FUJ!FILM

BL00886-200 **EN**



Owner's Manual

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM FinePix S200EXR digital camera and the supplied software. Be sure that you have read and understood its contents before using the camera.



For information on related products, visit our website at http://www.fujifilm.com/products/index.html











Before You Begin

First Steps

Basic Photography and Playback

More on Photography

More on Playback

Movies

Connections

Menus

Technical Notes

Troubleshooting

Appendix

IMPORTANT SAFETY INSTRUCTIONS

- · Read Instructions: All the safety and operating instructions should be read before the appliance is operated.
- · Retain Instructions: The safety and operating instructions should be retained for future reference
- · Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to
- Follow Instructions: All operating and use instructions should be followed.

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plua fully into the outlet. try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by the video product manufacturer as they may cause hazards

Water and Moisture: Do not use this video product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like

Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious iniury to a child or adult, and serious ings must not be blocked or cov-damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions. and should use a mounting accessory recommended by the manufacturer.

 
> An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces mav

cause the appliance and cart combination to overturn.

Antennas

Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Flectrical Code, ANSI/ NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE



Power Service Groundina Conductors Electrode System (NEC) (NFC SECTION ART 250, PART H) 810-21)

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power and refer servicing to qualified serlines or circuits. When installing an outside antenna system, extreme conditions: care should be taken to keep from • When the power-supply cord or touching such power lines or circuits as contact with them might be fatal. • If liquid has been spilled, or objects

Use

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service: Unplug this video product from the wall outlet

vice personnel under the following

- plug is damaged.
- have fallen into the video product.
- · If the video product has been exposed to rain or water.
- · If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performancethis indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

Be sure to read these notes before use

Safety Notes

 Make sure that you use your camera correctly. Read these safety notes and your Owner's Manual carefully before use. · After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



This icon indicates that death or serious injury can result if the information is ianored.



This icon indicates that personal injury or material damage can result if the information is ignored

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information requires attention ("Impor-



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark indicate an action that must be performed ("Required").

WARNING



If a problem arises, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock. Contact your FUJIFILM dealer. power socket



Do not allow water or foreign objects to enter the camera. If water or foreign objects get inside the camera, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock. Contact your FUJIFILM dealer.

∕ WARNING



Do not use the camera in the bathroom or shower. This can cause a fire or electric shock



Never attempt to change or take apart the camera. (Never open the casing.) Do not use the camera when it has been dropped or the casing is damaged. This can cause a fire or electric shock. Contact your FUJIFILM dealer.



Do not change, head or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and cause a fire or electric shock. If the cord is damaged, contact your FUJIFILM dealer.



<u>Do not place the camera on an unstable surface.</u> This can cause the camera to fall or tip over and cause injury.



<u>Never attempt to take pictures while in motion</u>. Do not use the camera while you are walking or driving a vehicle. This can result in you falling down or being involved in a traffic accident



Do not touch any metal parts of the camera during a thunderstorm. This can cause an electric shock due to induced current from the lightning discharge.



<u>**Do not use the battery except as specified.**</u> Load the battery as shown by the indicator



Do not heat, change or take apart the battery. Do not drop or subject the battery to impacts. Do not store the battery with metallic products. Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.



<u>Use only the battery or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown.</u> The use of other power sources can cause a fire.



If the battery leaks and fluid gets in contact with your eyes, skin or clothing, flush the affected area with clean water and seek medical attention or call an emergency number right away.



Do not use the charger to charge batteries other than those specified here. The supplied battery charger is for use only with the type of battery supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.



When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape. Contact with other metallic objects or batteries could cause the battery to ignite or burst.



<u>Keep memory cards out of the reach of small children.</u> Because memory cards are small, they can be swallowed by children. Be sure to store memory cards out of the reach of small children. If a child swallows a memory card, seek medical attention or call an emergency number.

CAUTION



Do not use this camera in locations affected by oil fumes, steam, humidity or dust. This can cause a fire or electric shock.



Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.



<u>Keep out of the reach of small children.</u> This product could cause injury in the hands of a child.



Do not place heavy objects on the camera. This can cause the heavy object to tip over or fall and cause injury.



<u>Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.</u> This can damage the power cord or caples and cause a fire or electric short



<u>Do not cover or wrap the camera or the AC power adapter in a cloth or blanket</u>. This can cause heat to build up and distort the casing or cause a fire.



When you are cleaning the camera or you do not plan to use the camera for an extended period. remove the battery and disconnect and unplug the AC power adapter. Failure to do so can cause a fire or electric shock.



When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire.



Using a flash too close to a person's eyes may temporarily affect the eyesight. Take particular care when photographing infants and young children.



When a memory card is removed, the card could come out of the slot too quickly. Use your finaer to hold it and aently release the card.



<u>Request regular internal testing and cleaning for your camera</u>. Build-up of dust in your camera can cause a fire or electric shock. Contact your FUJIFILM dealer to request internal cleaning every two years. Please note that this service is not free of charge.

The Battery and Power Supply

The following describes the proper use of the battery and how to prolong its life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted battery may not function at when cold. Keep a fully charged spare battery in a warm place and exchange as necessary, or keep the battery in your pocket or other warm place and insert it in the camera only when shooting. Do not place the battery in direct contact with hand warmers or other heating devices.

Charging the Battery

Charge the battery in the supplied battery charger (pg. 8). Charging times will increase at ambient temperatures below +10°C (+50°F) or above +35°C (+95°F). Do not attempt to charge the battery at temperatures above 40°C (+104°F); at temperatures below 0°C (+32°F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully dis- • The battery and camera body may charged before charging.

The battery may be warm to the touch immédiately after charging or use. This is normal.

Battery Life

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

Storage

Performance may be impaired if the • Do not use with other devices. battery is left unused for extended periods when fully charged. Run the • Do not expose to high heat and battery flat before storing it.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from +15°C to +25°C (+59°F to +77°F). Do not store in locations exposed to extremes of temperature.

Cautions: Handling the Battery

- · Do not transport or store with metal objects such as necklaces or hairpins.
- Do not expose to flame or heat.
- · Do not disassemble or modify.
- Use with designated chargers only. Dispose of used batteries promptly.
- Do not drop or subject to strong physical shocks.
- · Do not expose to water. Keep the terminals clean.

become warm to the touch after extended use. This is normal.

AC power adapters (Available Separately)

Use only FUJIFILM AC power adapters designated for use with this camera. Other adapters could damage the camera.

- · The AC power adapter is for indoor use only.
- · Be sure the DC plug is securely connected to the camera.
- . Turn the camera off before disconnecting the adapter. Disconnect the adapter by the plug, not the cable.
- Do not disassemble.
- humidity.
- Do not subject to strong physical shocks
- The AC power adapter may hum or become hot to the touch during use. This is normal.
- If the AC power adapter causes radio interference, reorient or relocate the receiving antenna.

Using the Camera

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft

Liquid Crystal

In the event that the monitor is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- · If liquid crystal comes in contact with your skin, clean the area with a cloth and then wash thoroughly with soap and running water.
- · If liquid crystal enters your eyes, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the result in the monitor to ensure that the camera is functioning normally. FUJIFILM Corporation can not accept liability for damages or lost profits incurred as a result of product malfunction.

NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" (pages iii–v) and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See http://www.dtsc.ca.gov/hazardouswaste/perchlorate.

For Customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant

To comply with Part 15 of the FCC Rules, this product must be used with a FUJIFILM-specified ferrite-core A/V cable, USB cable, and DC supply cord.

For Customers in Canada

CAUTION: This Class B digital apparatus complies with Canadian ICES-003.

EC Declaration of Conformity

We

Name: FUJIFILM Electronic Imaging Europe GmbH

Address: Benzstrasse 2 47533 Kleve, Germany

declare that the product

Product Name: FUJIFILM DIGITAL CAMERA FinePix S200EXR

Manufacturer's Name: FUJIFILM Corporation

Manufacturer's Address: 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052 JAPAN

conforms to the following Standards:

Safety: EN60065: 2002 + A1: 2006

EMC: FN55022: 1998 + A1: 2000 + A2: 2003 Class B

EN55024: 1998 + A1: 2001 + A2: 2003

EN61000-3-2: 2006

EN61000-3-3: 1995 + A1: 2001 + A2: 2005

1. Brows lu

following the provision of the EMC Directive (2004/108/EC) and Low Voltage Directive (2006/95/EC).

(

Kleve, Germany August 1, 2009

Place Date

Date Signature, Managing Director

Disposal of Electrical and Electronic Equipment in Private Households

Disposal of Used Electrical and Electronic Equipment (Applicable in the European Union, Norway, Iceland and Liechtenstein)



This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste.

Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



This symbol on the batteries or accumulators indicates that those batteries shall not be treated as household waste.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

In Countries Outside the European Union, Norway, Iceland and Liechtenstein

If you wish to discard this product, including the batteries or accumulators, please contact your local authorities and ask for the correct way of disposal.

Notes on Copyright

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

Trademark Information

xD-Picture Card is a trademark of FUJIFILM Corporation. Macintosh, Quick-Time, and Mac OS are trademarks of Apple Inc. in the U.S.A. and other countries. Microsoft, Windows, the Windows logo, Windows Vista and the Windows Vista logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. "Windows" is an abbreviation used in reference to the Microsoft Windows operating system. Adobe and Adobe Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and/or other countries. The SDHC logo is a trademark.

Note: The "Designed for Microsoft® Windows® XP" and "CERTIFIED FOR Windows Vista™ logos apply only to the camera and camera hardware driver.

About This Manual

Before using the camera, read this manual and the warnings on pages ii–vii. For information on specific topics, consult the sources below.

✓ Camera Q & Apg. ix Know what you want to do but don't know the name for it? Find the answer in "Camera Q & A."

✓ Warning Messages and Displayspg. 112
Find out what's behind that flashing icon or error message in the monitor or electronic viewfinder.

Memory Cards

Pictures can be stored in the camera's internal memory or on optional SD and SDHC memory cards. In this manual, SD memory cards are referred to as "memory cards." For more information, see page 11.

Camera Q & A

Find items by task.

Camera Setup

Question	Key phrase	See page
How do I set the camera clock?	Date and time	15
Can I set the clock to local time when I travel?	Time difference	97
How do I keep the display from turning off automatically?	Auto power off	100
How do I make the display brighter or darker?	LCD brightness	100
How do Laten the comore bearing and disking?	Operation and shutter volume	95
How do I stop the camera beeping and clicking?	Silent mode	19
What are the parts of the camera called?	Parts of the camera	2
What do the icons in the display mean?	Displays	5
How do I use the menus?	Menus	74
What's behind that flashing icon or error message?	Messages and displays	112
How much charge is left in the battery?	Battery level	16

Sharing Pictures

Question	Key phrase	See page
Can I print pictures on my home printer?	Printing pictures	63
Can I copy my pictures to my computer?	Viewing pictures on a computer	68

Taking Pictures

Question	Key phrase	See page
How many pictures can I take?	Memory capacity	118
Is there a quick and easy way to take snapshots?	mode mode	16
How can I avoid blurred pictures?	Dual IS mode	18
How can I make good portraits?	Intelligent Face Detection	22
Can I choose my own settings for different scenes?	SP (scene position)	44
Can the camera automatically adjust settings for different scenes?	mode	42
Can I choose between clarity, reduced noise, and dynamic range?	∙ൂ, ഒ, and എ modes	42
How do I shoot close-ups?	Close-ups (macro mode)	27
How do I keep the flash from firing?		
How do I stop my subjects' eyes glowing red when I use the flash?	Flash mode	28
How do I "fill-in" shadows on back-lit subjects?		
How do I take a series of pictures in a single burst?	Continuous shooting mode	32
How do I turn off the lamp on the front of the camera?	AF-assist illuminator	25
How do I take a group portrait that includes the photographer?	Self-timer mode	30
Is there a remote shutter release for this camera?	Remote shutter release (available separately)	103
How do I frame pictures with the subject off to one side?	Focus lock	24
Can I take pictures using saved settings?	C1 and C2 modes	51
Can I choose shutter speed and aperture?	P, S, A, and M modes	47–50
How do I adjust exposure?	Exposure compensation	34
How do I simulate the effects of different types of film?	Film simulation	79
How do I shoot movies?	Recording movies	59
How do I frame pictures in the viewfinder?	EVF/LCD button	4

Viewing Pictures

Question	Key phrase	See page
How do I view my pictures?	Single-frame playback	52
How do I delete the current picture?	The 🗑 button	21
Can I select other pictures for deletion?	Deleting pictures	56
Can I zoom in on pictures during playback?	Playback zoom	53
How do I view a lot of pictures at once?	Multi-frame playback	54
How do I view all pictures taken on the same day?	Sort by date	55
Can I protect my pictures from accidental deletion?	Protect	88
Can I hide the icons in the display when viewing my pictures?	The DISP/BACK button	54
Can I view my pictures in a slide show?	Slide show	86
Can I add a short voice memo to my pictures?	Voice memo	92
Can I crop unwanted elements out of my pictures?	Crop (trimming)	89
Can I make small copies of pictures?	Resize	90
Can I copy pictures from internal memory to a memory card?	Сору	90
How do I view my pictures on TV?	Viewing pictures on TV	62

Table of Contents

For Your Safetyii
IMPORTANT SAFETY INSTRUCTIONSii
Safety Notesiii
NOTICESvi
About This Manualviii
Camera Q & Aix
Defere Ver Demin
Before You Begin
Introduction1
Symbols and Conventions1
Supplied Accessories1
Parts of the Camera2
Camera Displays5
The Mode Dial6
First Steps
The Strap and Lens Cap7
Charging the Battery8
Inserting the Battery9
Inserting a Memory Card11
Turning the Camera on and Off14
Basic Setup15
Basic Photography and Playback
Taking Pictures in (Auto) Mode16
Viewing Pictures21
-

More on Photography	
🙎 Intelligent Face Detection and Red-Eye Removal	.22
Focus Lock	.24
AE Lock	.26
🛱 Macro Mode (Close-ups)	.27
🕻 Using the Flash (Super-Intelligent Flash)	.28
🖒 Using the Self-Timer	.30
💁 Continuous Shooting (Burst Mode)	.32
🔀 Exposure Compensation	.34
Metering	.35
Focus Mode	.36
Sensitivity	.38
White Balance	.39
Shooting Mode	.41
AUTO	.41
EXR EXR	.41
FSB FILM SIMULATION BRACKETING	
SP SCENE POSITION	
P PROGRAM AE	.47
S SHUTTER-PRIORITY AE	.48
A APERTURE-PRIORITY AE	.49
M MANUAL	.50
C1, C2 CUSTOM MODES	.51

More on Playback	
Playback Options	52
Playback Zoom	53
Multi-Frame Playback	54
Sort by Date	55
m Deleting Pictures	56
Viewing Photo Information	58
Movies	
Recording Movies	59
▶ Viewing Movies	61
Connections	
Viewing Pictures on TV	62
Viewing Pictures on TV	62
	63
Viewing Pictures on TVPrinting Pictures via USB	63 63
Viewing Pictures on TVPrinting Pictures via USB	63 63 63
Viewing Pictures on TV	63 63 63
Viewing Pictures on TV	63 63 63 65
Viewing Pictures on TV	6363636565

Menus	
Using the Menus: Shooting Mode	74
Using the Shooting Menu	74
Shooting Menu Options	
€ IMAGE SIZE	77
IMAGE QUALITY IMAGE QUALITY	78
M DYNAMIC RANGE	78
FILM SIMULATION	79
WB FINE TUNE	79
■ AF MODE	80
AE BKT EV STEPS	81
£ FLASH	81
EXTERNAL FLASH	82
■ HIGH-SPEED SHOOTING	83
Using the Menus: Playback Mode	84
Using the Playback Menu	84
Playback Menu Options	85
■ SLIDE SHOW	86
	86
☑ IMAGE ROTATE	87
o PROTECT	88
CROP	89
RESIZE	90
COPY	90
■ VOICE MEMO	92

The Setup Menu	94
Using the Setup Menu	94
Setup Menu Options	95
TIME DIFFERENCE	97
FORMAT	98
☑ IMAGE DISP	98
■ FRAME NO	99
PLAYBACK VOLUME	100
	100
AUTO POWER OFF	100
RAW CCD-RAW	101
FOCUS CHECK	101

Technical Notes	
Optional Accessories	102
Accessories from FUJIFILM	103
Caring for the Camera	104
Troubleshooting	
Troubleshooting	105
Warning Messages and Displays	112
Appendix	
Glossary	116
Internal Memory/Memory Card Capacity	118
Specifications	120
FUJIFILM Digital Camera Worldwide Network	126

Introduction

Symbols and Conventions

The following symbols are used in this manual:

\(\) Caution: This information should be read before use to ensure correct operation.

← Note: Points to note when using the camera.

園 **Tip**: Additional information that may be helpful when using the camera.

Menus and other text in the camera monitor are shown in bold. In the illustrations in this manual, the monitor display may be simplified for explanatory purposes.

Supplied Accessories

The following items are included with the camera:



NP-140 rechargeable battery



BC-140 battery charger



USB cable



A/V cable



Strap



Lens cap



Lens cap holder

• Owner's Manual (this manual)



FinePix software CD

Shutter button......20

ISO (sensitivity) button......38


(exposure compensation) button34

Command dial......32, 34, 38, 39

Microphone......92

Parts of the Camera

For more information, refer to the page listed to the right of each item.

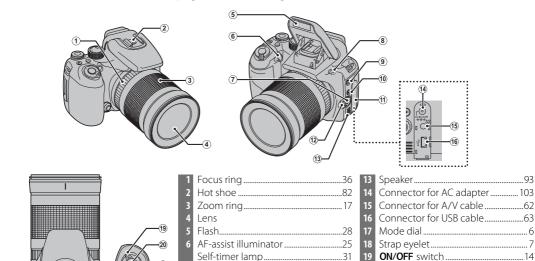


(Continuous shooting) button......32


WB (white balance) button......39

Focus mode selector.....36

Terminal cover

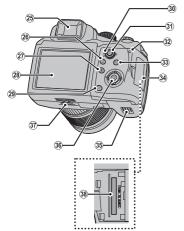


	Electronic viewfinder		
			Memory card slot cover12
	red-eye removal) button22		
28	Monitor5	36	Selector button (see below)
29	DISP (display)/BACK button18, 54	37	Tripod mount
30	Metering selector35	38	Memory card slot12
31	AE-L (autoexposure lock) button26		

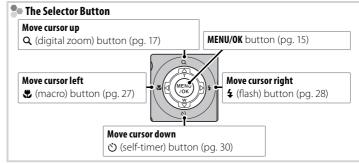

The Electronic Viewfinder (EVF)

The electronic viewfinder provides the same information as the monitor, and can be used when bright lighting conditions make the display in the monitor difficult to see. To switch between the monitor and electronic viewfinder, press the **EVF/LCD** button (your selection remains in effect when the camera is turned off or the mode dial is rotated to another setting).


The camera is equipped with diopter adjustment to accommodate individual differences in vision. Slide the diopter adjustment control up and down until the viewfinder dispay is in sharp focus.

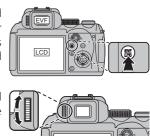

Camera Displays

The following indicators may appear during shooting and playback: The indicators displayed vary with camera settings.

 ■ Shooting




* M: indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (pg. 11).

-1	Internal memory indicator	11
2	Focus frame 19,	24
3	Silent mode	19
4	Continuous shooting mode	32
5	Metering	35
6	Intelligent Face Detection	
	indicator	22
7	Shooting mode	41
8	Flash mode	28
9	Macro (close-up) mode	27
10	Self-timer indicator	30
11	Focus warning 19, 1	12

12	Blur warning28, 112
13	Date and time15
14	Number of available frames 118–119
15	Sensitivity38
16	Image quality and size77, 78
17	Dynamic range78
18	Film simulation79
19	White balance39
20	Battery level16
21	Dual IS mode18
22	Exposure compensation34

■ Playback

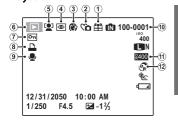


1	Gift image52
2	Silent mode indicator19
3	Portrait enhancer46
	Red-eye removal indicator22, 86
5	Intelligent Face Detection
	indicator22
6	Playback mode indicator52

7	Protected image	88
3	DPOF print indicator	65
	Voice memo indicator	
)	Frame number	99
	Dynamic range	78
	EXR mode	

The Mode Dial

 
To select a shooting mode, align the mode icon with the mark next to the mode dial.



(AUTO): A simple "point-and-shoot" mode recommended for first-time users of digital cameras (pg. 16).

Exa: Improve clarity, reduce noise, increase dynamic range, or let the camera automatically adjust settings to suit the scene (pg. 41).

FSE (FILM SIMULATION BRACKETING): Vary film simulation settings over a series of pictures (pq. 43).

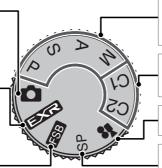

P, S, A, M: Select for full control over camera settings, including aperture (**M** and **A**; pg. 49, 50) and/or shutter speed (**M** and **S**; pg. 48, 50).

C1, C2 (CUSTOM): Recall stored settings for modes P, S, A, M, and all modes except (pg. 51).


(MOVIE): Record movies with sound (pg. 59).

SP (SCENE POSITION): Choose a scene suited to the subject or shooting conditions and let the camera do the rest (pg. 44).

The Strap and Lens Cap

Attaching the Strap

After passing the strap through the lens cap holder, attach the strap to the two strap eyelets as shown below.

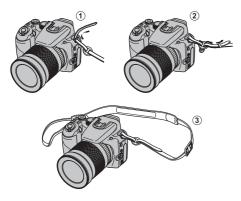

**** Caution

To avoid dropping the camera, be sure the strap is correctly secured.

The Lens Cap

When removing or replacing the lens cap, press the latch as shown.



To avoid losing the lens cap, pass the supplied string through the eyelet and secure the lens cap to the strap.



The Lens Cap Holder

When not in use, the lens cap can be attached to the lens cap holder as shown.

 


Charging the Battery

The battery is not charged at shipment. Charge the battery before use.

1 Place the battery in the charger.

Insert the battery into the supplied battery charger in the orientation shown by the arrow.



2 Charge the battery.

Plug the charger into a power outlet. The charging indicator will blink while the battery charges.

**** Cautions

- Unplug the charger when it is not in use.
- Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
- Charging times increase at low temperatures.

The Charging Indicator

The charging indicator shows battery charge status as follows:

Charging indicator	Battery status	Action
	Battery not inserted.	Insert the battery.
Off	Battery fault.	Unplug the charger and remove the battery.
Blinks Battery charging		_
On	Battery fully charged.	Remove the battery.

3 Remove the battery.

Remove the battery when the charging indicator stops blinking.

Inserting the Battery

After charging the battery, insert it in the camera as described below.

1 Open the battery-chamber cover.

← Note

Be sure the camera is off before opening the battery-chamber cover.

 


N Cautions

- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

2 Insert the battery.

Insert the battery with the arrow aligned with the arrow next to the battery chamber.



N Caution

Insert the battery in the correct orientation. *Do* NOT *use force or attempt to insert the battery upside down or backwards.* The battery will slide in easily in the correct orientation.

3 Close the battery-chamber cover.



Removing the Battery

After turning the camera off, open the battery-chamber cover, press the battery latch to the side, and slide the battery out of the camera as shown.



**** Caution

Turn the camera off before removing the battery.

■ Tips: Using an AC Adapter

 The camera can be powered by an optional AC adapter (sold separately). See manual provided with the AC adapter for details.

**** Cautions

- Do not affix stickers or other objects to the battery.
 Failure to observe this precaution could make it impossible to remove the battery from the camera.
- Do not short the battery terminals. The battery could overheat.
- Read the cautions on page v.
- Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.
- Do not remove the labels from the battery or attempt to split or peel the outer casing.
- The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Inserting a Memory Card

Although the camera can store pictures in internal memory, optional SD memory cards (sold separately) can be used to store additional pictures.

When no memory card is inserted, nappears in the monitor and internal memory is used for recording and playback. Note that because camera malfunction could cause internal memory to become corrupted, the pictures in internal memory should periodically be transferred to a computer and saved on the computer hard disk or on removable media such as CDs or DVDs. The pictures in internal memory can also be copied to a memory card (see page 90). To prevent internal memory from becoming full, be sure to delete pictures when they are no longer needed.

When a memory card is inserted as described below, the card will be used for recording and playback.

■ Compatible Memory Cards

SanDisk SD and SDHC memory cards have been approved for use in the camera. A complete list of approved memory cards is available at http://www.fujifilm.com/products/digital_cameras/index.html. Operation is not guaranteed with other cards. The camera can not be used with https://www.fujifilm.com/products/digital_cameras/index.html. Operation is not guaranteed with other cards. The camera can not be used with https://www.fujifilm.com/products/digital_cameras/index.html. Operation is not guaranteed with other cards. The camera can not be used with https://www.fujifilm.com/products/digital_cameras/index.html.

**** Caution

SD memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting an SD memory card, slide the write-protect switch to the unlocked position.



Write-protect switch

Inserting a Memory Card

1 Open the memory card slot cover.

 
← Note

 
Be sure the camera is off before opening the memory card slot cover.



) Insert the memory card.

Holding the memory card in the orientation shown, slide it in until it clicks into place.





Be sure card is in correct orientation; do not insert at an angle or use force. **3** Close the memory card slot cover.



Removing Memory Cards

After confirming that the camera is off, press the card in and then release it slowly. The card can now be removed by hand.



**** Cautions

- The memory card may spring out if you remove your finger immediately after pushing the card in.
- Memory cards may be warm to the touch after being removed from the camera. This is normal and does not indicate a malfunction.

 
**** Cautions

- Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.
- Format memory cards before first use or after using them in a computer or other device. For more information on formatting memory cards, see page 98.
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- Do not use miniSD or microSD adapters that expose the back of the card. Failure to observe this precaution may cause damage or malfunction. Adapters that are larger or smaller than the standard dimensions of an SD card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- 8888 88888

- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of SD memory card.
- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.

Turning the Camera on and Off

Rotate the \mathbf{ON}/\mathbf{OFF} switch to \mathbf{ON} to turn the camera on.



Select **OFF** to turn the camera off.

▼ Tip: Switching to Playback Mode

Press the **b** button for about a second to start playback. Press **b** button again or press the shutter button halfway to return to shooting mode.

**** Caution

Pictures can be affected by fingerprints and other marks on the lens. Keep the lens clean.

■ Tip: Auto Power Off

The camera will turn off automatically if no operations are performed for the length of time selected in the **AUTO POWER OFF** menu (pg. 100; note that **OFF** is not available when significantly is selected in **EXE** mode). To turn the camera on, use the **ON/OFF** switch.

Basic Setup

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (for information on resetting the clock or changing languages, see page 95).

1 Choose a language.



1.1 Press the selector up or down to highlight a language.



1.2 Press MENU/OK.



Set the date and time.



2.1 Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.

2.2 Press MENU/OK.



 
▼ Tip: The Camera Clock

If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on. If the battery is left in the camera or an optional AC adapter connected for about ten hours, the battery can be removed for about a week without resetting clock, language selection, or power management options.


Taking Pictures in (Auto) Mode

This section describes how to take pictures in (auto) mode.


Turn the camera on.
Rotate the ON/OFF switch to ON.



 2 Select node.
Rotate the mode dial to no.



 3 Check the battery level. Check the battery level in the display.






Indicator	Description
(white)	Battery partially discharged.
(white)	Battery more than half discharged.
4	Low battery. Charge as soon as pos-
(red)	sible.
	Battery exhausted. Turn camera off
(blinks red)	and charge battery.

4 Frame the picture.

 Position the main subject in the focus frame and use the zoom ring to frame the picture in the display.



Rotate left to zoom out

Zoom indicator

Rotate right to zoom in



To zoom in an additional 2×using digital zoom (pg. 120), press the selector up (Q). Q will be displayed under the zoom indicator and the indicator will change color. Press the selector up again to exit digital zoom.





Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.



To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.




▼ Tip: Focus Lock

Use focus lock (pg. 24) to focus on subjects that are not in the focus frame.

Framing Guideline and Post-Shot Assist Window

To choose the shooting information and guides displayed, press the **DISP/BACK** button.

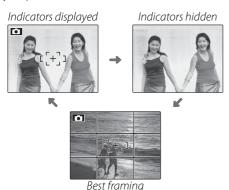

To use the best framing, position the main subject at the intersection of two lines or align one of the horizontal lines with the horizon. Use focus lock (pg. 24) to focus on subjects that will not be in the center of the frame in the final photograph.

Avoiding Blurred Pictures

If the subject is poorly lit, blurring caused by camera shake can be reduced using the **DUAL IS MODE** option in the setup menu (pg. 95). Choose whether image stabilization is performed



at all times when the camera is in shooting mode (**\bigsim_1 CONTINUOUS*), or only when the shutter button is pressed halfway (*\bigsim_2 SHOOTING ONLY*).

 
Note that blurring may still occur depending on the scene or shooting conditions.

Filters

The camera can be used with a ϕ 67 mm thin-frame PL (polarizing) filters. The edges of pictures taken with the standard PL filters will be blacked out.

🗫 😘 Silent Mode

In situations in which camera sounds or lights may be unwelcome, hold the **DISP/BACK** button down for a few seconds or select **ON** for **SILENT MODE** in the scene menu (note that silent mode is not available during movie or voice memo playback).



The camera speaker, flash, and AF-assist illuminator/self-timer lamp turn off and flash and volume settings can not be adjusted (note that the flash will still fire when • is selected in scene mode). To restore normal operation, press the DISP/BACK button until the con is no longer displayed.

5 Focus.

Press the shutter button halfway to focus on the main subject in the focus frame.







Focus frame

Camera selects small focus frame and focuses on subject

← Note

The lens may make a noise when the camera focuses. This is normal

If the camera is able to focus, it will beep twice and the indicator lamp will glow green.

If the camera is unable to focus, the focus frame will turn red, **!AF** will be displayed, and the indicator lamp will blink green. Change the composition or use focus lock (pg. 24).


6 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



▼ Tip: The Shutter Button

The shutter button has two positions. Pressing the shutter button halfway (①) sets focus and exposure; to shoot, press the shutter button the rest of the way down (②).

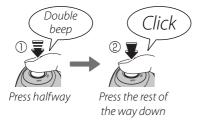

← Note

If the subject is poorly lit, the AF-assist illuminator may light to assist focus (pg. 25). For information on using the flash when lighting is poor, see page 28.



The indicator lamp shows camera status as follows:

Indicator lamp	Camera status		
Glows green	Focus locked.		
Blinks green	Blur, focus, or exposure warning. Picture can be taken.		
Blinks green and orange	Recording pictures. Additional pictures can be taken.		
Glows orange	Recording pictures. No additional pictures can be taken at this time.		
Blinks orange	Flash charging; flash will not fire when picture is taken.		
Blinks red	Lens or memory error (internal memory or memory card full or not formatted, format error, or other memory error).		

 
▼ Tip: Warnings

Detailed warnings appear in the display. See pages 112–115 for more information.

Viewing Pictures

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

1 Press the **▶** button.



The most recent picture will be displayed in the monitor.



2 View additional pictures.

Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press the shutter button to exit to shooting mode

Deleting Pictures

To delete the picture currently displayed in the monitor, press the 面 (**AE-L**) button. The following dialog will be displayed.





To delete the picture, press the selector left to highlight **OK** and press **MENU/OK**. To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.



■ Tip: The Playback Menu

 
Pictures can also be deleted from the playback menu (pg. 56).

! Intelligent Face Detection and Red-Eye Removal

Intelligent Face Detection allows the camera to automatically detect human faces and set focus and exposure for a face anywhere in the frame for shots that emphasize portrait subjects. Choose for group portraits (in vertical or horizontal orientations) to prevent the camera from focusing on the background.

1 Turn Intelligent Face Detection on.

Press the Detection to display Intelligent Face Detection options.





Press the selector left or right to highlight **2** and press **MENU/OK**.

2 Frame the picture.

If a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by



Green border

other faces are indicated by white borders.

? Focus.

Press the shutter button halfway to focus on the subject in the green border. Note that, in some shooting modes, exposure is adjusted for the current shooting mode and may not be optimized for the selected subject.

**** Caution

If no face is detected when the shutter button is pressed halfway (pg. 107), the camera will focus on the subject at the center of the display.

4 Shoot.

Press the shutter button all the way down to shoot.



**** Caution

If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

To turn Intelligent Face Detection off, press the Detection and select **OFF**.



Intelligent Face Detection is recommended when using the self-timer for group- or self-portraits (pg. 30).



When a picture taken with Intelligent Face Detection is displayed, the camera can automatically select faces for red-eye removal (pg. 86), playback zoom (pg. 53), slide shows (pg. 86), printing (pg. 66), and cropping (pg. 89).

Focus Lock

To compose photographs with off-center subjects:

1 Position the subject in the focus frame.



7 Focus.

Press the shutter button halfway to set focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock; note that if exposure is currently locked using the **AE-L** button as described on page 26, pressing the shutter button halfway will lock focus only).





Repeat steps 1 and 2 as desired to refocus before taking the picture.

3 Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.



⚠ Shoot.

Press the shutter button the rest of the way down to take the picture.



Press the rest of the way down

Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus using autofocus, use focus lock (pg. 24) to focus on another subject at the same distance and then recompose the photograph.

as mirrors or car bodies



• Very shiny subjects such | • Fast-moving subjects.



- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
- Subjects positioned in front of or behind a highcontrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

The AF-Assist Illuminator

If the subject is poorly lit, the AF-assist illuminator will light to assist the focus operation when the shutter button is pressed halfway.



- Avoid shining the AF-assist illuminator directly into your subject's eyes. See page 96 for information on disabling the AF-assist illuminator.
- The camera may be unable to focus using the AFassist illuminator in some cases. If the camera is unable to focus in macro mode (pg. 27), try increasing the distance to the subject.
- The AF-assist illuminator is not available in silent mode.

AE Lock

To set exposure for a subject that will not be in the focus frame in the final composition:

1 Position the subject in the focus frame.



Meter exposure.

Press the **AE-L** button to meter exposure for the subject in the focus frame and then, keeping the **AE-L** button pressed, press the shutter button halfway to focus. Focus and exposure will remain locked while the shutter button is pressed halfway, even if you later release the **AE-L** button.



Repeat steps 1 and 2 as desired to refocus before taking the picture.

3 Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.



**** Caution

Adjusting zoom ends AE lock. AE lock is not available with Intelligent Face Detection.

⚠ Shoot.

Press the shutter button the rest of the way down to take the picture.



← Note

If AE-L2 is selected for AE-LOCK MODE in the setup menu (pg. 96), exposure will lock when the AE-L is pressed and remain locked until the button is pressed again.

Macro Mode (Close-ups)

For close-ups, press the selector left (*) to display macro close-up options. Press the selector left or right to highlight or and press MENU/OK.



Choose from ♥ (macro mode),

№ (super macro mode), or

OFF (macro mode off)

When macro mode is in effect, the camera focuses on subjects near the center of the frame. Use the zoom control to compose pictures. The following restrictions apply in super macro mode: the lens must be zoomed all the way out (at other zoom positions, **↓** is displayed) and the flash can not be used.

To exit macro mode, press the selector left () and select OFF.

← Notes

- Use of a tripod is recommended to prevent blur caused by camera shake.
- Flash compensation may be required when using the flash.

4 Using the Flash (Super-Intelligent Flash)

When the flash is used, the camera's *Super-Intelligent Flash* system instantly analyzes the scene based on such factors as the brightness of the subject, its position in the frame, and its distance from the camera. Flash output and sensitivity are adjusted to ensure that the main subject is correctly exposed while preserving the effects of ambient background lighting, even in dimly-lit indoor scenes. Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

1 Raise the flash.

Press the flash pop-up button to raise the flash.

 
Turning the Flash Off

Lower the flash where flash photography is prohibited or to capture natural lighting under dim light. At slow shutter speeds, **!o** will be displayed to warn that pictures may be blurred; use of a tripod is recommended.



7 Choose a flash mode.

Press the selector right (\$\frac{4}{2}\$), and then press the selector left or right to highlight one of the following options and press MENU/OK.



Mode	Description
AUTO (AUTO FLASH)	The flash fires when required. Recommended in most situations.
4	The flash fires whenever a picture is taken. Use for backlit subjects or for natural color-
(FORCED FLASH)	ation when shooting in bright light.
\$\$	Capture both the main subject and the background under low light (note that brightly
(SLOW SYNCHRO)	lit scenes may be overexposed).

3 Focus.

Press the shutter button halfway to focus. If the flash will fire, 3 will be displayed when the shutter button is pressed halfway. At slow shutter speeds, 5 will appear in the display to warn that pictures may be blurred; use a tripod.



4 Shoot.

Press the shutter button the rest of the way down to shoot.

**** Caution

The flash may fire several times with each shot. Do not move the camera until shooting is complete.



Red-Eye Removal

When **ON** is selected for **③ RED-EYE REMOVAL** in the setup menu (pg. 96), red-eye removal (**④**) is available in AUTO FLASH (**⑤**), FORCED FLASH (**⑤**4), and SLOW SYNCHRO (**⑥**) modes. Red-eye removal minimizes "*red-eye*" caused when light from the flash is reflected from the subject's retinas as shown in the illustration at right.



🖒 Using the Self-Timer

The camera offers a ten-second timer that allows photographers to appear in their own photographs, and a two-second timer that can be used to avoid blur caused by the camera moving when the shutter button is pressed. The self-timer is available in all shooting modes.

1 Set the timer.

The current self-timer mode is displayed in the monitor. To choose a different setting, press the selector down (ல்), and then press the selector left or right to highlight an option and press MENU/OK.





Choose from **OFF** (self-timer off), \cite{h} (10 s delay), or \cite{h} (2 s delay)

7 Focus.

Press the shutter button halfway to focus.

**** Caution

Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.




3 Start the timer.

Press the shutter button the rest of the way down to start the timer. The display in the monitor shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press **DISP/BACK**.





The self-timer lamp on the front of the camera will blink immediately before the picture is taken. If the two-second timer is selected, the self-timer lamp will blink as the timer counts down.

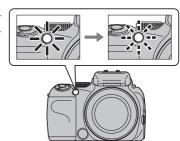

Intelligent Face Detection

Because it ensures that the faces of portrait subjects will be in focus, Intelligent Face Detection (pg. 22) is recommended when using the self-timer for group portraits or self-portraits. To use the self-timer with Intelligent Face Detection, turn Intelligent Face Detection on, set the timer as described in Step 1, and then press the shutter button all the way down to start the timer. The camera will detect faces while the timer is counting down and adjust focus and exposure immediately before the shutter is released. Be careful not to move until the picture has been recorded

← Note

The self-timer turns off automatically when the picture is taken, a different shooting mode is selected, playback mode is selected, or the camera is turned off.

Q Continuous Shooting (Burst Mode)

Capture motion or automatically vary selected settings over a series of pictures.

1 Choose a continuous shooting.

Press the **\(\documes\)** button and rotate the command dial to choose from the following options:



Mode	Description
(top 6)	The camera takes up to six pictures while the shutter button is pressed.1
™ (last 6)	The camera takes up to 40 pictures while the shutter button is pressed, but only the last six frames are recorded. ²
₽ (top 24)	The camera takes up to 24 pictures while the shutter button is pressed. 1,3
답 (last 24)	The camera takes up to 40 pictures while the shutter button is pressed, but only the last 24 frames are recorded. ^{2,3}
(AE bracketing)	Each time the shutter button is pressed, the camera takes three shots: one using the metered value for exposure, the second overexposed by the amount selected for AE BRACKETING in the shooting menu (pg. 81), and the third underexposed by the same amount (the camera may not be able to use the selected bracketing increment if the amount of over- or under-exposure exceeds the limits of the exposure metering system).
(film simulation bracketing)	Each time the shutter button is pressed, the camera takes three shots, each with a different option selected for Tellm SIMULATION: PROVIA for the first shot, Velvia for the second, and SE ASTIA for the third. ²
bracketing)	Each time the shutter button is pressed, the camera takes three shots, each with a different option selected for MDYNAMIC RANGE: 100 100% for the first shot, 200 200% for the second, and 400% for the third. 4
OFF	Continuous shooting off. One picture is taken each time the shutter button is pressed.

¹ The maximum number of shots per burst when an option other than **OFF** is selected for **EXECUTE AND SET OF SET OF**

² Available only when **OFF** is selected for **CCD-RAW**.

^{3 ■} IMAGE SIZE set to S, S ISO to 400 or above, DYNAMIC RANGE to 100.

⁴ ISI ISO set to 3200 or below. When ■ is selected for ● IMAGE SIZE, ISI ISO set to between 400 and 3200.

7 Focus.

Press the shutter button halfway to focus.



3 Shoot.

Pictures will be taken while the shutter button is pressed. Shooting ends when the shutter button is released, memory is full, or the selected number of shots has been taken.



← Notes

- Focus and exposure are determined by the first frame in each series. The flash turns off automatically (pg. 28); the previously-selected flash mode is restored when burst shooting is turned off.
- Frame rate varies with shutter speed.
- The number of pictures that can be recorded depends on the memory available. Bracketing options are only available if there is sufficient memory for three pictures. Additional time may be required to record pictures when shooting ends.

Exposure Compensation

Use exposure compensation when photographing very bright, very dark, or high-contrast subjects.

1 Choose a value.

Press the **b**utton and rotate the command dial until the exposure indicator shows the desired value.





The effect is also visible in the display.









Choose positive (+) values to increase exposure

2 Take pictures.

Choosing an Exposure Compensation Value

• Backlit subjects: choose values from +% EV to +1% EV (for an explanation of the term "EV", see the Glossary on page 116)



 Highly reflective subjects or very bright scenes (e.g., snowfields): +1 EV



 
- Scenes that are mostly sky: +1 EV
- Spotlit subjects (particularly if photographed against dark backgrounds): –½ EV
- Subjects with low reflectivity (pine trees or dark-colored foliage): –?4 EV

← Note

A \square icon and exposure indicator are displayed at settings other than ± 0 . Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of ± 0 .

Metering


Use the metering selector to choose how the camera meters exposure when Intelligent Face Detection is off. The following options are available:



Mode	Description
(multi)	Automatic scene recognition is used to adjust exposure for a wide range of shooting conditions.
(spot)	The camera meters lighting conditions at the center of the frame. Recommended when the background is much brighter or darker than the main subject. Can be used with exposure lock (pg. 26) to meter off-center subjects.
[] (average)	Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.

Focus Mode

 
Use the focus mode selector to choose how the camera focuses. The following options are available:



Mode	Description	
AF-S (single)	Focus locks while the shutter button is pressed halfway. Choose for stationary subjects.	
AF-C (continuous)	The camera continually adjusts focus to reflect changes in the distance to the subject even when the shutter button is not pressed halfway (note that this increases the drain on the battery). AF MODE (pg. 80) is fixed at CENTER; if Intelligent Face Detection is on, the camera will continually adjust focus for the selected face. Choose for moving subjects.	
MF (manual)	Focus manually using the focus ring. Rotate the ring left to reduce the focus distance, right to increase. The manual focus indicator indicates how closely the focus distance matches the distance to the subject in the focus brackets. Choose for manual control of focus or in situations in which the camera is unable to focus using autofocus (pg. 25). Intelligent Face Detection turns off automatically. **Reduce focus** distance** **Manual focus** mode icon **Manual focus** indicator	

★ Notes: Manual Focus

 - Use of a tripod is recommended. Focus may be affected if the camera moves.
- The camera will not focus when the focus ring is rotated all the way to the right. To focus at infinity, focus on a distant object.
- To focus using autofocus (pg. 25), press the ▶●◀ button. This can be used to quickly focus on a chosen subject in manual focus mode.



Sensitivity

The camera's sensitivity to light can be adjusted by pressing the **ISO** button and rotating the command dial until the desired value is highlighted in the display.



Higher values can be used to reduce blur when lighting is poor; note, however, that mottling may appear in pictures taken at high sensitivities, particularly at settings above **1600**. If **AUTO** or an option such as **AUTO** (**3200**) is selected, the camera will adjust sensitivity automatically in response to shooting conditions. In the case of **AUTO** (**3200**), **AUTO** (**1600**), **AUTO** (**800**), and **AUTO** (**400**), the value in parentheses is the maximum sensitivity that will be selected when the subject is poorly lit.

Settings other than **AUTO** are shown by an icon in the display.

← Note

Sensitivity can also be adjusted in the shooting menu (pg. 75). Sensitivity is not reset when the camera is turned off.



White Balance

For natural colors, press the **WB** button and rotate the command dial until a setting that matches the light source is highlighted in the display (for an explanation of "white balance," see the Glossary on page 117).




Option	Description
AUTO	White balance adjusted automatically.
Γ_1/Γ_2	Measure values for white balance (pg. 40).
*	For subjects in direct sunlight.
*	For subjects in the shade.
₩í	Use under "daylight" fluorescent lights.
₩2	Use under "warm white" fluorescent lights.
₩	Use under "cool white" fluorescent lights.
<u>-</u> ф-	Use under incandescent lighting.

If **AUTO** does not produce the desired results (for example, when taking close-ups), select \mathcal{L}_{1} or \mathcal{L}_{2} and measure a value for white balance or choose the option that matches the light source.

- At settings other than \square_i and \square_i , auto white balance is used with the flash. Turn the flash off (pg. 28) to take pictures at other settings.
- Results vary with shooting conditions. Play pictures back after shooting to check colors in the monitor.

 $\blacksquare \ \square_1/\square_2$, Custom White Balance



and press the shutter button all the way down to measure white balance

If "COMPLETED!" is displayed, press **MENU/OK** to set white balance to the measured value. This value is stored even when the battery is removed and can be reselected by pressing **MENU/OK** when custom white balance options are displayed.

If "UNDER" is displayed, raise exposure compensation (pg. 34) and try again.

 
If "OVER" is displayed, lower exposure compensation and try again.

■ Tip

To give a deliberate color cast to your photographs, measure a value for custom white balance using a colored instead of a white object.

Shooting Mode

Choose a shooting mode according to the scene or type of subject. To choose a shooting mode, rotate the mode dial to the desired setting (pg. 6). The following modes are available:



AUTO

Choose for crisp, clear snapshots (pg. 16). This mode is recommended in most situations.

EXR EXR

To let the camera automatically optimize settings for your current subject, or to improve clarity, reduce noise, or enhance dynamic range, rotate the mode dial to and follow the steps below:

1 Press **MENU/OK** to display the shooting menu.





2 Highlight TEXR MODE.



3 Press the selector right to display the following menu.





4 Press the selector up or down to highlight one of the following options.



Option	Description
EXR AUTO	The camera automatically selects the scene and EXR mode according to shooting conditions.
RESOLUTION PRIORITY	Choose for crisp, clear shots.
HIGH ISO & LOW NOISE	Reduce noise in pictures taken at high sensitivities.
D-RANGE PRIORITY	Increase the amount of detail visible in highlights. RANGE is set to 800 (800%).

5 Press **MENU/OK** to select the highlighted option.



6 Press **DISP/BACK** to return to shooting mode.



EX EXR AUTO

In this mode, the camera automatically analyzes the composition and selects the appropriate scene mode according to the subject and shooting conditions. The selected mode is displayed as shown at right. When the shutter button is




Display when portrait subject is detected.

pressed halfway, the camera selects the optimal EXR mode, which is displayed next to the scene mode icon.

Mode	Type of subject or scene detected
0	Portrait: Human portrait subject.
٥	Landscape : Man-made or natural landscape.
©	Night landscape: Poorly lit landscape.
Ø	Macro: Subject close to camera.
®	Back-lit portrait: Back-lit portrait subject.
•	Night portrait: Poorly lit portrait subject.

IMAGE SIZE

 If Im is selected for IMAGE SIZE in Image mode, the camera will automatically select the optimal image size.



← Notes

- (AUTO) will be selected if the subject does not match the scenes listed above.
- The camera focuses continuously, increasing the drain on the battery. The sound of the camera focusing may be audible.
- In sm mode, the camera continuously focuses on the selected face, and si is displayed in the monitor.

FSB FILM SIMULATION BRACKETING

Each time the shutter button is pressed, the camera records three images: the first with standard color reproduction suited to a wide range of subjects, from portraits to landscapes (FPROVIA), the second with a high-contrast palette of saturated colors suited to nature photographs (FVEVIA), and the third with a soft-toned palette of less saturated colors (FRASTIA).

← Note

If **RAW+JPG** or **RAW** is selected for **CCD-RAW**, only one image (**STOP PROVIA**) will be recorded with each shot.

SP SCENE POSITION

The camera offers a choice of "scenes," each adapted to particular shooting conditions or a specific type of subject, which can be assigned to the **SP** position on the mode dial:

1 Rotate the mode dial to SP.



2 Press **MENU/OK** to display the following menu.



SHOOTING MENU 1/2

CI SCENE POSITION 100

E3190 AUTO

CI MAGE SIZE MI 4/3

E41 MAGE QUALITY N

E52 DYNAMIC GRANGE AUTO

CT FILM SMULATION CITY

EACH COLUMN COLUMN CITY

EACH COLUMN CITY

EACH

3 Highlight **SCENE POSITION**.



4 Press the selector right to display the following menu.





5 Press the selector up or down to highlight a scene (pg. 46).



6 Press **MENU/OK** to select the highlighted option.



7 Press **DISP/BACK** to return to shooting mode.



Until the setting is changed as described above, the chosen scene will be selected whenever the mode dial is rotated to **SP**.

PRO FOCUS MODE

The camera takes up to three shots when the shutter-release button is pressed, softening the background to emphasize the main subject for results on par with single-lens reflex cameras. The amount of softening can be adjusted before shooting by rotating command dial.

← Note

Background objects that are too close to the main subject will not be softened. If a message stating that the camera is unable to create the effect is displayed when the camera focuses, try backing away from your subject and increasing zoom. The camera may also be unable to soften the background if the subject is moving; if prompted, check the results and try again.

**** Cautions

- Hold the camera steady during shooting.
- Frame coverage is reduced in this mode.

PRO LOW-LIGHT MODE

Each time the shutter button is pressed, the camera takes four shots and combines them to form a single exposure. Use to reduce noise and blur when photographing poorly lit subjects or static subjects at high zoom ratios.

← Note

A single exposure may not be created with some scenes if the subject or camera moves during shooting. Do not move the camera until shooting is complete.


**** Caution

Frame coverage is reduced in this mode.

Scene	Description
PRO FOCUS MODE	Choose for blurring the background of a subject such as a portrait or a flower to make it impressive.
	Choose for shooting a subject under low light or a still subject by using the telephoto zoom.
NATURAL LIGHT	Capture natural light indoors, under low light, or where the flash can not be used.
₩\$NATURAL & \$	Get good results with backlit subjects and other difficult lighting. The camera takes two shots: one without the flash and one with.
♣ PORTRAIT	Choose for soft-toned portraits with natural skin tones.
PORTRAIT ENHANCER	Choose for a smooth skin effect in soft-focus portraits.
▲ LANDSCAPE	Choose for crisp, clear daylight shots of buildings and landscapes.
% SPORT	Choose when photographing moving subjects. TE HIGH SPEED SHOOTING turns on automatically and priority is given to faster shutter speeds.
C NIGHT	Choose this mode for poorly lit twilight or night scenes. Sensitivity is automatically raised to reduce blur caused by camera shake.
x ^{C*} NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night. Use a tripod to prevent blur.
FIREWORKS	Slow shutter speeds are used to capture the expanding burst of light from a firework. Use a tripod to prevent blur.
≚ SUNSET	Record the vivid colors in sunrises and sunsets.
*§ SNOW	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
≜ 3 BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
☆ FLOWER	Choose for vivid close-ups of flowers. The camera focuses in the macro range.
TEXT TEXT	Take clear pictures of text or drawings in print. The camera focuses in the macro range.

P PROGRAM AE

 In this mode, the camera sets exposure automatically. If desired, you can choose different combinations of shutter speed and aperture that will produce the same exposure (program shift).



N Caution

If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "---". Press the shutter button halfway to measure exposure again.

Program Shift

Rotate the command dial to choose the desired combination of shutter speed and aperture. The default values can be restored by raising the flash, rotating the mode dial to another setting, turning the camera off, or selecting playback mode. Program shift is available when the flash is off or an option other than **AUTO** is selected for **DYNAMIC RANGE** or **ISO**. Program shift is not available when the flash is raised.





S SHUTTER-PRIORITY AE

 
You choose the shutter speed while the camera adjusts aperture for optimal exposure.

1 Rotate the mode dial to **S**. Shutter speed will be displayed.



**** Caution

If the subject is outside the metering range of the camera, the aperture display will show "F--". Press the shutter button halfway to measure exposure again.



2 Rotate the command dial to choose the shutter speed.



 
Take pictures. If the correct exposure can not be achieved at the selected shutter speed, aperture will be displayed in red when the shutter button is pressed halfway. Adjust shutter speed until the correct exposure is achieved.

A APERTURE-PRIORITY AE

You choose the aperture while the camera adjusts shutter speed for optimal exposure.

1 Rotate the mode dial to **A**. Aperture will be displayed.





2 Rotate the command dial to choose the aperture.



Take pictures. If the correct exposure can not be achieved at the selected aperture, shutter speed will be displayed in red when the shutter button is pressed halfway. Adjust aperture until the correct exposure is achieved.

**** Caution

If the subject is outside the metering range of the camera, the shutter speed display will show "---". Press the shutter button halfway to measure exposure again.

M MANUAL

In this mode, you choose both shutter speed and aperture. If desired, exposure can be altered from the value suggested by the camera.

1 Rotate the mode dial to **M**. Shutter speed and aperture will be displayed.



Shutter speed

Aperture

2 Rotate the command dial to choose the shutter speed.



**** Caution

Noise in the form of randomly-spaced bright pixels may occur in long exposures.

3 Press the **☑** button and rotate the command dial to choose the aperture.



4 Take pictures.


The Exposure Indicator

The amount the picture will be under- or over-exposed at current settings is shown by the exposure indicator.



C1, C2 CUSTOM MODES

 
In **P**, **S**, **A**, and **M** modes and all modes except modes except modes except modes except modes except modes except modes. The shooting menu (pg. 75) can be used to save current camera and menu settings. These settings are recalled whenever the mode dial is rotated to the corresponding custom mode (**C1** or **C2**).



CUSTOM SET


The CUSTOM SET option in the shooting menu stores the following settings:

 - Shooting menu: ① EXR MODE, M IMAGE SIZE, M IMAGE QUALITY, M DYNAMIC RANGE, D FILM SIMULATION, M WB FINE TUNE, M COLOR, T TONE, S SHARPNESS, N NOISE REDUCTION, M AF MODE, M AE BKT EV STEPS, M FLASH, M EXTERNAL FLASH, M HIGH-SPEED SHOOTING
- Setup menu: A AF ILLUMINATOR, A CCD-RAW
- Camera controls: ISO, white balance, burst mode, macro mode, digital zoom, flash mode, exposure compensation, Intelligent Face Detection, monitor display options (DISP/BACK button)



Playback Options

 To view the most recent picture in the monitor, press the **D** button.





Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.

← Note

Playback Zoom

Press the selector up to zoom in on pictures displayed in single-frame playback; down to zoom out.

Press selector down to zoom out



Press selector up to zoom in



To view areas of the image not currently visible in the display, press the selector left or right and then use the selector to scroll to the desired location.





Navigation window shows portion of image - currently displayed in monitor

Press **DISP/BACK** to exit zoom.

← Note

Playback zoom is not available with cropped copies saved at a size of 640 or copies created with **ERE-SIZE** (pg. 90).

Intelligent Face Detection


Pictures taken with Intelligent Face Detection (pg. 22) are indicated by a icon. Press the button to zoom in on the subject selected with Intelligent Face Detection. You can then use the zoom control to zoom in and out.



Multi-Frame Playback

To change the number of images displayed, press DISP/BACK when a picture is shown full-frame in the monitor



 

Indicators hidden

Indicators displayed Sort by date 1 frame w/ prev. & next Microthumbnail 9 frames 2 frames

Use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.

▼ Tip: Two-Frame Display

Two-frame display can be used to compare pictures taken in 🐠 🕏 mode.



Sort by Date

Choose sort-by-date mode to view pictures taken on a selected date.

1 Press **DISP/BACK** until the sort-by-date screen is displayed.



2 Use the selector up or down to highlight a date. Keep the selector pressed to scroll rapidly to the desired date.





Press the selector left or right to scroll through the pictures taken on the highlighted date. Keep the selector pressed to scroll rapidly to the desired frame.

 


m Deleting Pictures

The **ERASE** option in the playback menu can be used to delete still pictures and movies, increasing the amount of space available on the memory card or in internal memory (for information on deleting pictures in single-frame playback, see page 21). *Note that deleted pictures can not be recovered. Copy important pictures to a computer or other storage device before proceeding.*

1 Press **MENU/OK** to display the playback menu.






2 Press the selector up or down to highlight **ERASE**.



 3 Press the selector right to display delete options.





4 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



5 Press **MENU/OK** to display options for the selected item (pg. 57).



▼ Tips: Deleting Pictures

- When a memory card is inserted, pictures will be deleted from the memory card; otherwise, pictures will be deleted from internal memory.
- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete (pg. 88).
- If a message appears stating that the selected images are part of a DPOF print order, press MENU/OK to delete the pictures.

■ FRAME: Deleting Selected Images

Selecting **FRAME** displays the dialog shown at right.



Press the selector left or right to scroll through pictures and press **MENU/OK** to delete the current picture (the picture is deleted immediately; be careful not delete the wrong picture).



Press **DISP/BACK** to exit when all the desired pictures have been deleted

■ ALL FRAMES: Deleting All Images

Selecting **ALL FRAMES** displays the confirmation shown at right.



Highlight **OK** and press **MENU/ OK** to delete all unprotected pictures.



The dialog shown at right is displayed during deletion. Press **DISP/BACK** to cancel before all pictures have been deleted (any pictures deleted before the button was pressed can per



the button was pressed can not be recovered).

Viewing Photo Information

To view the photo information listed below in single-frame playback, press **2**.

 




- ① Dynamic range, ② Image size and quality,
- ③ Sensitivity, ④ Shutter speed/aperture,
- ⑤ Film simulation, ⑥ Flash mode, ⑦ White balance,
- 8 Exposure compensation, 9 Frame number,
- 1 Picture (overexposed areas blink on and off),
- ① Histogram

Histograms

Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.



Shadows

Highlights

Optimal exposure: Pixels are distributed in an even curve throughout the tone range.

Overexposed: Pixels are clustered at the right side of the graph.

Underexposed: Pixels are clustered at the left side of the graph.







Recording Movies

Shoot short movies at 30 frames per second. Sound is recorded via the built-in microphone; do not cover the microphone during recording.

Rotate the mode dial to 2 (movie mode).



Press the shutter button all the way down to start recording.



 


Display shows time available




■ Tip

There is no need to keep the shutter button pressed during recording.



To choose the frame size, press MENU/0Kand select **€ QUALITY**. Choose **640** (640×480 pixels) for better quality, 320 (320×240 pixels) for longer movies. Press MENU/OK to return to movie recording mode.



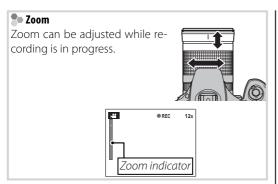

3 Press the shutter button halfway to end recording. Recording ends automatically when the movie reaches maximum length or memory is full.



- Focus, exposure, and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from those displayed before recording begins.
- Movies are recorded as monaural motion JPEG files.
- If the subject is poorly lit, the AF-assist lamp may light to assist the focus operation. To turn the AF-assist lamp off, select OFF for the AF ILLUMINATOR option in the setup menu (pg. 96).

**** Caution

- The indicator lamp lights while movies are being recorded. Do not open the battery chamber cover during shooting or while the indicator lamp is lit. Failure to observe this precaution could prevent the movie from being played back.
- The lens may make a noise when the camera focuses during recording.

▶ Viewing Movies

During playback, movies are displayed in the monitor as shown at right. The following operations can be performed while a movie is displayed:



Operation	Description
Start/pause playback	Press the selector down to start playback. Press again to pause. To delete the movie, press the 面 (AE-L) button while the movie is paused.
End playback	Press the selector up to end playback.
Advance/ rewind	Press the selector right to advance, left to rewind. If playback is paused, the movie will advance or rewind one frame each time the selector is pressed.
Adjust volume	Press MENU/OK to pause playback and display volume controls. Press the selector up or down to adjust the volume; press MENU/OK again to resume playback.

Progress is shown in the monitor during play-back.



₹ Tip: Viewing Movies on a Computer

 
Copy movies to the computer before viewing.

**** Cautions

- Do not cover the speaker during playback.
- Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

Viewing Pictures on TV

Connect the camera to a TV and tune the television to the video channel to show pictures to a group. The supplied A/V cable connects as shown below. Turn the camera off before connecting the cable.



Turn the camera on and press **b** button. The camera monitor turns off and pictures and voice memos are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

← Note

Image quality drops during movie playback.

**** Caution

When connecting the cable, be sure the connectors are fully inserted.

Printing Pictures via USB

If the printer supports PictBridge, the camera can be connected directly to the printer and pictures can be printed without first being copied to a computer. Note that depending on the printer, not all the functions described below may be supported.



Connecting the Camera

Connect the supplied USB cable as shown and turn the printer on.



1 Turn the camera on and press **D** button. **USB** will be displayed in the monitor, followed by the PictBridge display shown below at right.



Printing Selected Pictures

Press the selector left or right to display a picture you wish to print.



To print one copy of the current picture, proceed directly to Step 3.

Press the selector up or down to choose the number of copies (up to 99). Repeat steps 1-2 to select additional pictures.



? Press **MENU/OK** to display a confirmation dialog.







⚠ Press MENU/OK to start printing.



▼ Tip: Printing the Date of Recording

To print the date of recording on pictures, press **DISP/BACK** in steps 1–2 to display the PictBridge menu (see "Printing the DPOF Print Order," below). Press the selector up or down to highlight **PRINT WITH DATE** and press **MENU/OK** to return to the PictBridge display (to print pictures without the date of recording, select **PRINT WITHOUT DATE**). To ensure that the date is correct, set the camera clock before taking pictures. Note that the **PRINT WITH DATE** option is only available with printers that support date printing.

★ Notes

- Use an optional AC adapter and DC coupler to power the camera for extended periods.
- Print pictures from internal memory or a memory card that has been formatted in the camera.
- Default printer page size and print quality settings are used when printing via direct USB connection.

During Printing

The message shown at right is displayed during printing. Press DISP/BACK to cancel before all pictures are printed (depending on the printer, printing may end before the current picture has printed).



If printing is interrupted, turn the camera off and then on again.

Disconnecting the Camera

Confirm that the above message is not displayed and turn the camera off. Disconnect the USB cable.

Printing the DPOF Print Order

To print the print order created with **PRINT ORDER (DPOF)** in the playback menu (pg. 85):

1 In the PictBridge display, press **DISP/ BACK** to open the PictBridge menu.



2 Press the selector up or down to highlight **PRINT DPOF**.





3 Press **MENU/OK** to display a confirmation dialog.





4 Press **MENU/OK** to start printing.



Creating a DPOF Print Order

The PRINT ORDER (DPOF) option in the play-back menu can be used to create a digital "print order" for PictBridge-compatible printers (pg. 65) or devices that support DPOF.

DPOF

DPOF (Digital Print Order Format) is standard that allows pictures to be printed from "print orders" stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.

■ WITH DATE /WITHOUT DATE

To modify the DPOF print order, select PRINT ORDER (DPOF) in the playback menu and press the selector up or down to highlight WITH DATE or WITHOUT DATE.



WITH DATE : Print date of recording on pictures.

 
• **WITHOUT DATE**: Print pictures without date.

Press MENU/OK and follow the steps below.

1 Press the selector left or right to display a picture you wish to include in or remove from the print order.



2 Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.



■ Tip: Intelligent Face Detection

If the current picture was created with Intelligent Face Detection, pressing 2 sets the number of copies to the number of faces detected.

- Repeat steps 1–2 to complete the print order. Press MENU/OK to save the print order when settings are complete, or **DISP/BACK** to exit without changing the print order.
- ▲ The total number of prints is displayed in the monitor. Press MENU/ **OK** to exit.



The pictures in the current print order are indicated by a icon during playback.



■ RESET ALL

To cancel the current print order, select **RESET ALL** in the PRINT ORDER (DPOF) menu. The confirmation shown at right will be displayed; press



MENU/OK to remove all pictures from the order.

← Notes

- Remove the memory card to create or modify a print order for the pictures in internal memory.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted con- ■RESET DPOF OK? taining a print order created by another camera, the message shown at right will be displayed. Pressing **MENU/OK** cancels the print order; a new print order must be created as described above



Viewing Pictures on a Computer

The supplied FinePixViewer software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install FinePixViewer as described below. Do NOT connect the camera to the computer until installation is complete.

Installing FinePixViewer

FinePixViewer is available in Windows and Macintosh versions. Installation instructions for Windows are on pages 68–69, those for the Macintosh on pages 70–71.

Installing FinePixViewer: Windows

1 Confirm that the computer meets the following system requirements:

OS	Preinstalled versions of Windows Vista, Windows XP Home Edition (Service Pack 2), Windows XP Professional (Service Pack 2), or Windows 2000 Professional (Service Pack 4)
CPU	Windows Vista: 800 MHz Pentium 4 or better (3 GHz Pentium 4 or better recommended) Windows XP: 800 MHz Pentium 4 or better (2 GHz Pentium 4 or better recommended)
CI U	• Windows 2000: 200 MHz Pentium or better
	• Windows Vista: 512 MB or more (1 GB or more recommended)
RAM	• Windows XP: 512 MB or more
	• Windows 2000: 128 MB or more
Free disk	A minimum of 450 MB required for installation with 600 MB available when FinePixViewer is running (15 GB or
space	more recommended under Windows Vista, 2 GB or more recommended under Windows XP)
Video	800×600 pixels or more with 16-bit color or better (1,024 \times 768 pixels or more with 32-bit color recommended)
Other	 Built-in USB port recommended. Operation is not guaranteed other USB ports. Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option.

**** Caution

For information about Windows 7, visit http://www.fujifilm.com/support/download/camera/software/. Other versions of Windows are not supported. Operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

- **2** Start the computer. Log in to an account with administrator privileges before proceeding.
- **3** Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

Windows Vista

If an AutoPlay dialog is displayed, click **SETUP.exe**. A "User Account Control" dialog will then be displayed; click **Allow**

The installer will start automatically; click **Installing FinePixViewer** and follow the on-screen instructions to install FinePixViewer. Note that the Windows CD may be required during installation.

■ If the Installer Does Not Start Automatically

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu (Windows Vista/XP) or double-click the **My Computer** icon on the desktop (Windows 2000), then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **SETUP** or **SETUP.exe**.

- **4** If prompted to install Windows Media Player or DirectX, follow the on-screen instructions to complete installation.
- **5** When prompted, remove the installer CD from the CD-ROM drive and click **Restart** to restart the computer. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.

Installation is now complete. Proceed to "Connecting the Camera" on page 72.

Installing FinePixViewer: Macintosh

1 Confirm that the computer meets the following system requirements:

CPU	PowerPC or Intel	
ΛC	Pre-installed versions of Mac OS X version 10.3.9–10.5	
	(for the latest information, visit http://www.fujifilm.com/)	
RAM	256 MB or more	
Free disk space	A minimum of 200 MB required for installation with 400 MB available when FinePixViewer is running	
Video	800×600 pixels or more with thousands of colors or better	
	Built-in USB port recommended. Operation is not guaranteed other USB ports.	
Other	Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet	
	connection and e-mail software required to use e-mail option.	

- After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive. Double-click the **FinePix CD** icon on the desktop and double-click **Installer for Mac OS X**.
- **3** An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

- 4 Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.
- **5** Select **Applications** in the Finder **Go** menu to open the applications folder. Double-click the **Image Capture** icon and select **Preferences...** from the Image Capture application menu.

About Image Cupture

And Image Cupture

Mide Image Cupture

Model Image

The Image Capture preferences dialog will be displayed. Choose **Other...** in the **When a camera is connected, open** menu, then select **FPVBridge** in the "Applications/FinePixViewer" folder and click **Open**.



Select **Quit Image Capture** from the Image Capture application menu.

Installation is now complete. Proceed to "Connecting the Camera" on page 72.

Connecting the Camera

1 If the pictures you wish to copy are stored on a memory card, insert the card into the camera (pg. 11). If no card is inserted, pictures will be copied from internal memory.

**** Caution

Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Charge the battery before connecting the camera.

2 Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.



3 Turn the camera on and press ▶ button. FinePixViewer will start automatically and the "Save Image Wizard" will be displayed. Follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.

**** Caution

If FinePixViewer does not start automatically, the software may not be correctly installed. Disconnect the camera and reinstall the software.

For more information on using FinePixViewer, select **How to Use FinePixViewer** in the FinePixViewer **Help** menu.

← Note

The camera will not turn off automatically while connected to a computer.

N Cautions

- Use only memory cards that have been formatted in the camera and contain pictures taken with the camera. If a memory card containing a large number of images is inserted, there may be a delay before FinePixViewer starts and FinePixViewer may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure the indicator lamp is out before turning the camera off, disconnecting the USB cable. Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- Disconnect the camera before inserting or removing memory cards.
- Use FinePixViewer to copy voice memos.
- In some cases, it may not be possible to access pictures saved to a network server using FinePixViewer in the same way as on a standalone computer.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

Disconnecting the Camera

After confirming that the indicator lamp is out, follow the on-screen instructions to turn the camera off and disconnect the USB cable.

Updating FinePixViewer

The latest version of FinePixViewer can be downloaded from http://www.fujifilm.com/.

Uninstalling FinePixViewer

Only uninstall FinePixViewer before reinstalling the software or when it is no longer required. After quitting FinePixViewer and disconnecting the camera, drag the "FinePixViewer" folder from "Applications" into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use "Programs and Features" (Windows Vista) or "Add or Remove Programs" (other versions of Windows) to uninstall FinePixViewer, FinePix Resource, and FinePix Studio. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

Using the Menus: Shooting Mode

 
The shooting menu is used to adjust settings for a wide range of shooting conditions.

Using the Shooting Menu

1 Press **MENU/OK** to display the shooting menu.









3 Press the selector right to display options for the highlighted item.



4 Press the selector up or down to highlight the desired option.



5 Press **MENU/OK** to select the highlighted option.



6 Press DISP/BACK to exit.



Shooting Menu Options

Menu item	Description	Options	Default
SCENE POSITION	Choose a scene for SP mode (pg. 44).	1	l <u>®</u> ₽
EXR MODE	Choose options for EXR mode (pg. 41).	EXG/6/6/	EXR
ISO 150	Adjust ISO sensitivity (pg. 38). Choose higher values when the subject is poorly lit.	AUTO / AUTO (3200) / AUTO (1600) / AUTO (800) / AUTO (400) / 12800 / 6400 / 3200 / 1600 / 800 / 400 / 200 / 100	AUTO
■ IMAGE SIZE	Choose image size and aspect ratio (pg. 77).	4:3/ 3:2/ 16:9/ M 4:3/ M 3:2/ M 16:9/ S 4:3/ S 3:2/ S 16:9	4:3
MAGE QUALITY	Choose image quality (pg. 78).	F/N	N
DROG DYNAMIC RANGE	Enhance details in highlights for natural contrast (pg. 78).	AUTO / R100 / R200 / R400 / R800	AUTO
FILM SIMULATION	Simulate the effects of different types of film (pg. 79).	Sior/Vr/Sr/Br/Sim	<u> </u>
KWB WB FINE TUNE	White balance can be fine-tuned using this option. Adjustments can be made in the range +3 to −3.	-3/-2/-1/0/+1/+2/+3	0
Color COLOR	Adjust color density.	HIGH/MID/LOW	MID
Tone TONE	Adjust contrast.	HARD/STD/SOFT	STD
SHARPNESS	Choose whether to sharpen or soften outlines.	HARD/STD/SOFT	STD
NOISE REDUCTION	Choose the amount of noise reduction.	HIGH/STD/LOW	STD


Menu item	Description	Options	Default
■ AF MODE	Choose how the camera selects a focus area (pg. 80).	围/ 于 /砂	Ð
☑ AE BKT EV STEPS	Choose the size of the bracketing increment when the is selected in continuous shooting mode (pg. 81).		±1/3 EV
⊞ FLASH	Adjust flash brightness (pg. 81).	-⅓ EV - +⅓ EV in steps of ⅓ EV	0
EXTERNAL FLASH	Choose when using a optional flash (pg. 82).	ON/OFF	OFF
■ HIGH-SPEED SHOOTING	Choose for quick shutter response (pg. 83).	ON/OFF	OFF
2 CUSTOM SET	Save settings for P , S , A , M , and all except modes (pg. 51).	_	

← Note

Some options are not available in all shooting modes.

IMAGE SIZE

 Choose the size and aspect ratio at which still pictures are recorded. Large pictures can be printed at large sizes with no drop in quality; small pictures



require less memory, allowing more pictures to be recorded.

Option	Prints at sizes up to
4:3	34×25 cm (13.5×10 in.)
3:2	34×23 cm (13.5×9 in.)
1 6:9	34×19 cm (13.5×7.5 in.)
M 4:3	24×18 cm (9.5×7 in.)
M 3:2	24×16 cm (9.5×6 in.)
M 16:9	24 × 13 cm (9.5 × 5.5 in.)
§ 4:3	17×13 cm $(7 \times 5$ in.)
\$ 3:2	17 × 12 cm (7 × 4.5 in.)
S 16:9	17×9 cm (7×3.5 in.)

The number of pictures that can be taken at current settings (pg. 118–119) is shown to the right of the image quality icon in the display.

Aspect Ratio

Pictures with an aspect ratio of 4:3 have the same proportions as the camera display. Pictures with an aspect ratio of 3:2 have the same proportions as a frame of 35-mm film, while an aspect ratio of 16:9 is suited to display on High Definition (HD) devices.



4:.





16:9

← Note

★ IMAGE SIZE is not reset when the camera is turned off or another shooting mode is selected.

MAGE QUALITY

Choose how much image files are compressed. Select **FINE** (low compression) for higher image quality, **NORMAL** (high compression) to increase the



number of pictures that can be stored.

DRIII DYNAMIC RANGE

Control contrast. Higher values are recommended for scenes that include both sunlight and deep shade or for increased contrast when photograph-



ing such subjects as sunlight on water, brightly-lit autumn leaves, and portraits taken against a blue sky; note, however, that mottling may appear in pictures taken at higher values. If **AUTO** is selected, the camera will automatically select values between 100% and 400% in response to shooting conditions.

← Note

RANGE is selected in **EXX MODE**.

FILM SIMULATION


Simulate the effects of different types of film, including sepia and black-and-white.



Option	Description	
STOP PROVIA/	Standard color reproduction. Suited	
STANDARD	to a wide range of subjects, from por-	
STANDARD	traits to landscapes.	
▼ Velvia/	A high-contrast palette of saturated	
VIVID	colors, suited to nature photographs.	
S # ASTIA/	A soft-toned palette of less saturated	
SOFT	colors.	
Ē ⊯ B&W	Take pictures in black and white.	
SEPIA	Take pictures in sepia.	

WB FINE TUNE

 Press the selector up or down to fine-tune white balance on the selected color axis (Red-Cyan or Blue-Yellow) by +3 to -3 in increments of one. Press **MENU/OK** to select.



I AF MODE

This option controls how the camera selects the focus area. Regardless of the option selected, the camera will focus on the subject in the center of the monitor when macro mode is on (pg. 27).

• 🔟 **CENTER**: The camera focuses on the subject in the center of the frame. This option can be used with focus lock.



• F MULTI: When the shutter button is pressed halfway, the camera detects high-contrast subjects near the center of the frame and selects the focus area automatically (if the focus frame is not displayed, select **■ CENTER** and use focus lock; pg. 24).







• **AREA**: The focus position can be chosen manually by pressing the selector up, down, left, or right while pressing the **I** button. Press the shutter button half-



Focus target

way to focus on the subject in the focus target.

☐ AE BKT EV STEPS

Choose the size of the exposure bracketing increment used when (AE bracketing) is selected in continuous shooting. Choose from increments of



 $\pm \frac{1}{3}$ EV, $\pm \frac{2}{3}$ EV, and ± 1 EV (for an explanation of the term "EV," see the Glossary on page 116).

理 FLASH

Adjust flash brightness. Choose from values between $+\frac{2}{3}$ EV and $-\frac{2}{3}$ EV (the default setting is ± 0). Note that the desired results may not be achieved de-



pending on shooting conditions and the distance to the subject.

™ EXTERNAL FLASH

Choose **ON** when using an optional flash unit mounted on the camera hot shoe.



**** Cautions

- Maximum shutter speed is 1/4000 s. The flash may not fully light the subject at speeds faster than 1/1000 s.
- Use auto or custom white balance (pg. 39).
- If the built-in flash is raised when **ON** is selected for **EXTERNAL FLASH**, the built-in flash will fire once to provide a signal for the optional flash unit to fire.

← Note

The camera can be used with flash units that provide aperture adjustment, external metering, and sensitivity control. Some flash units that are designed specifically for other cameras can not be used.

Using an Optional Flash Unit

 
1 Select **ON** for **EXTERNAL FLASH**.



2 Lower the built-in flash and mount the optional flash unit on the camera hot shoe. Tighten the locking screw.



Rotate the mode dial to P, S, A, M, C1, C2, FSB, or RESOLUTION PRIORITY and HIGH ISO & LOW NOISE only).



4 Adjust flash settings as described in the manual provided with the optional flash unit. TTL mode is not supported; choose external flash sync mode and set sensitivity (pg. 38) and aperture to the values selected with the camera.

団 HIGH-SPEED SHOOTING

Selecting **ON** reduces focusing time, ensuring a quick shutter response.



Using the Menus: Playback Mode

Using the Playback Menu

1 Press **•** to enter playback mode (pg. 14).



2 Press **MENU/OK** to display the playback menu.



PLAYBACK MENU 1/2

THE ERASE

SUBSIDE SHOW

SUBSIDE SHOW

MAGE ROTATE

PUMAGE ROTATE

PROFECT

COP

BACK) SKIT

3 Press the selector up or down to highlight the desired menu item.



4 Press the selector right to display options for the highlighted item.





5 Press the selector up or down to highlight the desired option.



6 Press **MENU/OK** to select the highlighted option.



7 Press **DISP/BACK** to exit.



Playback Menu Options

The following options are available:

Option	Description	
iii ERASE	Delete all or selected pictures (pg. 56).	
■ SLIDE SHOW	View pictures in a slide show (pg. 86).	
	Create copies with reduced red eye (pg. 86).	
2 IMAGE ROTATE	Rotate pictures (pg. 87).	
○ PROTECT	Protect pictures from accidental deletion (pg. 88).	
□ CROP	Create cropped copies of pictures (pg. 89).	
RESIZE	Create small copies of pictures (pg. 90).	
COPY COPY	Copy pictures between internal memory and a memory card (pg. 90).	
₽ VOICE MEMO	Add voice memos to pictures (pg. 92).	
PRINT ORDER (DPOF)	Select pictures for printing on DPOF- and PictBridge-compatible devices (pg. 65).	

園 SLIDE SHOW


View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to view onscreen help. When a movie is displayed, movie playback will begin automatically, and the slide show will continue when the movie ends. The show can be ended at any time by pressing **MENU/OK**.

Option	Displayed in
NORMAL	Press selector left or right to go back or skip ahead one frame. Select FADE-IN
FADE-IN	for fade transitions between frames.
NORMAL 🖭	As above, except that camera automatically zooms in on faces selected with
FADE-IN 🙎	Intelligent Face detection.
MULTIPLE	Display several pictures at once.

← Note

The camera will not turn off automatically while a slide show is in progress.

 
™ RED EYE REMOVAL



- Red eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Red eye removal can not be performed on RAW images.

MAGE ROTATE

 By default, pictures taken in tall orientation are displayed in wide orientation. Use this option to display pictures in the correct orientation in the



monitor. It has no effect on pictures displayed on a computer or other device.


← Notes

- Protected pictures can not be rotated. Remove protection before rotating pictures (pg. 88).
- The camera may not be able to rotate pictures created with other devices.

To rotate a picture, play the picture back and select **2 IMAGE ROTATE** in the playback menu.

1 Press the selector down to rotate the picture 90° clockwise, up to rotate the picture 90° counterclockwise.



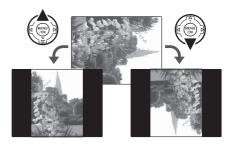

2 Press **MENU/OK** to confirm the operation (to exit without rotating the picture, press **DISP/BACK**).



The next time the picture is played back, it will automatically be rotated.

PROTECT

Protect pictures from accidental deletion. The following options are available.

■ FRAME

Protect selected pictures.

1 Press the selector left or right to display the desired picture.







Picture not protected

Protected picture

2 Press **MENU/OK** to protect the picture. If the picture is already protected, pressing **MENU/OK** will remove protection from the image.



3 Repeat steps 1–2 to protect additional images. Press **DISP/BACK** to exit when the operation is complete.



■ SET ALL

Press **MENU/OK** to protect all pictures, or press **DISP/BACK** to exit without changing picture status.



■ RESET ALL

Press **MENU/OK** to remove protection from all pictures, or press **DISP/BACK** to exit without changing picture status.



If the number of pictures affected is very large, the display at right will appear in the monitor while the operation is in progress. Press **DISP/BACK** to exit before the operation is complete.



N Caution

Protected pictures will be deleted when the memory card or internal memory is formatted (pg. 98).

CROP

To create a cropped copy of a picture, play the picture back and select **CROP** in the playback menu (pg. 85).

1 Press the selector up or down to zoom the image in and out, then press the selector left or right to exit zoom and use the selector to scroll the picture until the desired portion is displayed (to exit to single-frame playback without creating a cropped copy, press DISP/BACK).





Navigation window shows portion of image currently displayed in monitor

If the size of the final copy will be **640**, **OK** will be displayed in yellow.

If the picture was shot with Intelligent Face Detection (pg. 20), ☑ will be displayed in the monitor. Press the ☑ button to zoom in on the selected face



2 Press **MENU/OK**. A confirmation dialog will be displayed.





Copy size (M, S, or 640) is shown at the top. Larger crops produce larger copies; all copies have an aspect ratio of 4:3.

Press **MENU/OK** to save the cropped copy to a separate file.



RESIZE

To create a small copy of a picture, play the picture back and select **RESIZE** in the playback menu (pg. 85).



Press the selector up or down to highlight 640 STANDARD or 820 SMALL.



2 Press **MENU/OK** to select the highlighted option.



3 Press **MENU/OK** to copy the picture at the selected size.



MY COPY

Copy pictures between internal memory and a memory card.

- Press the selector up or down to highlight INTERNAL MEMORY → INTERNAL MEMORY → INTERNAL MEMORY (copy pictures from a memory card to internal memory).
- **2** Press the selector right to display options for the highlighted item.





3 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



4 Press MENU/OK.



■ Tip: Copying Pictures Between Memory Cards

To copy pictures between two memory cards, insert the source card and copy the pictures to internal memory, then remove the source card, insert the destination card, and copy the pictures from internal memory.

■ FRAME

Copy selected frames.



Press the selector left or right to display the desired picture.



2 Press **MENU/OK** to copy the picture.



3 Repeat steps 1–2 to copy additional images. Press **DISP/BACK** to exit when the operation is complete.



ALL FRAMES

Press **MENU/OK** to copy all pictures, or press **DISP/BACK** to exit without copying pictures.



Cautions

 
- Copying ends when the destination is full.
- DPOF print information is not copied (pg. 66).

VOICE MEMO

To add a voice memo to a still picture, select **VOICE MEMO** after displaying the picture in playback mode.


Voice memos can not be added to movies or protected pictures. Remove protection from pictures before recording voice memos (pg. 88).

1 Hold the camera at a distance of about 20 cm (8 in.) and face the microphone.



2 Press **MENU/OK** to start recording.



 

3 Press **MENU/OK** again to end recording. Recording ends automatically after 30 seconds.





← Notes

 
 If a voice memo already exists for the current picture, the options at right will be displayed. Select RE-REC to replace the existing memo.



• Voice memos are recorded as PCM-format WAV files (pg. 117).

Playing Voice Memos

Pictures with voice memos are indicated by a **Q** icon during playback. To play the voice memo, press the selector down. To pause, press the selector down again; to end playback, press the selector up. Press the selector left to rewind, right to fast forward. Volume controls can be displayed by pressing the **MENU/OK** button; press the selector up or down to adjust the volume, and press **MENU/OK** again to resume playback.




← Note

The camera may not play voice memos recorded with other devices.

N Caution

 Do not cover the speaker during playback.



The Setup Menu

Using the Setup Menu

- 1 Display the setup menu.
 - **1.1** Press **MENU/OK** to display the menu for the current mode.



1.2 Press the selector left to highlight the tab for the current menu.



1.3 Press the selector down to highlight the setup menu tab ().

 




1.4 Press the selector right to place the cursor in the setup menu.







2.1 Press the selector up or down to highlight a menu item.



2.2 Press the selector right to display options for the highlighted item.





2.3 Press the selector up or down to highlight an option.



2.4 Press **MENU/OK** to select the highlighted option.



3 Press **DISP/BACK** to exit.



Setup Menu Options

Menu item	Description	Options	Default
DATE/TIME	Set the camera clock.	_	_
TIME DIFFERENCE	Set the clock to local time (pg. 97).	☆ / +	⇧
® 言語/LANG.	Choose a language.	See page 122	ENGLISH
SILENT MODE	Select ON in situations in which camera sounds or lights may be unwelcome (pg. 19).	ON/OFF	OFF
© RESET	Reset all settings except ODATE/TIME , TIME DIFFERENCE , BACKGROUND COLOR , and WIDEO SYSTEM to default values. A confirmation dialog will be displayed, press the selector left or right to highlight OK and press MENU/OK .	_	_
FORMAT	Format internal memory or memory cards (pg. 98).	=	_
☑ IMAGE DISP.	Choose how long pictures are displayed after shooting (pg. 98).	CONT/3 SEC/1.5 SEC/ ZOOM/OFF	1.5 SEC
FRAME NO.	Choose how files are named (pg. 99).	CONT./RENEW	CONT.
OPERATION VOL.	Adjust the volume of camera controls. Adjust the volume of the shutter sound.	• (••) (high) / • (••) (mid) / • (•• (low) / • (OFF (mute)	I (1)
PLAYBACK VOLUME	Adjust the volume for movie and voice memo playback (pg. 100).		7
LCD BRIGHTNESS	Control the brightness of the display (pg. 100).	_	0
■ EVF/LCD MODE	Choose 30 fps to increase battery life, 50 fps for improved display quality.	30 fps / 50 fps	50 fps
AUTO POWER OFF	Choose the auto power off delay (pg. 100).	5 MIN/2 MIN/OFF	2 MIN
DUAL IS MODE	Choose when image stabilization is performed (pg. 18). Select OFF when using a tripod.	(4))1/(4))2/OFF	((山))) ₁

Menu item	Description	Options	Default
	Create copies with reduced red eye (pg. 29).	ON/OFF	ON
A≦ AF ILLUMINATOR	Turn the AF-assist illuminator on or off (pg. 24).	ON/OFF	ON
AE-LOCK MODE	If AE-L 1 is selected, exposure will lock while the AE-L button is pressed. If AE-L 2 is selected, exposure will lock while the AE-L button is pressed and remain locked until the button is pressed again (pg. 26).	AE-L 1 / AE-L 2	AE-L1
CCD-RAW	Choose RAW+JPG or RAW to record RAW pictures (note that because RAW data are not processed on the camera, processing must be performed after the pictures are copied to a computer; pg. 101). If RAW+JPG is selected, JPEG copies will also be recorded. Choose OFF to record pictures in JPEG format only.		
■ FOCUS CHECK	ON/OFF	ON	
■ SAVE ORG IMAGE	Choose whether to save unprocessed copies of pictures taken using red-eye removal.	ON/OFF	OFF
BACKGROUND COLOR	Choose a color scheme for menus and cursors.	_	_
GUIDANCE DISPLAY Choose whether to display tool tips.		ON/OFF	ON
₩ VIDEO SYSTEM	Choose a video mode for connection to a TV (pg. 62).	NTSC/PAL	_
C. CUSTOM RESET	Reset all settings for mode C . A confirmation dialog will be displayed; press the selector left or right to highlight OK and press MENU/OK .	C1/C2	C1

TIME DIFFERENCE

When traveling, use this option to switch the camera clock instantly from your home time zone to the local time at your destination.

- **1** Specify the difference between local time and your home time zone.
 - **1.1** Press the selector up or down to highlight **← LOCAL**.



1.2 Press the selector right to display the time difference.





1.3 Press the selector left or right to highlight +, -, hours, or minutes; press up or down to edit. The minimum increment is 15 minutes.



1.4 Press **MENU/OK** when settings are complete.



 
2 Switch between local time and your home time zone



After changing time zones, check that the date and time are correct.

■ FORMAT

Format internal memory or a memory card. If a memory card is inserted in the camera, will be displayed in the dialog shown at right and this op-



tion will format the memory card. If no memory card is inserted, in will be displayed and this option will format internal memory. Press the selector left to highlight **OK** and press **MENU/OK** to begin formatting.

Cautions

- All data—including protected pictures—will be deleted. Be sure important files have been copied to a computer or other storage device.
- ${\boldsymbol{\cdot}}$ Do not open the battery cover during formatting.

☑ IMAGE DISP.

Choose an option other than **OFF** to display pictures in the monitor after shooting. Pictures can be displayed for 1.5 s (**1.5 SEC**), 3 s (**3 SEC**), or until the **MENU/OK** button is pressed (**CONTINUOUS** and **ZOOM** (**CONTINUOUS**)). If **ZOOM** (**CONTINUOUS**) is selected, photos can be zoomed in to check focus and other fine details (see page 53). Note that **ZOOM** (**CONTINUOUS**) is disabled in continuous shooting (pg. 32) and **★** mode, and that the colors displayed at settings of **1.5 SEC** and **3 SEC** may differ from those in the final picture.

← Note

Pictures taken in continuous shooting are always displayed after shooting.

I FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown at right. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card or internal memory is formatted.



- **CONTINUOUS**: Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
- **RENEW**: Numbering is reset to 0001 after formatting or when a new memory card is inserted.

- If the frame number reaches 999-9999, the shutter release will be disabled (pg. 114).
- Selecting RESET (pg. 95) resets FRAME NO. to CONTINUOUS but does not reset frame numbering.
- Frame numbers for pictures taken with other cameras may differ.

TD PLAYBACK VOLUME

Press the selector up or down to choose volume for movie and voice memo playback and press **MENU/OK** to select.



◯ LCD BRIGHTNESS

Press the selector up or down to choose display brightness and press **MENU/OK** to select.



AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is



selected, the camera must be turned off manually. Note that regardless of the option selected, the camera will not turn off automatically when connected to a printer (pg. 63) or computer (pg. 68) or when a slide show is in progress (pg. 86).

■ Tip: Reactivating the Camera

To reactivate the camera after it has turned off automatically, use the **ON/OFF** button or press the **D** button for about a second (pg. 14).

RAW CCD-RAW

Choose whether to record raw, unprocessed image data directly from the CCD. Select **RAW+JPG** to record both RAW and JPEG copies of all photo-



graphs taken, **RAW** to record only RAW data, or **OFF** to record pictures in JPEG format only.

**** Caution

The following playback options are not available when **RAW** is selected: red-eye removal, cropping, resize, and playback zoom ratios of over 2.5 x.

← Note

A version of FinePixViewer that allows RAW images to be viewed on a computer is scheduled to be available for download from the FUJIFILM website (http://www.fujifilm.com/support/download/camera/software/) from November, 2009.

■ FOCUS CHECK

If **ON** is selected, the center of frame will be magnified in the display to assist focus when the focus ring is rotated in manual focus mode (pg. 36).




The view through the lens is restored when the shutter button is pressed or if no operations are performed for a set period.

**** Caution

Focus check is only available when **30 fps** is selected for **EVF/LCD MODE** (pg. 95). The camera must be in manual focus mode.

Optional Accessories

The camera supports a wide range of accessories from FUJIFILM and other manufacturers.

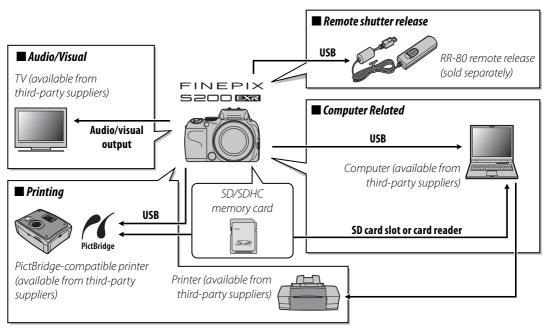

Accessories from FUJIFILM

The following optional accessories are available from FUJIFILM. For the latest information on the accessories available in your region, check with your local FUJIFILM representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.

AC power adapter	AC-84V	Use for extended playback or when copying pictures to a computer (shape of adapter and plug vary with region of sale).	
Rechargeable Li-ion battery	NP-140 (supplied)	Additional NP-140 large-capacity batteries can be purchased as required.	
Remote release	RR-80	Remote shutter release; can be used to reduce camera shake or keep the shutter open during a time exposure.	

Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

■ Water and Sand

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

■ Condensation

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

Cleaning

Use a blower to remove dust from the lens and monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

Traveling

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

Troubleshooting

Power and Battery

rowera	iliu battery			
	Problem	Possible cause	Solution	Page
		The battery is exhausted.	Insert a fresh or fully-charged spare battery.	9
	The camera does	The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	9
	not turn on.	The battery-chamber cover is not latched.	Latch the battery-chamber cover.	9
	not turn on.	The AC adapter and DC coupler are not connected properly.	Make sure that the AC adapter and DC coupler are properly connected.	_
Power		The battery is cold.	Warm the battery by placing it in a pocket or other warm place and re-insert it in the camera immediately before taking a picture.	
supply	The battery runs	There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	
	down quickly.	The camera is in 🌇 mode.	Select another shooting mode.	41
		The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery.	_
		AF-C is selected for focus mode.	Select a different focus mode.	36
	The camera turns off suddenly.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	9
		The AC adapter or DC coupler has been disconnected.	Make sure that the AC adapter and DC coupler are properly connected.	_
	Charging does not	The battery is not correctly inserted.	Re-insert the battery in the charger.	8
	start.	The battery is not in the correct orientation.	Re-insert the battery in the correct orientation.	8
	Charging is slow.	The temperature is low.	Charge the battery at room temperature.	V
Battery		There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	_
charger	The charging lamp lights, but the battery does not	The battery has been charged many times.	The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your FUJIFILM dealer.	_
	charge.	The charger is not correctly plugged into a power outlet.	Plug the charger correctly into the power outlet.	_

Menus and Displays

Problem	Possible cause	Solution	Page
Menus and displays are not	English is not selected for the 💿 言語/LANG.	Soloet ENGLISH	15, 95
in English.	option in the setup menu.	select english .	13, 93

Shooting

	Problem	Possible cause	Solution	Page
		Memory is full.	Insert a new memory card or delete pictures.	11, 56
		Memory is not formatted.	Format the memory card or internal memory.	98
	No picture is taken when the shutter	There is dirt on the memory card contacts.	Clean the contacts with a soft, dry cloth.	_
Taking	button is pressed.	The memory card is damaged.	Insert a new memory card.	11
pictures	battori is pressea.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	9
F		The camera has turned off automatically.	Turn the camera on.	14
	The monitor goes dark after shooting.	The flash has fired.	The monitor may darken while the flash charges. Wait for the flash to charge.	28
	Th	The subject is close to the camera.	Select macro mode.	27
Focus	The camera does not focus.	The subject is far away from the camera.	Cancel macro mode.	1 2/
	not rocus.	The subject is not suited to autofocus.	Use focus lock.	24
EXR AUTO	Image size varies from shot to shot.	is selected for [IMAGE SIZE.	Select another image size or shooting mode.	41, 43, 77

	Problem	Possible cause	Solution	Page
	Face detection not available.	Intelligent Face Detection is not available in the current shooting mode.	Choose a different shooting mode.	41
		The subject's face is obscured by sunglasses, a hat, long hair, or other objects.	Remove the obstructions.	
Intelligent	No face is	The subject's face occupies only a small area of the frame.	Change the composition so that the subject's face occupies a larger area of the frame.	22
Face Detection	detected.	The subject's head is at an angle or the subject is not facing the camera.	Ask the subject to face the camera and hold their head straight.	
		The camera is tilted.	Hold the camera straight.	17
		The subject's face is poorly lit.	Shoot in bright light.	_
	Wrong subject selected.	The selected subject is closer to the center of the frame than the main subject.	Recompose the picture or turn face detection off and frame the picture using focus lock.	22, 24
Close-ups	Macro mode is not available.	Macro mode is not available in the current shooting mode.	Choose a different shooting mode.	41
		The flash is charging.	Wait for the flash to charge.	28
	The flash does	The flash is not available in the current shooting mode.	Choose a different shooting mode.	41
	not fire.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	9
Flack		An option other than OFF is selected for continuous shooting.	Turn continuous shooting off.	32
Flash	Flash mode not available.	The desired flash mode is not available in the current shooting mode.	Choose a different shooting mode.	41
	avaliable.	The camera is in silent mode.	Turn silent mode off.	19
	The flash does	The subject is not in range of the flash.	Position the subject in range of the flash.	122
	not fully light the	The flash window is obstructed.	Hold the camera correctly.	17
	subject.	Fast shutter speed selected.	Choose a slower shutter speed.	48, 50

	Problem	Possible cause	Solution	Page
		The lens is dirty.	Clean the lens.	104
	Pictures are	The lens is blocked.	Keep objects away from the lens.	17
	blurred.	!AF is displayed during shooting and the focus frame is displayed in red.	Check focus before shooting.	112
Problem images		🕼 is displayed during shooting.	Use the flash or a tripod.	28
,	Pictures are mottled.	Slow shutter speed selected and the subject is poorly lit.	Choose a faster shutter speed.	48, 50
	Vertical lines appear in pictures.	The camera has been used continuously at high temperatures.	Turn the camera off and wait for it to cool down.	_
Recording	Pictures are not recorded.	Power was interrupted during shooting.	Turn the camera off before connecting the AC adapter/DC coupler. Leaving the camera on can result in corrupted files or damage to the memory card or internal memory.	_
Continuous	/ '	The self-timer is on and \mathbf{C} or \mathbf{G} is selected for continuous shooting.	Turn the self-timer off.	30

Playback

	Problem	Possible cause	Solution	Page
Pictures	Pictures are grainy.	The pictures were taken with a different make or model of camera.	_	_
rictures	Playback zoom	The pictures were created using TRESIZE or with a different make or model of camera.	_	53, 90
	N. 1	The camera is in silent mode.	Turn silent mode off.	19
No sound in voice memo and movie	memo and movie	Playback volume is too low.	Adjust playback volume.	100
Auulu	playback.	The microphone was obstructed.	Hold the camera correctly during recording.	92
	pia) suciti	The speaker is obstructed.	Hold the camera correctly during playback.	93
Deletion	Selected pictures are not deleted.	Some of the pictures selected for deletion are protected.	Remove protection using the device with which it was originally applied.	88
Frame no.	File numbering is unexpectedly reset.		Turn the camera off before opening the battery- chamber cover.	10, 14, 99

Connections

	Problem	Possible cause	Solution	Page
		The camera is not properly connected.	Connect the camera correctly.	62
	No pieturo or	An A/V cable was connected during movie playback.	Connect the camera once movie playback has ended.	61, 62
	No picture or sound.	Input on the television is set to "TV".	Set input to "VIDEO".	_
TV	Souria.	The camera is not set to the correct video standard.	Match the camera W VIDEO SYSTEM setting to the TV.	96
		The volume on the television is too low.	Adjust the volume.	_
	No color.	The camera is not set to the correct video standard.	Match the camera W VIDEO SYSTEM setting to the TV.	96
Computer	The computer does not recognize the camera.	The camera is not properly connected.	Connect the camera correctly.	72
	Pictures can not	The camera is not properly connected.	Connect the camera correctly.	63
	be printed.	The printer is off.	Turn the printer on.	_
PictBridge	Only one copy is printed.	The printer is not PictPridge compatible		
	The date is not printed.	The printer is not PictBridge-compatible.	_	

Miscellaneous

Problem	Possible cause	Solution	Page
Nothing happens when the shutter button is pressed.		Remove and reinsert the battery or disconnect and reconnect the AC adapter/DC coupler.	9
snutter button is pressed.	The battery is exhausted.	Insert a fresh or fully-charged spare battery.	9
The camera does not function as expected.	Temporary camera malfunction.	Remove and reinsert the battery or disconnect and reconnect the AC adapter/DC coupler. If the problem persists, contact your FUJIFILM dealer.	

Warning Messages and Displays

The following warnings are displayed in the monitor:

Warning	Description	Solution
□ (red)	The battery is low.	Insert a fresh or fully-charged spare battery.
(blinks red)	The battery is exhausted.	linsert a fresh of fully charged spare battery.
j oʻ	Slow shutter speed. Picture may be blurred.	Use the flash or mount the camera on a tripod.
!AF (displayed in red with red focus frame)	The camera can not focus.	 Use focus lock to focus on another subject at the same distance, then recompose the picture (pg. 24). If the subject is poorly lit, try focusing at a distance of about 2 m (6.6ft.). Use macro mode to focus when taking close-ups.
Aperture or shutter speed shown in red	The subject is too bright or too dark. The picture will be over- or under-exposed.	If the subject is dark, use the flash.
FOCUS ERROR		Turn the camera off and then on again, taking care not to
ZOOM ERROR	Camera malfunction.	touch the lens. If the message persists, contact a FUJIFILM
LENS CONTROL ERROR		dealer (pg. 126).
NO CARD	No memory card inserted when MI COPY is selected in the playback menu.	Insert a memory card.
	The memory card or internal memory is not for- matted or the memory card was formatted in a computer or other device.	
CARD NOT INITIALIZED	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 98). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer (pg. 126).

Warning	Description	Solution
640 CAN NOT EXECUTE	An attempt was made to resize a 640 picture.	640 and 820 images can not be resized.
320 CAN NOT EXECUTE	An attempt was made to resize a 320 picture.	and 520 images carriot be resized.
	The memory card is not formatted for use in the camera.	Format the memory card (pg. 98).
CARD ERROR	The memory card contacts require cleaning or the memory card is damaged.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 98). If the message persists, replace the memory card.
	Incompatible memory card.	Use a compatible memory card.
	Camera malfunction.	Contact a FUJIFILM dealer (pg. 126).
SD MEMORY FULL		
MEMORY FULL	1	Delete pictures or insert a memory card with more free
INTERNAL MEMORY IS FULL INSERT A NEW CARD	tures can not be recorded or copied.	space.
	Memory card error or connection error.	Re-insert the memory card or turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer (pg. 126).
WRITE ERROR	Not enough memory remaining to record additional pictures.	Delete pictures or insert a memory card with more free space.
	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 98).
PROTECTED CARD	The memory card is locked.	Unlock the memory card (pg. 11).
BUSY	The memory card is incorrectly formatted.	Use the camera to format the memory card (pg. 98).

Warning	Description	Solution
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999).	Format the memory card and select RENEW for the IDS FRAME NO. option in the IDS SET-UP menu. Take a picture to reset frame numbering to 100-0001, then return to the IDS FRAME NO. menu and select CONTINUOUS .
	The file is corrupt or was not created with the camera.	The file can not be played back.
READ ERROR	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 98). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer (pg. 126).
TOO MANY FRAMES	Date for which more than 4,999 pictures exist selected in sort-by-date view.	Choose a different date.
PROTECTED FRAME	An attempt was made to delete, rotate, or add a voice memo to a protected picture.	Remove protection before deleting, rotating, or adding voice memos to pictures.
■ ERROR	Voice memo file is corrupt.	The voice memo can not be played back.
EKKUK	Camera malfunction.	Contact a FUJIFILM dealer (pg. 126).
SD NO IMAGE	The source device selected in the playback	Select a different source.
■ NO IMAGE	COPY menu contains no pictures.	Select a different source.
640 CAN NOT CROP	An attempt was made to crop a 640 picture.	
CAN NOT CROP	The picture selected for cropping is damaged or was not created with the camera.	These pictures can not be cropped.
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images.	Copy the pictures to internal memory and create a new print order.
CAN NOT SET DPOF	The picture can not be printed using DPOF.	_
CAN NOT SET DPOF	Movies can not be printed using DPOF.	_

Warning	Description	Solution
CAN NOT ROTATE	The picture can not be rotated.	_
CAN NOT ROTATE	Movies can not be rotated.	_
CAN NOT EXECUTE	Red-eye removal can not be applied to the se-	
CAN NOT EXECUTE	lected picture or movie.	
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode.	levit cilant moda hatora choocing a tlach moda or adii icting
COMMUNICATION ERROR	A connection error occurred while pictures were being printed or copied to a computer or other device.	Confirm that the device is turned on and that the USB cable is connected.
PRINTER ERROR	Printer out of paper or ink, or other printer error.	Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.
PRINTER ERROR RESUME?	riffice out of paper of life, of other printer error.	Check printer (see printer manual for details). If printing does not resume automatically, press MENU/OK to resume.
CAN NOT BE PRINTED	An attempt was made to print a movie, a picture	Movies and some pictures created with other devices can not be printed. If the picture was created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.

Glossary

Digital zoom: Unlike optical zoom, digital zoom does not increase the amount of visible detail. Instead, details visible using optical zoom are simply enlarged, producing a slightly "grainy" image.

DP0F (Digital Print Order Format): A standard that allows pictures to be printed from "print orders" stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



EV (Exposure Value): The exposure value is determined by the sensitivity of the image sensor and the amount of light that enters the camera while the image sensor is exposed. Each time the amount of light doubles, EV increases by one; each time the amount of light is halved, EV decreases by one. The amount of light entering the camera can be controlled by adjusting aperture and shutter speed.

Exif Print: A standard that allows information stored with pictures to be used for optimal color reproduction during printing.

JPEG (Joint Photographic Experts Group): A compressed file format for color images. The higher the compression rate, the greater the loss of information and more noticeable drop in quality when the picture is displayed.

Motion JPEG: An AVI (Audio Video Interleave) format that stores sound and JPEG images in a single file. Motion JPEG files can be played in Windows Media Player (requires DirectX 8.0 or later) or QuickTime 3.0 or later.

Smear: A phenomenon specific to CCDs which causes white streaks to appear when very bright light sources, such as the sun or reflected sunlight, appear in the frame.

WAV (Waveform Audio Format): A standard Windows audio file format. WAV files have the extension "*.WAV" and may be compressed or uncompressed. The camera uses uncompressed WAV. WAV files can be played using Windows Media Player or QuickTime 3.0 or later.

White balance: The human brain automatically adapts to changes in the color of light, with the result that objects that appear white under one light source still appear white when the color of the light source changes. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This process is known as "white balance."

Internal Memory/Memory Card Capacity

The following table shows the recording time or number of available frames at different image qualities. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

		4:3		8	3:2		16:9	М	4:3	M	3:2	M	16:9
		FINE	NORMAL										
S	ize (pixels)	4000>	<3000	4000>	< 2664	4000>	×2248	2816	× 2112	2816>	(1864	2816>	< 1584
	File size	4.7 MB	3.0 MB	4.2 MB	2.6 MB	3.5 MB	2.2 MB	2.9 MB	1.5 MB	2.6 MB	1.3 MB	2.2 MB	1.1 MB
	rnal memory oprox. 47 MB)	9	15	11	17	13	21	16	31	18	36	21	42
OS	512 MB	100	160	110	180	130	220	160	330	180	370	220	430
) card	1 GB	200	330	230	370	270	440	330	660	370	740	440	870
ď	2 GB	410	660	460	740	550	880	670	1310	750	1470	880	1720
JHUS	4 GB	830	1330	930	1490	1110	1770	1340	2640	1510	2950	1770	3440
Ϋ́ (8 GB	1680	2670	1880	3000	2240	3550	2700	5290	3030	5920	3550	6910
card	16 GB	3330	5310	3740	5950	4450	7050	5370	10510	6020	11760	7050	13720

		8	4:3	8	3:2	8	16:9				
		FINE	NORMAL	FINE	NORMAL	FINE	NORMAL	RAW	M_RAW ¹	640	320
S	ize (pixels)	2048>	< 1536	2048>	< 1360	1920>	< 1080	_	_	640×480	320×240
	File size	1.6 MB	800 KB	1.4 MB	720 KB	1.0 MB	690 KB	25 MB	13 MB		
	rnal memory oprox. 47 MB)	30	59	34	66	45	68	1	3	42 sec.	83 sec.
QS	512 MB	310	600	350	680	460	700	19	35	7 min.	14 min.
) card	1 GB	620	1210	700	1370	930	1400	40	75	14 min.	28 min.
ᆲ	2 GB	1230	2380	1400	2690	1870	2810	80	150	29 min.	57 min.
SDHC	4 GB	2480	4770	2820	5390	3760	5640	160	310	58 min. ²	114 min. ²
충	8 GB	4980	9570	5650	10820	7540	11310	320	620	116 min. ²	230 min. ²
card	16 GB	9880	19000	11230	21480	14970	22460	630	1230	231 min. ²	457 min. ²

¹ RAW photographs taken in high ISO noise reduction mode are automatically recorded in M_RAW format.

² Total length of all movie files. Individual movies can not exceed 2GB, regardless of capacity of memory card.

Specifications

System	
Model	FinePix S200EXR Digital Camera
Effective pixels	12 million
CCD	1/1.6-in. Super CCD EXR
Storage media	Internal memory (approx. 47 MB) SD/SDHC memory cards (see page 11)
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.2, and Digital Print Order Format (DPOF)
File format	 Still pictures: Exif 2.2 JPEG (compressed); CCD-RAW (original RAF format, special-purpose software required); RAW+JPG available Movies: AVI-format Motion JPEG Audio: monaural WAV
Image size (pixels)	• L 4:3: 4,000×3,000 • L 3:2: 4,000×2,664 • L 16:9: 4,000×2,248 • M 4:3: 2,816×2,112 • M 3:2: 2,816×1,864 • M 16:9: 2,816×1,584 • S 4:3: 2,048×1,536 • S 3:2: 2,048×1,360 • S 16:9: 1,920×1,080
File size	See pages 118–119
Lens Focal length	Fujinon 14.3 × optical zoom lens, F/2.8 (wide angle) – 5.3 (telephoto) f=7.1 mm – 101.5 mm (35-mm format equivalent: 30.5 mm – 436 mm)
Digital zoom	Approx. 2 × (up to 28.6 × when combined with optical zoom)
Aperture	F2.8/F1.1 (wide angle), F5.3/F11 (telephoto), ½ EV increments Manual/Auto selectable
Focus range (distance from front of lens)	
Sensitivity	Standard output sensitivity equivalent to ISO 100, 200, 400, 800, 1600, 3200, 6400 (image size M or S), 12800 (image size S only); AUTO, AUTO (400), AUTO (800), AUTO (1600), AUTO (3200)
Metering	256-segment through-the-lens (TTL) metering; MULTI, SPOT, AVERAGE

System					
Exposure control	Programmed AE (program shift: available); shutter-priority AE; and aperture-priority AE;				
	manual exposure				
Exposure compensation	$-2 \text{EV} - +2 \text{EV}$ in increments of $\frac{1}{3} \text{EV}$ (P , S , A , C1 , C2 , EXR — except EXR — and FSB modes)				
Scene modes	(PRO FOCUS MODE), 📵 (PRO LOW-LIGHT MODE), 🕦 (NATURAL LIGHT),				
	◆ (NATURAL AND FLASH LIGHTING), ◆ (PORTRAIT), ♦ (PORTRAIT ENHANCER), ▲ (LANDSCAPE),				
	🖎 (SPORT), 🖰 (NIGHT), 🥓 (NIGHT (TRIPOD)), 🍥 (FIREWORKS), 📸 (SUNSET), 🐠 (SNOW),				
	⚠ (BEACH), ★ (FLOWER), 🔟 (TEXT)				
Picture stabilization	Optical stabilization (lens shift)				
Intelligent Face Detection	Available				
Shutter speed (combined	• (: 1/15 S - 1/4,000 S • (): 1/8 S - 1/1,000 S • (): 4 S - 1/2 S				
mechanical and electronic	• FSB , P , S , A modes: 4 s – 1/4,000 s • M mode: 30 s – 1/4,000 s				
shutter)	• Other modes: 1/4 S—1/4,000 S				
Continuous	• • up to 1.6 fps; max. 6 frames (max. 3 frames when RAW or RAW+JPG is selected for EM CCD-				
	RAW)				
	• 🛍: up to 5 fps; max. 24 frames				
	• T : up to 1.6fps; last 6 frames recorded (last 3 frames when RAW or RAW+JPG is selected for				
	CCD-RAW)				
	• ॡ : up to 5 fps; last 24 frames recorded				
	• 탑: 3 frames (selected exposure, overexposure, underexposure)				
	• III: 3 frames (PROVIA, Velvia, ASTIA)				
	• 🖪 : 3 frames (100%, 200%, 400%)				
Focus	Mode: Single AF, continuous AF, manual focus with one-press AF				
	Focus-area selection: Center, multi, area				
	Autofocus system: Contrast-detect TTL AF with AF-assist illuminator				
White balance	Automatic scene detection; seven manual preset modes for custom white balance, direct sunlight,				
	shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, and incandescent				

System	
Self-timer	Off, 2 sec., 10 sec.
Flash	Manual pop-up flash with CCD-metered auto flash control; effective range when sensitivity is set to AUTO is approx. 30 cm-7.2 m/1 ft23.6 ft. (wide angle), 90 cm-3.8 m/3 ft12.5 ft. (telephoto)
Flash modes	Auto, forced flash, off, slow synchro (red-eye removal off); auto with red-eye removal, forced flash with red-eye removal, off, slow synchro with red-eye removal (red-eye removal on)
Electronic viewfinder (EVF)	0.2-in., 200k-dot reflect-type color viewfinder; frame coverage approx. 100%
Monitor	2.7-in., 230k-dot color LCD monitor; frame coverage approx. 100%
Movies	Frame size 640×480 or 320×240 pixels; 30 fps; monaural sound; zoom not available
Shooting options	EXR mode (EXR AUTO, RESOLUTION PRIORITY, HIGH ISO & LOW NOISE, D-RANGE PRIORITY), Dynamic range, Intelligent Face Detection with red-eye removal, framing guideline, frame number memory, film simulation, high-speed shooting, and histogram display
Playback options	Intelligent Face Detection, red-eye removal, micro thumbnail, multi-frame playback, sort-by-date, trimming, resize, slide show, image rotation, voice memo, histogram display, and exposure warning
Other options .	PictBridge, Exif Print, language selection (Arabic, Simplified Chinese, Traditional Chinese, Czech, Danish, Dutch, English, Finnish, French, German, Hungarian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Russian, Slovak, Spanish, Swedish, Thai, and, Turkish), time difference, silent mode

Input/output terminals	
A/V OUT (audio/video output)	8-pin multi-connector for NTSC or PAL output with monaural sound
Digital input/output	USB 2.0 High Speed; PTP (Picture Transfer Protocol)/MTP (Media Transfer Protocol)
DCIN	For use with AC-84V AC power adapter (sold separately)
	. o. ase mante of the porter adapter (solid separately)

Power supply/other						
Power supply	NP-140 rechargeable battery; optional AC-84V AC power adapter					
Guide to the number of	Battery Type	Number of frames				
available frames for battery operation	NP-140	Approx. 370 frames				
operation	CIPA standard, measured using battery supplied with camera and SD memory card. Note: Number of shots that can be taken with battery varies with battery charge level and will decline at low temperatures.					
Camera dimensions (W×H×D)	134.4 mm × 93.6 mm × 145.0 mm/5.3 in. × 3.7 in. × 5	.7 in., excluding batteries and accessories				
Camera weight	Approx. 820 g/28.9 oz., excluding batteries, access	sories, and memory cards				
Shooting weight	Approx. 870 g/30.7 oz., including batteries and me	emory card				
Operating conditions	Temperature: 0 °C to +40 °C (+32 °F to +104 °F)					
	80% humidity or less (no condensation)					

NP-140 rechargeable batter	NP-140 rechargeable battery				
Nominal voltage	DC 7.2V				
Nominal capacity	1150 mAh				
Operating temperature	0°C-+40°C/+32°F-+104°F				
Dimensions (W \times H \times D)	35.5 mm×56.0 mm×13.3 mm/1.4 in.×2.2 in.×0.5 in.				
Weight	Approx. 47 g/1.5 oz.				

BC-140 battery charger	
Rated input	100 V-240 V AC, 50/60 Hz
Input capacity	14.0 VA (100 V)–20 VA (240 V)
Rated output	8.4 V DC, 720 mA
Supported batteries	NP-140 rechargeable batteries
Charging time	Approx. 110 minutes
Dimensions (W \times H \times D)	68.0 mm×84.0 mm×28.0 mm/2.7 in.×3.3 in.×1.1 in.
Weight	Approx. 83 g/2.9 oz., excluding battery
Operating temperature	0°C-+40°C/+32°F-+104°F

The weight and dimensions vary with the country or region of sale.

Color Television Systems

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

Notices

- Specifications subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors (particularly in the vicinity of text) may appear. This is normal for this type of monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

FUJIFILM Digital Camera Worldwide Network

Contact your local distributor (see list below) for repairs and technical support. Please present the warranty and purchase receipt when requesting repairs; refer to the warranty card for the conditions of the warranty. Technical support may not be available for models not handled by the local distributor. The following information is subject to change without notice.

NORTH AMERICA	1		
Canada	FUJIFILM Canada Inc.	Technical support	TEL 1-866-818-FUJI (3854) http://www.fujihelp.ca
		Repair service	TEL 1-800-263-5018 http://www.fujihelp.ca
U.S.A.	FUJIFILM U.S.A., Inc.	Technical support	TEL 800-800-3854 digitalinfo@fujifilm.com
		Repair service	TEL 800-659-3854
CENTRAL AND SO	OUTH AMERICA		
Argentina	Imagen e informacion S.A.	Technical support & repairs	TEL +54-11-4836-1000 servtec@imageneinformacion.com.ar
Bolivia	Reifschneider Bolivia Ltda.	Technical support & repairs	TEL +591 33 44 1129 gciagral@bibosi.scz.entelnet.bo
Brazil	FUJIFILM do Brasil Ltda.	Technical support & repairs	TEL 0800-12-8600 camarasdigitais@fujifilm.com.br
Chile	Reifschneider SA	Technical support & repairs	TEL 56-2-6781200 serviciotecnico@reifschneider.cl
Colombia	Animex de Colombia Ltda.	Technical support & repairs	TEL +57 1 338-0299 animex@etb.net.co
Ecuador	Espacri Cia Ltda	Technical support & repairs	TEL 593-72-835526
	Importaciones Espacri Cia. Ltda.	Technical support & repairs	TEL +593 783 5526 portiz@fujifilm.com.ec
Mexico	Fujifilm de Mexico, S.A. de C.V.	Technical support	TEL (52-55) 5263-55000 eizquierdo@fujifilm.com.mx
		Repair service	TEL (52-55) 5366-5150/56/57 cpalma@fujifilm.com.mx
Paraguay	Errece S.R.L.	Technical support & repairs	TEL +595 21 444256 jmarbulo@fujifilm.com.py
Peru	Procesos de Color S.A.	Technical support & repairs	TEL +51 14 33 5563 jalvarado@fujifilm.com.pe
Uruguay	Fotocamara S.R.L.	Technical support & repairs	TEL +598-2-9002004 fotocam@adinet.com.uy
	Kiel S.A.	Technical support & repairs	TEL (05982) 419 4542 kiel@fujifilm.com.uy
Venezuela	C. Hellmund & Cia Sa	Technical support & repairs	TEL 0212-2022300 hellmund@hellmund.com
EUROPE			
Austria	Fuji Film Oesterreich	Technical support & repairs	TEL 0043 1 6162606/51 or 52 kamera.service@fujifilm.at
Belgium	Belgian Fuji Agency	Technical support & repairs	TEL 3210242090 info@fuji.be
Croatia	I&I d.o.o.	Technical support	TEL 38512319060 dsaravanja@fujifilm.hr
		Repair service	TEL 38512316228 info@fujifilm.hr

EUROPE			
Cyprus	PMS IMAGING LTD	Technical support & repairs	TEL 35722746746 mariosashiotis@fujifilm.com.cy
	Doros Neophytou CAMERA REPAIRS	Technical support & repairs	TEL 35722314719 dorosn@logosnet.cy.net
Czech Republic	Fujifilm Cz., s.r.o.	Technical support	TEL 00420 234 703 411 petr.barta@fujifilm.cz
	AWH servis	Repair service	TEL 00420 222 721 525 awh@awh.cz
Denmark	Fujifilm Danmark A/S	Technical support & repairs	TEL 0045 45662244 fujifilm@fujifilm.dk
Finland	Fuji Finland Oy	Technical support & repairs	TEL +358 9 825951 www.fuji.fi fuji@fuji.fi
France	FUJIFILM France	Technical support & repairs	direction.technique@pm2s.fr
Germany	FUJIFILM Electronic Imaging Europe GmbH	Technical support & repairs	Tel 0180 / 589 89 80° service@fujifilm-digital.com °0,14 EUR pro Minute aus dem deutschen Festnetz, abweichende Preise aus Mobilfunknetzen möglich, Stand bei Drucklegung.
Greece	FUJIFILM HELLAS S.A.	Technical support & repairs	TEL 0030 210 9404100 fujifilm@fujifilm.gr
Hungary	Fujifilm Hungary Ltd.	Technical support	TEL 3612389410 fujifilm@fujifilm.hu
		Repair service	TEL 3613633777
Iceland	lcephoto (Ljosmyndavorur)	Technical support & repairs	TEL 354 568 0450 framkollun@fujifilm.is
Italy	FujiFilm Italia S.r.l.	Call center	TEL 039-0267978181 info@fujifilm.it
		Repair service	TEL 039-6058294 FAX 039-6058295
Lithuania	Fujifilm Lithuania	Technical support & repairs	TEL 370-5-2130121 info@fujifilm.lt
Malta	Ciancio (1913) Co.Ltd.	Technical support & repairs	TEL 0356-21-480500 info@fujifilm.com.mt
Norway	Fujifilm Norge AS	Technical support	TEL 0047-02273 http://www.fujifilm.no/ mailto:post@fujifilm.no
		Repair service	TEL 0047-55393880
		nepail service	http://www.camera.no/mailto:service@camera.no
Poland	Fujifilm Polska Distribution Sp.	Technical support	TEL +48-22-517-66-00 fujifilm@fujifilm.pl
1 Olariu	z o.o.	Repair service	TEL +48-22-886-94-40 serwis@fujifilm.pl
Portugal	Fujifilm Portugal, Lda	Technical support	TEL (351) 226 194 237 finepix@fujifilm.pt
Tortugal	i ujiiiiii r vi tugai, tua	Repair service	TEL (351) 226 194 200 cameras@fujifilm.pt
Romania	CTS-Cardinal Top Systems Ltd	Technical support & repairs	TEL 4021-230-09-82 cts tirla@hotmail.com
Russia	Fujifilm Electronic Imaging Europe	Technical support & repairs	TEL 8 800 200 3854 (Для бесплатных звонков из России)
Nassia	GmbH	recrimed support a repairs	*Для звонков из других стран набирайте +7 800 200 3854 http://www.fujifilm-digital.ru/ info@fujifilm-digital.ru
Slovakia	Fujifilm Slovakia s.r.o.	Technical support	TEL 00421 2 33 595 107 fujifilm@fujifilm.sk
		Repair service	TEL 00421 2 33 595 119 servis@fujifilm.sk
Spain	Fujifilm Espana S.A.	Technical support & repairs	TEL 902012535
		·	http://www.fujifilm.es/soporte/ tallersat@fujifilm.es

EUROPE			
Sweden	Fujifilm Sverige AB	Technical support	TEL 46 8 506 141 70 kamera@fujifilm.se
	-	Repair service	TEL 46 8 506 141 00 kameraverkstaden@fujifilm.se
Switzerland /	Fujifilm (Switzerland) AG	Technical support & repairs	TEL +41 44 855 5154 RepairCenter@fujifilm.ch
Liechtenstein			
The Netherlands	FUJIFILM Electronic Imaging	Technical support	TEL +31(0)102812500 helpdesk@fujifilm-digital.nl
	Nederland	Repair service	TEL +31(0)102812520 camerareparaties@fujifilm-digital.nl
Turkey	Fujifilm Turkiye Sinfo A.S.	Technical support	TEL +90 212 696 5090 csarp@fujifilm.com.tr
		Repair service	TEL +90 212 696 5090 servis@fujifilm.com.tr
U.K.	FUJIFILM UK Ltd.	Technical support	TEL +44 (0)8700 841310 fujitec@fuji.co.uk
		Repair service	TEL +44 (0)8700 841314 fujitec@fuji.co.uk
Ukraine	Image Ukraine CJSC	Technical support & repairs	TEL +380-44-4909075 d@fujifilm.ua
MIDDLE EAST			
Iran	Tehran Fuka Co.	Technical support & repairs	TEL (+98-21)2254810-19 fuka@neda.net
Israel	Shimone Group Ltd.	Technical support	TEL (+) 972 3 9250666 digital@fujifilm.co.il
		Repair service	TEL (+) 972 3 9250666 khaim@shimone.com
Jordan	Grand Stores Al- Abdali,	Technical support & repairs	TEL 009626-4646387 gstores@go.com.jo
	Amman / Jordan		
Lebanon	Fototek S.A.R.L.	Technical support & repairs	TEL +961 1 252474 fototek@antakiholding.com
Qatar	Techno Blue	Technical support	TEL 00974 44 66 175 prabu@techno-blue.com
Saudi Arabia	Emam Distribution Co. Ltd.	Technical support	TEL 96626978756 service@fujifilm.com.sa
Syria	Film Trading Company	Technical support	TEL + 963 11 2218049 f.t.c@Net.SY
		Repair service	TEL + 963 21 4641903 filmtradin@Net.SY
U.A.E.	Grand Stores	Technical support & repairs	TEL + 971-4-2823700 photography@grandstores.ae
Yemen	Al-Haidary Trading	Technical support	TEL 00967-1-503980
		Repair service	TEL 00967-1-503977
AFRICA			
Egypt	Foto Express Egypt	Technical support & repairs	TEL (202) 7762062 fotoegypt@access.com.eg
Kenya	Fuji Kenya Ltd	Repair service	TEL (254-20)4446265-8 info@fujifilm.co.ke
South Africa	Cameratek CC.	Technical support & repairs	TEL +27 11 251 2400 www.cameratek.co.za
OCEANIA			
Australia	FUJIFILM Australia Pty Ltd	Technical support & repairs	TEL 1800 226 355 digital@fujifilm.com.au
Fiji	Brijlal & Co. Ltd		TEL (679)3304133 kapadia@connect.com.fj
New Caledonia	Phocidis SARL		TEL (00 687) 25-46-35 phocidis@phocidis.nc

OCEANIA			
New Zealand	Fujifilm NZ Ltd	Technical support & repairs	TEL +64-9-4140400 glenn.beaumont@fujifilm.co.nz
Papua New	Oceania PNG Limited	Technical support	TEL +675 3256411 oceania@daltron.com.pg
Guinea			
\SIA			
long Kong	Fuji Photo Products Co., Ltd.	Technical support & repairs	TEL (852)2406 3287 rsd@chinahkphoto.com.hk
ndonesia	PT. Modern Internasional, Tbk.	Technical support & repairs	TEL +62 021 45867187 assd_kmrsrv@modernphoto.co.id
Malaysia	FUJIFILM (Malaysia) Sdn. Bhd.	Technical support	TEL 603-55698388 technical@fujifilm.com.my
		Repair service	TEL 603-55698388 camera@fujifilm.com.my
hilippines	YKL Development & Trdg. Corp.	Technical support	TEL 632-7436601~06
			info@yklcolor.com digital@yklcolor.com
		Repair service	TEL 632-7436601~06 techop_services@yklcolor.com
ingapore	FUJIFILM (Singapore) Pte Ltd	Technical support & repairs	TEL 65-6380 5557 service@fujifilm.com.sg
outh Korea	Korea Fujifilm Co., Ltd.	Technical support	TEL +82-2-3282-7363 photo@fujifilm.co.kr
	Yonsan AS Center (Fujidigital)	Repair service	TEL +82-2-701-1472 1bowl@hanmail.net
	Kangnam AS Center (Digitalgallery)	Repair service	TEL +82-2-2203-1472 nurijili@hanmail.net
	Busan AS Center (Digital-Sewon)	Repair service	TEL +82-51-806-1472 merahan@yahoo.co.kr
aiwan	Hung Chong Corp.	Technical support & repairs	TEL 886-2-6602-8988 dah@mail.hungchong.com.tw
hailand	FUJIFILM (Thailand) Ltd.	Technical support	TEL +662-2706000 ext. 751,752
			Dusit_Suriyong@fujifilm.co.th yaowarat@fujifilm.co.th
		Repair service	TEL +662-2706000 ext.761,762 warin@fujifilm.co.th
√ietnam	International Minh Viet Co., Ltd.	Technical support & repairs	TEL +84-8-4135740 ext. 322 diep.phanthithanh@imv.com

FUJIFILM

FUJIFILM Corporation 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN http://www.fujifilm.com/products/digital_cameras/index.html