## KODAK EASYSHARE M340 Digital Camera



## Extended user guide

www.kodak.com

For interactive tutorials: www.kodak.com/go/howto

For help with your camera:

www.kodak.com/go/m340support

## Kodak

Eastman Kodak Company Rochester, New York 14650 © Eastman Kodak Company, 2008

All screen images are simulated.

Kodak, EasyShare, and Perfect Touch are trademarks of Eastman Kodak Company. 4F8437\_en


### **Front view**



- 1 Shutter button
- 2 Mode dial
- 3 Power button
- 4 Flash button
- 5 Self-timer light

- 6 Lens/Lens cover
- 7 DC-In (5V)
- 8 Flash
- 9 Microphone

### **Back view**

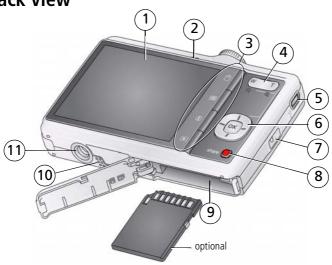

- 1 LCD
- 2 Ready/Battery Charging light
- 3 Delete, Menu, Info, Review buttons
- 4 Zoom (Telephoto/Wide Angle) button
- 5 USB/AV Out
- 6 **△/**▼ **∢/**▶ OK button

- 7 Strap post
- 8 Share button
- 9 Battery, SD/SDHC Card compartment
- 10 Speaker
- 11 Tripod socket

## **Table of contents**

1	Setting up your camera	I	
	Attaching the strap Loading the KLIC-7001 battery Charging the battery	1	
	Turning on the camera		
	Setting the language and date/time		
	Storing pictures on an optional SD or SDHC Card		
	Other charging options		
	Other charging options	4	
2	Taking pictures/videos	5	
	Taking focused pictures	5	)
	Using the optical zoom		
	Using the flash		
	Using different modes		
	Taking a video		
	Using shortcuts		
	Using the self-timer		
	Taking panoramic pictures		
	Understanding the picture-taking icons		
_			
3	Working with pictures/videos	.15	,
	Reviewing pictures/videos		
	Deleting pictures/videos		
	Viewing pictures/videos in different ways	. 17	
	Selecting multiple pictures/videos		
	Creating a multimedia slide show		
	Using the menu button in review		
	Cropping pictures		
	Using KODAK PERFECT TOUCH Technology	. 21	
	Adding sound tags		
	Copying pictures/videos	. 23	

### Table of contents

	Editing videosUnderstanding the review icons	. 24 . 27
4	Doing more with your camera	. 28
5	Transferring, printing, tagging Installing the software Transferring pictures/videos to your computer Printing pictures Tagging your pictures	.35 .36 .37
6	Troubleshooting	43
7	Getting help  Getting help from your camera  Getting help on the Web  Getting help on the telephone	. 47 . 48
8	Appendix Camera specifications Care and maintenance Upgrading your software and firmware Storage capacities Important safety instructions Battery replacement, battery life Limited warranty Regulatory compliance	. 50 . 52 . 53 . 53 . 53 . 54

# 1


## Setting up your camera

**IMPORTANT:** For package contents, see your product package.

## Attaching the strap



## Loading the KLIC-7001 battery

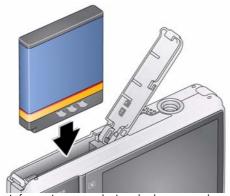

For information on replacing the battery and extending battery life, see page 54.


## **Charging the battery**

(1) Turn OFF the camera.




Learn other charging options	See page 4
Learn more about batteries	See page 54

## **Turning on the camera**

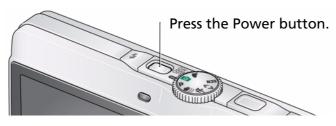

## Setting the language and date/time

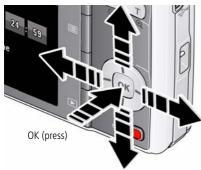

### Language:

▲/▼ to change.
OK to accept.

#### Date/Time:

At the prompt, press OK.

▲/▼ to change current field.

**√/**▶ for previous/next field.

OK to accept.

NOTE: To change language in the future, use the Setup Menu (see page 32).

## Storing pictures on an optional SD or SDHC Card

Your camera has internal memory. You can purchase an SD or SDHC Card to conveniently store more pictures/videos.



#### CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera.

- 1) Turn off the camera.
- 2 Insert or remove the optional card.
- (3) Turn on the camera.



Purchase accessories

www.kodak.com/go/m340accessories

## Other charging options

First, turn OFF the camera. The charging light blinks during charging and stays steady when the battery is fully charged.

#### **KODAK 5V AC Adapter**

(May be sold separately.)



## KODAK USB Cable and a USB computer port

Ensure that the USB cable is connected to a powered USB port and the computer is turned on (not in sleep mode).



Purchase accessories	www.kodak.com/go/m340accessories
Learn more about USB charging	www.kodak.com/go/USBcharging

# 2

## Taking pictures/videos

### **Taking focused pictures**



To get clear, focused pictures:

- 1 Turn the Mode dial to Smart Capture 3. Ther press the Power button to turn on the camera.
- **2** Compose the picture.
- Press the Shutter button halfway to focus and set exposure. When the framing marks turn green, press the Shutter button completely down.

### Using the framing marks

Framing marks indicate the camera focus area. In Smart Capture mode (and in SCN modes designed for pictures of people), the camera attempts to focus on faces.



- 1 Press the Shutter button **halfway**.

  If the camera is not focusing on the desired subject, release the Shutter button and recompose the scene.
- **2** Press the Shutter button **completely down** to take the picture.

NOTE: Framing marks do not appear in all modes. Multiple framing marks may appear when faces are detected. When you press the Shutter button halfway down, the framing marks attempt to follow the main subject.

### Reviewing the picture/video just taken

After you take a picture/video, the LCD briefly displays a quickview. (To exit the quickview sooner, press the Shutter button halfway.)



To review pictures/videos anytime, see page 15.

## Using the optical zoom



- **1** Use the LCD to frame your subject.
- 2 To zoom in, press Telephoto (T). To zoom out, press Wide Angle (W).
- **3** Take the picture.

 
NOTE: For focus distances, see Specifications starting on page 50.

### **Using digital zoom**

Use digital zoom to get up to 5X magnification beyond optical zoom. (Digital zoom is not available in Smart Capture mode.) Press Telephoto (T) until the slider is at the end of the optical zoom range. Release Telephoto (T), then press it again.

NOTE: You may notice decreased image quality when using digital zoom. The slider pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.


## Using the flash



Flash modes		Flash fires
Auto	<b></b> ₽A	When the lighting conditions require it.
Fill (Flash On)		Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject).  NOTE: (Not available in Smart Capture mode.)
Red Eye Your camera can correct red-eye using 2	Preflash	A preflash fires, shrinking the eye pupil, before the picture is taken.
methods. To choose a red eye setting, see Red Eye Reduction, page 33.	Digital Correction	A preflash does not fire; the camera corrects red eye.
Off	3	Never

## **Using different modes**

 Turn the Mode dial to the mode that best suits your subjects and surroundings.



Use this mode		For		
		General picture taking—it offers excellent image quality and ease of use.		
ĝ	Smart Capture	■ Faces are detected. ■ The scene is analyzed for other content and for lighting. You can choose the best picture size and aspect ratio for your needs—just press the Menu ■ button and choose Picture Size.		
		<ul> <li>3:2 (the best choice when making 4 x 6 prints)</li> <li>16:9 (wide screen)</li> <li>4:3 (the default setting)</li> </ul>		
P	Program	Advanced picture taking—allows more access to manual settings than Smart Capture.		
((ك	Blur Reduction	Reducing blur caused by camera shake or subject motion.		
×	Sport	Action pictures.		
€]	Panorama	"Stitching" up to 3 pictures into a panoramic scene. (See page 13.)		
SCN	Scene	Point-and-shoot simplicity when taking pictures in practically any situation. (See page 9.)		
	Video	Capturing video with sound. (See page 10.)		

(EN

### **Using Scene (SCN) modes**

Choose a Scene mode—for great pictures in practically any situation.

- 1 Turn the Mode dial to SCN.
- **2** Press **4/** to view scene mode descriptions.


  If the mode description turns off before you finish reading it, press OK.
- **3** Press OK to choose a Scene mode.

SCN mode	For
Portrait	Full-frame portraits of people.
Landscape	Distant scenes.
Close-up	Close range. Use available light instead of flash, if possible.
Flower	Close-ups of flowers or other small subjects in bright light.
Sunset	Subjects at dusk.
Backlight	Subjects that are in shadow or "backlit" (when light is behind the subject).
Candle Light	Subjects illuminated by candle light.
Children	Action pictures of children in bright light.
Manner/ Museum	Quiet occasions, like a wedding or lecture. Flash and sound are disabled. Place the camera on a steady surface or tripod.
Text	Documents. Place the camera on a steady surface or tripod.
Beach	Bright beach scenes.
Snow	Bright snow scenes.
Fireworks	Fireworks. Place the camera on a steady surface or tripod.
Self- Portrait	Close-ups of yourself. Assures proper focus and minimizes red eye.
Night Portrait	Reduces red eye of people in night scenes or low-light conditions.
Night Landscape	Distant scenery at night. Flash does not fire.

#### Taking pictures/videos

SCN mode	For
High ISO	People indoors, in low-light scenes.

## Taking a video

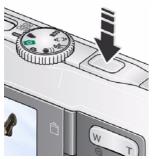

- 1 Turn the Mode dial to Video
- **2** Press the Shutter button **completely down**, then release it. To stop recording, press and release the Shutter button again.

To review and work with videos, see page 15.

## **Using shortcuts**

Your camera has a clean, uncluttered interface. For quick access to the most popular capture and review functions:

- 1 Press the Info 1 button. *The shortcuts appear.*
- 2 Press / to access functions like Exposure Compensation, Self-timer, and Auto focus. (You'll see different functions in different modes.)
- 3 Press →/▼ to choose a setting.To hide the shortcuts again, press ⑥.



## Using the self-timer

Use the self-timer when you want to be included in a picture, or to ensure a steady Shutter button press. Place the camera on a tripod or flat surface.



- 1 In any picture-taking mode, press the Info **1** button to show shortcuts.
- 2 Press / to highlight the self-timer icon. Press / to choose a setting:
  - **10 seconds**—A picture is taken after a 10-second delay (so you have time to get into the scene).
  - **2 seconds**—A picture is taken after a 2-second delay (for a steady, shutter release on a tripod).
  - **2 shot**—The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later.
- 3 Compose the scene. Press the Shutter button halfway, then completely down.

The camera takes the picture/pictures after the delay.

NOTE: In Panoramic modes (page 13), only the 2- and 10-second options are available.

Use the same procedure to take a 2- or 10-second self-timer video, but press the Shutter button **completely down**.


## **Taking panoramic pictures**

Use panorama to "stitch" up to 3 pictures into a panoramic scene.

NOTE: For best results, use a tripod. Only the panoramic picture is saved; individual pictures are not. (Exposure and white balance are set with the first picture. The flash is set to Off.)


- 1 Turn the Mode dial to **L >**.
- 2 Press **1/ a/** to highlight Panorama Left-Right or Panorama Right-Left (depending on the direction you want to pan), then press OK.
- **3** Take the first picture.

  After a quickview, the LCD displays the liveview and an "overlay" from the first picture.
- **4** Compose the second picture. Make the overlay from the first picture cover the same portion in the new picture. (You can press the Delete button to re-take a picture.)
- **5** If you are taking only 2 pictures, press OK to stitch them together. *After you take 3 pictures, the pictures are automatically stitched together.*

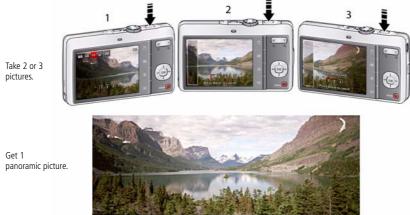

NOTE: To use the self-timer 10-second or 2-second setting, see page 12.

## **Understanding the picture-taking icons**

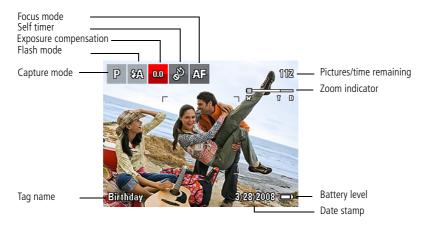

## 3

## Working with pictures/videos

## Reviewing pictures/videos



- **1** Press the Review button.
- **2** Press **4/** for previous/next picture/video.
  - To exit, press the Review button.
  - To view pictures/videos as thumbnails, press the Wide Angle (W) button. (For more, see page 17.)

### Magnifying a picture



- 1 Press T to magnify 1X–8X.
- 2 Press / to view other parts of a picture.
  - Press OK to return to 1X.

### Playing a video



Playback speed
4X 2X 1X 2X 4X

Reverse Forward

Press OK to play a video. Press OK to pause/resume. During playback:

- Press > to play at 2X speed; press again for 4X.

## **Deleting pictures/videos**

- **1** Press the Review button.
- 2 Press **//** for previous/next picture/video.
- **3** Press the Delete button.
- **4** Follow the screen prompts.

NOTE: To delete protected pictures/videos, remove protection before deleting. (See Protecting pictures/videos from deletion, below.)

### Using the undo delete feature

If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture.

### Protecting pictures/videos from deletion

- **1** Press the Review button.
- 2 Press **//** for previous/next picture/video.
- 3 Press the Menu button.
- **4** Press **t** o highlight Protect, then press OK.

The picture/video is protected and cannot be deleted. The Protect icon appears with the protected picture/video.

■ Press the Menu 🔠 button to exit the menu.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.



Formatting internal memory or an SD or SDHC Card deletes all (including protected) pictures/videos. (Formatting internal memory also deletes email addresses and tag names. To restore them, see KODAK EASYSHARE Software Help.)

### Viewing pictures/videos in different ways

### Viewing as thumbnails (multi-up)

1 Press the Review button.

The camera shows the last picture that was taken.



**2** Press the Wide Angle (W) button to view pictures/videos as thumbnails. (Press it again to see more, smaller thumbnails.)

To view all pictures/videos, highlight the All tab.

 
To sort by favorites, date, or tagged pictures/videos, press 

number of the propriate tab.

- **3** To see a single picture/video, press / to highlight it. Then press the Telephoto (T) button.
  - To select multiple pictures/videos, see Selecting multiple pictures/videos.
  - Press the Review button to exit Review.

## Selecting multiple pictures/videos

Use the multi-select feature when you have two or more pictures/videos to print, transfer, delete, etc. Multi-select is used most effectively in Multi-Up mode, Viewing as thumbnails (multi-up).



- 1 Press the Review ▶ button, then →/ and 
  ✓/ to find a picture/video.
- **2** Press OK to select pictures/videos.

A check mark appears on the picture. You can now print, transfer, delete, etc. the selected pictures. You can press OK again to remove a check mark.

## Creating a multimedia slide show

Use Multimedia Slide Show to display your pictures/videos on the LCD. You can play all pictures/videos, or select pictures to include in the slide show. You can customize your slide show to include music and your choice of transitions. You can even save a slide show.

### Make a slide show that you can save

- 1 Press the Review button. Select 2-100 pictures (see page 17).
- 2 Press the Menu button, then for to highlight Multimedia Slide Show, then press OK.
- **3** Press for to highlight Preview Show, then press OK.

  Each picture/video is displayed once. To interrupt the slide show, press OK. After the slide show plays, you may save or modify it.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

### Play a slide show loop


When you turn on Loop, the slide show is continuously repeated.

- 1 On the Multimedia Slide Show menu, press —/ to highlight Loop, then press OK.
- **2** Press to highlight On, then press OK.
- **3** Press for to highlight Preview Show, then press OK.

  The slide show repeats until you press OK or until the battery is exhausted.

### Displaying pictures/videos on a television

You can display pictures/videos on a television, computer monitor, or any device equipped with a video input. To connect the camera directly to a television, use an A/V cable (may be sold separately).

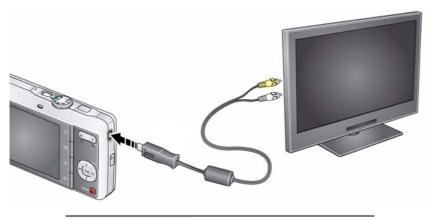

**Purchase accessories** 

www.kodak.com/go/m340accessories

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct (see page 34). The slide show stops if you connect or disconnect the cable while the slide show is running. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)


## Using the menu button in review

- 1 Press the Review button, then the Menu button.
- **2** Press **4/** to highlight a tab:
  - Review
  - Edit
  - Setup
- **3** Press **△/** ★ to highlight a setting, then press OK.
- 4 Highlight an option, then press OK.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

## **Cropping pictures**

You can crop a picture so that only the desired portion of the picture remains.

 

- 1 Press the Review ▶ button, then **1** to find a picture to crop.
- 2 Press the Menu **■** button, then **1** to highlight the Edit tab. Highlight Crop, then press OK.
- **3** Press Telephoto (T) to zoom in, or **4/ h** to move the crop box. Press OK.
- **4** Follow the screen prompts.

  The picture is cropped. (The original is saved.) Cropped pictures cannot be cropped again on the camera.
- Press the Shutter button halfway down to return to Capture mode.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

## Using KODAK PERFECT TOUCH Technology

KODAK PERFECT TOUCH Technology helps ensure better, brighter pictures. PERFECT TOUCH Technology is automatically applied to pictures taken in Smart Capture mode. (You cannot apply PERFECT TOUCH Technology to videos, panoramic pictures, or pictures to which PERFECT TOUCH Technology is already applied.)

- **1** Press the Review ▶ button, then **1** for previous/next picture.
- 2 Press the Menu button, then </br>
  Ibutton, then Ibutton, then Ibutton, then press OK.
  - The enhancement is previewed. Press **4/ h h** to view other parts of the picture.
- **3** Press OK. Follow the screen prompts to replace the original picture or to save the enhanced picture as a new one.
- Press the Shutter button halfway down to return to Capture mode.

## **Adding sound tags**

You can record a voice or sound tag (up to 1 minute long) for a picture.

NOTE: Only one sound tag can be added to each picture (not to videos).

### Recording a sound tag

- 1 Press the Review button, then \to find a picture.
- 2 Press the Menu button, then \tag{button} to highlight the Edit tab.
- **3** Press to highlight Sound Tag. Press OK.
- 4 Highlight Record, then press OK.
- **5** Follow the screen prompts.

The sound tag is applied to your picture.

Press the Shutter button halfway down to return to Capture mode.

IMPORTANT: Your camera offers a built-in Help system. See page 47.

### Playing a sound tag

- 1 Press the Review button, then \( \square \) to find a sound-tagged picture.
- **2** Press OK to play the sound tag.
- **3** Press to adjust the volume.
- **4** Press OK to stop playback.

## **Copying pictures/videos**

You can copy pictures/videos from a card to internal memory or from internal memory to a card.

### Copy pictures/videos:

- **1** Press the Review button.
- 2 Press the Menu button, then \(\psi\) to highlight the Edit tab.
- **3** Press —/ to highlight Copy, then press OK. Highlight a choice, then press OK.

NOTE: Pictures/videos are copied, not moved. To remove pictures/videos from the original location after copying, delete them (see page 16).

 
**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

## **Editing videos**

You can do incredible things with your videos.

### Making a picture from a video

You can choose a single frame from a video, then make a picture suitable for a  $4 \times 6$ -inch  $(10 \times 15 \text{ cm})$  print.




- **1** Press the Review ▶ button, then **1** to find a video.
- 2 Press the Menu **■** button, then **1** to highlight the Edit tab. Highlight Make Picture, then press OK.
- **3** Follow the screen prompts.

  A picture is created. (The original video is saved.)
  - Press the Shutter button halfway down to return to Capture mode.

**IMPORTANT**: Your camera offers a built-in Help system. See page 47.

### Trimming a video

 You can remove an unwanted start or end from a video, saving only the desired portion.




- 1 Press the Review button, then **1** to find a video.
- 2 Press the Menu **■** button, then **1** to highlight the Edit tab. Highlight Trim, then press OK.
- **3** Follow the screen prompts.

  The video is trimmed. (You can save it as a new video or replace the original.)
  - Press the Shutter button halfway down to return to Capture mode.

### Making a video action print

 From a video, you can make a 4-, 9-, or 16-up picture, suitable for a 4 x 6-inch (10 x 15 cm) print.



- **1** Press the Review ▶ button, then **1** to find a video.
- 2 Press the Menu button, then \( \blacktriangleright \) to highlight the Edit tab. Highlight Action Print, then press OK.
- **3** Highlight an option, then press OK.

**Auto—**The camera includes the first and last frames, then 2, 7, or 14 equally spaced frames.

Manual—Choose the first and last frames; the camera chooses 2, 7, or 14 frames.

**Full Manual**—Choose 4, 9, or 16 frames.

**Use Bookmarks**—The camera uses bookmarked frames. See page 26.

A 4-, 9-, or 16-up picture is created.


Press the Shutter button halfway down to return to Capture mode.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

### Using video bookmarks

You can set bookmarks at interesting places in your video, then jump from one bookmark to another.


### **Setting bookmarks**

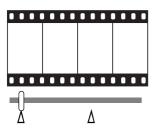

- 1 Press the Review ▶ button, then </br>


  button, then
- 2 Press the Menu button, then **\*/** to highlight the Edit tab. Highlight Bookmark, then press OK.
- **3** Press / to highlight Create/Edit, then press OK.
- **4** While the video plays, press to add bookmarks. When finished adding up to 9 bookmarks, press .
  - Press the Menu button to exit the menu.

### **Using bookmarks**

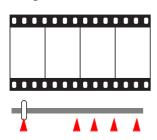

- 1 Press the Review ▶ button, then **\*/** to find a video.
- 2 Press to play the video. To jump to the first bookmark, press and hold // for 4 seconds while the video is playing.
  - After you jump to a bookmark, press **4/** to jump to other bookmarks.
  - To view all bookmarked video frames, press the Zoom wide angle (W) button. To return to normal view, press the telephoto (T) button.

## **Understanding the review icons**

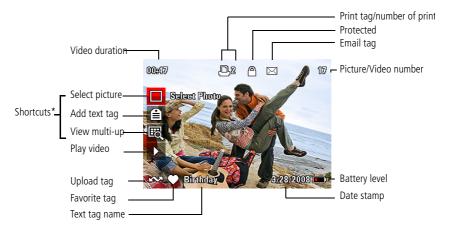

<sup>\*</sup> For more about shortcuts, see page 11.

# Doing more with your camera

**IMPORTANT:** Your camera offers a built-in Help system. To get the most from your camera, see page 47.

## Using the menu button to change settings

You can change settings to get the best results from your camera.

NOTE: Some modes offer limited settings. Some settings remain until you change them; others, until you change modes or turn off the camera.

- 1 Press the Menu button.
- **2** Press **4/** to highlight a tab:
  - **Capture/Video** for the most common picture- and video-taking settings
  - **Setup** for other camera settings
- **3** Press **/** to highlight a setting, then press OK.
- **4** Highlight an option, then press OK.

#### Using the capture tab

Press Menu, <b>4/</b> , <b>4/</b> , and OK to access settings	Picture-taking	g Options
	IMPORTANT:	Your camera offers a built-in Help system. See page 47.
Exposure Compensation	0.0, +/-0.3, +/	/-0.7, +/-1.0, +/-1.3, +/-1.7, +/-2.0

Make a picture lighter or darker. (Available in Program and Panorama modes.) To use a shortcut, see page 11.

Press Menu, ◀/▶, ▲/▼,	Picture-taking Options	
and OK to access settings	<b>IMPORTANT</b> : Your camera offers a built-in Help system.	
	See page 47.	
Picture Size	10.1 MP (4:3)	
Choose a picture resolution.	8.9 MP (3:2)	
	7.6 MP (16:9)	
	5.0 MP (4:3)	
	3.1 MP (4:3)	
	2.2 MP (3:2)	
	2.1 MP (16:9)	
	1.2 MP (4:3)	
Focus Mode	Auto—For general picture-taking.	
Select a large or concentrated area of focus.	ed Macro—For sharpness and detail in pictures at close range. Use available light instead of flash, if possible. The camera automatically sets the focus distance depending on the zoom position.	
	<b>Infinity</b> —For distant subjects; auto-focus framing marks are unavailable.	
Burst	Off	
Take up to 3 pictures in quick succession. (Burst is not available in Panorama mode.)	On—Press the Shutter button halfway to focus and set exposure. Press the Shutter button completely down and hold it to take pictures.	
<b>Long Time Exposure</b> Choose how long the shutter stays open.	Off 0.5, 1.0, 2.0, 4.0 seconds	

Press Menu, <b>4/</b> , <b>4/</b> , and OK to access settings	Picture-taking Options	
and OK to access settings	IMPORTANT: Your camera offers a built-in Help system. See page 47.	
Color Mode	High Color	
Choose color tones.	Natural Color	
Unavailable in Video mode.	Low Color	
	Black & White	
	<b>Sepia</b> —For a reddish-brown, antique look.	
	NOTE: EASYSHARE Software also lets you change a color picture to black-and-white or sepia.	
AF Control (Still) Choose an auto-focus setting.	<b>Continuous AF</b> —Because the camera is always focusing, there is no need to press the Shutter button halfway down to focus.	
	<b>Single AF</b> —Uses TTL-AF (through-the-lens auto focus) when the Shutter button is pressed halfway down.	
White Balance Choose your lighting	<b>Auto</b> —Automatically corrects white balance. Ideal for general picture taking.	
condition. (Available only in	<b>Daylight</b> —For pictures in natural lighting.	
Program and Panorama modes.)	<b>Tungsten</b> —Corrects the orange cast of incandescent light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.	
	<b>Fluorescent</b> —Corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash.	
	<b>Open Shade</b> —For pictures in shade in natural lighting.	
Face Detect Capture Choose if faces get focus priority.	On—In P mode (and in SCN modes designed for pictures of people), the camera attempts to focus on faces.  Off	
	NOTE: Not available in Smart Capture mode (because face detection is always on).	

Press Menu, 4/1, 1/2, and OK to access settings	Picture-taking Options
and OK to access settings	IMPORTANT: Your camera offers a built-in Help system. See page 47.
<b>Exposure Metering</b> Evaluate light levels at specific areas of a scene.	<b>Multi-Pattern</b> —Evaluates lighting conditions throughout the image to give an optimum picture exposure. Ideal for general picture taking.
	<b>Center-Weight</b> —Evaluates the lighting conditions of the subject centered in the lens. Ideal for backlit subjects.
	<b>Center-Spot</b> —Similar to Center-weight, except the metering is concentrated on a smaller area of the subject centered in the LCD.
<b>AF Zone</b> Select a large or concentrated	<b>Multi-Zone</b> —Evaluates 5 zones to give an even picture focus. Ideal for general picture taking.
area of focus.	<b>Center-Zone</b> —Evaluates the small area centered in the lens. Ideal when you need precise focus.
ISO Speed	Auto—For general picture taking.
Control the sensitivity of the camera sensor.	ISO 80, 100, 200, 400, 800, 1600
Sharpness	Sharp
Control picture sharpness or	Normal
softness.	Soft

## Video settings

Press Menu, ◀/▶, ▲/▼,	Video-taking Options	
and OK to access settings	IMPORTANT:	Your camera offers a built-in Help system.
		See page 47.
Video Size	640 x 480 @ 3	24 fps (VGA)
Choose a video resolution.	320 x 240 @ 3	24 fps (QVGA)

Press Menu, ◀/▶, ▲/▼, and OK to access settings	Video-taking Options IMPORTANT: Your camera offers a built-in Help system. See page 47.
AF Control	Continuous AF—Camera is always focusing.
Choose an auto-focus setting.	<b>Single AF</b> —Camera focuses once, when the Shutter button is pressed.

## Using the Setup menu

Use Setup to customize other camera settings.

Press Menu, <b>/</b> to highlight Setup, then <b>/</b> to access settings	Setup Options IMPORTANT: Your camera offers a built-in Help system. See page 47.
Share button Choose how pictures/videos are handled when you press the Share button. NOTE: Some online services limit video file sizes. Use EASYSHARE Software to choose a preferred online service.	Favorite and Upload—Pictures/videos are tagged as Favorites and uploaded to your preferred online service when you connect to your computer or network.  Favorite—Pictures/videos are tagged as Favorites (5-star in EASYSHARE Software, on your computer).  Upload—Pictures/videos are uploaded to your preferred online service when you connect to your computer or network.
LCD Brightness Choose LCD brightness.	High Power Power Save
Image Storage Choose a storage location for pictures/videos.	<b>Auto</b> —The camera uses the card if one is in the camera. If not, the camera uses internal memory.  Internal Memory—The camera always uses internal memory, even if a card is installed.

Press Menu, / to highlight Setup, then / to access settings	Setup Options IMPORTANT: Your camera offers a built-in Help system. See page 47.
<b>Set Tag</b> Create tag names and assign them to pictures/videos. See page 39.	On—Create a tag. Off
Date Stamp Imprint the date on pictures. Not available on panoramic pictures.	Choose a date option, or turn off the feature.
<b>Red Eye Reduction</b> Choose how you want to reduce red eye.	Preflash—Red eye preflash fires before the picture is taken. Digital Correction—Red eye preflash does not fire; the camera digitally corrects red eye.
<b>Video Blur Reduction</b> Improve video stability.	On Off
Orientation Sensor Orient pictures/videos so that they are displayed with the correct side up.	On—The camera rotates pictures to their correct orientation. Off—Pictures are not rotated.
Camera Sounds Choose sound effects for each function.	Power On Focus Lock Shutter Error Self-timer
Sound Volume	High Medium Low Off
Date & Time	Set date and time.

Setup Options IMPORTANT: Your camera offers a built-in Help system. See page 47.
1, 3, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,
10 minutes
5 minutes
3 minutes
1 minute
NTSC—Used in North America and Japan; most common format.
PAL—Used in Europe and China.
Choose your language.
Memory Card—Deletes everything on the card;
formats the card.
Cancel—Exits without making a change.
Internal Memory—Deletes everything in
internal memory including email addresses, and
tag names; formats the internal memory.

## 5

## Transferring, printing, tagging



#### CAUTION:

Before connecting any cables, install the software that was included with your camera. Failure to do so may cause the software to load incorrectly.

## Installing the software


- **1** Close all open software applications before starting the installation.
  - NOTE: If running WINDOWS OS and installing EASYSHARE Software from the Kodak Web site, do not close the WinZip application. If prompted, allow EASYSHARE Software to access the Internet.
- 2 Place the KODAK EASYSHARE Software CD into the CD-ROM drive.
- **3** Load the software:
  - **WINDOWS OS**—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.
  - **MAC OS X**—double-click the CD icon on the desktop, then click the Install icon.
- **4** Follow the on-screen instructions to install the software.
- NOTE: When prompted, register your camera and software. Registering lets you sign up for information that keeps your system up-to-date. To register later, visit www.kodak.com/go/register.
- **5** If prompted, restart the computer.

For software help, click the Help button in EASYSHARE Software.

# Transferring pictures/videos to your computer Using the USB cable

Turn on the camera.

Then connect a KODAK USB Cable, Model U-8.

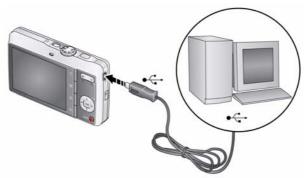

## **Using other options**

You can also use a KODAK Card Reader to transfer your pictures/videos.

Purchase accessories	www.kodak.com/go/m340accessories
Learn more about connecting	www.kodak.com/go/howto

## **Printing pictures**

#### Direct printing with a KODAK All-in-One Printer

Your camera is compatible with PICTBRIDGE Technology, so you can print directly to PICTBRIDGE enabled printers. You need a camera with fully charged battery, a PICTBRIDGE enabled printer, and a USB cable.

#### Connecting the camera to a KODAK All-in-One Printer

- **1** Turn **off** the printer. Turn **on** the camera.
- 2 Connect the appropriate USB cable from the camera to the printer.

  The PICTBRIDGE logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu turns off, press any button to redisplay it.
- **3** Highlight a printing option, then press OK.

**Current Picture**—Press **/>** to choose a picture. Choose the number of copies. **Tagged Pictures**—Print pictures that you tagged for printing and choose a print size.

**Index Print**—Print thumbnails of all pictures. (This option requires one or more sheets of paper.) If the printer is capable, choose a print size.

**All Pictures**—Print all pictures in internal memory or on a card. Choose the number of copies.

**Image Storage**—Access Auto or Internal Memory.

NOTE: During direct printing, pictures are not permanently transferred or saved to the printer. To transfer pictures to your computer, see page 36.

**Purchase cables, accessories** www.kodak.com/go/m340accessories

#### Disconnecting the camera from a KODAK All-in-One Printer

- **1** Turn off the camera and printer.
- **2** Disconnect the USB cable from the camera and the printer.

### Using a printer that is not PICTBRIDGE enabled

After you transfer pictures from the camera to your computer, you can print them from EASYSHARE Software. For details, see Help in EASYSHARE Software.

## Ordering prints online

KODAK Gallery (www.kodakgallery.com) is one of the many online print services offered in EASYSHARE Software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Have prints, photo greeting cards, frames, and albums delivered to your door.

## Printing from an optional SD or SDHC Card

- Automatically print tagged pictures when you insert your card into a printer with an SD/SDHC Card slot. See your printer user's guide for details.
- Make prints at an SD/SDHC Card-capable KODAK Picture Kiosk. Visit www.kodak.com/go/picturemaker.
- Take the card to your local photo retailer for professional printing.

## **Tagging your pictures**

You can tag your pictures so they are easy to:

- Print
- Fmail
- Organize with a favorite tag
- Organize with a tag name that you create

### **Tagging pictures for printing**

- 1 Press the Review button. Press **1** to locate a picture.
- 2 Press the Menu button.
- **3** Press **/** to highlight Print, then press OK.
- 4 Press / to select the number of copies.

**Optional:** You can apply a print quantity to other pictures. Press // for previous/next. Keep the print quantity as is, or press /w to change it. Repeat this step until the desired print quantity is applied to each picture.

**5** Press OK.

The Print icon appears in the status area.

Press the Shutter button halfway down to return to Capture mode.

**IMPORTANT**: Your camera offers a built-in Help system. See page 47.

#### **Printing tagged pictures**

When you transfer the tagged pictures to your computer, the EASYSHARE Software print screen opens. For details on printing, see Help in EASYSHARE Software.

### Tagging pictures/videos for emailing

First, create a new email address: highlight Add Email, press OK, then use the on-camera keyboard.

- 1 Press the Review button. Press 4/> to locate a picture.
- 2 Press the Menu button.
- **3** Press —/ to highlight Email, then press OK.
- 4 Press / to locate an email address, then press OK.

To tag other pictures/videos with the same address, scroll through them. When the picture you want is displayed, press OK.

To send the pictures/videos to more than one address, repeat step 3.

- To remove a selection, highlight a checked address and press OK. To remove all email selections, highlight Clear All, then press OK.
- Press the Shutter button halfway down to return to Capture mode.

The Email icon appears in the status area.

When you transfer the tagged pictures/videos to your computer, EASYSHARE Software prompts you to send the pictures/videos. For details, see Help in EASYSHARE Software.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

#### Assigning the favorite tag to pictures/videos

To make your favorite pictures/videos easier to locate in EASYSHARE Software, you can assign the favorite tag.

- **1** Press the Share button, then locate a picture/video.
- **2** Highlight Favorite, then press OK.

The favorite icon appears with the picture. When you transfer the tagged pictures/videos to your computer, EASYSHARE Software opens and categorizes your favorite pictures/videos.

## Assigning text tags to pictures/videos

First, create a new tag name: highlight New Tag, press OK, then use the on-camera keyboard.

- 1 Press the Review button, then locate a picture/video.
- **2** Press the Menu button.
- **3** Highlight Tag, then press OK.
- **4** Highlight a tag name, then press OK.

To assign the tag to other pictures, press **1** to locate a picture, then press OK. The tag name appears with the picture.

To remove a selection, highlight a tag name and press OK. To remove all tag selections, highlight Clear All, then press OK.

When you transfer the tagged pictures/videos to your computer, EASYSHARE Software opens and categorizes your pictures/videos with the appropriate tag.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

#### Assigning a tag to pictures/videos you take next

Use the Set Tag feature to assign a tag name to the next pictures/videos you take. First, create a new tag name: highlight New Tag, press OK, then use the on-camera keyboard.

- 1 Press the Menu button.
- 2 Highlight the Setup tab.
- **3** Highlight Set Tag, then press OK.
- **4** Highlight a tag name, then press OK.
- **5** Press the Shutter button halfway down to return to Capture mode. *The selected tag is displayed on the LCD.*

When you transfer the tagged pictures/videos to your computer, EASYSHARE Software opens and categorizes your pictures/videos with the appropriate tag.

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

# **6** Troubleshooting

**IMPORTANT:** Your camera offers a built-in Help system. See page 47.

#### Camera problems

Status	Solution
Camera does not turn on	Make sure the battery is charged and installed correctly (see page 1).
Camera does not turn off	
Camera buttons and controls do not function	
In Review, a blue or black screen is displayed instead of a picture	<ul><li>Transfer all pictures to the computer (see page 35).</li><li>Take another picture.</li></ul>
Pictures remaining number does not decrease after taking a picture	■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)
Flash does not fire	Check the flash setting, and change as needed (see page 7). NOTE: The flash does not fire in all modes.
Memory card is almost or entirely full	<ul><li>Transfer the pictures to the computer (see page 35).</li><li>Delete pictures from the card (see page 16) or insert a new card.</li></ul>
Battery life is short	<ul> <li>Make sure the correct battery type is installed (see page 54).</li> <li>Wipe the contacts with a clean, dry cloth before inserting a battery in the camera.</li> <li>Insert a new or charged battery (see page 1).</li> </ul>

## Troubleshooting

Status	Solution
You cannot take a	■ Turn the camera off, then on again.
picture	■ Depress the Shutter button all the way (see page 5).
	■ Insert a new or charged battery (see page 1).
	Memory is full. Transfer pictures to the computer (see page 35), delete pictures (see page 16), or insert another card.
Memory card not recognized or camera	Card may be corrupted. Format the card in the camera (see page 34).
freezes with card	■ Use another memory card. Only SD or SDHC Cards are supported.
Cannot find the desired picture/video	To view pictures on a card or in internal memory, see page 15.

## Computer/connectivity problems

Status	Solution
Pictures do not transfer to computer	See Help in EASYSHARE Software.
Slide Show does not run on an external video device	<ul> <li>Adjust the camera Video Out setting to NTSC or PAL (see page 34).</li> <li>Make sure the external device settings are correct. (See the</li> </ul>
video device	device's user's guide).
Computer does not communicate with	Make sure the battery is charged and installed correctly (see page 1).
the camera	■ Turn on the camera.
	■ Make sure the USB cable model U-8 is connected to the camera and the computer (see page 36).
	■ Make sure EASYSHARE Software is installed (see page 35).

## Picture quality problems

Status	lution	
Picture is not clear	To automatically set exposure and focus, press the Shutte halfway. When the framing marks turn green, press the button <b>completely down</b> to take the picture.	
	Clean the lens (see page 52).	
	Make sure the camera is not in Macro mode if you are m 27.6 in. (70 cm) from your subject.	ore than
	Place the camera on a flat, steady surface or use a tripod in high-zoom settings or in low light).	(especially
	Use a larger picture size (see page 29).	
	If you're manually adjusting the ISO speed, realize that h setting may cause grainy pictures (see page 31).	igh ISO
Picture is too dark	Reposition the camera for more available light.	
	Use Fill flash (see page 7) or change your position so light behind the subject.	nt is not
	Move so that the distance between you and the subject is effective flash range. (See camera specifications starting page 50.)	
	To automatically set exposure and focus, press the Shutte halfway. When the framing marks turn green, press the button <b>completely down</b> to take the picture.	er button Shutter
Picture is too light	Reposition the camera to reduce the amount of available	e light.
	Turn the flash off (see page 7).	
	Move so that the distance between you and the subject is effective flash range. (See camera specifications starting page 50.)	
	To automatically set exposure and focus, press the Shutte <b>halfway</b> . When the framing marks turn green, press the button <b>completely down</b> to take the picture.	er button Shutter
	In Program and Panorama modes, adjust the Exposure Compensation (see page 28).	

## Direct printing (PICTBRIDGE enabled printer) problems

Status	Solution
Cannot find the desired picture	■ Use the Direct printing menu to change the image storage location.
The Direct printing menu interface turns off	■ Press any camera button to redisplay the menu.
Cannot print pictures	Make sure there is a connection between the camera and the printer (see page 37).  Make sure the printer and the camera have payers.
Camera or printer	<ul><li>Make sure the printer and the camera have power.</li><li>Follow the prompts to resolve the issue.</li></ul>
display an error message	Tollow the prompts to resolve the issue.

# **7** Getting help

## **Getting help from your camera**


You want the most from your camera. You want to understand:

- What it can do for you
- And how to take the best possible pictures and videos

#### Great news!

Your camera offers a built-in Help system. It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help. Because the more you know your camera, the more confident you become.

### **Turning on camera Help**

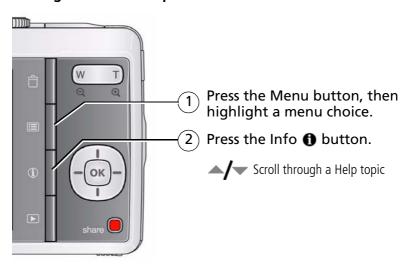

## **Getting help on the Web**

#### Camera

Email, write, or phone Kodak	www.kodak.com/go/contact
Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	www.kodak.com/go/m340support
Purchase camera accessories (lenses, cards, etc.)	www.kodak.com/go/m340accessories
Download the latest camera firmware and software	www.kodak.com/go/m340downloads
See online demonstrations of your camera	www.kodak.com/go/howto
Register your camera	www.kodak.com/go/register

#### Software

Get information on EASYSHARE Software	www.kodak.com/go/easysharesw (or see Help in EASYSHARE Software)
Get help with the WINDOWS OS and working with digital pictures	www.kodak.com/go/pcbasics

#### Other

Get support for cameras, software, accessories, mo	re www.kodak.com/go/support
Get information on KODAK Inkjet Products	www.kodak.com/go/inkjet
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch

## Getting help on the telephone

NOTE: If you have questions concerning this product, you may speak with Kodak customer support.

Australia	1800 267 588	Netherlands	020 346 9372
Austria	0179 567 357	New Zealand	0800 880 120
Belgium	02 713 14 45	Norway	23 16 21 33
Brazil	0800 891 42 13	Philippines	1 800 1 888 9600
Canada	1 800 465 6325	Poland	00800 4411625
China	800 820 6027	Portugal	021 415 4125
Czech Republic	00 800 56325000	Russia	8 495 929 9166
Denmark	3 848 71 30	Singapore	800 6363 036
Finland	0800 1 17056	Slovakia	00 800 56325000
France	01 55 1740 77	Spain	91 749 76 53
Germany	069 5007 0035	Sweden	08 587 704 21
Greece	00800 44140775	Switzerland	044 838 53 51
Hong Kong	800 901 514	Taiwan	0800 096 868
Hungary	06 80 456 325	Thailand	001 800 631 0017
India	91 80 41374555	Turkey	00800 448827073
	(toll free 000800 440 1227)		
Ireland	01 407 3054	United Kingdom	0870 243 0270
Italy	02 696 33452	United States	1 800 235 6325
Japan	03 5540 9002	International Toll Line	+44 131 458 6714
Korea	080 708 5600	International Toll Fax	+44 131 458 6962

# 8 Appendix

## **Camera specifications**

CCD-1/2.33-type

**Effective pixels**—10.2 MP (3688 x 2770)

LCD-2.7 in. (6.9 cm) LCD; 230K pixels

**Image storage**—Optional SD/SDHC Card (The SD logo is a trademark of the SD Card Association.) Maximum supported card size: 32 GB

**Internal storage capacity**—16 MB internal memory (10 MB available for image storage. 1 MB equals one million bytes.)

**Taking lens—**3X optical zoom; f/3.1–f/5.7; 35 mm equivalent: 35–105 mm

Lens protection—Built-in

**Digital zoom**—5X continuous

**Focus system**—TTL-AF (through-the-lens auto focus); Auto: Multi-Zone, Center-Zone. Working range:

60 cm (23.6 in.)-infinity @ wide, normal

60 cm(23.6 in.)-infinity @ telephoto, normal

10-70 cm (3.9-27.6 in.) @ wide, Macro mode

60-70 cm (23.6-27.6 in.) @ telephoto, Macro mode

10 m (32.8 ft)-infinity @ wide, Landscape mode

Auto focus control—Continuous and Single AF

**Face detection**—Up to 5 faces

**Shutter speed**—1/1400–4 seconds

**ISO speed**—Auto (in Smart Capture): 80–320; Manual: 80, 100, 200, 400, 800, 1600

Exposure metering—TTL-AE; Multi-Pattern, Center-Weight, Center-Spot

**Exposure compensation**—+/-2.0 EV with 1/3 EV step

White Balance—Auto, Daylight, Tungsten, Fluorescent, Open Shade

**Electronic Flash**—Auto flash; Auto, Fill, Red Eye, Off; Guide No.6; working range @ ISO 320: 0.6–3.5 m (2–11.5 ft) @ wide; 0.6–2.0 m (2–6.6 ft) @ telephoto

**Burst mode**—Maximum 3 pictures @ 1.5 fps; Auto Exposure, Auto Focus, Auto White Balance executed for first shot only

**Capture modes**—Smart Capture, Program, Blur Reduction, Sport, Panorama, Scene modes, Video

#### Image file format—

Still: EXIF 2.21 (JPEG compression); file organization DCF Video: QUICKTIME (CODEC Motion JPEG; audio: G.711)

Picture size—10.1 MP (4:3): 3664 x 2748 pixels

8.9 MP (3:2): 3664 x 2442 pixels

7.6 MP (16:9): 3664 x 2062 pixels

5.0 MP (4:3): 2592 x 1944 pixels

3.1 MP (4:3): 2048 x 1536 pixels

2.2 MP (3:2): 1800 x 1200 pixels

2.1 MP (16:9): 1920 x 1080 pixels

1.2 MP (4:3): 1280 x 960 pixels

Color modes—High Color, Natural Color, Low Color, Black & White, Sepia

Sharpness modes—Sharp, Normal, Soft

Video capture—80 minutes maximum

VGA (640 x 480 @ 24 fps)

QVGA (320 x 240 @ 24 fps)

Video blur reduction—Yes

**Communication with computer**—USB 2.0 high speed (PIMA 15740 protocol); via KODAK USB Cable, Model U-8

Video output—NTSC or PAL

Microphone—Yes

**Speaker**—Yes

**PICTBRIDGE support**—Yes

**Power**—KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7001 (720 or 770 mAh); 5V AC adapter; USB charging

**Tripod mount**—1/4 inch

**Size**—95.5 x 58.5 x 19.2 mm (3.8 x 2.3 x 0.8 in.) @ power off

Weight—115 g (4.1 oz) without card or battery

Operating temperature—0–40° C (32–104° F)

#### Care and maintenance

- If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of KODAK Products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or www.kodak.com/go/m340support.

## **Upgrading your software and firmware**

Download the latest versions of the software included on the KODAK EASYSHARE Software CD and the camera firmware (the software that runs on the camera). Visit www.kodak.com/go/m340downloads.

## Storage capacities

The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD Card capacities, visit <a href="https://www.kodak.com/go/SDcapacities">www.kodak.com/go/SDcapacities</a>. Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos.

## Important safety instructions



#### CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit www.kodak/go/accessories.
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.

- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations. Visit www.kodak.com/go/kes.
- Do not charge non-rechargeable batteries.

  For more information on batteries, visit www.kodak.com/go/batterytypes.

## Battery replacement, battery life

- KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7001 (770 mAh): 280—320 pictures per charge.
- KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7001 (720 mAh): 300—340 pictures per charge.

Battery life per CIPA testing method. (Approx. number of pictures in Smart Capture mode, using 128 MB SD Card.) Actual life may vary based on usage.

## **Extending battery life**

- Use power-saving features (see Using the Setup menu, page 32).
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading the battery in the camera.

■ Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

## **Limited warranty**

Kodak warrants KODAK Consumer Electronic Products and Accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

#### Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

#### Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories

or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty.

Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

#### Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

#### **Outside the United States and Canada**

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

## Regulatory compliance

## FCC compliance and advisory



KODAK EASYSHARE M340 Digital Camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

## Waste Electrical and Electronic Equipment/Battery disposal



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or visit <a href="https://www.kodak.com/go/recycle">www.kodak.com/go/recycle</a>.



#### **Australian C-Tick**



#### **VCCI Class B ITE**

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス日情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。 取扱説明書に従って正しい取り扱いをして下さい。

#### Korean Class B ITE

B급 기기 이 기기는 가정용(B급)으로 전자파적합등록을 (가정용 방송통신기기) 한 기기로서 주로 가정에서 사용하는 것을 목적 으로 하며, 모든 지역에서 사용할 수 있습니다.

#### **Russian GOST-R**

Eastman Kodak Company Rochester, NY 14650 Фотокамера изготовлена в Китае; остальные элементы -AIO-40 в соответствии с маркировкой.

(EN

#### China RoHS

#### 环保使用期限 (EPUP)

在中国大陆、该值表示产品中存在的任何危险物质不得释放,以免危及人身健康、财产或环境的时间期限(以年計)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害	<b>皆物质或元</b>	读名称	及含量	协识表		
	有毒有害物质或元素					
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯酚
数码相机电路板元件	×	0	0	0	0	0
锂电池	×	0	0	0	0	0
交流变压器	×	0	0	0	0	0



#### **Canadian DOC statement**

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Classe B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

#### **FCC and Industry Canada**

This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC et Industrie Canada

Cet appareil est conforme à la norme RSS-210 d'Industrie Canada et aux réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences muisibles, et (2) cet appareil doit supporter les interférences reçues, y compris celles susceptibles de muire à son bon fonctionnement.

## Index

A	telephoto/zoom, 6
A/V out, 19	
about this camera, 34	C
accessories, 36	cable
battery, 54	audio/video, 19
buying, 48	USB, 36
SD/SDHC Card, 3	camera sounds, 33
AF control (Still), 30	Canadian compliance, 59
AF control (video), 32	care and maintenance, 52
AF zone, 31	charging the battery, 2, 4
auto, 8	children, 9
enhancement, 21	clock, setting, 3
focus control, 30, 32	color mode, 30
focus framing marks, 5	computer
power off, 34	connecting camera, 35
auto focus (AF)	transfer to, 35
zone, 31	connector, USB / A/V, 19, 36
auto power off, 34	copy pictures
·	card to memory, 23
В	memory to card, 23
backlight, 9	to computer via USB cable, 35
battery	cropping pictures, 21
charging, 2, 4	customer support, 49
expected life, 54	customize camera, 32
loading, 1	
types, 54	D
battery compartment, ii	date setting, 3
beach, 9	date stamp, 33
bookmarks, 26	DC-in, i
button	delete button, ii
delete, 6	deleting
review, ii	during quickview, 6

from internal memory, 16 from SD/SDHC Card, 16	framing marks, 5
protecting pictures, videos, 16	G
digital zoom, 6	guidelines, battery, 54
displaying slide show, 18	Н
disposal, recycling, 52	help
downloading pictures, 35	camera help, 47
E	Web links, 47
EASYSHARE Software, 35 edit videos, 24	high ISO, 10
emailing pictures, videos, 40	
expected battery life, 54	icons, modes, 8 image stabilizer (video), 33
exposure long time, 29, 32	image storage, 32
metering, 31	installing
exposure compensation, 28	battery, 1
exposure metering, 31	SD/SDHC Card, 3
external video device	software, 35 ISO speed, 31
viewing pictures, videos, 19	.00 36000, 0 .
F	<b>.</b>
face detect capture, 30	joystick, ii
favorites tagging, 41	К
FCC compliance, 57 fireworks, 9	KODAK EASYSHARE Software
firmware, upgrading, 53	installing, 35
flash, i	upgrading, 53 KODAK PERFECT TOUCH
flash button, i	Technology, 21
flash, using, 7 flower, 9	Kodak Web sites, 47
focus framing marks, 5	
focus mode, 29	<b>L</b> language, 34
format, 34	LCD, ii

brightness, 32 reviewing pictures, 15 reviewing videos, 15 LCD brightness, 32 lens cleaning lens, 52 light, self-timer, i loading battery, 1	night portrait, 9 scene (SCN), 9 self-portrait, 9 snow, 9 text, 9 modes, capture smart capture, 8 multiple selections, 17 multi-up, 17
SD/SDHC Card, 3 software, 35 long time exposure, 29, 32	<b>N</b> night landscape, 9 night portrait, 9
<b>M</b> MAC OS, installing software, 35 magnify a picture, 15 maintenance, camera, 52 make picture from video, 24 manner/museum, 9	OK button, ii online prints, ordering, 38 optical zoom, 6 orientation sensor, 33
memory inserting card, 3 menu button, ii menu settings, 28 mode dial, i modes, 8 auto, 8 backlight, 9 beach, 9 children, 9 fireworks, 9 flower, 9 high ISO, 10 manner/museum, 9 night landscape, 9	panoramic pictures, 13 PERFECT TOUCH Technology, 21 PICTBRIDGE enabled printer, 37 picture size, 28, 29 pictures copying, 23 cropping, 21 emailing tagged, 40 PERFECT TOUCH, 21 printing, 38 printing tagged, 39 protecting, 16 review icons, 27 reviewing, 15

tagging, 39	running slide show, 18
taking, modes, 8	
transfer via USB cable, 35	S
pictures/video	safety, 53
deleting, 16	scene modes (SCN), 9
playing a video, 15	SD/SDHC Card
power	inserting, 3
camera, 2	printing from, 38
power button, i	select multiple pictures/videos, 17
pre-tagging, 42	self-portrait, 9
printing	self-timer, 12
from a card, 38	self-timer light, i
from computer, 38	service and support telephone
optimizing printer, 47	numbers, 49
order online, 38	set tag, 33
PICTBRIDGE, 37	setting
tagged pictures, 38	AF zone, 31
protecting pictures, videos, 16	auto power off, 34
	auto-focus, 30, 32
Q	camera sounds, 33
quickview, using, 6	color mode, 30
	date and time, 3
R	date stamp, 33
recycling, disposal, 52	exposure metering, 31
regulatory information, 57	image storage, 32
repair, 48	ISO, 31
reset camera, 34	language, 34
review button, ii	LCD brightness, 32
reviewing pictures/video	long time exposure, 29, 32
as you take them, 6	orientation sensor, 33
deleting, 16	picture size, 28, 29
LCD, 15	picture-taking mode, 8
protecting, 16	self-timer, 12
slide show, 18	sharpness, 31

sound volume, 33 video out, 34 video size, 31 white balance, 30 setting up the camera, 1 setup menu, 32 Share button, 32 sharpness, 31 shutter problems, 44 self-timer delay, 12 shutter button, i slide show continuous loop, 18 running, 18 smart capture, 8 snow, 9 software installing, 35 upgrading, 53	taking pictures, videos, 5 telephone support, 49 television, slide show, 19 text, 9 time, setting, 3 timer, shutter delay, 12 tips battery guidelines, 54 care & maintenance, 52 transfer, via USB cable, 35 trash can, deleting, 6 trimming a video, 24 tripod socket, ii troubleshooting, 43 turning camera on and off, 2  U undelete, undo, 16 upgrading software, firmware, 53 URLs, Kodak Web sites, 47
sound volume, 33 sounds, 33 specifications, camera, 50	USB transferring pictures, 35 USB/AV Out, ii
strap, 1 strap post, ii support, technical, 49  T tagging creating tags, 41 favorites, 41 for email, 40 for print, 39 pre-tagging, 42	V VCCI compliance, 58 video action print, 25 copying, 23 edit, 24 emailing tagged, 40 out, 34 playback, 15 protecting, 16

```
review icons, 27
   size, 31
   transfer to computer, 35
   viewing, 15
video bookmarks, 26
video out, 34
video size, 31
viewing
   by multi-up, 17
   picture, after taking, 6, 15
volume, 33
W
warranty, 55
white balance, 30
WINDOWS OS, installing software, 35
Z
zoom
   digital, 6
   optical, 6
zoom button, ii
```