


# PENTAX

EN

Digital Camera

# Optio E60

Operating Manual

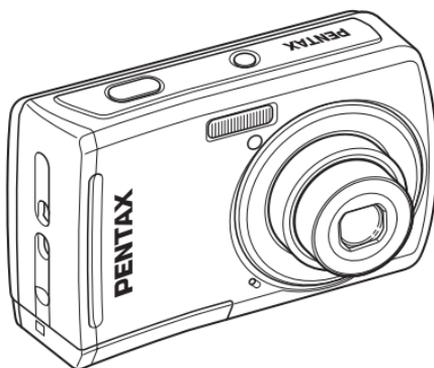

To ensure the best performance from your camera, please read the Operating Manual before using the camera.

Thank you for purchasing this PENTAX Digital Camera.

Please read this manual before using the camera in order to get the most out of all the features and functions. Keep this manual safe, as it can be a valuable tool in helping you to understand all the camera capabilities.

### **Regarding copyrights**

Images taken using this PENTAX Digital Camera that are for anything other than personal enjoyment cannot be used without permission according to the rights as specified in the Copyright Act. Please take care, as there are cases where limitations are placed on taking pictures even for personal enjoyment during demonstrations, performances or of items on display. Images taken with the purpose of obtaining copyrights also cannot be used outside the scope of use of the copyright as laid out in the Copyright Act, and care should be taken here also.

### **Regarding trademarks**

- PENTAX and Optio are trademarks of HOYA Corporation.
- SDHC logo () is trademark.
- This product supports PRINT Image Matching III. PRINT Image Matching enabled digital still cameras, printers and software help photographers to produce images more faithful to their intentions. Some functions are not available on printers that are not PRINT Image Matching III compliant.  
Copyright 2001 Seiko Epson Corporation. All Rights Reserved.  
PRINT Image Matching is a trademark of Seiko Epson Corporation.  
The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.
- All other brands or product names are trademarks or registered trademarks of their respective companies.

### **To users of this camera**

- There is a possibility that recorded data may be erased or that the camera may not function correctly when used in surroundings such as installations generating strong electromagnetic radiation or magnetic fields.
- The liquid crystal panel used in the display is manufactured using extremely high precision technology. Although the level of functioning pixels is 99.99% or better, you should be aware that 0.01% or fewer of the pixels may not illuminate or may illuminate when they should not. However, this has no effect on the recorded image.
- There is a possibility that the illustrations and the display screen in this manual are different from the actual product.
- In this manual, both an SD Memory Card and an SDHC Memory Card are referred to as SD Memory Cards hereafter.
- In this manual, the generic term "computer(s)" refers to either a Windows PC or a Macintosh hereafter.

### **Regarding PictBridge**

PictBridge allows the user to connect the printer and digital camera directly, using the unified standard for the direct printout of images. You can print images directly from the camera through a few simple operations.

#### **Regarding Product Registration**

In order to better serve you, we request that you complete the product registration, which can be found on the CD-ROM (S-SW81) supplied with the camera or on the PENTAX website. Thank you for your cooperation.

Refer to the "PC Connection Manual" (bottom right on page 1) for more information.

## USING YOUR CAMERA SAFELY

We have paid close attention to the safety of this product. When using this product, we request your special attention regarding items marked with the following symbols.



### **Warning**

This symbol indicates that violating this item could cause serious personal injuries.



### **Caution**

This symbol indicates that violating this item could cause minor or medium personal injuries, or material losses.

## About the Camera



### **Warning**

- Do not attempt to take the camera apart or remodel the camera. High voltages are present within the camera, and there is therefore a danger of electric shocks if the camera is taken apart.
- If the inside of the camera should become exposed as a result of, for example, the camera being dropped, please do not under any circumstances touch such exposed portions, as there is a danger of receiving an electric shock.
- To avoid the risk of it being swallowed by mistake, keep the SD Memory Card out of the reach of small children. Seek medical attention immediately if a card is accidentally swallowed.
- Wrapping the strap of the camera around your neck is also dangerous. Please take care that small children do not hang the strap around their necks.
- Use an AC adapter that is of the power and voltage specified for exclusive use with this product. The use of an AC adapter other than that specified exclusively for use with this product may cause fire or electric shocks.
- If the camera emits smoke or a strange smell, or in the event of any other irregularity, stop using the camera immediately, remove the batteries or unplug the AC adapter, and contact your nearest PENTAX Service Center. Continued use of the camera may result in fire or electric shock.
- During thunderstorms, unplug and discontinue use of the AC adapter. Continued use could cause equipment failure, a fire, or electric shock.

## Caution

- Never try to disassemble or short the batteries. Also, do not dispose of the batteries in a fire, as they may explode.
- Do not charge any batteries other than rechargeable Ni-MH batteries. The batteries could explode or catch fire. Batteries for use with this camera other than Ni-MH batteries cannot be charged.
- Do not place your finger on the flash when it is discharging as there is a risk of burns.
- Do not discharge the flash while it is touching your clothing as there is a risk of discoloring of the clothing.
- If any leakage from the batteries should come in contact with your eyes, do not rub them. Flush your eyes with clean water and get medical attention immediately.
- If any leakage from the batteries should come in contact with skin or clothes, wash the affected areas thoroughly with water.
- Remove the batteries from the camera immediately if they become hot or emit smoke. Be careful not to burn yourself during removal.
- Some portions of the camera heat up during use, so please take care, as there is a risk of low temperature burns if such portions are held for long periods of time.
- Should the liquid crystal display be damaged, be careful of glass fragments. Also, be careful not to allow the liquid crystal to get on your skin or in your eyes or in your mouth.
- Depending on your inherent factors or physical condition, the use of the camera may cause itching, rashes or blisters. In case of any abnormality, stop using the camera and get medical attention immediately.

### Handling Precautions for Batteries

- This camera uses two AA alkaline, AA lithium, AA Ni-MH or AA nickel manganese batteries. Do not use batteries other than those specified here. Using some other type of battery may cause the camera to function poorly, or the batteries may rupture or cause a fire.
- AA alkaline, AA lithium and AA nickel manganese batteries cannot be recharged. Do not try to take the batteries apart. The batteries may rupture or leak if you try to charge them or take them apart.
- Do not remove the external seal of the battery. If the seal is removed, the battery may short and may cause a fire, rupture, leak or heat.
- When replacing the batteries, do not combine different brands, types or capacities. Also, do not combine old batteries with new ones. Doing so may cause the batteries to rupture or cause a fire.
- Do not insert the batteries with the positive (+) and negative (–) poles in the wrong orientation. Doing so may cause the batteries to rupture or cause a fire.

## About the AC Adapter

### **Caution**

- Do not place heavy objects on the AC plug cord, allow heavy objects to drop onto it or allow the AC plug cord to become damaged due to excessive bending. If the AC plug cord becomes damaged, consult a PENTAX Service Center.
- Do not short or touch the output terminals of the product while it is still plugged in.
- Do not plug in the AC plug cord with wet hands. This can cause an electrical shock.
- Do not subject the product to strong impacts or allow it to drop onto a hard surface. This can cause a malfunction.
- To reduce the risk of hazards, use only CSA/UL Certified power supply cord set, cord is Type SPT-2 or heavier, minimum NO.18 AWG copper, one end with a molded-on male attachment plug cap (with a specified NEMA configuration), and the other is provided with a molded-on female connector body (with a specified IEC nonindustrial type configuration) or the equivalent.

## Care to be Taken During Handling

- Take the Worldwide Service Network listing that is included in the package with you when traveling. This will be useful if you experience problems abroad.
- When the camera has not been used for a long time, confirm that it is still working properly, particularly prior to taking important pictures (such as at a wedding or during traveling). Contents of the recording cannot be guaranteed if recording, playback or transferring your data to a computer, etc. is not possible due to a malfunction of your camera or recording media (SD Memory Card), etc.
- The lens on this camera is not interchangeable. The lens is not removable.
- Do not clean the product with organic solvents such as thinner, alcohol or benzene.
- Places of high temperature and humidity should be avoided. Particular care should be taken regarding vehicles, which can become very hot inside.
- Storing the camera where pesticides and chemicals are handled should be avoided. Remove from case and store in a well-ventilated place to prevent the camera from becoming moldy during storage.

- As this camera is not waterproof, do not use the camera where it may come in contact with rain, water or any other liquid.
- Ensure that the camera is not subjected to substantial vibrations, shocks or pressure as this may cause damage or malfunction. Place the camera on a cushion for protection when the camera is subjected to the vibrations of a motorbike, car, ship, etc. If the camera is subjected to substantial vibrations, shocks or pressure, take your camera to your nearest PENTAX Service Center and have it checked.
- The temperature range in which the camera can be used is 0°C to 40°C (32°F to 104°F).
- The liquid crystal display will become black at a high temperature but will return to normal when normal temperatures are returned to.
- The response speed of the liquid crystal display becomes slow at low temperatures. This is due to the properties of the liquid crystal and is not a fault.
- Periodic checks are recommended every 1 to 2 years in order to maintain high performance.
- If the camera is subjected to rapid temperature changes, condensation may form on the inside and outside of the camera. Therefore put the camera in a bag or plastic bag, and take the camera out when the difference in temperature has subsided.
- Be careful not to allow dirt, mud, sand, dust, water, toxic gases or salt to enter the camera as this may damage the camera. Wipe away any raindrops or water droplets and allow the camera to dry.
- Refer to “Precautions When Using an SD Memory Card” (p.25) regarding the SD Memory Card.
- Please note that formatting an SD Memory Card or built-in memory will delete all data; however it may still be possible to recover that data using off-the-shelf data recovery software. Please manage your camera memory at your own risk.
- Please do not press forcefully on the display. This could cause breakage or malfunction.
- Be careful not to sit down with the camera in your back pocket as this may damage the exterior of the camera or the display.
- When using a tripod with the camera, be careful not to overtighten the screw in the tripod socket on the camera.

# Contents

USING YOUR CAMERA SAFELY .....	1
Care to be Taken During Handling .....	3
Contents .....	5
Composition of the Operating Manual .....	9
<b>Camera Features .....</b>	<b>10</b>
Names of Parts .....	12
Names of Operating Parts .....	13
Monitor Indications .....	14
<b>Getting Started .....</b>	<b>17</b>
<hr/>	
<b>Checking the Contents of the Package .....</b>	<b>17</b>
<b>Attaching the Strap .....</b>	<b>18</b>
<b>Powering the Camera .....</b>	<b>19</b>
Installing the Batteries .....	19
Using the AC Adapter with a Household Power Supply .....	21
<b>Installing the SD Memory Card .....</b>	<b>23</b>
Picture Storage Capacity .....	26
Movie Storage Capacity .....	26
<b>Turning the Camera On and Off .....</b>	<b>27</b>
Turning the Camera On in Capture Mode .....	27
Turning the Camera On in Playback Mode .....	28
<b>Initial Settings .....</b>	<b>29</b>
Selecting the Display Language .....	29
Setting the Date and Time .....	31
<b>Quick Start .....</b>	<b>33</b>
<hr/>	
<b>Taking Still Pictures .....</b>	<b>33</b>
<b>Playing Back Still Pictures .....</b>	<b>36</b>
Playing Back Images .....	36
Playing Back the Previous or Next Image .....	36
Rotating the Displayed Image .....	37
Switching between Capture Mode and Playback Mode .....	38
<b>Common Operations .....</b>	<b>39</b>
<hr/>	
<b>Understanding the Button Functions .....</b>	<b>39</b>
In Capture Mode .....	39
In Playback Mode .....	41
<b>Using the Menu .....</b>	<b>44</b>
How to Set the Menus .....	44
Menu List .....	47

<b>Using the Mode Palettes .....</b>	<b>49</b>
How to Select the Modes.....	49
Mode Palette List.....	49
Setting the Face Recognition function.....	51
<b>Taking Pictures .....</b>	<b>54</b>
<hr/>	
<b>Taking Pictures in a Selected Mode.....</b>	<b>54</b>
Taking Pictures in the Basic Mode (Green Mode).....	54
Letting the Camera Choose the Optimal Shooting Mode (Auto Picture Mode).....	56
Letting the Camera Choose the Optimal Settings (Program Mode) .....	57
Taking Pictures of People (Half-length Portrait/Portrait/Kids Mode).....	58
Taking Pictures of Your Pet (Pet Mode).....	60
Taking Pictures of Dark Scenes (Night Scene/Night Scene Portrait Mode) .....	61
Reducing Camera Shake and Blurring When Taking Pictures (Digital SR Mode) .....	62
Taking Panoramic Pictures (Digital Panorama Mode).....	64
Framing Your Pictures (Frame Composite Mode).....	67
<b>Taking Pictures with Customized Settings .....</b>	<b>69</b>
Selecting the Recorded Pixels.....	69
Selecting the Quality Level .....	71
Using the Zoom .....	73
Selecting the Focus Mode .....	76
Selecting the Auto Focus Mode (Focusing Area).....	78
Selecting the Flash Mode .....	79
Setting the Sensitivity .....	81
Setting the Exposure (EV Compensation).....	83
<b>Doing More with Useful Functions .....</b>	<b>84</b>
Displaying Shooting Information.....	84
Using the Self-timer .....	85
Taking a Series of Pictures.....	86
Setting the Date Imprint.....	88
Saving Your Settings (Memory).....	90
<b>Recording Movies .....</b>	<b>92</b>
Recording a Movie.....	92
Selecting the Settings for Taking Movies .....	94
<b>Playing Back and Deleting Images .....</b>	<b>97</b>
<hr/>	
<b>Playing Back Images on the Camera .....</b>	<b>97</b>
Playing Back Still Pictures .....	97

Reviewing Shooting Information .....	97
Nine-Image Display, Folder Display and Calendar Display .....	98
Zoom Playback .....	100
Zoom In On the Subject's Face Automatically (Face close-up playback) .....	101
Slideshow .....	103
<b>Playing Back Movies .....</b>	<b>105</b>
Playing Back a Movie .....	105
<b>Playing Back Images on a TV .....</b>	<b>107</b>
<b>Deleting Images and Sound Files .....</b>	<b>108</b>
Deleting a Single Image/Sound File .....	108
Deleting Selected Images and Sound Files (from Nine-Image Display) .....	110
Deleting All Images and Sound Files .....	112
Recovering Deleted Images .....	113
Protecting Images and Sound Files from Deletion (Protect) .....	114
<b>Editing and Printing Images .....</b>	<b>116</b>
<hr/>	
<b>Editing Images .....</b>	<b>116</b>
Changing the Image Size and Quality (Resize) .....	116
Cropping Images .....	118
Copying Images and Sound Files .....	119
Using the Digital Filter .....	121
Using the Brightness Filter .....	122
Adding a Frame (Frame Composite) .....	124
Red-eye Compensation .....	128
<b>Setting the Printing Service (DPOF) .....</b>	<b>129</b>
Printing Single Images .....	129
Printing All Images .....	131
<b>Printing Using PictBridge .....</b>	<b>132</b>
Connecting the Camera to the Printer .....	132
Printing Single Images .....	133
Printing All Images .....	135
Printing Using the DPOF Settings .....	136
Disconnecting the Cable from the Printer .....	136
<b>Recording and Playing Back Sound .....</b>	<b>137</b>
<hr/>	
<b>Recording Sound (Voice Recording Mode) .....</b>	<b>137</b>
<b>Playing Back Sound .....</b>	<b>139</b>
<b>Settings .....</b>	<b>140</b>
<hr/>	
<b>Camera Settings .....</b>	<b>140</b>

Formatting an SD Memory Card.....	140
Changing the Sound Settings.....	141
Changing the Date and Time.....	143
Setting the World Time .....	145
Changing the Display Language .....	147
Changing the Image Folder Name .....	148
Changing the USB Connection Mode.....	150
Changing the Video Output Format.....	151
Adjusting the Brightness of the Display .....	152
Using the Power Saving Function .....	153
Setting Auto Power Off .....	154
Resetting to Default Settings (Reset) .....	155

## **Appendix**

**156**

---

<b>List of World Time Cities .....</b>	<b>156</b>
<b>Default Settings.....</b>	<b>157</b>
<b>Functions Available for Each Shooting Mode.....</b>	<b>161</b>
<b>Optional Accessories .....</b>	<b>162</b>
<b>Messages .....</b>	<b>163</b>
<b>Troubleshooting.....</b>	<b>165</b>
<b>Main Specifications .....</b>	<b>167</b>
<b>WARRANTY POLICY.....</b>	<b>171</b>
<b>Index.....</b>	<b>176</b>

# Composition of the Operating Manual

This Operating Manual contains the following chapters.

## 1 Getting Started

This chapter explains what you need to do after purchasing the camera before you start taking pictures. Be sure to read it and follow the instructions.

## 2 Quick Start

This chapter explains the simplest way to take pictures and play back images. Use it if you wish to start taking pictures or playing back images straightaway.

## 3 Common Operations

This chapter explains common operations such as the functions of the buttons and how to use the menus. For more details, refer to the respective chapters below.

## 4 Taking Pictures

This chapter explains the various ways of capturing images and how to set the relevant functions.

## 5 Playing Back and Deleting Images

This chapter explains how to view still pictures and movies on the camera or on a TV and how to delete images from the camera.

## 6 Editing and Printing Images

This chapter explains the various ways of printing still pictures and how to edit images with the camera. For information on transferring images to a computer and installing the provided application software, see the supplied "PC Connection Manual". For details on editing and printing images on a computer, see the Help menu of the application software.

## 7 Recording and Playing Back Sound

This chapter explains how to record sound files (Voice Recording mode) and how to play back sound files.

## 8 Settings

This chapter explains how to set the camera-related functions.

## 9 Appendix

This chapter deals with troubleshooting and lists the optional accessories.

The meanings of the symbols used in this Operating Manual are explained below.

	indicates the reference page number for an explanation of the related operation.
	indicates information that is useful to know.
	indicates precautions to be taken when operating the camera.

1

2

3

4

5

6

7

8

9

# Camera Features

The Optio E60 features a variety of shooting modes to suit different situations. Here we briefly describe how to make the most of the key features of your camera. Together with the explanations of camera operations, it will enable you to enjoy your camera to the full.

## Easy-to-Navigate Capture and Playback Functions!



The Optio E60 features an easy-to-see 2.4-inch display. In addition, settings for capture, playback and editing functions are easy to navigate. Simply select icons that appear on the display.


Picture taking has never been simpler in  (Green) mode. With just one press of a button, you can capture every smile, every moment, and every memory. (p.54)

If you are unsure of which shooting mode to use, select  (Auto Picture). The camera selects the appropriate shooting mode depending on the scene. \*(p.56)

\* When you select  (Auto Picture), a shooting mode is selected from  (Standard),  (Night Scene),  (Landscape),  (Portrait),  (Night Scene Portrait),  (Sport) and  (Flower).

- **Let the camera choose the optimal settings.**
- **Use the Green Mode to take pictures easily using standard settings.**

## Have Fun with Adding a Frame to a Picture or Taking Panoramic Pictures!

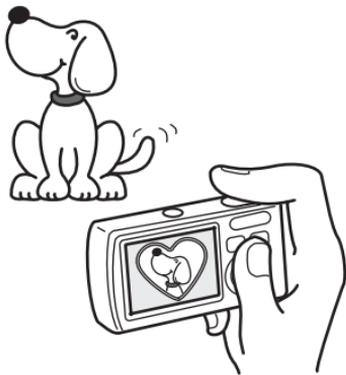

With the Optio E60, you can add a fancy frame when taking a picture of a child or your pet, for example. (p.67) You can also add frames to pictures you have taken. Taking panoramic pictures is also easy, as the camera stitches up to 3 pictures into a panoramic scene. (p.64)

- For decorating your pictures with a frame.
- For capturing a panoramic scene.

## Easy Printing without Using a Computer!

By connecting the camera to a printer that supports PictBridge using the USB/AV cable, you can enjoy printing out images directly from the camera with a touch of a button.

Gone are the days of not being able to print out pictures at home because operating the computer was too difficult!


- Easily print out images without using a computer.

## Display Images and Sound Files in Calendar Format!


The Optio E60 lets you display recorded images by date in calendar format. You can easily find the image you wish to play back as you look back at your album. (p.99)

# Names of Parts


## Front

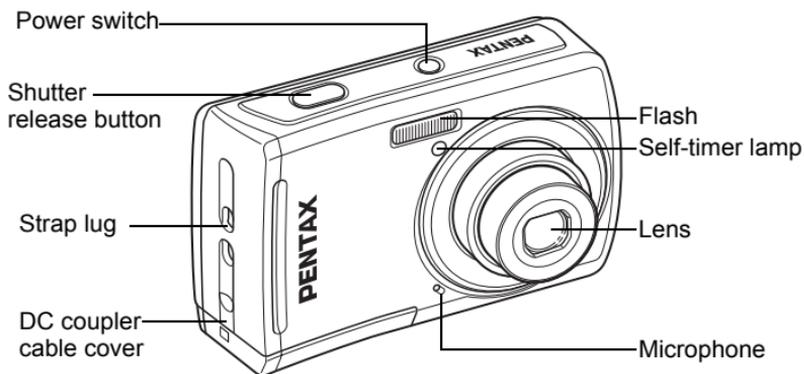

## Back

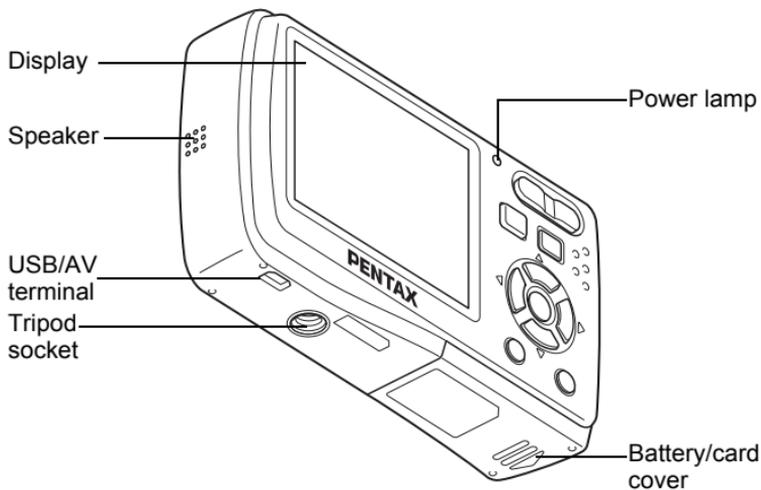

## Names of Operating Parts

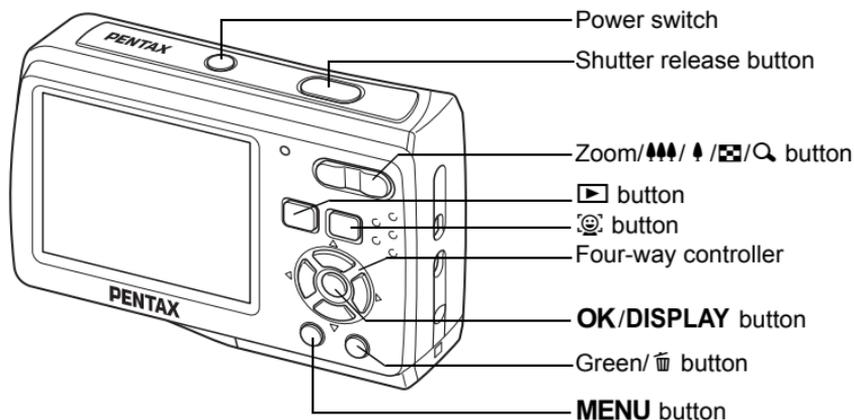


Refer to "Understanding the Button Functions" (p.39 - p.42) for an explanation of the function of each button.

# Monitor Indications

## Normal Display in Still Picture Capture Mode

The display shows information such as the shooting conditions.

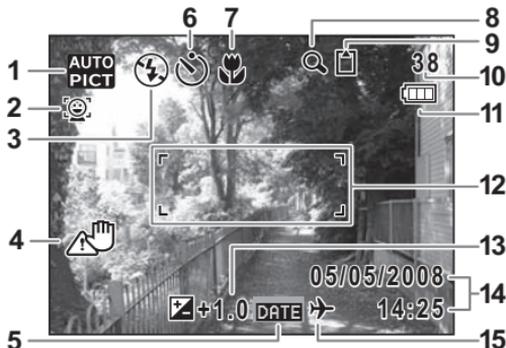

- |                                    |   |
|------------------------------------|---|
| 1 Shooting mode (p.49)             | 9 Memory status (p.27)  |
| 2 Face Priority icon (p.51)        |  : Built-in memory         |
| 3 Flash mode (p.79)                | (without card)  |
| 4 Camera shake icon (p.84)         |  : SD Memory Card          |
| (appears only when the shutter     |  : Card is write-protected |
| release button is pressed halfway) | 10 Remaining image storage capacity   |
| 5 Date Imprint setting (p.88)      | 11 Battery level indicator (p.20)   |
| 6 Drive mode (p.85 – p.87)         | 12 Focus frame (p.33)   |
| 7 Focus mode (p.76)                | 13 EV compensation (p.83)   |
| 8 Digital zoom and                 | 14 Date and time (p.31)   |
| Intelligent zoom icon (p.73)       | 15 World time setting (p.145)   |

\* Some indications may not appear depending on the shooting mode.

## Full Display in Still Picture Capture Mode

(All of the indications are displayed here for explanatory purposes.)



- |   |                          |
|---|--------------------------|
| 1 Shutter speed<br>(appears only when the shutter<br>release button is pressed halfway) | 3 Recorded pixels (p.69) |
| 2 Aperture<br>(appears only when the shutter<br>release button is pressed halfway)      | 4 Quality level (p.71)   |
|   | 5 Sensitivity (p.81)     |

\* Some indications may not appear depending on the shooting mode.

## Full Display in Still Picture Playback Mode

(All of the indications are displayed here for explanatory purposes.)

The display shows information such as the shooting conditions. A1 to A10 appear when “Normal Display” or “Detailed Display” is selected. B1 to B5 appear only when “Detailed Display” is selected. (p.97)



- |  |  |
|--|--|
| <b>A1</b> Playback mode (p.53)           | <b>A9</b> Shooting date and time (p.31)  |
| <b>A2</b> Face Priority icon (p.53)      | <b>A10</b> Four-way controller operation |
| <b>A3</b> Folder number (p.148)          | <b>B1</b> Recorded pixels (p.69)         |
| <b>A4</b> File number (p.36)             | <b>B2</b> Quality level (p.71)           |
| <b>A5</b> Protect icon (p.114)           | <b>B3</b> Sensitivity (p.81)             |
| <b>A6</b> Battery level indicator (p.20) | <b>B4</b> Shutter speed                  |
| <b>A7</b> Volume indicator (p.141)       | <b>B5</b> Aperture                       |
| <b>A8</b> Memory status (p.27)           |  |
| : Built-in memory<br>(without card)      |  |
| : SD Memory Card                         |  |
| : Card is write-protected                |  |

In Normal Display, A6 and A9 disappear if no operation is performed for two seconds.

## Button operation guide

The button operation guide appears on the display during operation.

The buttons are indicated as shown below.


Four-way controller (▲)	▲	Zoom button	
Four-way controller (▼)	▼	<b>OK/DISPLAY</b> button	
Four-way controller (◀)	◀	Shutter release button	
Four-way controller (▶)	▶	Green/  button	or
<b>MENU</b> button		button	

# Checking the Contents of the Package

Check that your camera comes complete with the items listed below.




Camera  
Optio E60

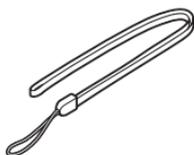


Strap  
O-ST62 (\*)



Software (CD-ROM)  
S-SW81

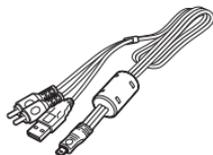

USB/AV cable  
I-UAV77 (\*)

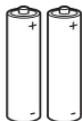

Two AA  
alkaline batteries



Operating Manual (this manual)  
/ PC Connection Manual  
(CD-ROM)




Quick Guide


Items marked with an asterisk (\*) are also available as optional accessories. For other optional accessories, refer to "Optional Accessories" (p.162).

# Attaching the Strap

Attach the strap (O-ST62) supplied with the camera.

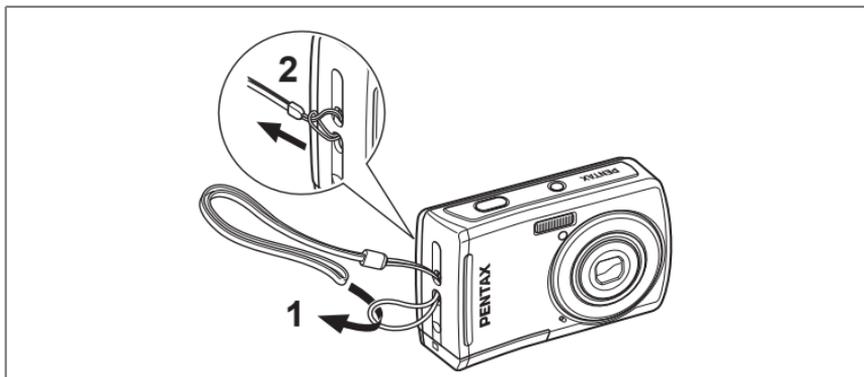

- 1** Pass the narrow end of the strap through the strap lug.
- 2** Pass the other end of the strap through the loop and pull tight.

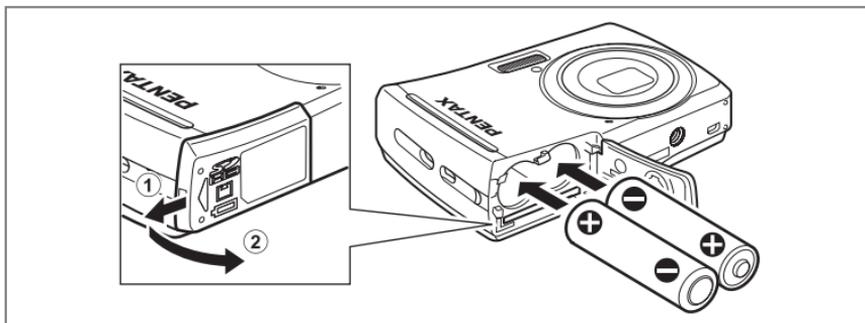

## Installing the Batteries

Install the batteries into the camera. Use two AA alkaline, AA lithium, AA Ni-MH, or AA nickel manganese batteries.

### 1 Open the battery/card cover.

Slide the battery/card cover in the direction ①. The cover will automatically open in the direction ② when you release your fingers from it.

### 2 Insert the batteries, making sure the (+) and (-) terminals on the batteries match the (+) and (-) symbols inside the battery compartment.

### 3 Close the battery/card cover and slide it in the opposite direction of ①.



- AA alkaline, AA lithium and AA nickel manganese batteries are not rechargeable.
- Do not open the battery/card cover or remove the batteries while the camera is turned on.
- If you do not intend to use the camera for a long time, remove the batteries. If the batteries are left in the camera for a long time, they may leak.
- If the batteries have been removed from the camera for a long time, when they are reinserted and the camera is turned on, the message [Battery depleted] may appear. This can also happen when using the camera for the first time; however this is not a malfunction. Turn the camera off, wait a minute and then turn the camera on again to reset the camera. The date and time may also be reset.
- Insert the batteries correctly. If the batteries are incorrectly oriented, malfunction may result. If the ends of the batteries look dirty, wipe them before inserting into the camera.



- Use the AC adapter kit K-AC62 (optional) if you intend to use the camera for a long time. (p.21)

1

## • Image Storage Capacity and Playback Time

(at 23°C with the display on and fresh AA alkaline batteries inserted)

Image Storage Capacity <sup>*1</sup>	Playback Time <sup>*2</sup>
Approx. 200 pictures	Approx. 280 min.

\*1: Recording capacity shows approximate number of shots recorded during CIPA-compliant testing (with the display on, flash used for 50% of the shots, and 23°C). Actual performance may vary according to operating conditions.

\*2: According to the result of in-house testing.



- In general, battery performance may temporarily deteriorate as the temperature decreases. Be sure to take spare batteries when using the camera in a cold region and keep the batteries warm by placing them in your pocket or inside your coat. Battery performance that has deteriorated due to cold temperature will return to normal performance when the batteries reach room temperature.
- Due to their characteristics, AA alkaline batteries and nickel manganese batteries may not allow the camera to make full use of its capabilities when used at cold temperatures. Use of AA lithium or AA Ni-MH batteries is recommended when the camera is used at cold temperatures.
- Be sure to take spare batteries with you when traveling abroad or to a cold region, or if you intend to take a lot of pictures.


## • Battery Level Indicator

You can check the battery level by the  indicator on the display.

Screen Display	Battery Status
 (green)	Adequate power remains.
 (green)	Batteries are running low.
 (yellow)	Batteries are running very low.
 (red)	Batteries are exhausted.
[Battery depleted]	The camera will turn off after this message appears.



Due to the characteristics of AA nickel manganese batteries, the battery level may not be displayed correctly when using these batteries.  may be displayed for the battery level even if the batteries are running low. The camera may also turn off without warning even if  is displayed.

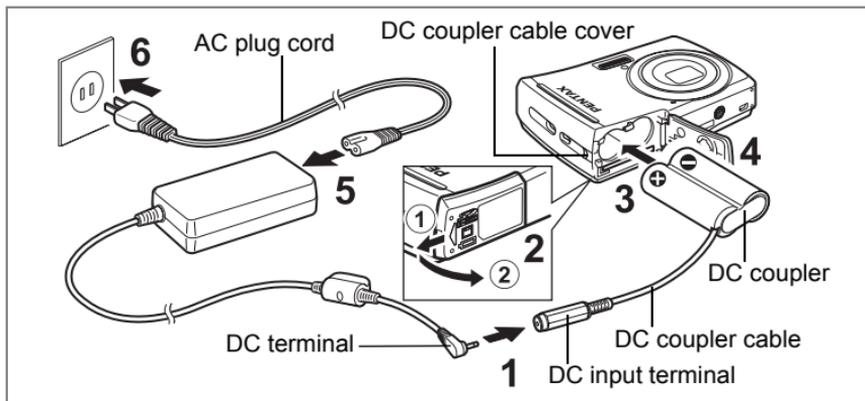

## Using the AC Adapter with a Household Power Supply

Use of the AC adapter kit K-AC62 (optional) with a household power supply is recommended if you intend to use the camera for a long time or connect it to a computer.


- 1** Connect the DC terminal of the AC adapter to the DC input terminal of the DC coupler.
- 2** Make sure that the camera is turned off and open the battery/card cover.  
Slide the battery/card cover in the direction ①. The cover will automatically open in the direction ② when you release your fingers from it.
- 3** Insert the DC coupler into the battery compartment, making sure the (+) and (-) terminals on the coupler match the (+) and (-) symbols inside the battery compartment.
- 4** Open the DC coupler cable cover, pass the DC coupler cable through the opening, and close the battery/card cover.  
Slide the battery/card cover in the opposite direction of ①. Slide the battery/card cover all the way in to make sure it is securely closed.
- 5** Connect the AC plug cord to the AC adapter.
- 6** Plug the AC plug cord into the power outlet.

- Make sure that the camera is turned off before connecting or disconnecting the AC adapter.
- Make sure that the AC plug cord and the power cord connecting the AC adapter to the camera are inserted securely. The data may become lost if either cord becomes disconnected while data is being recorded.
- Use the AC adapter with due care to avoid fire or electric shock. Be sure to read “USING YOUR CAMERA SAFELY” (p.1) and “About the AC Adapter” (p.3) before using the AC adapter.
- Be sure to read the operation manual accompanying the AC adapter kit K-AC62 before using the adapter.

# Installing the SD Memory Card

1

Getting Started

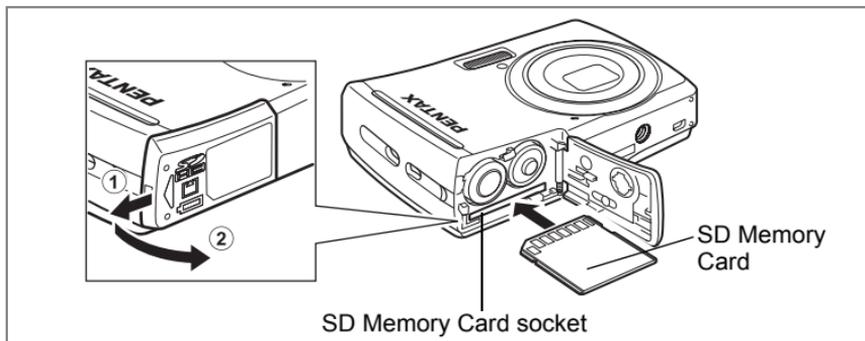

This camera uses either an SD Memory Card or an SDHC Memory Card. (Both cards are referred to as SD Memory Cards hereafter.) Captured images and sound files are saved on the SD Memory Card if a card is inserted in the camera. They are saved in the built-in memory if a card is not inserted.



- Be sure to use this camera to format an SD Memory Card that is unused or has been used on another camera. Refer to “Formatting an SD Memory Card” (p.140) for instructions on formatting.
- Make sure that the camera is turned off before inserting or removing the SD Memory Card.



The still picture storage capacity varies depending on the capacity of the SD Memory Card and the selected number of recorded pixels and quality level. (p.167)

## Backing Up Data

The camera may not be able to access data in the built-in memory in the case of a malfunction. Use a computer or other device to back up important data in another location.

**1 Open the battery/card cover.**

Slide the battery/card cover in the direction ①. The cover will automatically open in the direction ② when you release your fingers from it.


**2 Insert the SD Memory Card into the SD Memory Card socket so that the label is facing toward the display.**

Push the card in until it clicks. Images and sound may not be recorded correctly if the card is not inserted all the way.

**3 Close the battery/card cover and slide it in the opposite direction of ①.****Removing the SD Memory Card****1 Open the battery/card cover.****2 Push the card into the SD Memory Card socket to eject it.**

Pull the card out.

## Precautions When Using an SD Memory Card

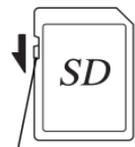

Write-protect switch

- The SD Memory Card is equipped with a write-protect switch. Setting the switch to LOCK protects the existing data by prohibiting recording of new data, deletion of existing data or formatting of the card.  appears on the display when the card is write-protected.
- Care should be taken when removing the SD Memory Card immediately after using the camera, as the card may be hot.
- Do not remove the SD Memory Card or turn the camera off while data is being saved to the card, images or sound files are being played back, or the camera is connected to a computer with the USB/AV cable, as this may cause the data to be lost or the card to be damaged.
- Do not bend the SD Memory Card or subject it to violent impact. Keep it away from water and store away from high temperature.
- Do not remove the SD Memory Card during formatting as this may damage the card and render it unusable.
- The data on the SD Memory Card may be deleted in the following circumstances. We do not accept any liability for data that is deleted
  - (1) when the SD Memory Card is mishandled by the user.
  - (2) when the SD Memory Card is exposed to static electricity or electrical interference.
  - (3) when the card has not been used for a long time.
  - (4) when the card is ejected or the batteries are removed while the data on the card is being recorded or accessed.
- If the SD Memory Card is not used for a long time, the data on the card may become unreadable. Be sure to regularly make a backup of important data on a computer.
- Avoid using or storing the card where it may be exposed to static electricity or electrical interference.
- Avoid using or storing the card in direct sunlight or where it may be exposed to rapid changes in temperature or to condensation.
- When using an SD Memory Card with a slow recording speed, recording may stop while you are taking movies even when there is adequate space in the memory, or shooting and playback may take a long time.
- For information on compatible SD Memory Cards, visit the PENTAX website.
- Be sure to format an SD Memory Card that is unused or has been used on another camera. Refer to "Formatting an SD Memory Card". (p.140)
- Please note that formatting the SD Memory Card will not necessarily delete the data so that it cannot be recovered using off-the-shelf data recovery software. There are off-the-shelf secure data deletion software programs available that will completely delete the data. If you are going to discard, give away or sell your SD Memory Card, you should ensure that the data on the card is completely deleted or the card itself is destroyed if it contains any personal or sensitive information. In any case, the data on your SD Memory Card should be managed at your own risk.

## Picture Storage Capacity

Select [Recorded Pixels] and [Quality Level] for still images according to how the images will be used.

For [Recorded Pixels], [10M], [7M], [5M], [3M], [16:9] (2.1M, 1920x1080), [1024] and [640] are selectable. For [Quality Level], you can select from [★★★ (Best)], [★★ (Better)] and [★ (Good)]. Make your selection on the [📷 Rec. Mode] menu.

Selecting the Recorded Pixels  p.69

Selecting the Quality Level  p.71

Storage capacity varies depending on the recorded pixels and the quality level you select. For details, see the table on the page indicated below.

Approximate Image Storage Capacity and Recording Time (Still Picture)  
 p.167

## Movie Storage Capacity

Select [Recorded Pixels] and [Frame Rate] for movies according to how the movies will be used.

For [Recorded Pixels], you can select either [640] or [320]. For [Frame Rate], you can select either [30fps] or [15fps]. Make your selection in [Movie] on the [📷 Rec. Mode] menu.

Selecting the Settings for Taking Movies  p.94


Storage capacity varies depending on the recorded pixels and the frame rate you select. For details, see the table on the page indicated below.

Movie Storage Capacity  p.168

# Turning the Camera On and Off

1

Getting Started

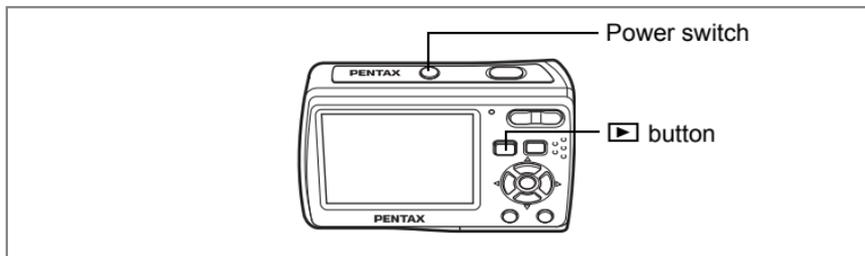

## Turning the Camera On in Capture Mode

### 1 Press the power switch.

The display turns on and the lens extends. The camera turns on in the capture mode.

If [Language/言語] screen or [Date Adjust] screen appears when you turn on the camera, follow the procedures on p.29 to select the display language and/or set current date and time.

### 2 Press the power switch again.

The display turns off, the lens closes, and the camera turns off.

## Checking the Memory Card

The memory card is checked automatically when the camera turns on.  appears on the display when there is no SD Memory Card inserted in the camera. In this case, images and sound files will be saved in the built-in memory.  appears instead of  when the write-protect switch on the SD Memory Card is in the locked position. Images and sound cannot be recorded when the write-protect switch is locked.

Memory status



If the batteries have been removed from the camera for a long time, when they are reinserted and the camera is turned on, the message [Battery depleted] may appear. This can also happen when using the camera for the first time; however this is not a malfunction. Turn the camera off, wait a minute and then turn the camera on again to reset the camera. The date and time and other settings may also be reset. Follow the procedure on p.31 to set these settings again.

27

## Turning the Camera On in Playback Mode

You can start the Optio E60 in the playback mode with the lens retracted. This is useful when you want to play back saved images and sound straightaway without taking pictures.

**1 Press the power switch while holding down the  button.**

The display turns on with the lens retracted. The camera turns on in the playback mode.


**2 Press the  button again or press the shutter release button halfway.**

The camera switches to the capture mode.

Playing Back Still Pictures  p.36

# Initial Settings

Set the language, time and date before you start taking pictures for the first time.

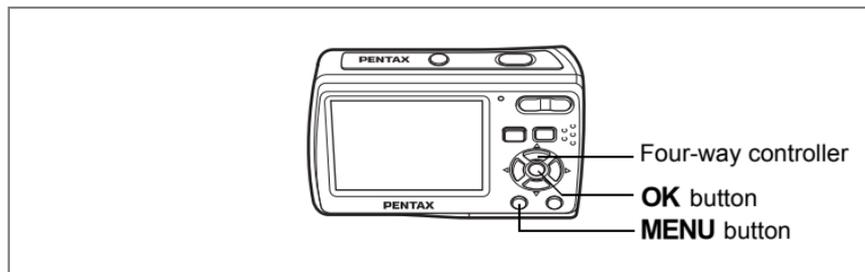

The [Language/言語] screen appears when the camera is turned on for the first time. Follow the procedures in “Selecting the Display Language” below to set the language, and in “Setting the Date and Time” (p.31) to set the current date and time.

Language, Date, and Time can be changed later. Refer to the pages below for instructions.

- To change the language, follow the steps in “Changing the Display Language” (p.147).
- To change the date and time, follow the steps in “Changing the Date and Time” (p.143).


## Selecting the Display Language

- 1 Use the four-way controller (▲▼◀▶) to choose the desired display language.

Language/言語		
English	日本語	Türkçe
Français	Dansk	Ελληνικά
Deutsch	Svenska	Русский
Español	Suomi	<b>ไทย</b>
Português	Polski	한국어
Italiano	Čeština	中文繁體
Nederlands	Magyar	中文简体
MENU Cancel		OK OK

## 2 Press the OK button.

The [Initial Setting] screen appears in the selected language. If the desired settings for [Hometown] and daylight saving time appear, press the **OK** button again to display the [Date Adjust] screen. Go to “Setting the Date and Time” (p.31). Go to Step 3 in “Setting Hometown and DST” (p.31) if the desired settings do not appear.

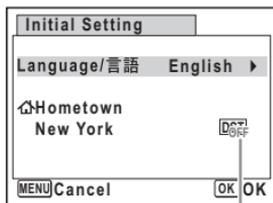

Daylight saving time

If you accidentally select another language and go to the next procedure, perform the following operation to set the language back.

### ● When Another Language Has Been Inadvertently Selected

- 1 Press the four-way controller (▶).
- 2 Use the four-way controller (▲ ▼ ◀ ▶) to select the language and press the **OK** button.

The [Initial Setting] screen appears in the selected language.

### ● When the Screen After Step 2 Appears in Another Language


- 1 Press the **OK** button.
- 2 Press the **MENU** button.
- 3 Press the four-way controller (▶).
- 4 Use the four-way controller (▼ ▲) to select [Language/言語].
- 5 Press the four-way controller (▶).  
The [Language/言語] screen appears.
- 6 Use the four-way controller (▲ ▼ ◀ ▶) to select the language.
- 7 Press the **OK** button.  
The [↖ Setting] menu appears in the selected language.

The language is now switched to your desired language. To reset [Hometown], [Date] or [Time], refer to the pages below for instructions.

- To change [Hometown], follow the steps in “Setting the World Time” (p.145).
- To change [Date] and/or [Time], follow the steps in “Changing the Date and Time” (p.143).

## Setting Hometown and DST



- 3 Press the four-way controller (▼).**  
The frame moves to [Hometown].
- 4 Press the four-way controller (▶).**  
The [Hometown] screen appears.
- 5 Use the four-way controller (◀▶) to choose the city.**
- 6 Press the four-way controller (▼).**  
The frame moves to [DST] (Daylight Saving Time).
- 7 Use the four-way controller (◀▶) to select  (On) or  (Off).**
- 8 Press the OK button.**  
The [Initial Setting] screen appears.
- 9 Press the OK button.**  
The [Date Adjust] screen appears. Next, set the date and time.

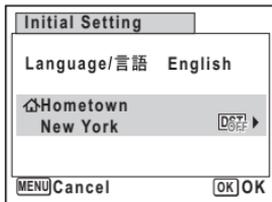

## Setting the Date and Time


Set the current date and time and the display style.

- 1 Press the four-way controller (▶).**  
The frame moves to [mm/dd/yy].
- 2 Use the four-way controller (▲▼) to choose the date and time display style.**
- 3 Press the four-way controller (▶).**  
The frame moves to [24h].
- 4 Use the four-way controller (▲▼) to select [24h] (24-hour display) or [12h] (12-hour display).**
- 5 Press the four-way controller (▶).**  
The frame returns to [Date Style].

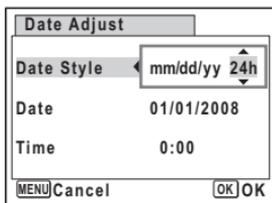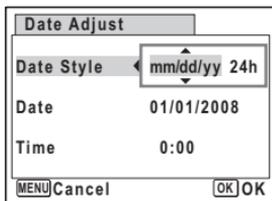

**6 Press the four-way controller (▼).**

The frame moves to [Date].

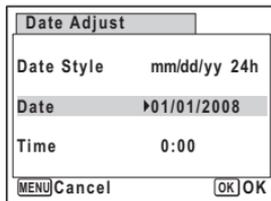
**7 Press the four-way controller (▶).**

The frame moves to the month.

**8 Use the four-way controller (▲▼) to change the month.**

Change the day and year in the same manner. Next, change the time.

If you selected [12h] in Step 4, the setting switches between am and pm corresponding to the time.

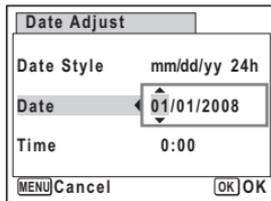**9 Press the OK button.**

The setting is set and the camera returns to capture status.

[Language/言語], [Date], [Time], [Hometown] and [DST] can be changed. Refer to the pages below for instructions.

- To change [Language/言語], follow the steps in “Changing the Display Language” (p.147).
- To change [Date] and/or [Time], follow the steps in “Changing the Date and Time” (p.143).
- To change [Hometown] or turn [DST] on and off, follow the steps in “Setting the World Time” (p.145).




When the [Initial Setting] or [Date Adjust] screen is displayed, you can cancel the setting operation and switch to the capture mode by pressing the **MENU** button. In this case, the [Initial Setting] screen will appear next time you turn the camera on.



If you press the **OK** button in Step 9, the camera clock is reset to 00 seconds. To set the exact time, press the **OK** button when the time signal (on the TV, radio, etc.) reaches 00 seconds.

The video output format (NTSC/PAL) is set to the format of the city selected in [Hometown] on the [Initial Setting] screen. Refer to “List of World Time Cities” (p.156) for the video output format of each city set as the Initial Setting, and “Changing the Video Output Format” (p.151) for changing the setting of the video output format.

## Taking Still Pictures

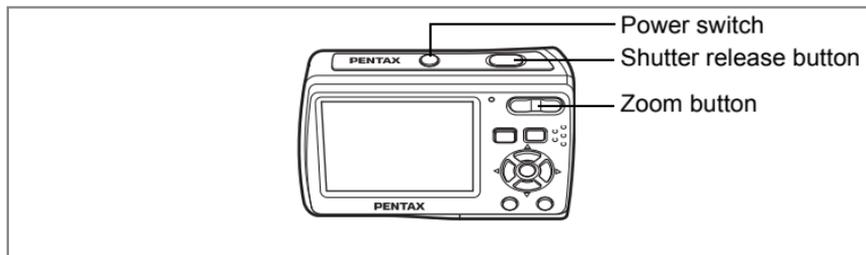

The standard procedure for taking still pictures is described below. The flash discharges automatically depending on the light conditions.

### 1 Press the power switch.

The camera turns on and is ready to take still pictures. In this manual, this is called the capture mode.

### 2 Compose the picture on the display.

The camera will automatically focus on the area within the focus frame. You can change the captured area by pressing the Zoom button.

▲ : enlarges the subject

▲▲▲ : widens the area captured by the camera

### 3 Press the shutter release button halfway.

The color of the focus frame indicates whether the camera focuses clearly on the subject or not.

Green : The subject is in focus.

White : The subject is out of focus.

Hold the shutter release button and wait until the focus frame turns green.



Focus frame



When the [Focusing Area] is set to  (Automatic Tracking AF) on the [Rec. Mode] menu (p.78), the focus frame turns green if the subject is in focus, and the focus frame remains white even if the subject is out of focus.

## 4 Press the shutter release button fully.

The picture is taken.

The image appears on the display for 2 seconds (Instant Review) and is saved to the SD Memory Card or the built-in memory. (p.23)



- When you turn on the camera, you can take pictures in **AUTO PICT** (Auto Picture), the default shooting mode. (p.56)
- Press the Green button to switch to  (Green) and let the camera set all the shooting functions automatically. (p.54)

### Pressing the Shutter Release Button

Press the shutter release button smoothly in two steps. This allows for exact focusing as well as preventing camera shake.

#### Basic method for shutter release

### 1 Press the shutter release button halfway.


Lightly press the shutter release button until you feel the click on your finger.

### 2 Confirm the focus frame on the display turns green.


Hold the shutter release button and wait until the focus frame turns green. The subject is in focus.

### 3 Press the shutter release button fully.

Press it down smoothly until the shutter is released.

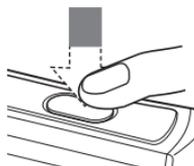

The subject is in focus.

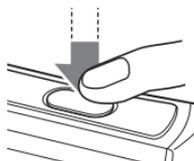

The picture is taken.




You can also press the shutter release button all the way down (single step) to take pictures. This allows you to release the shutter at the right moment. The pictures are taken as deep-focus (pan focus) shots.

**[Poor focusing conditions]**

The camera may not be able to focus under the following conditions. In these cases, lock the focus on an object the same distance away as the subject (by pressing and holding the shutter release button halfway), then aim the camera at your subject and press the shutter release button fully.

- Objects that lack contrast such as a blue sky or white wall
- Dark places or objects, or conditions that prevent light being reflected back
- Horizontal lines or intricate patterns
- Fast moving objects
- When there is an object in the foreground and an object in the background in the same picture
- Strongly reflected light or strong backlighting (bright background)

## Playing Back Still Pictures

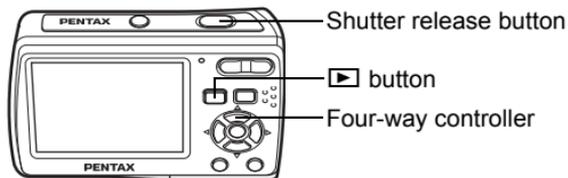

### Playing Back Images

- 1 Press the ▶ button after taking a picture.

The image appears on the display. In this manual, this is called the playback mode. Press the ▶ button again or press the shutter release button halfway to switch to the capture mode.




### Playing Back the Previous or Next Image

- 1 Press the ▶ button after taking a picture.

The image appears on the display.

- 2 Press the four-way controller (◀▶).

The previous or next image appears.

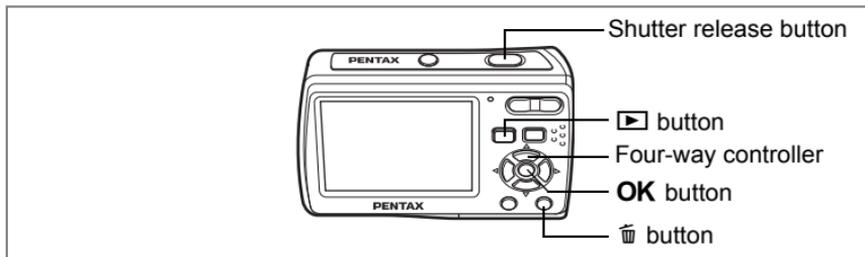

## Rotating the Displayed Image

You can rotate the displayed image. This is useful when you view images taken vertically.

- 1 Press the ▶ button after taking a picture.**


The image appears on the display.

- 2 Press the four-way controller (▼).**

The Playback Mode Palette appears.

- 3 Use the four-way controller (▲▼◀▶) to select ◊ (Image Rotation) and press the OK button.**

The rotation selection screen (0°, Right 90°, Left 90°, or 180°) appears.

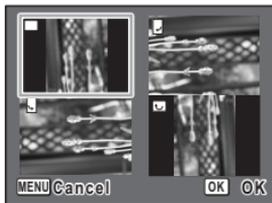

- 4 Use the four-way controller (▲▼◀▶) to choose the rotation direction and press the OK button.**

The rotated image appears.



Images taken in (Digital Panorama) or with the 16-frame shooting function and movies cannot be rotated.



Protected images can be rotated, but they cannot be saved in the rotated state.

## Deleting the Displayed Image

- 1 Press the  button when playing back an image.**

The screen for deleting the image appears.

- 2 Press the four-way controller () to select [Delete] and press the OK button.**

The image shown on the display is deleted.

- 3 Press the  button again or press the shutter release button halfway.**

The camera is ready for taking pictures.



## Switching between Capture Mode and Playback Mode


### From the Capture Mode to the Playback Mode

Press the  button.

### From the Playback Mode to the Capture Mode

Press the  button or press the shutter release button halfway.


## Understanding the Button Functions

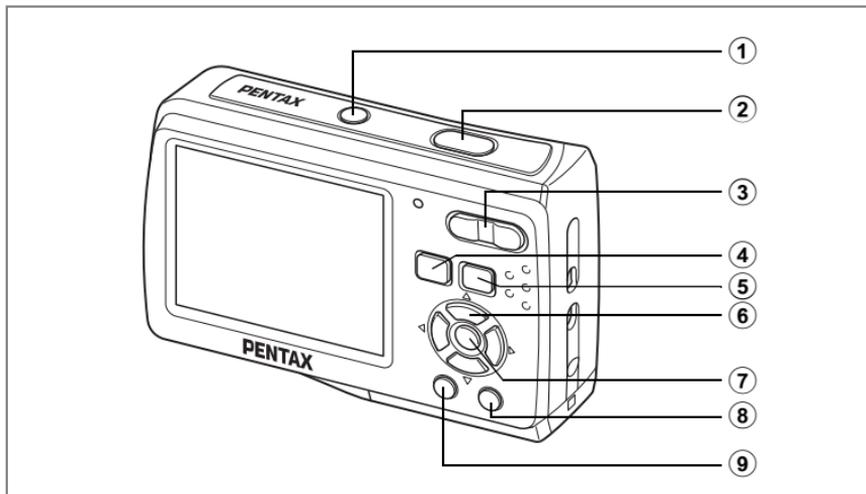

## In Capture Mode

- ① **Power switch**  
Turns the camera off. (p.27)
- ② **Shutter release button**  
Focuses on the subject when pressed halfway in the capture mode.  
(Except the focus mode **▲** or **PF**) (p.76)  
Takes the still picture when pressed down fully. (p.34)  
Starts and stops movie recording in **Movie**. (p.92)  
Starts and stops sound file recording in **Voice Recording**. (p.137)
- ③ **Zoom/AAA/▲ button**  
Changes the captured area. (p.73)
- ④ **▶ button**  
Switches to the playback mode. (p.38)
- ⑤ **☺ button**  
Switches the Face Recognition function (p.51). The Face Recognition function is switched as follows each time the ☺ button is pressed:  
Face Priority Off → Face Priority On → Face Priority Off → ...

- ⑥ **Four-way controller**  
(▲) : Changes the drive mode. (p.85, p.86)  
(▼) : Displays the Capture Mode Palette. (p.49)  
(◀) : Changes the flash mode. (p.79)  
(▶) : Changes the focus mode. (p.76)
- ⑦ **OK/DISPLAY button**  
Changes the information on the display. (p.84)
- ⑧ **Green button**  
Switches to  (Green). (p.54)
- ⑨ **MENU button**  
Displays the [ Rec. Mode] menu. (p.47)

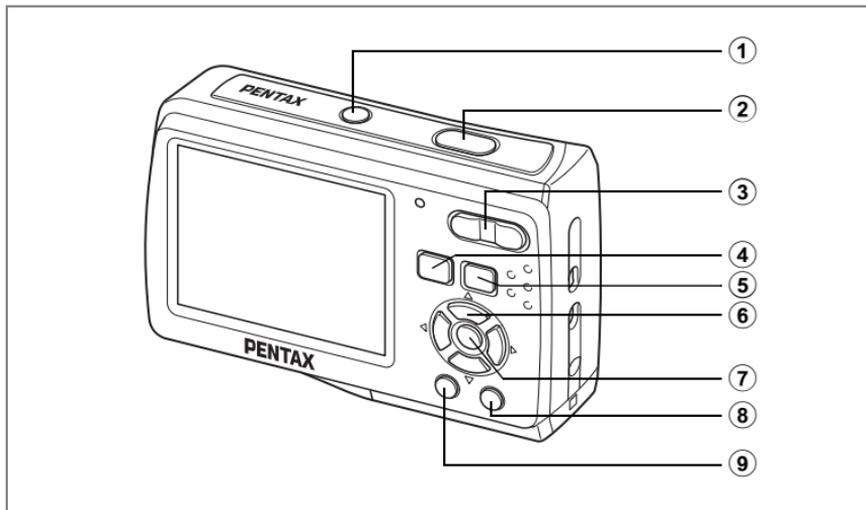

## In Playback Mode

- ① **Power switch**  
Turns the camera off. (p.27)
- ② **Shutter release button**  
Switches to the capture mode when pressed halfway. (p.36)
- ③ **Zoom// button**  
Press  during single-image display to change to nine-image display. Returns to the previous display when  is pressed. (p.98)  
Enlarges the image when  is pressed during single-image display. Returns to the previous display when  is pressed. (p.100)  
Press  during nine-image display to change to folder or calendar display. (p.99)  
Press  during folder display to change to nine-image display of the selected folder. (p.99)  
Press  during calendar display to change to nine-image display for the selected date. (p.99)  
Adjusts the volume during playback of movies or sound files. (p.105, p.139)
- ④ ** button**  
Switches to the capture mode. (p.38)

### 5 **button**

Zooms in on the subject's faces in the face-recognized image in the order the faces were recognized when the picture was taken. (Face close-up playback) (p.51)

### 6 **Four-way controller**

(▲) : Plays back and pauses a movie or sound file. (p.105, p.139)

(▼) : Displays the Playback Mode Palette. (p.53)

Stops a movie or sound file during playback. (p.105, p.139)

(◀▶) : Displays the previous or next image or sound file during single-image display. (p.36)

Frame forwards, frame reverses and reverses a movie during playback. (p.105)

Fast forwards, reverses, and moves to the next index in sound file playback. (p.139)

(▲▼◀▶) : Moves the display area during zoom display. (p.100)

Selects an image in nine-image display, a folder in folder display, and a date in calendar display. (p.98, p.99)

Moves the image when using the Frame Composite function. (p.124)

### 7 **OK/DISPLAY button**

Changes the information on the display. (p.97)

Returns zoom display or nine-image display to single-image display. (p.98, p.100)

Changes to nine-image display of the selected folder during folder display. (p.99)

Changes to single-image display of the selected date during calendar display. (p.99)

### 8 **Green/ button**

Switches from single-image display to the Delete screen. (p.108)

Switches from nine-image display to the Select & Delete screen. (p.110)

Switches from folder display to the calendar display screen. (p.99).

Switches from calendar display to the folder display screen. (p.99)

Saves the paused frame as a single image during the playback of a series of successive images taken with 16-frame shooting function.

### 9 **MENU button**

Displays the [ Setting] menu during single-image display. (p.48)

Returns to single-image display during Playback Mode Palette display. (p.53)

Returns zoom display or nine-image display to single-image display.  
(p.98, p.100)

Changes to nine-image display of the selected folder during folder  
display. (p.99)

Changes to nine-image display of the selected date during calendar  
display. (p.99)

# Using the Menu

Press the **MENU** button to display the menu on the display.

Press the **MENU** button in the capture mode to show the [📷 Rec. Mode] menu.


Press the **MENU** button in the playback mode to show the [🔍 Setting] menu.

## How to Set the Menus

You can set the menus as shown below. While you are making settings for the menus, the button operation guide appears at the bottom of the display to help you navigate through the different settings of the camera.


During recording

During playback

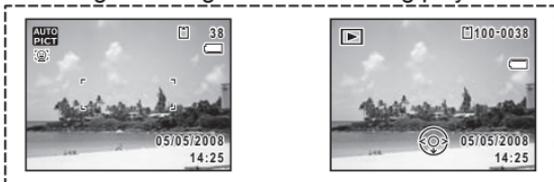

**MENU**

**MENU**

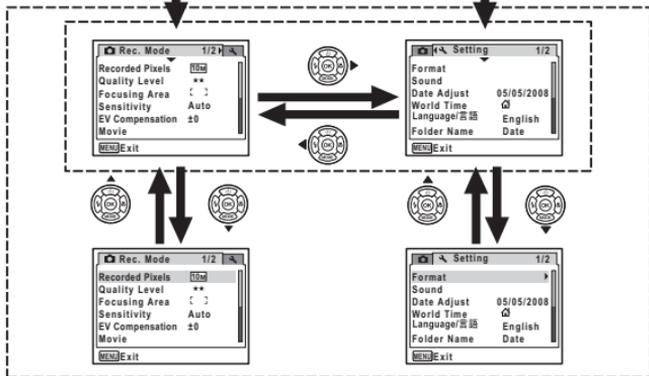

**SHUTTER**

**MENU**, **OK** or **▶**

Press halfway

The setting is complete and the camera returns to the capture mode



The setting is complete and the camera returns to the playback mode



3

Common Operations



A guide for each available button operation appears on the display during menu operation.

**Ex.) To set the [Quality Level] on the [Rec. Mode] menu**

- 1 Press the MENU button in the capture mode.**

The [Rec. Mode] menu appears.

- 2 Press the four-way controller (▼).**

The frame moves to [Recorded Pixels].

- 3 Press the four-way controller (▼).**

The frame moves to [Quality Level].

- 4 Press the four-way controller (▶).**




A pull-down menu appears with the items that can be selected.

The pull-down menu displays only those items that can be selected with the current camera settings.

- 5 Use the four-way controller (▲▼) to change the setting.**

The quality level changes each time the four-way controller (▲▼) is pressed.

Refer to the following page for instructions on saving settings and canceling changes.

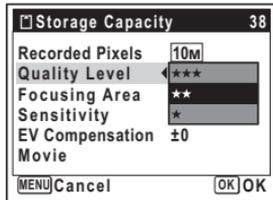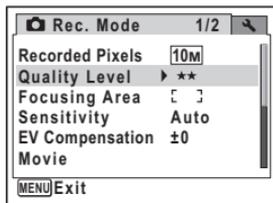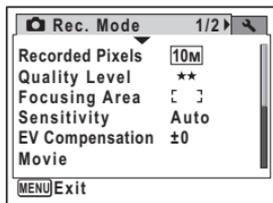

### Saving the Setting and Start Taking Pictures

#### 6 Press the shutter release button halfway.

The setting is saved and the camera returns to capture status.  
When the shutter release button is pressed fully, the picture is taken.

### Saving the Setting and Begin Playback of Images

#### 6 Press the button.

The setting is saved and the camera returns to playback status.

### Saving the Setting and Continue with Menu Operations

#### 6 Press the OK button or the four-way controller (◀).

The setting is saved and the screen returns to Step 3.

### Canceling the Changes and Continue with Menu Operations

#### 6 Press the MENU button.

The changes are canceled and the screen returns to Step 3.



The **MENU** button function differs depending on the screen. Refer to the button operation guide displayed at the bottom of the screen.

 Exit : Exits the menu and returns to the original screen.

  : Returns to Step 3 with the current setting.

 Cancel : Cancels the current selection, exits the menu and returns to Step 3.

## Menu List

This displays the items that can be set with the menus and provides descriptions of each item. See the list of default settings in the Appendix “Default Settings” (p.157) to decide whether you want the settings saved when the camera is turned off and whether you want the settings returned to the defaults when the camera is reset.

### [📷 Rec. Mode] Menu

Item	Description	Page	
Recorded Pixels	For choosing the number of recorded pixels of still pictures	p.69	
Quality Level	For choosing the quality level of still pictures	p.71	
Focusing Area	For changing the area for auto focusing	p.78	
Sensitivity	For setting the sensitivity	p.81	
EV Compensation	For adjusting the overall brightness of the picture	p.83	
Movie	Recorded Pixels	For choosing the number of recorded pixels of movies	p.94
	Frame Rate	For setting the frame rate (number of frames per second)	p.95
	Movie SR	For choosing whether or not to use the movie shake reduction function	p.96
Digital Zoom	For choosing whether or not to use the digital zoom function	p.75	
Memory	For choosing whether to save the set values of the shooting function or return to the defaults when the camera is turned off	p.90	
Date Imprint	For choosing whether to imprint the shooting date and/or time on the picture when shooting	p.88	

## [ Setting] Menu

Item	Description	Page
Format	For formatting the SD Memory Card	p.140
Sound	For adjusting the playback volume and setting the shutter sound, key operation sound and self-timer sound	p.141
Date Adjust	For adjusting the date, time, and date and time styles	p.143
World Time	For setting the world time	p.145
Language/言語	For setting the language in which menus and messages appear	p.147
Folder Name	For choosing how names are assigned to folders for storing images and sound files	p.148
USB Connection	For setting the USB/AV cable connection (to a computer or a printer)	p.150
Video Out	For setting the output format to the AV equipment	p.151
Brightness Level	For setting the brightness of the display	p.152
Power Saving	For setting the time until power saving mode is activated	p.153
Auto Power Off	For setting the time until the camera turns off automatically	p.154
Reset	For returning settings other than the date and time, language, world time, and video out to their defaults	p.155

# Using the Mode Palettes

Press the four-way controller (▼) to display the Mode Palette on the display. There are two different Mode Palettes, the “Capture Mode Palette” and the “Playback Mode Palette”.

You can activate a shooting mode most appropriate for the scene or edit taken images just by selecting the icons.

## How to Select the Modes

When you select an icon, the description for the selected mode appears on the lower half of the screen. Also, while you are using the Mode Palettes, refer to the bottom operation guide displayed at the bottom of the screen.

- 1 Press the four-way controller (▼).**  
In the capture mode, the “Capture Mode Palette” appears.  
In the playback mode, the “Playback Mode Palette” appears.
- 2 Use the four-way controller (▲▼◀▶) to select an icon.**
- 3 Press the OK button.**  
The screen for the selected mode appears.

## Mode Palette List

### Capture Mode Palette




Item	Description	Page
Auto Picture	Automatically select the best capture mode.	p.56
Program	Used for basic shooting. Various functions can also be set with this mode.	p.57
Night Scene	Used for night scenes. Use a tripod, etc. to prevent image shake.	p.61
Night Scene Portrait	For portraits in night scenes. Use a tripod, etc. to prevent image shake.	–

Item	Description	Page
 Half-length Portrait	For portraits with proper framing by automatic zoom. Fixed to 3M pixels.	p.58
 Movie	For capturing movies. Sound is also recorded.	p.92
 Landscape	For capturing landscape views. The camera focuses on a wide range.	–
 Flower	For capturing flowers. Reproduces the outline of the flower softly.	–
 Portrait	For capturing portraits. Makes the skin tone brighter and look healthy.	p.58
 Surf & Snow	For capturing images with dazzling backgrounds, snowy scenes or beaches.	–
 Sport	For fast moving subjects. Keeps the camera in focus until the shutter release.	–
 Digital SR	Higher sensitivity reduces blur.	p.62
 Kids	For capturing moving kids. Reproduces healthy and bright skin tone.	p.58
 Pet	For capturing pets in motion. Select the color of the pet's coat.	p.60
 Food	For capturing food. Saturation is higher to make it look appetizing.	–
 Digital Panorama	Stitches images taken with the camera to create a panoramic photograph.	p.64
 Frame Composite	For capturing image with a frame. Recorded pixels is fixed to 3M.	p.67
 Voice Recording	For recording sound. Do not cover the microphone with your hands.	p.137



Depending on the shooting mode, some functions may not be available. For details, see “Functions Available for Each Shooting Mode” (p.161).

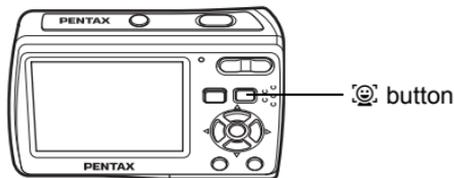


## Setting the Face Recognition function

With the Optio E60, the Face Recognition function is available with all shooting modes except  (Voice Recording). In the Face Recognition function, the camera automatically recognizes the subject's face, focuses (Face Recognition AF), and compensates the exposure (Face Recognition AE) when capturing images. Even when there are multiple faces, the camera will recognize the main subject's face and make suitable adjustments automatically. The subject is given a brighter and healthier look.

## Switching the Face Recognition Function

By default, the Face Recognition function is set to Face Priority On. The Face Recognition function is switched as follows each time the  button is pressed: Face Priority Off → Face Priority On → ...

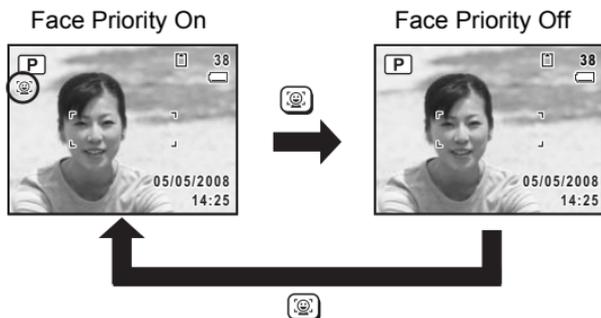


An icon indicating Face Priority On appears on the display. (The icon does not appear when Face Priority Off is selected.)




- Face Priority Off cannot be selected in (Auto Picture), (Portrait), (Night Scene Portrait), (Kids) or (Half-length Portrait).
- Face Priority On is automatically selected in (Auto Picture), (Movie) or (Green). When switching to another mode from one of these modes, the Face Recognition setting returns to the previous setting.
- Refer to p.101 on how to play back with the Face Recognition function.

## Playback Mode Palette

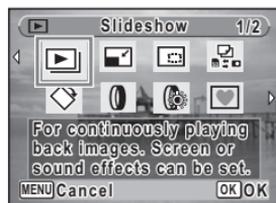

Item	Description	Page	
	Slideshow	For continuously playing back images. Screen or sound effects can be set.	p.103
	Resize	Changes Recorded Pixels and Quality Level to make the file size smaller.	p.116
	Cropping	For cropping images to the size you like. Saved as a new image.	p.118
	Image/Sound Copy	For copying images and sounds between the built-in memory and SD memory card.	p.119
	Image Rotation	Rotates captured images. Useful when viewing vertical images on a TV.	p.37
	Digital Filter	For modifying images with a Color filter.	p.121
	Brightness Filter	For modifying the brightness of the images.	p.122
	Frame Composite	For composing an image with a frame. Select Over-write or Save as to save.	p.124
	Red-eye Compensation	For compensating red-eye. May not work due to the condition of the image.	p.128
	Protect	Protects images and sounds from accidental deletion. Formatting will delete.	p.114
	DPOF	For the print settings. Useful when printing at a printing service.	p.129
	Image Recovery	For recovering images and sound files which were accidentally deleted.	p.113

## Taking Pictures in a Selected Mode

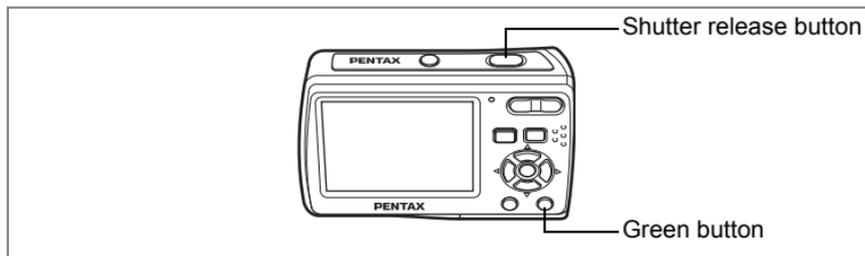Available in 

4

## Taking Pictures in the Basic Mode (Green Mode)

You can enter  (Green) just by pressing the Green button and enjoy easy picture taking.

### 1 Press the Green button in the capture mode.

The camera switches to .

Press the Green button again to return to the status before  was selected.

### 2 Press the shutter release button halfway.

The focus frame on the display turns green if the subject is in focus.

### 3 Press the shutter release button fully.

The picture is taken.

Remaining image storage capacity



In , you cannot change the information on the display by pressing the **OK/DISPLAY** button.



- In , the Continuous Shooting and 16-frame shooting are not available.
- When the remaining image storage capacity falls below 10, the number on the display turns red.
- When the camera is turned off in , it turns on in  next time the power switch is pressed.
- In , you can make settings with the [⏏ Setting] menu but cannot with the [📷 Rec. Mode] menu.


\* The settings in  (Green) are as shown below.

Flash Mode	(Auto) <sup>*1</sup>
Drive Mode	<input type="checkbox"/> (Standard) <sup>*2</sup>
Focus Mode	<b>AF</b> (Standard) <sup>*3</sup>
Information Display	Standard
Recorded Pixels	
Quality Level	<b>★★</b> (Better)
Focusing Area	(Multiple)
Sensitivity	Auto
EV Compensation	±0.0
Digital Zoom	<input checked="" type="checkbox"/> (On)
Date Imprint	Off
button	Face Priority On

\*1 Can be set to (Flash Off)

\*2 Can be set to (10 sec. Self-timer) or (2 sec. Self-timer). (The self-timer mode you have selected in a shooting mode other than  is available.)

\*3 Can be set to (Macro) or **PF** (Pan Focus)

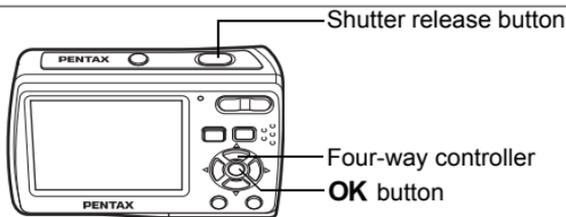

Available in 

## Letting the Camera Choose the Optimal Shooting Mode (Auto Picture Mode)

In  (Auto Picture), when you press the shutter release button, the camera selects the most appropriate mode from the following shooting modes: ☺ (Normal), 🌃 (Night Scene), 🏔️ (Landscape), 👤 (Portrait), 🌃 (Night Scene Portrait), 🏃 (Sport) and 🌸 (Flower).

**1 Press the four-way controller (▼) in the capture mode.**

The Capture Mode Palette appears.

**2 Use the four-way controller (▲▼◀▶) to select .**

**3 Press the OK button.**

The shooting mode is selected and the camera returns to capture status.


**4 Press the shutter release button halfway.**

The focus frame on the display turns green when the subject is in focus, and the selected mode icon will appear on the top left of the display.

**5 Press the shutter release button fully.**



- In , the EV Compensation is fixed at  $\pm 0.0$ . (p.83)
-  is selected as the default shooting mode.

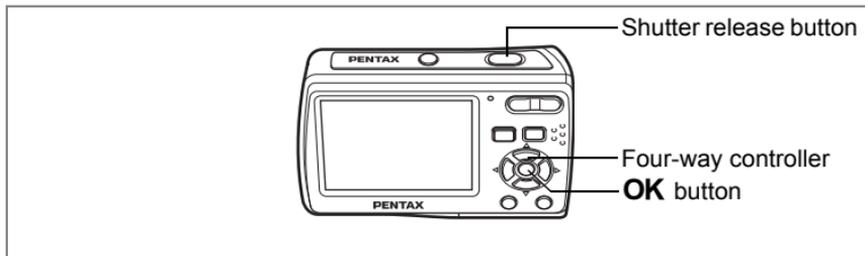


Available in **P**

## Letting the Camera Choose the Optimal Settings (Program Mode)

In **P** (Program), the camera automatically sets the shutter speed and aperture for taking still pictures. You can select other functions such as the flash mode and recorded pixels.

- 1 Press the four-way controller (▼) in the capture mode.**  
The Capture Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select **P**.**
- 3 Press the OK button.**  
The shooting mode is selected and the camera returns to capture status.
- 4 Set the functions you want to use.**
- 5 Press the shutter release button halfway.**  
The focus frame on the display turns green if the subject is in focus.
- 6 Press the shutter release button fully.**  
The picture is taken.



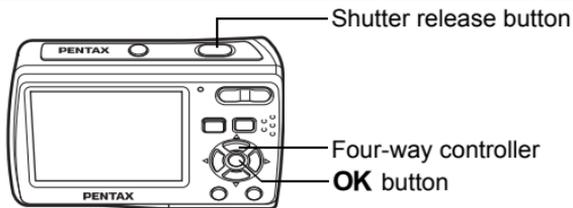

Available in

## Taking Pictures of People (Half-length Portrait/Portrait/Kids Mode)

(Half-length Portrait), (Portrait) and (Kids) are suitable for taking pictures of people. Face Recognition (p.51) is automatically activated for these shooting modes, making it easier to emphasize the subject's face when taking pictures.

- 1 Press the four-way controller (▼) in the capture mode.**  
The Capture Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select , or .**

The following procedures are for selecting .

- 3 Press the OK button.**

The shooting mode is selected and the camera returns to capture status. When the camera recognizes the subject's face, a yellow focus frame with the brackets appears on it within the display.

If there are more than two subjects, the camera first recognizes the main subject's face and a yellow focus frame with the brackets appears on it, and a white focus frame appears on the faces of the other subjects.

The size and location of the focus frame change while the camera continues to adjust the focus on the moving subject's face.



## 4 Press the shutter release button halfway.

The focus frame on the display turns green if the subject is in focus. When there are multiple faces, the focus frame with the brackets displayed in Step 3 turns green if the main subject's face is in focus.

## 5 Press the shutter release button fully.


The picture is taken.



The Face Recognition may not work if the subject is wearing sunglasses, has part of the face covered, or is not looking toward the camera.



- When the camera does not recognize the subject's face, the camera will focus on the subject using the Focusing Area mode selected in [Focusing Area] on the [Rec. Mode] menu.
- When there are multiple faces, the camera will first recognize the subject's face that looks closer to the center of the display and larger compared with the other ones as the main subject's face.
- In and , Face Priority On is always selected.
- In , recorded pixels is fixed at **3M**.
- In , intelligent zoom automatically functions whenever needed after recognizing the subject's face and adjusts the size of the subject to proper framing.
- In , the size of the subject's face that is recognized as the main subject is adjusted.

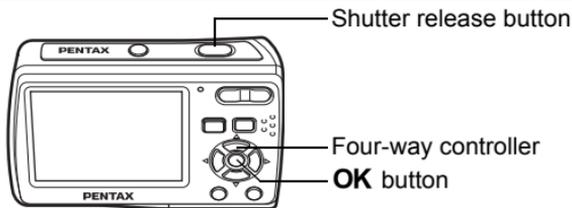

Available in

## Taking Pictures of Your Pet (Pet Mode)

In (Pet), you can select the appropriate pet color from white, black and in between according to your pet's coat or fur color.

**1 Press the four-way controller (▼) in the capture mode.**

The Capture Mode Palette appears.

**2 Use the four-way controller (▲▼◀▶) to select .**

**3 Press the OK button.**

The Pet mode selection screen appears. To take pictures with the Pet mode already selected, press the **MENU** button and go on to Step 6.

**4 Use the four-way controller (▲▼) to select , , , , or .**

There are two types of icons: a cat and dog icon. (Choosing either the cat or dog icon does not affect the resulting picture. Choose whichever you prefer.)

**5 Press the OK button.**

The Pet mode is selected and the camera returns to capture status.


**6 Press the shutter release button halfway.**

The focus frame on the display turns green if the subject is in focus.

**7 Press the shutter release button fully.**

The picture is taken.



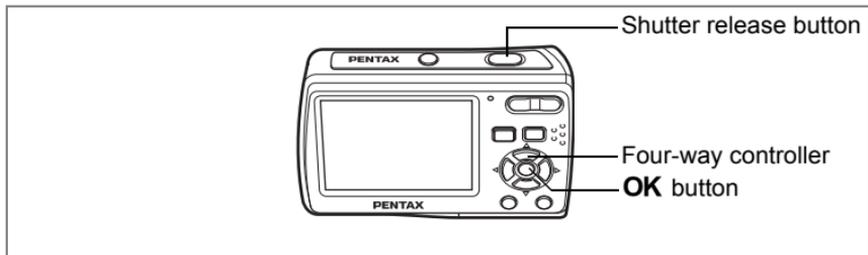

Available in

## Taking Pictures of Dark Scenes (Night Scene/Night Scene Portrait Mode)

In (Night Scene) and (Night Scene Portrait), you can choose settings appropriate for taking pictures of dark scenes, such as nightscapes.


- 1 Press the four-way controller (▼) in the capture mode.**  
The Capture Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select or .**
- 3 Press the OK button.**  
The shooting mode is selected and the camera returns to capture status.
- 4 Press the shutter release button halfway.**  
The focus frame on the display turns green if the subject is in focus.
- 5 Press the shutter release button fully.**  
The picture is taken.



The Continuous Shooting and 16-frame shooting are not available in and .



The shutter speed tends to be slower when taking pictures of dark scenes. To prevent camera shake, it is recommended to shoot using a tripod and/or the self-timer function. (p.85)

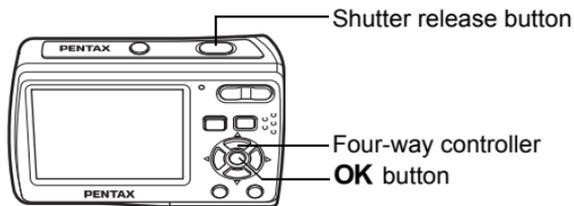

Available in 

## Reducing Camera Shake and Blurring When Taking Pictures (Digital SR Mode)


 (Digital SR) allows you to set the sensitivity higher than other shooting modes to reduce camera shake and blurring. Use this mode under the shooting conditions that camera shake or blurring tends to occur.

- 1 Press the four-way controller (▼) in the capture mode.**  
The Capture Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select .**
- 3 Press the OK button.**  
The shooting mode is selected and the camera returns to capture status.
- 4 Press the shutter release button halfway.**  
The focus frame on the display turns green if the subject is in focus.
- 5 Press the shutter release button fully.**  
The picture is taken.





- The shutter speed tends to be slower when taking pictures of dark scenes.
- To prevent camera shake, use a tripod and/or the self-timer function. (p.85)
- In «A», the sensitivity is automatically adjusted between ISO 100-6400. (p.81) Shutter speed and aperture are set automatically according to the adjusted sensitivity.
- In «A», the recorded pixels is fixed at **5M** (2592 × 1944).

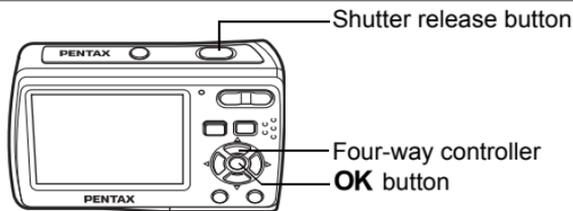

Available in 

## Taking Panoramic Pictures (Digital Panorama Mode)

In  (Digital Panorama), you can stitch 2 or 3 frames taken in sequence into a panoramic scene.

### 1 Press the four-way controller (▼) in the capture mode.

The Capture Mode Palette appears.

### 2 Use the four-way controller (▲▼◀▶) to select , and press the OK button.

The screen to specify the direction you want to pan appears.

### 3 Use the four-way controller (◀▶) to select the direction to stitch.

(▶): stitch the frames to the right

(◀): stitch the frames to the left

The camera is ready for taking the first frame.

The following procedures will explain steps for those when (▶) is selected.



### 4 Take the first frame.

Press the shutter release button fully to take the first frame, and after the taken image appears on the display (Instant Review), the camera is ready for taking the second frame. In the second frame shooting screen, an "overlay" from the first frame appears at the left 1/4 of the display.



The  on the upper left part of the screen indicates the number of the next frame for shooting.


## 5 Pan the camera to the right and take the second frame.

Be sure to make the “overlay” cover the same position in the second frame when you compose.

Pan the camera to the right and press the shutter release button fully to take the second frame. After the Instant Review of the second frame, the camera is ready for taking the third frame.

Repeat Steps 4 and 5 to take the third frame. After the third frame is taken, the message [Data being processed] will blink. After the Instant Review of the full panoramic picture, the camera will return to the screen to take the first frame again.

To stitch only the first frame and the second frame into a panoramic picture, go to Step 6 and select [Save] in Step 7.

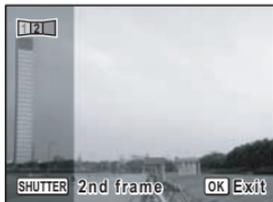

### To quit taking panoramic pictures

## 6 Press the OK button.

A confirmation screen for saving the taken image(s) appears.

## 7 Use the four-way controller (▲▼) to select [Save], [Discard], or [Cancel] and press the OK button.




[Save] : When you select [Save] after the first frame is taken, the frame taken is saved, and the camera will return to the screen to take the first frame. When you select [Save] after the second frame is taken, the message [Data being processed] blinks, and after the Instant Review of the 2 frames stitched together, the camera will return to the screen to take the first frame.

[Discard] : All the frames taken will be discarded, and the camera will return to the screen to take the first frame.

[Cancel] : The camera quits the operation and returns to the most recent shooting screen.



- When Face Priority On is selected (p.51), the Face Recognition function works only when taking the first frame.
- Focus, exposure, drive mode and zoom position used for all images in the panorama sequence are those set for the first frame.

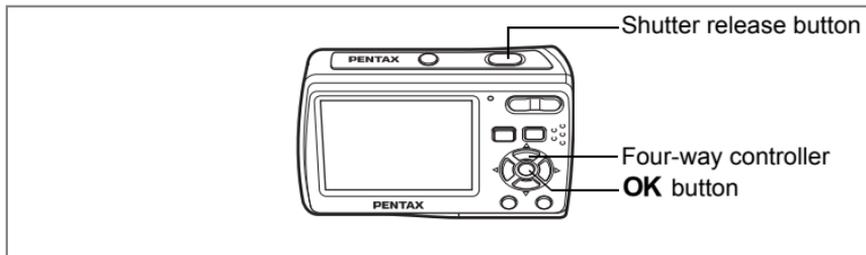

Available in

## Framing Your Pictures (Frame Composite Mode)

In (Frame Composite), you can display frames stored in your camera, and take a picture with a selected frame.

### 1 Press the four-way controller (▼) in the capture mode.

The Capture Mode Palette appears.

### 2 Use the four-way controller (▲▼◀▶) to select .

### 3 Press the OK button.

A nine-frame display of the frames stored in your camera appears on the display. (A total of 20 frames is stored by default.)



### 4 Use the four-way controller (▲▼◀▶) to choose the frame you want to use.

### 5 Press the OK button.

The selected frame appears in single-image display. You can choose another frame using either of the following operations.

Four-way controller (◀▶): displays another frame

**MENU** button or Zoom button ()

: returns to the nine-frame display of available frames



### 6 Press the OK button.

The frame appears on the screen.

## 7 Press the shutter release button halfway.

The focus frame on the display turns green if the subject is in focus.

## 8 Press the shutter release button fully.

The picture is taken.



The Continuous Shooting and 16-frame shooting are not available in .




- In , the recorded pixels is fixed at  and the quality level at  .
- The camera stores 3 default frames and 17 optional frames by default. (80 frames are included together with the default 3 frames in the supplied CD-ROM (S-SW81).)

### About the Optional Frames

Optional frames are stored in the built-in memory of the Optio E60, within the recording area of images, movies and sounds.

These optional frames can be deleted from the built-in memory by a file operation on the computer (e.g. deletion of files). If an optional frame has been deleted, it can be recovered by taking the steps on p.126 using the supplied CD-ROM (S-SW81).

# Taking Pictures with Customized Settings

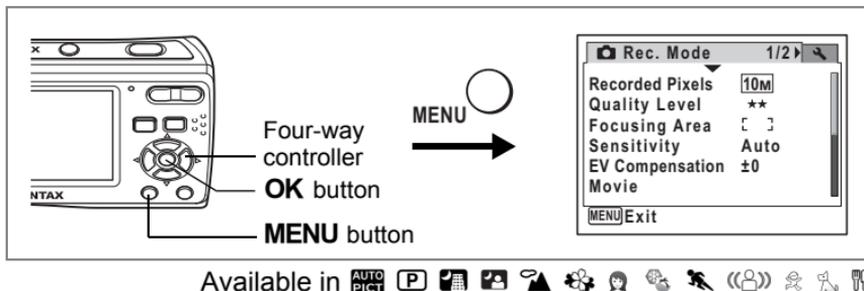

## Selecting the Recorded Pixels

You can choose from seven recorded pixels settings for still pictures. The larger the recorded pixels, the clearer the details will appear when you print your picture. As the quality of the printed picture also depends on the image quality, exposure control, resolution of the printer and other factors, you do not need to select more than the required number of recorded pixels. **3M** (2048 × 1536) is adequate for making postcard-size prints. The more pixels there are, the larger the picture and the bigger the file size. The data volume also varies depending on the quality level setting (p.71).

### Recorded Pixels

Recorded Pixels	Use	
<b>10M</b> 3648×2736	Clearer ↑ For printing high quality photos or A4-size pictures, or editing images on a computer.	
<b>7M</b> 3072×2304		
<b>5M</b> 2592×1944		
<b>3M</b> 2048×1536		For making postcard-size prints.
<b>16:9</b> 1920×1080		For expressing broadness of the picture naturally with the same aspect ratio as a Hi-definition TV.
<b>1024</b> 1024×768		
<b>640</b> 640×480		For posting on a website or attaching to e-mail.

## 1 Press the **MENU** button in the capture mode.


The [Rec. Mode] menu appears.

**2 Use the four-way controller (▲▼) to select [Recorded Pixels].**

**3 Press the four-way controller (▶).**

A pull-down menu appears.

**4 Use the four-way controller (▲▼) to change the number of recorded pixels.**

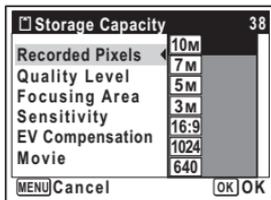

Storage capacity for the selected recorded pixels is also displayed on the upper right part of the screen.

**5 Press the OK button.**

The Recorded Pixels setting is saved.

**6 Press the MENU button.**

The camera returns to capture status with the current setting.



- In (Digital Panorama), recorded pixels for each image to be stitched is fixed at **2M**.
- In (Frame Composite) and (Half-length Portrait), recorded pixels is fixed at **3M**.
- In (Digital SR), recorded pixels is fixed at **5M**.
- In (Movie), movies are taken with the recorded pixels set in [Movie] on the [Rec. Mode] menu. (p.94)

Approximate Image Storage Capacity and Recording Time (Still Picture)  
(p.167)



## 6 Press the **MENU** button.

The camera returns to capture status with the current setting.



In  (Frame Composite), quality level is fixed at ★★.

Approximate Image Storage Capacity and Recording Time (Still Picture)  
(p.167)





The Intelligent Zoom range and the Digital Zoom range is displayed as an icon above the zoom bar.

: Intelligent Zoom range

: Digital Zoom range

## Recorded pixels and the maximum zoom ratio

Recorded pixels	Intelligent Zoom	Digital Zoom
	Not Available (3× optical zoom available)	Equivalent to approx. 17.1×
	Approx. 3.6×	
	Approx. 4.2×	
	Approx. 5.3×	
	Approx. 5.3×	
	Approx. 6.8×	
	Approx. 10.7×	
	Approx. 17.1× (Same as 17.1× Digital Zoom)	

4




- You are recommended to use a tripod to prevent camera shake when taking pictures at a high magnification rate.
- Pictures taken in the digital zoom range appear grainier than pictures taken in the optical zoom range.
- Intelligent Zoom is not available under the following conditions.
  - When the recorded pixels is set to . (3x optical zoom available)
    - In (Movie)
    - In (Digital SR)
  - When the sensitivity is set to 3200 or 6400.
- The image enlarged using Intelligent Zoom may appear rough on the display. This does not affect the quality of recorded image.
- In , only Digital Zoom is available.
- is available exclusively in (Digital Panorama).
- In , when the camera recognizes the subject's face, it automatically zooms in within the Intelligent Zoom range.

## Setting the Digital Zoom

The digital zoom is set to  (On) in the default settings. To take pictures using only the optical zoom, set the digital zoom to  (Off).

- 1 Press the MENU button in the capture mode.**  
The [📷 Rec.Mode] menu appears.
- 2 Use the four-way controller (▲ ▼) to select [Digital Zoom].**
- 3 Use the four-way controller (◀ ▶) to select  (On) or  (Off).**  
The selected setting is saved.
- 4 Press the MENU button.**  
The setting is complete and the camera returns to capture status.

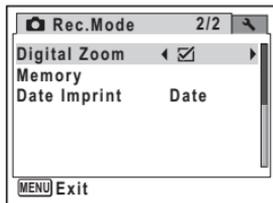

Saving the Digital Zoom Function Setting (p.90)





- When the focus mode is set to **AF** (Standard), the Auto-Macro function is available. When the subject is closer than approx. 50 cm (1.56 ft) from the camera, the camera automatically focuses on the subject within the focus range of (Macro).
- In  (Green), you can only select **AF**, , or **PF**.

Saving the Focus Mode (p.90)

## Focus lock


When you have difficulty in auto focusing on a subject, try the procedures below.

You may have difficulty in auto focusing on such subjects as:

- Subject contrast is very weak. (blue sky, solid white (Macro) wall, etc.)
- Dark places, black object, or subject that does not reflect light.
- Subject with strong reflected light, or strong backlight.
- Object with a fine pattern
- Rapidly moving objects
- When a distant object and a close object are both in the focus frame.

- 1 Find alternate subject that is in the same distance from the camera as the desired subject.**
- 2 Focus on the alternate subject.**  
Locate it in the focus frame on the display.
- 3 Press the shutter release button halfway.**  
The focus frame turns green when the alternate subject is in focus.
- 4 While holding the shutter release button halfway, move the camera to obtain the desired composition.**  
The focus is locked at the point you set in Step 3 even if you recompose. (Focus lock)
- 5 Press the shutter release button fully.**



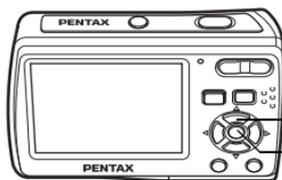

Four-way controller  
OK button

Available in

## Selecting the Flash Mode

### Flash Modes

	Auto	The flash discharges automatically depending on the light conditions.
	Flash Off	The flash does not discharge, regardless of the brightness. Use this mode to take pictures where flash photography is prohibited.
	Flash On	The flash discharges regardless of the brightness.
	Auto + Red-eye	This mode reduces the phenomenon of red eyes caused by the light from the flash being reflected in the subject's eyes. The flash discharges automatically.
	Flash On + Red-eye	This mode reduces the phenomenon of red eyes caused by the light from the flash being reflected in the subject's eyes. The flash discharges regardless of the light conditions.



- The flash mode is fixed at in (Movie), when the drive mode is set to (Continuous Shooting) or (16-frame shooting), or when the focus mode is set to (Infinity).
- A pre-flash discharges when or is displayed.
- In (Green), you can only select or .

## 1 Press the four-way controller (◀) in the capture mode.

The flash mode changes each time the button is pressed. You can also change the setting using the four-way controller (▲▼).

## 2 Press the OK button.

The camera returns to capture status with the selected flash mode.



### Preventing the “red-eye”

The “red-eye” in flash pictures occurs when the flashlight is reflected in the subject's eyes. To prevent the phenomenon, try the followings.

- Illuminate the subject.
- Shoot at closer distance in wide angle.
- Set the flash mode to  (Auto + Red-eye) or  (Flash On + Red-eye).

You can also compensate the red-eye pictures using the  (Red-eye Compensation) function of the camera. (p.128)





- When Sensitivity is set to 3200 or 6400, the number of recorded pixels is fixed at **5M**.
- When the shooting mode is set to  (Movie), only Auto is available.
- In «B», the sensitivity is fixed at Auto (ISO 100-6400).
- In the 16-frame shooting, the sensitivity is fixed at ISO 200.


Saving the Sensitivity (p.90)



# Doing More with Useful Functions

## Displaying Shooting Information

In the capture mode, you can change the display of shooting information by pressing the **OK/DISPLAY** button. For the meanings of the indications, see p.14.

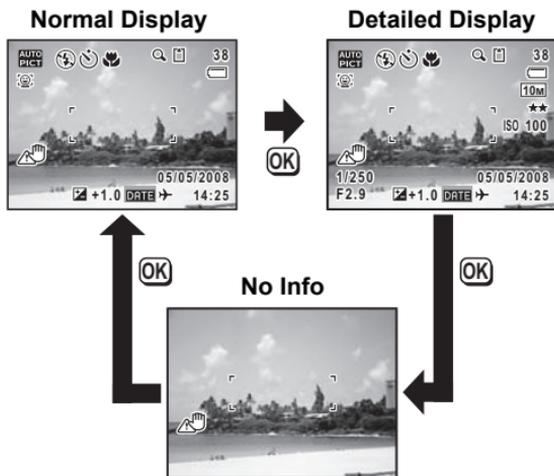

4

Taking Pictures



- In (Digital Panorama), shooting information is displayed only when you take the first frame. No shooting information is displayed when you take the second and/or the third frame.
- In (Voice Recording), the display cannot be switched.



- Under the conditions that camera shake tends to occur, will appear on the display when you press the shutter release button halfway. To prevent camera shake, use a tripod and the self-timer function. (p.85)
- In (Green), you cannot change the information on the display by pressing the **OK/DISPLAY** button.







- In Continuous Shooting and 16-frame shooting, the focus and EV Compensation are fixed with the first image.
- In Continuous Shooting, you can continue shooting until the memory capacity of the SD Memory Card or built-in memory reaches full.
- The interval of Continuous Shooting varies depending on the Recorded Pixels and the Quality Level you have selected.
- The images taken with the 16-frame shooting function will be printed as a single image in 4 × 4 rows of the 16 images.
- When you play back the images taken with the 16-frame shooting function, they will be displayed as follows.
  - When played back on the camera, 16 images are continuously played back like a movie. You can save one of a series of images taken with the 16-frame shooting function as a single image. You can play them back in the same way as you play back movies. (p.105)
  - When played back on a computer, the 16 images are arranged in 4 × 4 rows and displayed as a single image.
- When Face Priority On is selected (p.51), the Face Recognition function works only when taking the first image.






- The date and/or time is imprinted on the picture with the date style selected in the [Date Adjust] menu.
- When [Date Imprint] is set to the setting other than [Off], the **DATE** icon is displayed on the screen.
- When taking panoramic pictures in , the date and/or time is imprinted on the lower right of the stitched picture.

## Saving Your Settings (Memory)


The Memory function is for saving the current camera settings even when the camera is turned off.

For some camera settings, the Memory function is always set to  (On) (the settings are saved when the camera is turned off), while for others you can choose on or off (to choose whether the settings are saved or not when the camera is turned off). The items which can be set to  (On) or  (Off) in the Memory function are shown in the table below. (Items not listed here are always saved in the selected settings when the camera is turned off.) If you select  (On), the settings will be saved in the status they were in immediately before the camera was turned off. If you select  (Off), the settings will be reset to the defaults when the camera is turned off. The table below also shows whether the Memory default setting for each item is on or off.


Item	Description	Default Setting
Face Recognition	The Face Recognition mode set with the  button (p.51)	<input type="checkbox"/>
Flash Mode	The flash mode set with the four-way controller (  ) (p.79)	<input checked="" type="checkbox"/>
Drive Mode	The drive mode set with the four-way controller (  ) (p.85, p.86)	<input type="checkbox"/>
Focus Mode	The focus mode set with the four-way controller (  ) (p.76)	<input type="checkbox"/>
Zoom Position	The zoom position set with the Zoom/  /  button (p.73)	<input type="checkbox"/>
Sensitivity	The [Sensitivity] setting on the [  Rec. Mode] menu (p.81)	<input type="checkbox"/>
EV Compensation	The [EV Compensation] setting on the [  Rec. Mode] menu (p.83)	<input type="checkbox"/>
Digital Zoom	The [Digital Zoom] setting on the [  Rec.Mode] menu (p.75)	<input checked="" type="checkbox"/>
DISPLAY	The display information display mode set with the <b>OK/</b> <b>DISPLAY</b> button (p.84, p.97)	<input type="checkbox"/>
File No.	If a new SD Memory Card is inserted when On has been selected, file numbers are assigned sequentially.	<input checked="" type="checkbox"/>

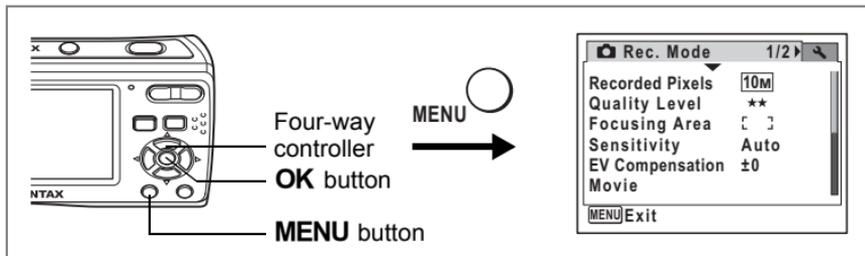

- 1 **Press the MENU button in the capture mode.**  
The [📷 Rec. Mode] menu appears.
- 2 **Press the four-way controller (▲▼) to select [Memory].**
- 3 **Press the four-way controller (▶).**  
The [Memory] screen appears.
- 4 **Use the four-way controller (▲▼) to choose an item.**
- 5 **Use the four-way controller (◀▶) to select  (On) or  (Off).**
- 6 **Press the OK button.**  
The Memory setting is saved.
- 7 **Press the MENU button.**  
The camera returns to capture status with the current setting.

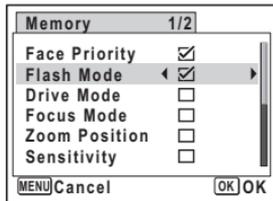

# Recording Movies

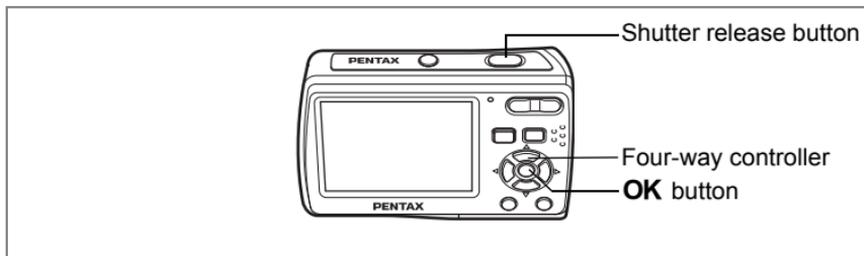

Available in 

## Recording a Movie

When you record movies, sound is recorded at the same time.

- 1 Press the four-way controller (▼) in the capture mode.**  
The Capture Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select  (Movie).**




### 3 Press the OK button.

 is selected and the camera is ready for recording movies.

The following information appears on the display.

- 1 Movie mode icon
- 2 Focus mode icon
- 3 Recording indicator (appears when recording begins in Step 4 and blinks during recording)
- 4 Remaining recordable time
- 5 Current date and time
- 6 Focus frame (does not appear during recording)

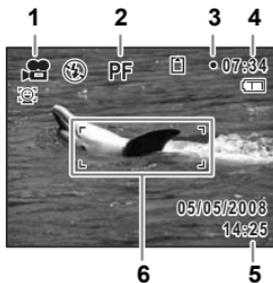

You can change the captured area by pressing the Zoom button to the left or right.

 : enlarges the subject

 : widens the area captured by the camera

### 4 Press the shutter release button fully.

Recording starts. You can record movie continuously until the built-in memory or SD Memory Card reaches full or max. 2GB.



The flash does not discharge in .



- You can use the optical zoom and digital zoom before starting to record, and the digital zoom while recording.
- When the focus mode is set to **AF** or , you can adjust the focus before recording starts.
- You can switch shooting information on the display with **OK/ DISPLAY** button during recording.


### 5 Press the shutter release button fully.

Recording stops.

Playing Back Movies (p.105)

#### Keeping the Shutter Release Button Pressed

If you keep the shutter release button pressed for more than one second, recording will continue as long as you keep the button pressed. Shooting stops when you take your finger off the shutter release button.

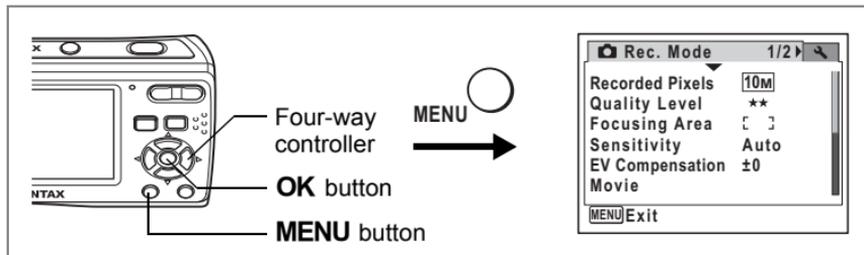

Available in

## Selecting the Settings for Taking Movies

You can select [Recorded Pixels] and [Frame Rate] for your movies. You can also use [Movie SR] to compensate for camera shake while you are recording movies.

- 1 Press the **MENU** button in the capture mode.  
[📷 Rec. Mode] menu appears.
- 2 Use the four-way controller (▲▼) to select [Movie].
- 3 Press the four-way controller (▶).  
The menu for movie setting appears.

### Selecting the Recorded Pixels of Movies

The more pixels are selected, the clearer the details and larger the file size. The file size also varies depending on the frame rate you select.

#### Recorded Pixels

<b>640</b> (640×480)	High-quality movies. Suitable for viewing on a TV or a computer.
<b>320</b> (320×240)	Suitable for posting on a website or attaching to an e-mail.


- 4 Use the four-way controller (▲▼) to select [Recorded Pixels].

**5 Press the four-way controller (▶).**

The pull-down menu appears.

**6 Use the four-way controller (▲▼) to change the recorded pixels.**

Recordable time for the selected recorded pixels is also displayed on the upper right part of the screen.

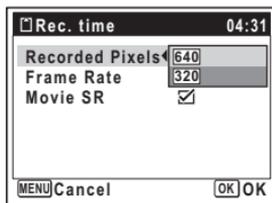**7 Press the OK button.**

Your selection is saved.

**8 Press the MENU button twice.**

The camera returns to capture status with the current setting.

### Selecting the Frame Rate


The frame rate determines how smoothly the movie is played back. The “fps” indicates the number of frames taken per second. The more frames, the better the quality of the movie, but the file size becomes larger.

**4 Use the four-way controller (▲▼) to select [Frame Rate].****5 Press the four-way controller (▶).**

The pull-down menu appears.

**6 Use the four-way controller (▲▼) to change the frame rate.**

Recordable time for the selected frame rate is also displayed on the upper right part of the screen.

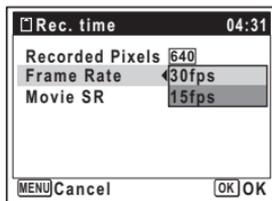**7 Press the OK button.**

Your selection is saved.

**8 Press the MENU button twice.**

The camera returns to capture status with the current setting.

## Setting the Movie SR (Movie Shake Reduction) Function

You can compensate for camera shake while you are recording movies with the Movie SR (Movie Shake Reduction) function.

**1 Press the MENU button in the capture mode.**

The [📷 Rec.Mode] menu appears.

**2 Use the four-way controller (▲▼) to select [Movie].**

**3 Press the four-way controller (▶).**

The [Movie] screen appears.


**4 Use the four-way controller (▲▼) to select [Movie SR].**

**5 Use the four-way controller (◀▶) to select  (On) or  (Off).**

The Movie SR (Movie Shake Reduction) setting is saved.

**6 Press the MENU button twice.**

The camera returns to capture status with the current setting.

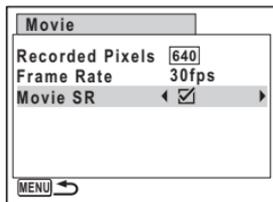

# Playing Back Images on the Camera

## Playing Back Still Pictures

To play back still pictures, press  button in the capture mode to switch to the playback mode. For details, see “Playing Back Images” (p.36). For playing back movies, see “Playing Back a Movie” (p.105).

## Reviewing Shooting Information

In the playback mode, you can change the display of shooting information on the played back image by pressing the **OK/DISPLAY** button. For the meanings of the indications, see p.16.

Normal Display




Detailed Display



No Info



Displaying Shooting Information (p.84)

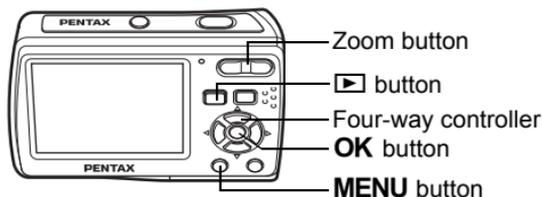

## Nine-Image Display, Folder Display and Calendar Display


### Nine-Image Display

You can display nine captured images on the display at a time.

#### 1 In the playback mode, press on the Zoom button.

A page consisting of nine thumbnail images appears. The displayed images change nine at a time page by page.

Use the four-way controller (   ) to move the selection frame. When 10 or more images have been saved, if you choose image ① and press the four-way controller ( ) , the previous page appears. Similarly, if you choose image ② and press the four-way controller ( ) , the next page appears.

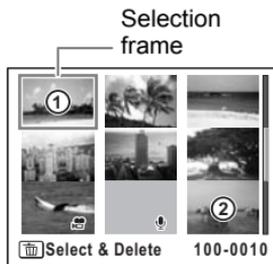

The icons that appear on the images indicate the following:

No icon : Still picture



: Movie (first frame appears)



: Sound file

#### 2 Press the OK button.

The single-image display of the selected image is displayed. You can also use the **MENU** button or  on the Zoom button to display the selected image.

## Switching to Folder Display or Calendar Display

In nine-image display, press  on the Zoom button to switch to folder display or calendar display. Press the Green button to switch between folder display and calendar display.

### 1 In the playback mode, press on the Zoom button.

The screen changes to nine-image display.

### 2 Press on the Zoom button.


The screen changes to folder display or calendar display.

#### Folder display

Folders with recorded images and sound files appear.

Use the four-way controller (   ) to move the selection frame.

Select a folder and press  on the Zoom button or **OK** button to switch to nine-image display with the first image in the folder selected.

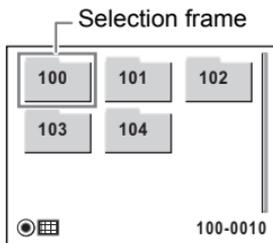

#### Calendar display

Recorded images and sound files are displayed by date in calendar format.


The first image recorded on a date is displayed for that date on the calendar.

 appears for dates on which a sound file was first recorded.


Use the four-way controller (   ) to move the selection frame.

Select a date and press  on the Zoom button to switch to nine-image display with the first image from that date selected.

Select a date and press the **OK** button to switch to single-image display of the first image recorded on that date.

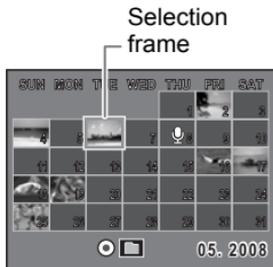

- Press the **MENU** button in folder display or calendar display to switch to normal nine-image display.
- Press the  button or the shutter release button in folder display or calendar display to switch to the capture mode.

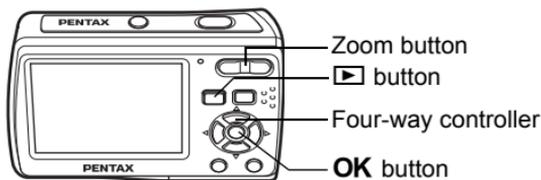

## Zoom Playback

You can magnify an image up to  $\times 10$ . A guide showing the center of the magnified portion of the image appears on the display during zoom playback.

**1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to magnify.**

**2 Press  $\mathcal{Q}$  on the Zoom button.**

The image is magnified ( $\times 1.1$  to  $\times 10$ ). Holding down  $\mathcal{Q}$  on the Zoom button changes the magnification continuously. You can use the guide at the bottom left of the screen to check which portion of the image is magnified.



Guide

**The following operations can be performed while the magnified image is displayed.**


- |                               |  |
|-------------------------------|--|
| Four-way controller (▲▼◀▶)    | Moves the position to be magnified     |
| Zoom button ( $\mathcal{Q}$ ) | Enlarges the image (max. $\times 10$ ) |
| Zoom button (⊞)               | Reduces the image (min. $\times 1.1$ ) |

**3 Press the OK button.**

The image returns to single-image display.

**Caution**

- Images taken with the 16-frame shooting function and movies cannot be magnified.
- The guide does not appear if the shooting information display is set to "No Info".

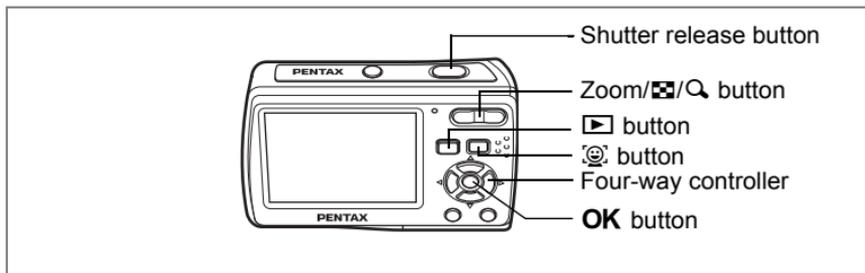

## Zoom In On the Subject's Face Automatically (Face close-up playback)

You can enjoy playing back images with the subject's faces zoomed in simply by pressing the button (Face close-up playback) if Face Recognition operated when the images were taken.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to magnify.**
- 2 Confirm that the icon is displayed in the image and press the button.**

The image is magnified around the face first recognized when the image was taken.



If multiple faces were recognized when the image was taken, the subject's faces are zoomed in on each time the button is pressed in the order the faces were recognized when the picture was taken.




- 3 Press the OK button.**

The image returns to single-image display.



- The magnification ratio for Face close-up playback may differ depending the conditions such as the size of the face recognized when shooting.
- Press  on the Zoom// button during Face close-up playback to center on the subject and switch between displaying the image at an equal or slightly larger magnification. Press  on the Zoom// button to center on the subject and switch between displaying the image at an equal or slightly smaller magnification.

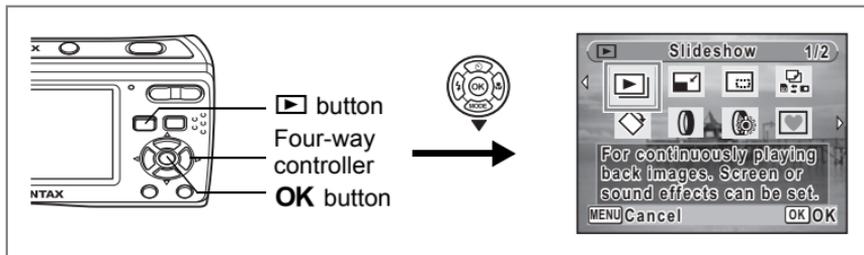

## Slideshow

You can play back recorded images one after another.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose an image to start the slideshow with.**
- 2 Press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 3 Use the four-way controller (▲▼◀▶) to select ▶ (Slideshow).**
- 4 Press the OK button twice.**  
The slideshow starts.  
Pressing the **OK** button during the slideshow pauses the slideshow. To resume the slideshow, press the **OK** button while the slideshow is paused.
- 5 Press any button other than the OK button or the power switch.**  
The slideshow stops.



If you press the four-way controller (▶) while playing back a movie, the next image is displayed without ending the slideshow.

## Setting the Slideshow Conditions

You can set the playback interval and also a screen effect and sound effect for when one image changes to the next.

- 1 Press the four-way controller (▼) in the playback mode.**  
The Playback Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select ▶.**

**3 Press the OK button.**

The screen for setting the slideshow conditions appears.

**4 Use the four-way controller (▲▼) to select [Interval].****5 Press the four-way controller (▶).**

A pull-down menu appears.


**6 Use the four-way controller (▲▼) to change the interval and press the OK button.**

You can choose from 3sec, 5sec, 10sec, 20sec and 30sec.

**7 Use the four-way controller (▲▼) to select [Screen Effect].**

After selecting [Screen Effect], press the four-way controller (▶).

A pull-down menu appears with the following items that can be selected. Use the four-way controller (▲▼) to select an item and press the **OK** button.

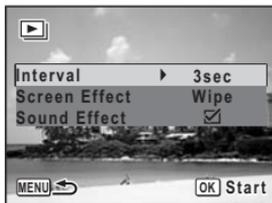

Off	No effect
Wipe	The next image slides over the previous one from left to right
Checker	The next image appears in small square mosaic blocks
Fade	The current image gradually fades out and the next image fades in

**8 Use the four-way controller (▲▼) to select [Sound Effect].****9 Use the four-way controller (◀▶) to select  (On) or  (Off).**

Except when the screen effect is set to Off, you can choose  (On) or  (Off) for the sound that is played when one image changes to the next.

**10 Press the OK button.**

The slideshow starts using the selected interval and effect.




Sound files made in  (Voice Recording) are not played back in the slideshow.



- The slideshow will continue until you press any button other than the **OK** button or the power switch.
- Movies will normally be played through to the end before the next picture is played back, regardless of the interval setting. However, pressing the four-way controller (▶) while playing back a movie skips to the next image.
- Panoramic pictures are played back scrolling for 5 seconds regardless of your setting on [Interval].

Playing Back Images on a TV (p.107)

# Playing Back Movies

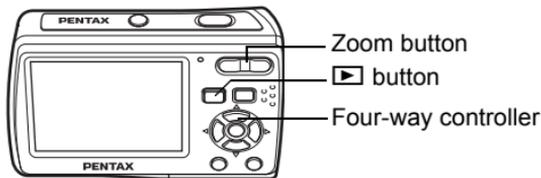

## Playing Back a Movie

You can play back the movies you have taken. Sound is played back at the same time.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the movie you want to play back.**

- 2 Press the four-way controller (▲).**

Playback starts.

Press the four-way controller (▲) again to pause.

**The following operations can be performed during playback.**

- |                         |                      |
|-------------------------|----------------------|
| Four-way controller (◀) | Reverse playback     |
| Four-way controller (▲) | Pause                |
| Zoom button (⬆)         | Increases the volume |
| Zoom button (⬇)         | Reduces the volume   |

**The following operations can be performed while playback is paused.**

- |                         |                                    |
|-------------------------|------------------------------------|
| Four-way controller (◀) | Frame reverse                      |
| Four-way controller (▶) | Frame forward                      |
| Four-way controller (▲) | Releases the Pause function (Play) |
- Green button: Saves the paused frame of a series of images taken with 16-frame shooting as a single image.




### 3 Press the four-way controller (▼).

Playback stops.



- You can play back images taken with the 16-frame shooting function in the same way as you play back movies.
- When you save the paused frame of a series of images taken with 16-frame shooting function as a single image, the displayed still image will be saved as a new image in 640 × 480 recorded pixels.

# Playing Back Images on a TV

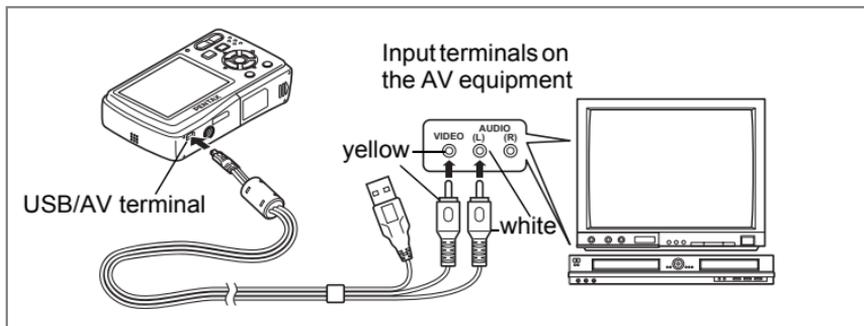

By connecting your camera to a TV or other AV equipment using the supplied USB/AV cable, you can display images on the monitor for review or picture taking.

- 1 Connect the supplied USB/AV cable to the USB/AV terminal on the camera.**
- 2 Connect the other ends of the USB/AV cable (yellow: video, white: audio) to the video input terminal and audio input terminal on the AV equipment.**

When using stereo sound equipment, insert the sound terminal into the L (white) terminal.

- 3 Turn the AV equipment on.**

When the equipment that the camera is connected to and the equipment that plays back images are different, turn both equipment on.

When viewing images on AV equipment with multiple video input terminals (such as a TV), refer to the operation manual of the equipment and select the video input terminal to which the camera is connected.

- 4 Turn the camera on.**




- Depending on the country or region, images and sound files may fail to be played back if the video output format is set different from the one in use there. If this happens, change the video output format setting. (p.151)
- The display of the camera turns off while it is connected to AV equipment. You cannot adjust sound volume using the Zoom button on the camera.



You are recommended to use the AC adapter kit K-AC62 (optional) if you intend to use the camera for a long time. (p.21)

# Deleting Images and Sound Files

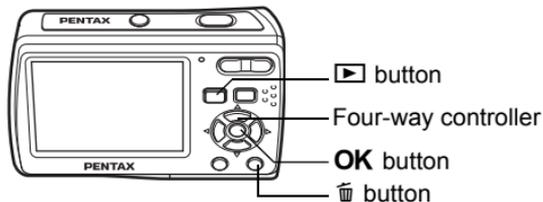

You can delete images and sounds with mistakes or that are unnecessary.

## When images or sounds are inadvertently deleted

Deleted images and sounds recorded with this camera can be recovered with the Optio E60. (p.113)

Deleted images and sounds can be recovered unless the SD Memory Card has been removed or the camera has been turned off after deletion.

However, deleted images and sounds cannot be recovered after operations to write data such as taking pictures, recording movies, protecting images, saving DPOF settings, resizing images, or cropping images have been performed.

## Deleting a Single Image/Sound File

You can delete a single image and sound file.



Protected images and sound files cannot be deleted. (p.114)

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image/sound file you want to delete.**
- 2 Press the  button.**  
A confirmation screen appears.


**3** Use the four-way controller (▲▼) to select [Delete].

**4** Press the OK button.

The image or sound file is deleted.



"Recovering Deleted Images" (p.113)

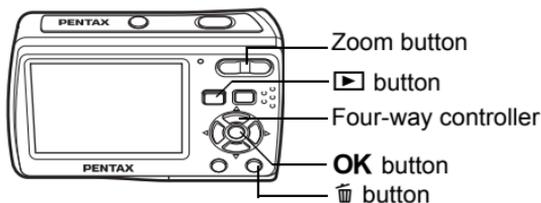

## Deleting Selected Images and Sound Files (from Nine-Image Display)

You can delete several images/sound files selected from the nine-image display at once.



Protected images and sound files cannot be deleted.


5

- 1 In the playback mode, press on the Zoom button.**

Nine thumbnail images appear.


- 2 Press the button.**

appears on the images and sound files.

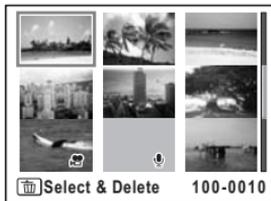

- 3 Use the four-way controller (, , , ) to choose the images and sound files that you want to delete and press the OK button.**

appears on the selected images and sound files.

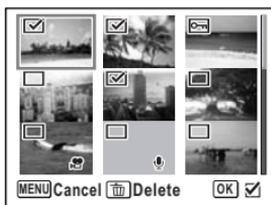

If you select an image and press on the Zoom button, the selected image is displayed in single-image display while you are holding the button, enabling you to check whether you want to delete it or not. (The display returns to the nine-image display when you release the button.) However, protected images cannot be displayed in single-image display.

**4 Press the  button.**


A confirmation dialog appears.

**5 Use the four-way controller ( ) to select [Select & Delete].**

**6 Press the OK button.**

The selected images and sound files are deleted.



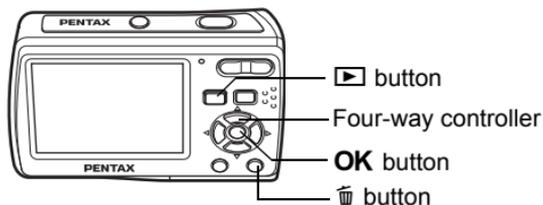

## Deleting All Images and Sound Files

You can delete all the images and sound files at once.



Protected images and sound files cannot be deleted. (p.114)


### 1 Press the 🗑 button twice in the playback mode.

A confirmation dialog appears.


### 2 Use the four-way controller (▲▼) to select [Delete All].

### 3 Press the OK button.

All the images and sound files are deleted.

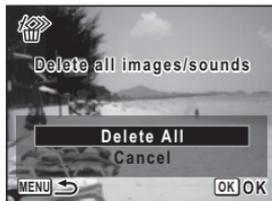

“Recovering Deleted Images” (p.113)

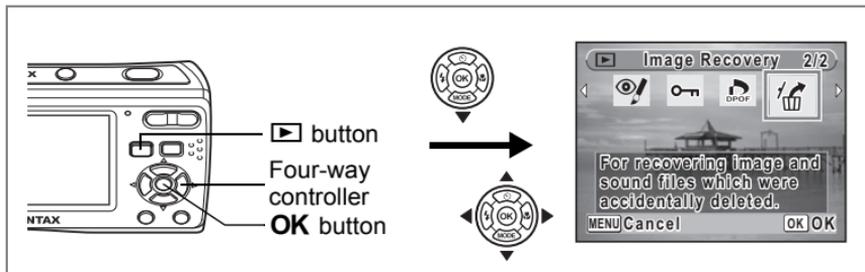

## Recovering Deleted Images

You can recover images or sound files that were taken with this camera and then deleted.



After deleting an image, once operations to write data (recording, protecting, DPOF setting, resizing or cropping) have been performed, the SD Memory Card has been removed, or the camera has been turned off, the message “No image to be processed” appears in Step 3 and the deleted images and sound files cannot be recovered.


- 1 After deleting a file, press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select .**  
(Image Recovery).
- 3 Press the OK button.**  
The number of recoverable images appears.
- 4 Use the four-way controller (▲▼) to select [Recover].**
- 5 Press the OK button.**



Deletion of the images is cancelled and the files are recovered.



Recovered images and sound files have the same file name as before they were deleted.

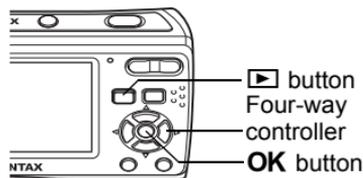


## Protecting Images and Sound Files from Deletion (Protect)

You can protect stored images and sound files from being accidentally deleted.

- 1 Press the four-way controller (▼) in the playback mode.**  
The Playback Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select  (Protect).**
- 3 Press the OK button.**  
The screen for selecting [Select image/sound] or [All Images/Sounds] appears.
- 4 Use the four-way controller (▲▼) to select [Select image/sound].**
- 5 Press the OK button.**  
The message [Protect this image/sound] appears. To protect another image or sound file, use the four-way controller (◀▶) to select another image or sound file.
- 6 Use the four-way controller (▲▼) to select [Protect].**
- 7 Press the OK button.**  
The selected image or sound file is protected.



- To cancel the Protect setting, select [Unprotect] in Step 6.
-  appears below the file number on protected images and sound files during playback.

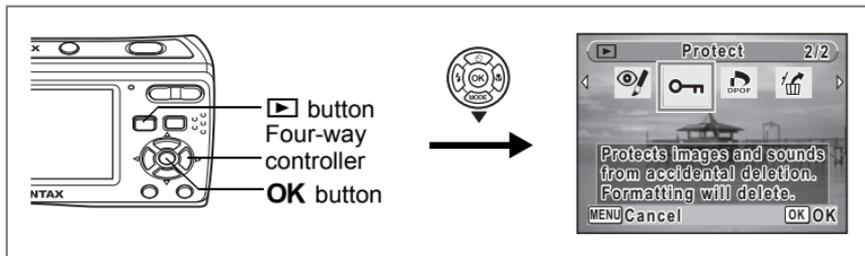

## Protecting All Images and Sound Files

- 1 Press the four-way controller (▼) in the playback mode.**  
The Playback Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select  (Protect).**
- 3 Press the OK button.**  
The screen for selecting [Select image/sound] or [All Images/Sounds] appears.
- 4 Use the four-way controller (▲▼) to select [All Images/Sounds].**
- 5 Press the OK button.**  
The screen for selecting [Protect] or [Unprotect] appears.
- 6 Use the four-way controller (▲▼) to select [Protect].**
- 7 Press the OK button.**  
All the images and sound files are protected.




Protected images and sound files will be deleted when the SD Memory Card is formatted.



To cancel the Protect setting on all your images and sound files, select [Unprotect] in Step 6.

## Editing Images

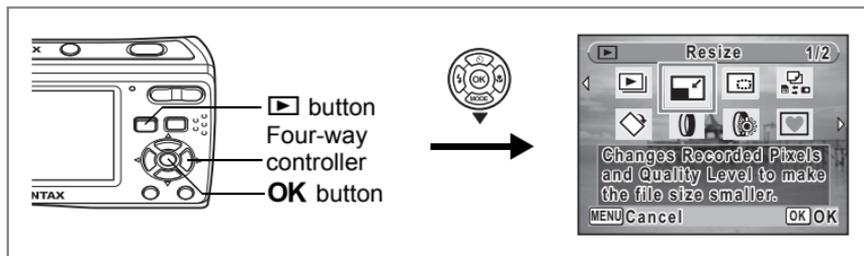

## Changing the Image Size and Quality (Resize)

By changing the size and quality of a selected image, you can make the file size smaller than the original. You can use this function to continue taking pictures when the SD Memory Card or built-in memory is full, by making the images smaller and overwriting the original images to make more space available.

**Caution**

- You cannot resize images with the recorded pixels **16:9** (1920x1080), images taken in **[ ]** (Digital Panorama) or with the 16-frame shooting function and movies.
- You cannot select a larger resolution or higher quality than that of the original image.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to resize.**
- 2 Press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 3 Use the four-way controller (▲▼◀▶) to select **[ ]** (Resize).**

#### 4 Press the **OK** button.

The screen for choosing the size and quality appears.



#### 5 Select **[Recorded Pixels]** and **[Quality Level]**.

Use the four-way controller (◀▶) to choose the size and quality.

Use the four-way controller (▲▼) to switch between **[Recorded Pixels]** and **[Quality Level]**.

#### 6 Press the **OK** button.

A confirmation dialog for overwriting the image appears.


If the image is protected, a confirmation screen does not appear. The image is automatically saved with a new file name.

#### 7 Use the four-way controller (▲▼) to select **[Overwrite]** or **[Save as]**.

#### 8 Press the **OK** button.

The resized image is saved.



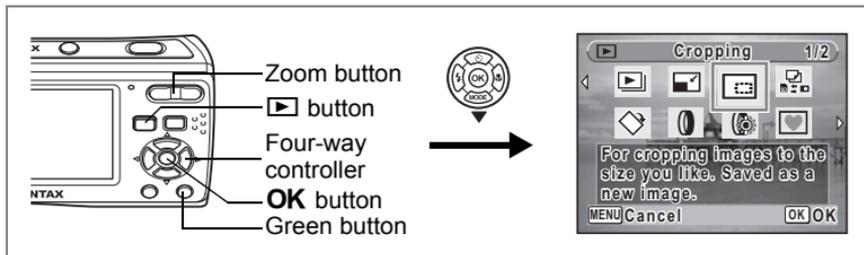

## Cropping Images

You can delete the unwanted part of a picture and save the cropped image as a new image.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to crop.**
- 2 Press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 3 Use the four-way controller (▲▼◀▶) to select [Cropping].**

- 4 Press the OK button.**

The Cropping screen appears.

- 5 Specify the portion to be cropped.**

Zoom button Changes the size of the portion to be cropped

Four-way controller (▲▼◀▶)  
Moves the cropping frame

Green button Rotates the cropping frame




- 6 Press the OK button.**

The cropped image is saved with a new file name.

The cropped image is saved in the same quality level as the original image. The number of recorded pixels is selected automatically according to the size of the cropped section.



Images with the recorded pixels 16:9 (1920x1080), images taken in [ ] (Digital Panorama) or with the 16-frame shooting function, and movies cannot be cropped.

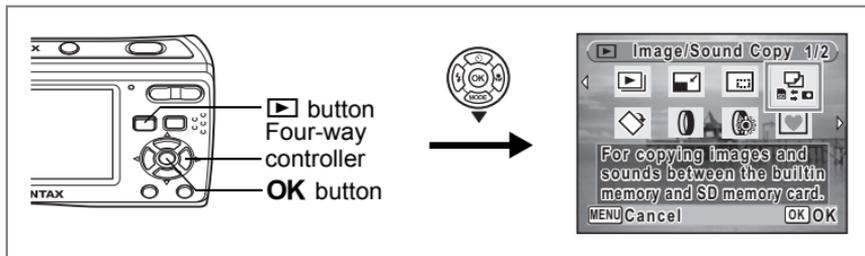

## Copying Images and Sound Files

You can copy images and sound files from the built-in memory to the SD Memory Card and vice versa. This function can only be selected when an SD Memory Card has been inserted in the camera.



Make sure that the camera is turned off before inserting or removing the SD Memory Card.

- 1 Press the four-way controller (▼) in the playback mode.**  
The Playback Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select  (Image/Sound Copy).**
- 3 Press the OK button.**  
The copying method selection screen appears.

### Copying Files from the Built-in Memory to the SD Memory Card

All the images and sound files in the built-in memory are copied to the SD Memory Card at once. Before copying the images, make sure that there is enough space in the SD Memory Card.

- 4 Use the four-way controller (▲▼) to select [ → SD].**
- 5 Press the OK button.**  
All the images and sound files are copied.



## Copying Files from the SD Memory Card to the Built-in Memory

Selected images and sound files from the SD Memory Card are copied to the built-in memory one at a time.


- 4 Use the four-way controller (▲▼) to select [SD] → [●].
- 5 Press the OK button.
- 6 Use the four-way controller (◀▶) to select the file you want to copy.
- 7 Press the OK button.



The selected image/sound file is copied.



When a file is copied from the SD Memory Card to the built-in memory, it is assigned a new file name.

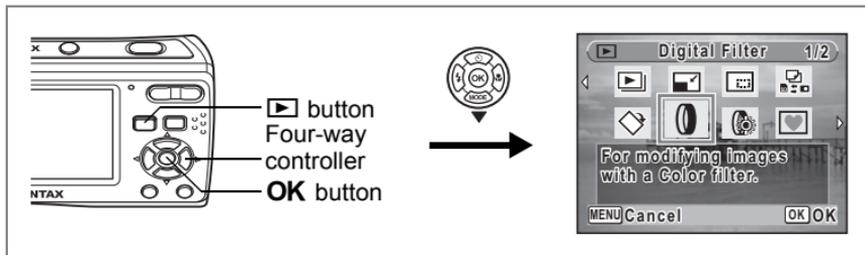


## Using the Digital Filter

You can change the color tone of taken images or give them digital effect without a computer. Select a digital filter from B&W, Sepia, Red, Pink, Purple, Blue, Green and Yellow to arrange the images in your style.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to edit.**
- 2 Press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 3 Use the four-way controller (▲▼◀▶) to select  (Digital Filter).**
- 4 Press the OK button.**  
The digital filter selection screen appears.
- 5 Use the four-way controller (▲▼) to choose a digital filter.**  
The preview of the edited image appears on the display. It changes each time you switch the filter.
- 6 Press the OK button.**  
A confirmation dialog for overwriting the image appears.
- 7 Use the four-way controller (▲▼) to select [Overwrite] or [Save as].**  
If the image is protected, a confirmation screen does not appear. The image is automatically saved with a new file name.
- 8 Press the OK button.**  
The edited image is saved with the same number of recorded pixels and quality level as the original.



With the digital filter, you can edit still pictures taken with this camera only. You cannot edit images taken in  (Digital Panorama) and movies recorded in  (Movie).

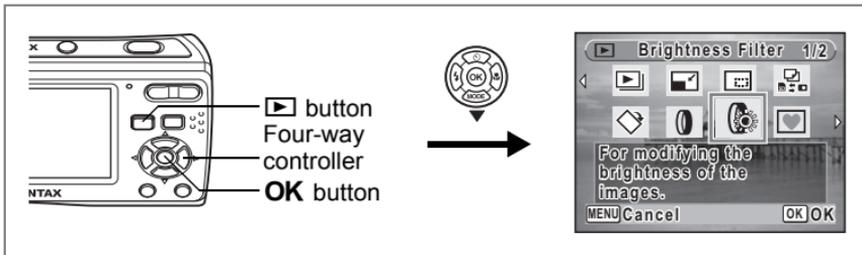

## Using the Brightness Filter

You can change the brightness of taken images without a computer.

- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to edit.**
- 2 Press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 3 Use the four-way controller (▲▼◀▶) to select .**
- 4 Press the OK button.**

A bar to adjust the brightness appears on the bottom center of the display.

- 5 Use the four-way controller (◀▶) to adjust the brightness.**

The preview of the edited image appears on the display. It changes each time you press the four-way controller (◀▶) and adjust the brightness.



- 6 Press the OK button.**

A confirmation dialog for overwriting the image appears.

- 7 Use the four-way controller (▲▼) to select [Overwrite] or [Save as].**



If the image is protected, a confirmation screen does not appear. The image is automatically saved with a new file name.

## 8 Press the OK button.

The edited image is saved with the same number of recorded pixels and quality level as the original.



With the brightness filter, you can edit still pictures taken with this camera only. You cannot edit images taken in  (Digital Panorama), movies, or images taken with other cameras.

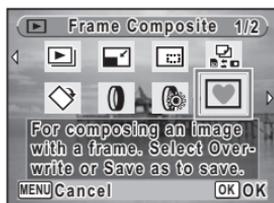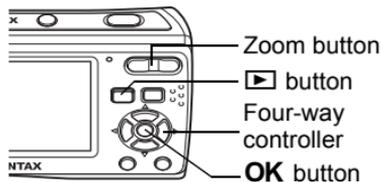

## Adding a Frame (Frame Composite)

You can add a frame to taken pictures. You can use the frames stored in your camera, and new frames downloaded from websites.

- 1** Enter the playback mode and use the four-way controller (◀▶) to choose the image to which you want to add a frame.
- 2** Press the four-way controller (▼).  
The Playback Mode Palette appears.
- 3** Use the four-way controller (▲▼◀▶) to select  (Frame Composite).
- 4** Press the OK button.  
A nine-frame display of frames stored in your camera appears on the display.
- 5** Use the four-way controller (▲▼◀▶) to choose a frame.



## 6 Press the OK button or on the Zoom button.

The selected frame appears in single-image display.

You can choose another frame using either of the following operations.

Four-way controller (): displays another frame

**MENU** button or Zoom button ()

: returns to the nine-frame display of available frames



## 7 Press the OK button.

The frame position and size adjustment screen appears. Use the four-way controller () to adjust the position of the image, and use the Zoom button to enlarge or reduce the image.



## 8 Press the OK button.

A confirmation dialog for overwriting the image appears.

## 9 Use the four-way controller () to select [Overwrite] or [Save as].

If the image is protected, a confirmation screen does not appear. The image is automatically saved with a new file name.



## 10 Press the OK button.

The edited image is saved with the recorded pixels of .

Caution

The Frame Composite function cannot be used for images taken in  (Digital Panorama) or with the 16-frame shooting function, movies, and images with the recorded pixels  or smaller than . An error message appears in Step 4.

### About the Optional Frames

Optional frames are stored in the built-in memory of the Optio E60, within the recording area of images, movies and sounds.

These optional frames can be deleted from the built-in memory by a file operation on the computer (e.g. deletion of files). If an optional frame has been deleted, it can be copied by using the supplied CD-ROM (S-SW81).

How to copy:

1. Remove the SD Memory Card from the camera. (If the SD Memory Card remains in the camera, the frames will be copied to the SD Memory Card and not to the built-in memory)
2. Refer to the PC Connection Manual and connect the camera to a computer with the USB/AV cable (I-UAV77).
3. Select [Cancel] if the device detection screen is automatically displayed after the camera is connected to the computer.
4. Insert the supplied CD-ROM (S-SW81) into the CD-ROM drive.
5. Select [EXIT] if the installation screen is displayed.
6. If there is no FRAME folder in the root directory of the camera (removable disk), create it by using your computer.
7. Select the desired frame file to copy from the FRAME folder in the root directory of the CD-ROM (S-SW81), and perform file operation on the computer to copy it to the FRAME folder of the camera (removable disk). (For details on the file operation on the computer, see the operating manual of the computer you use.)
8. Refer to the PC Connection Manual and disconnect the USB/AV cable and then the camera from the computer.

\* The supplied CD-ROM (S-SW81) includes the 3 default frames, which are also stored on the camera within the recording area that cannot be edited. If you try to do copy the 3 default frames from the CD-ROM to the camera, the same frames will be duplicated.

\* If you want to copy the frames to the SD Memory Card, keep the SD Memory Card inserted in the camera in Step 1.

\* The frames can be stored in both the built-in memory and the SD Memory Card, but the processing may take time as the number of files increase.


\* You can also only copy some frame files as needed.

## Using a New Frame

Frames downloaded from PENTAX website or other source can be used when taking pictures. To display available frames stored in the built-in memory or the SD Memory Card, in Step 3, select  (Frame Composite) and press the **OK** button.



- The three frames stored by default in the built-in memory cannot be deleted.
- Up to 979 downloaded frames can be displayed. Including the frames already stored in the built-in memory, you can choose from up to 999 frames.
- Extract the downloaded frame and copy it to the FRAME folder in the SD Memory Card.
- The FRAME folder is created when the SD Memory Card is formatted with this camera.

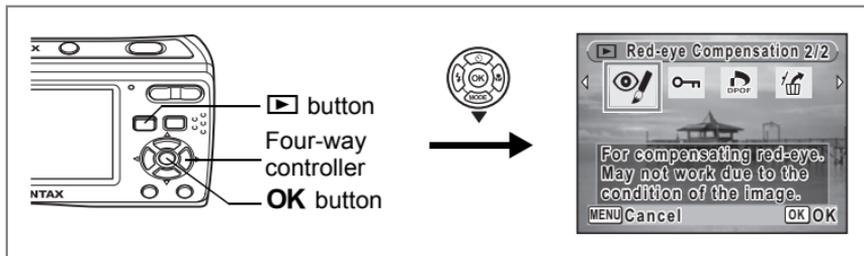

## Red-eye Compensation

You can compensate the “red-eye” in flash pictures.


- 1 Enter the playback mode and use the four-way controller (◀▶) to choose the image you want to correct.**
- 2 Press the four-way controller (▼).**  
The Playback Mode Palette appears.
- 3 Use the four-way controller (▲▼◀▶) to select  (Red-eye Compensation).**
- 4 Press the OK button.**  
A confirmation dialog for overwriting the image appears.
- 5 Use the four-way controller (▲▼) to select [Overwrite] or [Save as].**  
If the image is protected, a confirmation screen does not appear. The image is automatically saved with a new file name.
- 6 Press the OK button.**



- The red-eye compensation function cannot be used on movies or on images where red eyes cannot be detected on the camera. An error message appears in Step 4.
- The red-eye compensation can be used for still images taken with this camera. However, it cannot be used for images taken in  (Digital Panorama) or with the 16-frame shooting function.

# Setting the Printing Service (DPOF)

DPOF (Digital Print Order Format) is the format for storing print order data on still pictures captured with a digital camera. Once the print order data has been stored, the pictures can be printed according to the DPOF settings using a DPOF-compatible printer or photo processing lab. You cannot store print order data for movies or sound-only files.

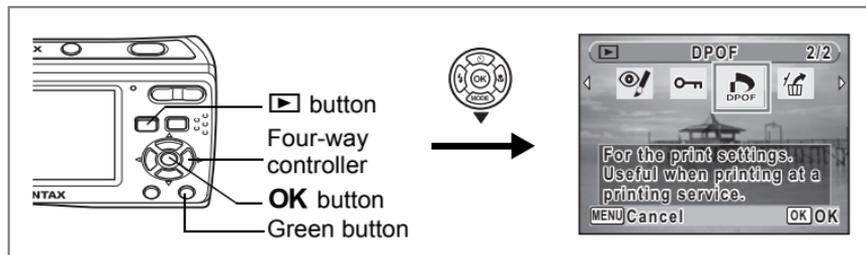

## Printing Single Images

Set the following items for each image.

Copies	Choose the number of copies up to 99.
Date	Specify whether you want the date inserted on the print or not.

- 1 Press the four-way controller (▼) in the playback mode.**  
The Playback Mode Palette appears.
- 2 Use the four-way controller (▲▼◀▶) to select  (DPOF).**
- 3 Press the OK button.**  
The screen for selecting [Single Image] or [All Images] appears.
- 4 Use the four-way controller (▲▼) to select [Single Image].**



## 5 Press the OK button.

The message [DPOF setting for this image] appears. To make DPOF settings for another image, use the four-way controller (◀▶) to select another image.

If DPOF settings have already been made for an image, the previous number of copies and date setting (☑ or ☐) will be displayed.



## 6 Use the four-way controller (▲▼) to choose the number of copies.

## 7 Use the Green button to choose whether to insert the date or not.

☑ (On) : The date will be imprinted.

☐ (Off) : The date will not be imprinted.

To continue setting DPOF print order data, use the four-way controller (◀▶) to choose another image and repeat Steps 6 and 7.



## 8 Press the OK button.


The DPOF settings are saved and the screen returns to the DPOF menu.



- Depending on the printer or printing equipment at the photo processing lab, the date may not be imprinted on the pictures even if ☑ (On) was selected in the DPOF settings.
- If the picture already has the date and/or time imprinted on it (p.88), do not set Date ☑ (On) in DPOF settings. Otherwise, the date and/or time could be imprinted twice on your printed picture.



To cancel DPOF settings, set the number of copies to [00] in Step 6 and press the **OK** button.

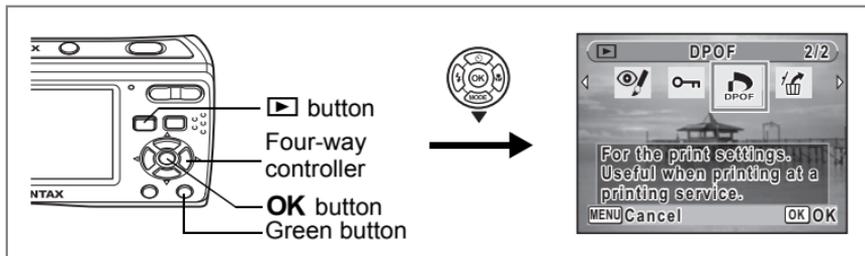

## Printing All Images

When you choose the number of copies and whether or not to insert the date, the settings are applied to all the images stored in the camera.

### 1 Display the screen for DPOF settings in the playback mode.

Refer to Steps 1 to 3 on p.129.

### 2 Use the four-way controller (▲▼) to select [All Images].

### 3 Press the OK button.

The message [DPOF setting for all images] appears.

### 4 Choose the number of copies and whether to insert the date or not.

Refer to Steps 6 and 7 in “Printing Single Images” (p.130) for details of how to make the settings.

### 5 Press the OK button.

The DPOF settings for all the images are saved and the camera returns to the DPOF setting screen.



- The number of copies specified in the DPOF settings applies to all the images. Before printing, check that the number is correct.
- If the pictures already have the date and/or time imprinted on them (p.88), do not set Date  (On) in DPOF settings. Otherwise, the date and/or time could be imprinted twice on your printed pictures.



Settings for single images are canceled when settings are made for all images.

# Printing Using PictBridge

By connecting the camera to a printer that supports PictBridge using the supplied USB/AV cable (I-UAV77), you can print images directly from the camera without using a computer. Connect the camera to the printer and select the images you want to print and the number of copies on the camera.



- You are recommended to use the AC adapter kit K-AC62 (optional) when the camera is connected to the printer. The printer may not work properly or the image data may be lost if the battery runs out of power while the camera is connected to the printer.
- Do not disconnect the USB/AV cable during data transfer.
- Depending on the type of printer, not all the settings made on the camera (such as print settings and DPOF settings) may be valid.
- A printing error may occur if the selected number of copies exceeds 500.
- Printing the index of the images (printing multiple images on a single sheet) cannot be performed directly from the camera. Make the settings on a printer supporting index printing function or use a computer.

6

## Connecting the Camera to the Printer

- 1 Select [PictBridge] for the [USB Connection] mode on the [ Setting] menu.**

Refer to “Changing the USB Connection Mode” (p.150).

- 2 Turn off the camera.**

- 3 Connect the camera to the printer using the supplied USB/AV cable.**

- 4 Turn the printer on.**

- 5 When the printer is ready to print, turn the camera on.**

The printing mode selection screen appears.



## Printing Single Images

- 1 In the printing mode selection screen, use the four-way controller (▲▼) to select [Single Image].**
- 2 Press the OK button.**

The setting screen appears.
- 3 Use the four-way controller (◀▶) to choose an image to print.**
- 4 Use the four-way controller (▲▼) to choose the number of copies.**

You can print up to 99 copies.
- 5 Use the Green button to choose whether to insert the date or not.**
  - (On) : The date will be imprinted.
  - (Off) : The date will not be imprinted.
- 6 Press the OK button.**



A confirmation dialog appears.

To print the pictures according to the print settings on the printer, press the **OK** button.

To change the print settings, go to Step 7.
- 7 Press the Green button.**


The screen for changing the print settings appears.
- 8 Select [Paper Size] and press the four-way controller (▶).**

The [Paper Size] screen appears.

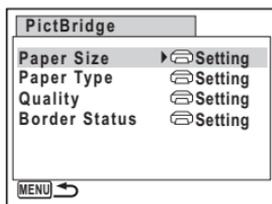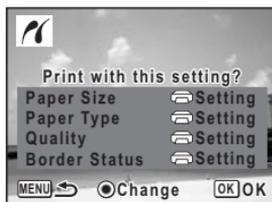

## 9 Use the four-way controller (▲▼◀▶) to choose the paper size.

You can only choose a size that is supported by your printer.

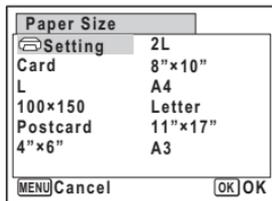

## 10 Press the OK button.

The Paper Size setting is saved, and the screen returns to the print settings screen.

## 11 Use the four-way controller (▲▼) to select [Paper Type] and press the four-way controller (▶).

A pull-down menu appears.

## 12 Use the four-way controller (▲▼) to select the paper type and press the OK button.

The Paper Type setting is saved, and the screen returns to the print settings screen. Set [Quality] and [Border Status] in the same way as in Steps 11 and 12.

If you select [⊞ Setting] for each print setting, images are printed according to the settings made on the printer.

Paper Type with more ★ supports higher quality paper.

Quality with more ★ indicates higher print quality.

The print settings screen appears after each item has been set.

## 13 Press the MENU button.

The screen returns to the confirmation dialog.

## 14 Press the OK button.

The image is printed according to the settings.

Press the **MENU** button to cancel printing.



- The power lamp lights while the camera is communicating with the printer, and blinks while the card is being accessed and during printing. Do not disconnect the USB/AV cable while the power lamp is blinking.
- If the picture already has the date and/or time imprinted on it (p.88), do not set Date  (On) in DPOF settings. Otherwise, the date and/or time could be imprinted twice on your printed picture.



The [Paper Size], [Paper Type], [Quality] and [Border Status] settings are reset to the defaults when the camera is turned off.

Disconnecting the Cable from the Printer (p.136)

## Printing All Images

- 1 In the printing mode selection screen, use the four-way controller (▲▼) to select [All Images].**




- 2 Press the OK button.**

The setting screen appears.

- 3 Choose the number of copies and whether to insert the date or not.**

The number of copies and date setting that you choose apply to all the images.

Refer to Steps 4 and 5 in “Printing Single Images” (p.133) for details of how to make the settings.

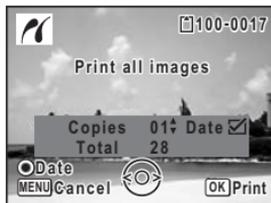

- 4 Press the OK button.**

A confirmation dialog appears.

Refer to Steps 7 to 11 of “Printing Single Images” (p.133, p.134) for details of changing print settings.

- 5 Press the OK button on the print settings confirmation screen.**

All the images are printed according to the settings.

Press the **MENU** button to cancel printing.




If the pictures already have the date and/or time imprinted on them (p.88), do not set Date  (On) in DPOF settings. Otherwise, the date could be imprinted twice on your printed pictures.

## Printing Using the DPOF Settings

**1** In the printing mode selection screen, use the four-way controller (▲▼) to select [DPOF AUTOPRINT].

**2** Press the OK button.

The DPOF settings you have made appear. Use the four-way controller (◀▶) to check the number of copies for each picture, whether to insert the date or not, and the total number of copies. Refer to p.129 for instructions on how to make the DPOF settings.

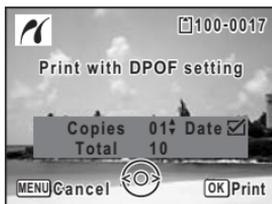

**3** Press the OK button.

A confirmation dialog appears.

Refer to Steps 7 to 11 of “Printing Single Images” (p.133, p.134) for details of changing print settings.

**4** Press the OK button on the print settings confirmation screen.

The images are printed according to the settings.

Press the **MENU** button to cancel printing.

6

## Disconnecting the Cable from the Printer


Disconnect the USB/AV cable from the camera and the printer when you finish printing.

**1** Turn off the camera.

**2** Disconnect the USB/AV cable from the camera and the printer.

## Recording Sound (Voice Recording Mode)

You can record sound with the camera. The microphone is located below and to the left of the lens on the camera. When recording sound, aim the camera to obtain the best conditions.

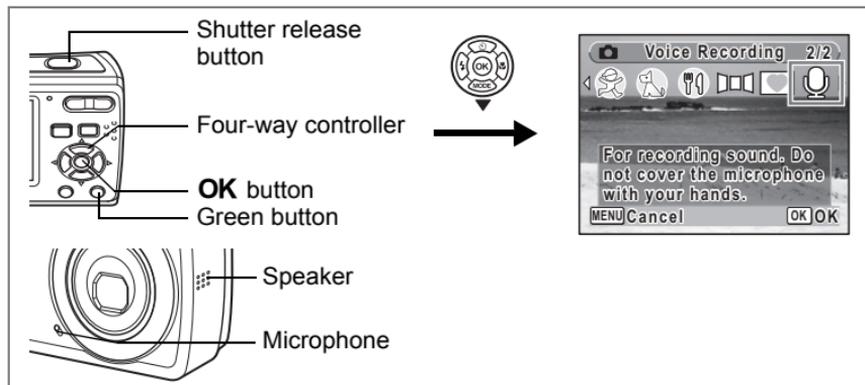

### 1 Press the four-way controller (▼) in the capture mode.

The Capture Mode Palette appears.

### 2 Use the four-way controller (▲▼◀▶) to select (Voice Recording).

### 3 Press the OK button.

The remaining recordable time and the recording time of the current file appear on the display.

1 Recording time

2 Remaining recordable time



#### 4 Press the shutter release button fully.

Recording starts. The power lamp blinks during recording.

You can record sound continuously until the built-in memory or SD Memory Card reaches full, or for max. 24 hours.

When the Green button is pressed during recording, an index can be added to the current sound file.



#### 5 Press the shutter release button fully.


Recording stops.



- If you press and hold down the shutter release button for more than one second in Step 4, recording continues until you take your finger off the button.
- Sound is saved in WAVE monaural files.

# Playing Back Sound


You can play back the sound files you made in  (Voice Recording).

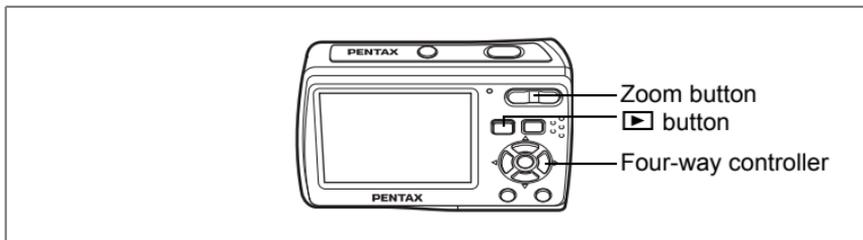

- 1 Press the  button.**
- 2 Use the four-way controller ( ) to choose a sound file to play back.**
- 3 Press the four-way controller ()**.

The sound file is played back.

- 1 Total file recording time
- 2 Playback time

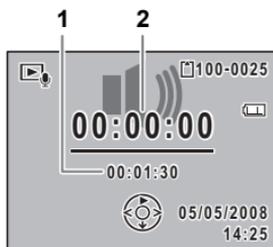

**The following operations can be performed during playback.**

- Four-way controller () Pauses playback
- Zoom button () Increases the volume
- Zoom button () Reduces the volume

If there are no recorded indexes:

- Four-way controller () Reverses playback
- Four-way controller () Fast forwards playback

If there are recorded indexes:

- Four-way controller () Plays back starting from the previous index
- Four-way controller () Plays back starting from the next index

**The following operations can be performed while playback is paused.**


- Four-way controller () Resumes playback
- Four-way controller () Rewinds approx. 5 seconds
- Four-way controller () Advances approx. 5 seconds

- 4 Press the four-way controller ()**.

Playback stops.

# Camera Settings

How to display the [Setting] menu

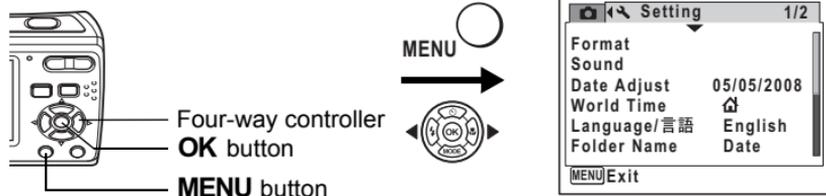

## Formatting an SD Memory Card

Formatting will delete all the data on the SD Memory Card.



- Do not remove the SD Memory Card during formatting as this may damage the card and render it unusable.
- Formatting will delete protected images and any data recorded on the card with a camera other than this camera.
- SD Memory Cards formatted on a computer or device other than the camera cannot be used. Be sure to format the card with the camera.
- The built-in memory cannot be formatted.

**1 Use the four-way controller (▲▼) to select [Format] on the [Setting] menu.**


**2 Press the four-way controller (▶).**

The [Format] screen appears.



**3 Use the four-way controller (▲▼) to select [Format].**

**4 Press the OK button.**

Formatting starts. When formatting is completed, the camera returns to the capture mode or the playback mode.

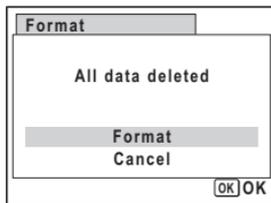


How to display the [ Setting] menu

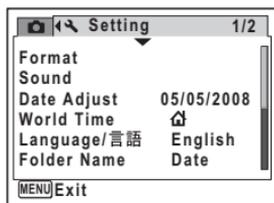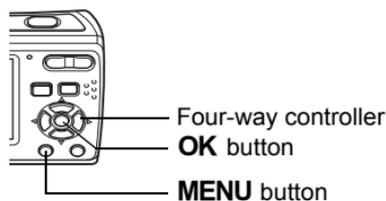

## Changing the Sound Settings

You can adjust the volume of operation sounds and change the type of sound.

- 1 Use the four-way controller ( ) to select [Sound] on the [ Setting] menu.
- 2 Press the four-way controller ().  
The [Sound] screen appears.

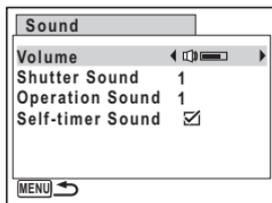

## Changing the Operation Volume

- 3 Use the four-way controller ( ) to select [Volume].
- 4 Use the four-way controller ( ) to adjust the volume.  
The selected volume is saved.  
Set the volume to 0 to mute the shutter sound, operation sound, and self-timer sound.

## Changing the Sound Type

- 5 Use the four-way controller ( ) to select [Shutter Sound].
- 6 Press the four-way controller ().  
A pull-down menu appears.

- 7 Use the four-way controller (▲ ▼) to select [1], [2], [3] or [Off] and press OK button.**

The selected sound type is saved.



- 8 Set [Operation Sound] in the same way as in Steps 5 to 7.**

Use the four-way controller (◀ ▶) to select  (On) or  (Off) for the self-timer sound.

- 9 Press the MENU button.**

The screen returns to the [ Setting] menu with the changed setting.


How to display the [Setting] menu

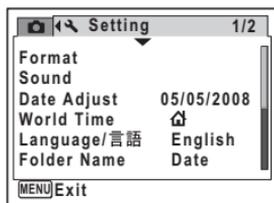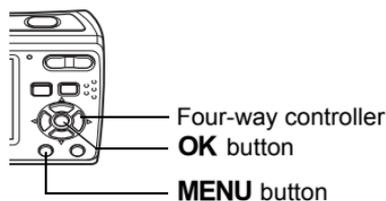


## Changing the Date and Time

You can change the initial date and time settings. You can also set the style in which the date appears on the camera.

- 1 Use the four-way controller (▲▼) to select [Date Adjust] on the [Setting] menu.**
- 2 Press the four-way controller (▶).**  
The [Date Adjust] screen appears.

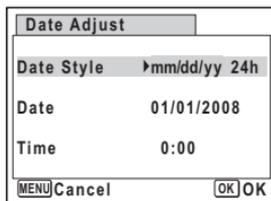


- 3 Press the four-way controller (▶).**  
The frame moves to [mm/dd/yy].  
Depending on the initial setting or previous setting, [dd/mm/yy] or [yy/mm/dd] may be displayed.

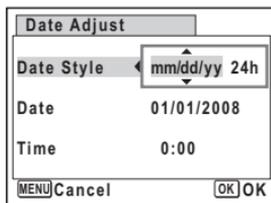

- 4 Use the four-way controller (▲▼) to choose the date display style.**  
Choose [mm/dd/yy], [dd/mm/yy] or [yy/mm/dd].
- 5 Press the four-way controller (▶).**  
The frame moves to [24h].

- 6 Use the four-way controller (▲▼) to select [24h] (24-hour display) or [12h] (12-hour display).**

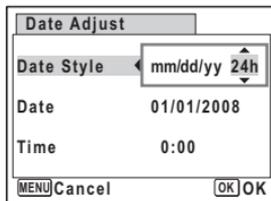


## 7 Press the four-way controller (▶).

The frame returns to [Date Style].

## 8 Press the four-way controller (▼).

The frame moves to [Date].

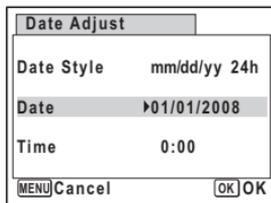

## 9 Press the four-way controller (▶).


The frame moves to one of the following items depending on the date style set in Step 4.

For [mm/dd/yy] month (e.g. [01])

For [dd/mm/yy] day (e.g. [01])

For [yy/mm/dd] year (e.g. [2008])

The following operations and screens use [mm/dd/yy] as an example. The operations are the same even if another date style has been selected.

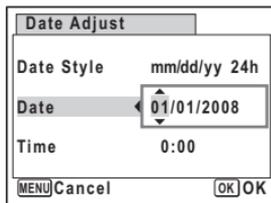

## 10 Use the four-way controller (▲▼) to change the month.

## 11 Press the four-way controller (▶).

The frame moves to the day field. Use the four-way controller (▲▼) to change the day. After changing the day, change the year in the same manner.

8

## 12 Change the time in the same way as in Steps 7 to 10.

If you selected [12h] in Step 6, the setting switches between am and pm corresponding to the time.

## 13 Press the OK button.

The date and time settings are saved.



When you finish the settings and press the **OK** button, the camera clock is reset to 00 seconds. To set the exact time, press the **OK** button when the time signal (on the TV, radio, etc.) reaches 00 seconds.

How to display the [↖ Setting] menu




Four-way controller

OK button

MENU button

MENU

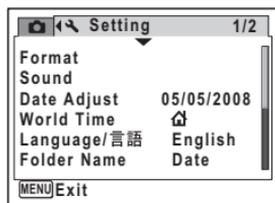


## Setting the World Time

The date and time selected in “Setting the Date and Time” (p.31) and “Changing the Date and Time” (p.143) serve as the 🏠 (Hometown) date and time. By using the world time function, you can display the time in a city other than the Hometown (→ Destination). This is useful when taking pictures in a different time zone.

### Setting the Destination

- 1 Use the four-way controller (▲▼) to select [World Time] on the [↖ Setting] menu.**
- 2 Press the four-way controller (▶).**  
The [World Time] screen appears.
- 3 Use the four-way controller (▲▼) to select → (Destination).**
- 4 Press the four-way controller (▶).**  
The [Destination] screen appears. The city that is currently selected blinks on the map.
- 5 Use the four-way controller (◀▶) to change the Destination city.**  
The current time, location and time difference of the selected city appear.
- 6 Use the four-way controller (▲▼) to select [DST].**
- 7 Use the four-way controller (◀▶) to select  (On) or  (Off).**  
Select  (On) if the Destination city uses daylight saving time.

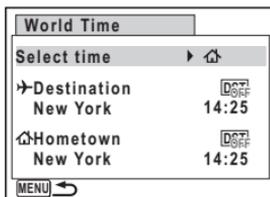

## 8 Press the OK button.

The World Time setting is saved.

## 9 Press the MENU button twice.

The camera returns to capture status with the current setting.



Select (Hometown) in Step 3 of p.143 to set the city and DST setting for the Hometown city.

### Displaying the Time of the Destination on the display (Select Time)

#### 1 Use the four-way controller (▲▼) to select [World Time] on the [ Setting] menu.

#### 2 Press the four-way controller (▶).

The [World Time] screen appears.

#### 3 Use the four-way controller (▲▼) to select [Select time].




#### 4 Press the four-way controller (▶).

A pull-down menu appears.

#### 5 Use the four-way controller (▲▼) to select (Destination) or (Hometown).

: Displays the time in the city selected as the Destination city

: Displays the time in the city selected as the Hometown city

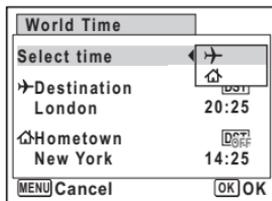

#### 6 Press the OK button.

The Select time setting is saved.



#### 7 Press the MENU button twice.

The camera returns to the capture mode or the playback mode.

(Destination) appears on the display when the camera returns to the capture mode and World Time is selected.



How to display the [Setting] menu

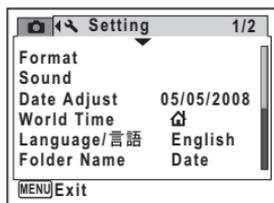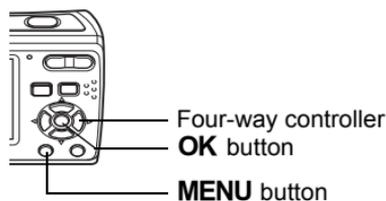

## Changing the Display Language

You can change the language in which the menus, error messages, etc. are displayed.

You can choose from English, French, German, Spanish, Portuguese, Italian, Dutch, Japanese, Danish, Swedish, Finnish, Polish, Czech, Hungarian, Turkish, Greek, Russian, Thai, Korean, and Chinese (traditional and simplified).


- 1 Use the four-way controller (▲▼) to select [Language/言語] on the [Setting] menu.**
- 2 Press the four-way controller (▶).**  
The [Language/言語] screen appears.
- 3 Use the four-way controller (▲▼◀▶) to select the language.**
- 4 Press the OK button.**



How to display the [Setting] menu



Four-way controller  
OK button  
MENU button

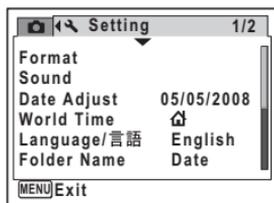


## Changing the Image Folder Name

You can change the image folder name to [Standard] or [Date]. When [Date] is selected, pictures are saved in separate folders by the date they were taken.


### Folder Name

Standard	XXXPENTX (where XXX is the 3-digit folder number)
Date	XXX_mmdd (3-digit folder number_month day) * xxx_ddmm (3-digit folder number_day month) when the date style is set to [dd/mm/yy].


Taken with the folder name setting [Standard].  
(e.g. March 25)

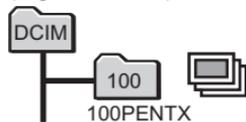

Taken with the folder name setting [Date].  
(e.g. March 25)

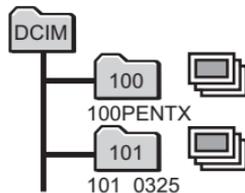

Next time, taken with the folder name setting [Date] again.  
(e.g. April 1)

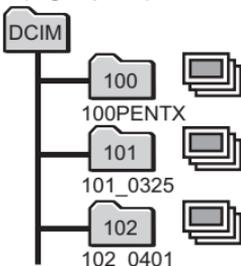

- 1 Use the four-way controller (▲▼) to select [Folder Name] on the [Setting] menu.
- 2 Press the four-way controller (▶).  
A pull-down menu appears.
- 3 Use the four-way controller (▲▼) to select [Standard] or [Date].



## 4 Press the OK button.

The Folder Name setting is saved.



- The maximum number of files is 900 folders.
- The capacity of an image folder is 9999 files maximum. When the number of files reaches 9999, a new folder will be automatically created.

How to display the [ Setting] menu

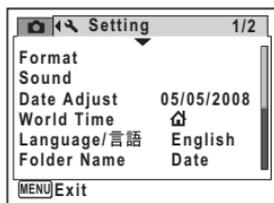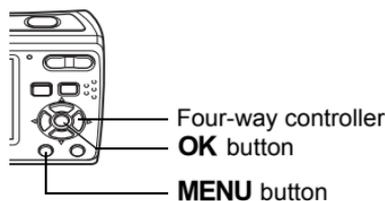

## Changing the USB Connection Mode

Choose the appropriate USB connection depending on whether you are going to connect the USB/AV cable to a computer or a PictBridge-compatible printer.




For instructions on connecting the camera to a computer, refer to the PC Connection Manual contained in the CD-ROM that contains this Operating Manual.

- 1 Use the four-way controller ( ) to select [USB Connection] on the [ Setting] menu.**
- 2 Press the four-way controller () .**  
A pull-down menu appears.
- 3 Use the four-way controller ( ) to select [PC] or [PictBridge].**

[PC] : Select this option when transferring image data to a computer

[PictBridge] : Select this option when connecting the camera to a PictBridge-compatible printer

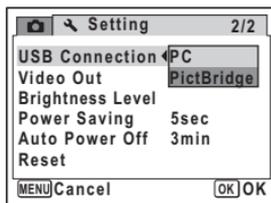



- 4 Press the OK button.**

The USB Connection setting is saved.



Do not connect the camera to your computer while [PictBridge] is selected for the [USB Connection]. Also, do not connect the camera to your printer while [PC] is selected.


How to display the [↶ Setting] menu

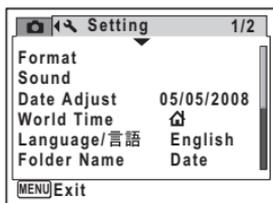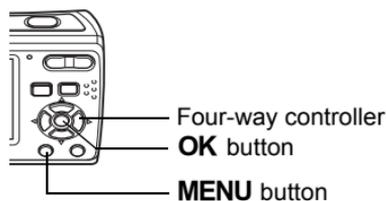

## Changing the Video Output Format

When you connect the camera to AV equipment, choose the appropriate video output format (NTSC or PAL) for taking and playing back images.

- 1 Use the four-way controller (▲▼) to select [Video Out] on the [↶ Setting] menu.**
- 2 Press the four-way controller (▶).**  
A pull-down menu appears.
- 3 Use the four-way controller (▲▼) to select [NTSC] or [PAL].**  
Choose the video output format to match the output format of the AV equipment.
- 4 Press the OK button.**  
The Video Out setting is saved.

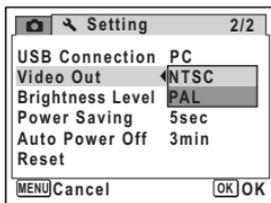

Depending on the country or region, images and sound files may fail to be played back if the video output format is set different from the one in use there. If this happens, change the video output format setting.

Playing Back Images on a TV p.107


How to display the [Setting] menu



Four-way controller

MENU button

MENU

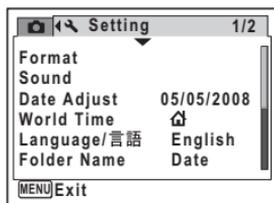

## Adjusting the Brightness of the Display

You can adjust the brightness of the display for easy viewing. It is useful when you view the display outdoors or in brighter places.

- 1 Use the four-way controller (▲▼) to select [Brightness Level] on the [Setting] menu.**
- 2 Use the four-way controller (◀▶) to adjust the brightness.**

The following setting is saved.

■ (Dark)


■ (Normal)

■ (Bright)



- 3 Press the MENU button.**

The camera returns to the capture mode or the playback mode.

You can view the display with the set brightness.

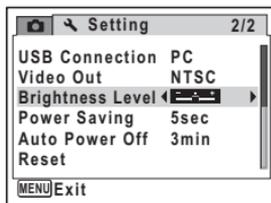


How to display the [ Setting] menu

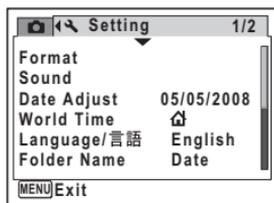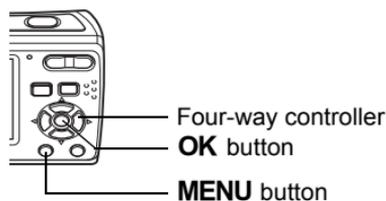

## Using the Power Saving Function

You can save battery power by setting the display to turn off automatically when no operation is performed for a fixed time. After the power saving function has been activated, the display returns to the ordinary brightness by pressing any of the buttons.

- 1 Use the four-way controller ( ) to select [Power Saving] on the [ Setting] menu.**
- 2 Press the four-way controller ().**  
A pull-down menu appears.
- 3 Use the four-way controller ( ) to select [2min], [1min], [30sec], [15sec], [5sec] or [Off].**
- 4 Press the OK button.**

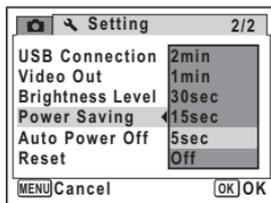

The Power Saving setting is saved.





Power Saving does not function in the following situations.

- While the menu is being displayed
- While recording a movie
- While playing back
- While the camera is connected to a printer
- While the message is being displayed
- When no operation is performed after the camera is turned on, Power Saving is activated after 15 seconds even if [5sec] is selected.

How to display the [Setting] menu




Four-way controller  
OK button  
MENU button

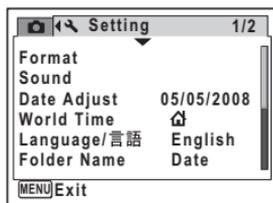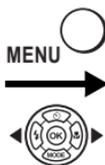

## Setting Auto Power Off

You can set the camera to turn off automatically when no operation is performed for a fixed time.

- 1 Use the four-way controller (▲▼) to select [Auto Power Off] on the [Setting] menu.**
- 2 Press the four-way controller (▶).**  
A pull-down menu appears.
- 3 Use the four-way controller (▲▼) to select [5min], [3min] or [Off].**
- 4 Press the OK button.**  
The Auto Power Off setting is saved.


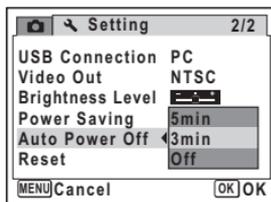


8

Caution

Auto Power Off does not function while the camera is connected to a computer or a printer.


How to display the [Setting] menu

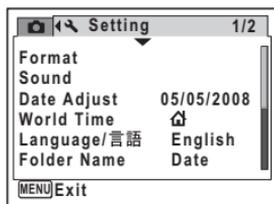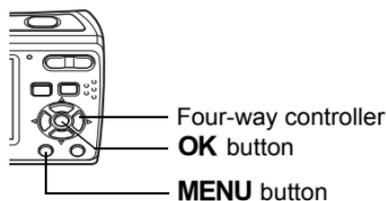

## Resetting to Default Settings (Reset)

You can reset the camera settings to their defaults. Refer to “Default Settings” (p.157) for the reset settings.

- 1 Use the four-way controller (▲▼) to select [Reset] on the [Setting] menu.**
- 2 Press the four-way controller (▶).**  
The [Reset] screen appears.
- 3 Use the four-way controller (▲▼) to select [Reset].**
- 4 Press the OK button.**  
The settings return to the defaults.

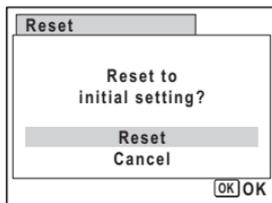

The settings on [Date Adjust], [World Time], [Language/言語] and [Video Out] cannot be reset.

## List of World Time Cities

The column "City" indicates cities that can be set as either the Initial Setting (p.29) or the World Time (p.145).

The column "Video Output Format" indicates the video output format of the city set as the Initial Setting.

Region	City	Video Output Format	Region	City	Video Output Format
North America	Honolulu	NTSC	Africa/ West Asia	Istanbul	PAL
	Anchorage	NTSC		Cairo	PAL
	Vancouver	NTSC		Jerusalem	PAL
	San Francisco	NTSC		Nairobi	PAL
	Los Angeles	NTSC		Jeddah	PAL
	Calgary	NTSC		Tehran	PAL
	Denver	NTSC		Dubai	PAL
	Chicago	NTSC		Karachi	PAL
	Miami	NTSC		Kabul	PAL
	Toronto	NTSC		Male	PAL
	New York	NTSC		Delhi	PAL
Halifax	NTSC	Colombo	PAL		
Central and South America	Mexico City	NTSC	Kathmandu	PAL	
	Lima	NTSC	Dacca	PAL	
	Santiago	NTSC	East Asia	Yangon	NTSC
	Caracas	NTSC		Bangkok	PAL
	Buenos Aires	PAL		Kuala Lumpur	PAL
	Sao Paulo	PAL		Vientiane	PAL
Rio de Janeiro	NTSC	Singapore		PAL	
Europe	Lisbon	PAL		Phnom Penh	PAL
	Madrid	PAL		Ho Chi Minh	PAL
	London	PAL		Jakarta	PAL
	Paris	PAL		Hong Kong	PAL
	Amsterdam	PAL		Beijing	PAL
	Milan	PAL		Shanghai	PAL
	Rome	PAL	Manila	NTSC	
	Copenhagen	PAL	Taipei	NTSC	
	Berlin	PAL	Seoul	NTSC	
	Prague	PAL	Tokyo	NTSC	
	Stockholm	PAL	Guam	NTSC	
	Budapest	PAL	Oceania	Perth	PAL
	Warsaw	PAL		Adelaide	PAL
	Athens	PAL		Sydney	PAL
Helsinki	PAL	Noumea		PAL	
Moscow	PAL	Wellington		PAL	
Africa/ West Asia	Dakar	PAL		Auckland	PAL
	Algiers	PAL		Pago Pago	NTSC
	Johannesburg	PAL			

# Default Settings

The table below lists the factory default settings.

The meaning of the indications for menu items with a default setting is explained below.

## Last Memory Setting

- Yes : The current setting (last memory) is saved when the camera is turned off.
- No : The setting returns to the default setting when the camera is turned off.
- \* : The setting depends on the [Memory] setting (p.90).
- : NA

## Reset Setting

- Yes : The setting returns to the default setting with the Reset function (p.155).
- No : The setting is saved even after reset.

## ● [📷 Rec. Mode] Menu Items

Item	Default Setting	Last Memory Setting	Reset Setting	Page	
Recorded Pixels	<b>10M</b> (3648×2736)	Yes	Yes	p.69	
Quality Level	★★ (Better)	Yes	Yes	p.71	
Focusing Area	[ ] (Multiple)	Yes	Yes	p.78	
Sensitivity	Auto	*	Yes	p.81	
EV Compensation	±0.0	*	Yes	p.83	
Movie	Recorded Pixels	<b>640</b> (640×480)	Yes	Yes	p.94
	Frame Rate	30fps	Yes	Yes	p.95
	Movie SR	<input checked="" type="checkbox"/> (On)	Yes	Yes	p.96
Digital Zoom	<input checked="" type="checkbox"/> (On)	*	Yes	p.75	

Item		Default Setting	Last Memory Setting	Reset Setting	Page
Memory	Face Priority	<input type="checkbox"/> (Off)	Yes	Yes	p.51
	Flash Mode	<input checked="" type="checkbox"/> (On)	Yes	Yes	p.79
	Drive Mode	<input type="checkbox"/> (Off)	Yes	Yes	p.85, p.86
	Focus Mode	<input type="checkbox"/> (Off)	Yes	Yes	p.76
	Zoom Position	<input type="checkbox"/> (Off)	Yes	Yes	p.73
	Sensitivity	<input type="checkbox"/> (Off)	Yes	Yes	p.81
	EV Compensation	<input type="checkbox"/> (Off)	Yes	Yes	p.83
	Digital Zoom	<input checked="" type="checkbox"/> (On)	Yes	Yes	p.73
	DISPLAY	<input type="checkbox"/> (Off)	Yes	Yes	p.84, p.97
File No.	<input checked="" type="checkbox"/> (On)	Yes	Yes	—	
Green Button		<input type="checkbox"/> (Green)	Yes	Yes	p.40
Date Imprint		Off	Yes	Yes	p.88

## ● [ Setting ] Menu Items

Item		Default Setting	Last Memory Setting	Reset Setting	Page
Format		Cancel	—	—	p.140
Sound	Volume	3	Yes	Yes	p.141
	Shutter Sound	1	Yes	Yes	
	Operation Sound	1	Yes	Yes	
	Self-timer Sound	<input checked="" type="checkbox"/> (On)	Yes	Yes	
Date Adjust	Date Style (date)	According to initial setting	Yes	No	p.31
	Date Style (time)	According to initial setting	Yes	No	
	Date	According to initial setting	Yes	No	
	Time	According to initial setting	Yes	No	
World Time	Select time	 (Hometown)	Yes	Yes	p.145
	Destination (City)	According to initial setting	Yes	No	
	Destination (DST)	<input type="checkbox"/> (Off)	Yes	No	
	Hometown (City)	According to initial setting	Yes	No	
	Hometown (DST)	<input type="checkbox"/> (Off)	Yes	No	
Language/言語		According to initial setting	Yes	No	p.29
Folder Name		Date	Yes	Yes	p.148
USB Connection		PC	Yes	Yes	p.150

Item	Default Setting	Last Memory Setting	Reset Setting	Page
Video Out	According to initial setting	Yes	No	p.151
Brightness Level	 (Standard)	Yes	Yes	p.152
Power Saving	5 sec	Yes	Yes	p.153
Auto Power Off	3 min	Yes	Yes	p.154
Reset	Cancel	—	—	p.155

## ● Playback Mode Palette Items

Item	Default Setting	Last Memory Setting	Reset Setting	Page
Digital SR	—	—	—	p.62
Slideshow	Interval	3 sec	Yes	p.103
	Screen Effect	Wipe	Yes	
	Sound Effect	<input checked="" type="checkbox"/> (On)	Yes	
Image/Sound Copy	Built-in memory → SD Memory Card	—	—	p.119
Image Rotation	Normal	—	—	p.37
Digital Filter	B&W	No	—	p.121
Frame Composite	Default1	Yes	Yes	p.124
Red-eye Compensation	—	—	—	p.128
Protect	Single Image/ Sound	Depending on the recorded image/ sound	—	p.114
	All Images/ Sounds	Depending on the recorded image/ sound	—	
DPOF	Single Image	Copies: 0	—	p.129
	All Images	Date: <input type="checkbox"/> (Off)	—	p.131
Image Recovery	Cancel	—	—	p.113

## ● Key Operation

Item	Function	Default Setting	Last Memory Setting	Reset Setting	Page
button	Operation Mode	Playback mode	—	—	—
Zoom/// button	Zoom Position	Wide	*	No	p.73
Four-way controller	Drive Mode	(Normal)	*	Yes	p.85, p.86
	Shooting Mode	(Auto Picture)	Yes	Yes	p.49
	Flash Mode	(Auto)	*	Yes	p.79
	Focus Mode	<b>AF</b> (Standard)	*	Yes	p.76
<b>MENU</b> button	Menu Display	Capture mode: [ Rec. Mode] menu Playback mode: [ Setting] menu	—	—	p.44
<b>OK/DISPLAY</b> button	Information Display	Normal	*	Yes	p.84, p.97
button	Operation Mode	Face Priority On	*	Yes	p.51

# Functions Available for Each Shooting Mode

Yes: Can be set and function is available.

- : Fixed setting. Cannot be changed.

# : Can be set but function is not available.

No : Cannot be set.

		AUTO PICT	P								
(Auto)	Yes	Yes <sup>*8</sup>	Yes <sup>*8</sup>	No	No	No	Yes	Yes	Yes	Yes <sup>*8</sup>	Yes
(Flash Off)	Yes	Yes	Yes	Yes	-	No	Yes	Yes	Yes	Yes	Yes
(Flash On)	No	Yes <sup>*8</sup>	Yes <sup>*8</sup>	Yes	No	No	Yes	Yes	Yes	Yes <sup>*8</sup>	Yes
(Auto + Red-eye)	No	Yes	Yes	No	No	No	Yes	Yes	Yes	Yes	Yes
(Flash On + Red-eye)	No	Yes	Yes	Yes	No	No	Yes	Yes	Yes	Yes	Yes
(Self-timer)	Yes <sup>*1</sup>	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
(2 sec. Self-timer)	Yes <sup>*1</sup>	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
(Continuous Shooting)	No	No	Yes	No	No	No	Yes	No	Yes <sup>*6</sup>	Yes	Yes
(16-frame shooting)	No	No	Yes	No	No	No	No	No	Yes <sup>*6</sup>	Yes <sup>*9</sup>	Yes
<b>AF</b> (Standard)	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
(Macro)	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
(Infinity)	No	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
<b>PF</b> (Pan Focus)	Yes	Yes	Yes	Yes	Yes	No	Yes	Yes	Yes	Yes	Yes
Recorded Pixels	-	Yes	Yes	Yes	Yes <sup>*2</sup>	#	-	-	Yes <sup>*7</sup>	Yes <sup>*10</sup>	Yes
Quality Level	-	Yes	Yes	Yes	Yes <sup>*2</sup>	#	Yes	-	Yes	Yes	Yes
Focusing Area	-	-	Yes	Yes	Yes <sup>*3</sup>	#	Yes	Yes	Yes	Yes	Yes
Sensitivity	-	Yes	Yes	Yes	-	#	- <sup>*5</sup>	Yes	Yes	Yes	Yes
EV Compensation	No	No	Yes	Yes	Yes <sup>*4</sup>	#	Yes	Yes	Yes	Yes	Yes
Movie	No	#	#	#	Yes	#	#	#	#	#	#
Memory	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Date Imprint	No	Yes	Yes	Yes	#	#	Yes	Yes	Yes	Yes	Yes

\*1 The self-timer mode you have selected in a shooting mode other than (Green) can be used.

\*2 Uses the settings in [Movie].

\*3 "Automatic Tracking AF" is not available.

\*4 Not available during recording

\*5 Fixed at an automatic high sensitivity setting

\*6 In (Digital Panorama), "Continuous Shooting" and "16-frame shooting" are not available.

\*7 In , fixed at . Cannot be changed on [ Rec. Mode] menu.

\*8 Face Recognition AF&AE is activated when the subject's face is recognized. If the flash is discharged, the flash mode will perform Flash On + Red-eye.

\*9 In (Half-length Portrait), "16-frame shooting" is not available.

\*10 In , fixed at . Cannot be changed on [ Rec. Mode] menu.

# Optional Accessories

A number of dedicated accessories are available for this camera.

## **AC adapter kit K-AC62**

This kit includes the DC coupler D-DC51, the AC adapter D-AC62 and the AC plug cord.

## **USB/AV cable I-UAV77 (\*)**

### **Strap**

**O-ST62 (\*)**

**O-ST24** Genuine leather strap

**O-ST8** Silver chain strap

**O-ST30, O-ST81** Plastic coated strap

### **Camera case**

**O-CC72**

**O-CC81**

Products marked with an asterisk (\*) are the same as those supplied with the camera.

# Messages

Messages such as the following may appear on the display during camera operation.

Battery depleted	The batteries are exhausted. Replace with new batteries. If using rechargeable batteries, charge the batteries. (p.19)
Built-in memory full	The built-in memory/SD Memory Card is full and no more images can be saved.
Memory card full	Insert a new SD Memory Card or delete unwanted images. (p.23, p.108) Change the quality level or recorded pixels of recorded images and try again. (p.116)
Memory card error	Shooting and playback are impossible due to a problem with the SD Memory Card. You may be able to display or copy the images on the card using a computer.
Card not formatted	The SD Memory Card you have inserted is unformatted or has been formatted on a computer or other device and is not compatible with this camera. Format the SD Memory Card in the camera. (p.140)
Card locked	The SD Memory Card is write-protected. (p.25)
Compression error	This message appears when compression of images has failed. Change the quality level/size and record or save again.
No image/sound	There are no image/sound files on the SD Memory Card.
Deleting	This message appears when the camera is deleting an image or sound file.
Camera cannot play this image and sound	You are trying to play back an image or sound in a format not supported by this camera. You may be able to play it back on another brand of camera or your computer.
Image folder could not be created	The largest file number (9999) has been assigned to an image in the largest folder number (999) or the number of image, movie, and sound files recorded on the SD Memory Card has reached 10000 and no more files can be saved. Insert a new SD Memory Card or format the card. (p.140)
Protected	The image or sound file you are trying to delete is protected.
Data being recorded	This message appears when you try to switch to the playback mode while an image is still being recorded, or when the protect setting or DPOF setting is being changed. It disappears after the image is recorded or the setting is changed.

Data being processed	This message appears when the camera takes more than five seconds to display an image due to image processing, or when the SD Memory Card or built-in memory is being formatted.
No image to be processed	This message appears when no image/sound file is present.
This image/sound cannot be processed	This message appears when you attempt to edit a file that cannot be processed.
No card in the camera	This message appears when you select [Image/Sound Copy] with no SD Memory Card inserted.
The card memory is not enough to copy images/sounds	This message appears when there is not enough memory on the SD Memory Card or in built-in memory to copy image/sound to. Insert a new SD Memory Card or delete unwanted images. (p.23, p.108)
The built-in memory is not enough to copy images/sounds	
Cannot process correctly	This message appears when Red-eye Compensation cannot be performed correctly.

Messages such as the following may appear on the display when using the PictBridge function.

Low paper level in the printer	The paper level of the printer is low.
No paper in the printer	There is no paper in the printer.
Low ink level in the printer	The ink level of the printer is low.
No ink in the printer	There is no ink in the printer.
Printer error	An error message has been sent from the printer.
Data error	A data error message has been sent from the printer.
Paper stuck in the printer	The paper is stuck in the printer.

# Troubleshooting

Problem	Cause	Remedy
The camera will not turn on	The batteries are not installed	Check if the batteries are installed. If not, install batteries.
	The batteries are installed incorrectly	Check orientation of the batteries. Reinsert the batteries according to the ⊕ ⊖ symbols in the battery compartment. (p.19)
	The batteries are exhausted	Insert new batteries or use the AC adapter.
No image appears on the display	The camera is connected to a computer	The display is off when the camera is connected to a computer.
	The camera is connected to the AV equipment	The display is off when the camera is connected to an AV equipment.
The display is hard to see	The brightness level of the display is set too dark	Adjust the brightness level in [Brightness Level] in the [⚙ Setting] menu. (p.152)
	Power Saving function is on	When the Power Saving function is on, the display automatically darkens after a certain amount of time. Press a button to return to the normal brightness level. Select [Off] in [Power Saving] in the [⚙ Setting] menu to turn the Power Saving function off. (p.153)
The shutter will not release	The flash is charging	Pictures cannot be taken while the flash is charging. Wait until charging is finished.
	There is no available space on the SD Memory Card or in the built-in memory	Insert an SD Memory Card with available space or delete unwanted images. (p.23, p.108)
	Recording	Wait until recording is finished.
The picture is dark when using the flash	The subject is too far away in a dark environment, such as a night scene	The picture becomes dark if the subject is too far away. Take picture within the specified flash range.

Problem	Cause	Remedy
The subject is not in focus	The subject is difficult to focus on with auto focus	The camera may have difficulty in focusing on such subjects as: low-contrast subjects (a white wall, a blue sky, etc.), dark subjects, finely-patterned objects, rapidly-moving objects. It is also difficult to get proper focus when shooting through a window or a net. Try shooting using the focus lock (p.77).
	The subject is not in the focusing area	Locate the desired subject in the focus frame (focusing area) in the center of the display. If it is difficult to do so, first lock the focus on the desired subject (focus lock), and then move the camera to recompose. (p.77)
	The subject is too close	Set the focus mode to  . (p.76)
	The focus mode is set to 	Normal pictures will be out of focus if taken with the focus mode set to  .
The flash does not discharge	The flash mode is set to  (Flash Off)	Set to Auto or  (Flash On). (p.79)
	The drive mode is set to  or 	The flash does not discharge in these modes.
	The focus mode is set to  The shooting mode is set to 	
The USB connection with a personal computer does not function properly	The USB connection setting of the camera is set to [PictBridge]	Set the USB connection setting to [PC]. (p.150)
The USB connection with a printer does not function properly	The USB connection setting of the camera is set to [PC]	Set the USB connection setting to [PictBridge]. (p.132)

Very occasionally, static electricity may cause camera malfunction. In this case, remove the battery and install it again. If the camera is then working properly, normal condition is restored and you can continue using the camera.

# Main Specifications

Type	Fully automatic compact digital still camera with built-in zoom lens	
Number of Effective Pixels	Approx. 10.1 megapixels	
Image Sensor	Type	CCD
	Size	1/2.33 inch
Number of Recorded Pixels	Still	10M (3648×2736 pixels), 7M (3072×2304 pixels) 5M (2592×1944 pixels), 3M (2048×1536 pixels) 2.1M(16:9) (1920×1080 pixels), 1024 (1024×768 pixels) 640 (640×480 pixels) * Fixed at 3M (2048×1536) for Frame Composite and Half-length Portrait. * Fixed at 2M (1600×1200) per one image for Panorama mode. * Fixed at 640 (640×480) per one image, and 2560×1920 per one picture for 16-frame shooting.
	Movie	640 (640×480 pixels), 320 (320×240 pixels)
Sensitivity (standard output sensitivity)	Auto, Fixed (ISO 100-6400*)	
	* When Digital SR (blur reduction) mode is selected	
File Format	Still Picture	JPEG (conforms to Exif 2.2), conforms to DCF2.0, DPOF, PictBridge, PRINT Image Matching III
	Movie	AVI (Motion JPEG), approx. 30fps/15fps, with sound
	Sound	WAVE (PCM) system, monaural
Storage Medium	Built-in memory (approx. 6.3MB), SD Memory Card, SDHC Memory Card	

## Approximate Image Storage Capacity and Recording Time

### Still Picture

	★★★ (Best)		★★ (Better)		★ (Good)	
	Built-in Memory	512MB	Built-in Memory	512MB	Built-in Memory	512MB
<b>10M</b> 3648×2736	1	120	2	241	4	344
<b>7M</b> 3072×2304	1	160	3	301	4	402
<b>5M</b> 2592×1944	2	192	4	371	6	536
<b>3M</b> 2048×1536	3	301	7	603	11	878
<b>16:9</b> 1920×1080	5	439	7	603	11	878
<b>1024</b> 1024×768	14	1074	24	1859	32	2417
<b>640</b> 640×480	29	2197	46	3453	54	4028

Unit: picture(s)

The image storage capacity is for reference only. The actual image storage capacity may vary depending on the SD Memory Card and the subject.

#### Movie/Sound

	Movie (30fps)		Movie (15fps)		Sound	
	Built-in Memory	512MB	Built-in Memory	512MB	Built-in Memory	512MB
 640×480	7 sec.	9 min. 56 sec.	14 sec.	17 min. 54 sec.	10 min. 6 sec.	12 hr. 28 min. 27 sec.
 320×240	15 sec.	19 min. 53 sec.	28 sec.	35 min. 48 sec.		

The recording time is for reference only. The actual recording time may vary depending on the SD Memory Card and the subject.

Lens	Focal Length	5.7mm - 17.1mm (equivalent to approx. 32mm - approx. 96mm in 35mm format of focal length)
	Aperture	f/2.9 (W) - f/5.2 (T)
	Lens Composition	7 elements in 6 groups (3 aspherical elements)
	Zoom Type	Electrically driven
	Lens Cover	Electrically driven
Digital Zoom Magnification	Approx. ×5.7	
Display	Type	LCD
	Image size	2.4 inch
	Dots	approx. 112,000 dots
	Brightness level	brightness adjustable in two steps (Economy, Normal)
Playback Functions	Single-frame, 9-frame index, enlargement (max. ×10, scroll), folder display, calendar display, rotating, sound playback, slideshow, movie playback, Select & Delete, image/sound copying, digital filter (B&W, Sepia, Red, Pink, Purple, Blue, Green, Yellow), brightness filter, cropping, resizing, frame composite, red-eye compensation, protect, DPOF, Image Recovery, Face close-up playback	

Focus Modes	Autofocus, Macro, Infinity, Pan Focus	
	AF type	TTL contrast detection system by sensor (user selectable: multiple/spot/Automatic Tracking AF)
	Focus Range (From lens face)	Normal : 0.5 m - ∞ (whole zoom area) Macro : 0.1 m - 0.6 m (Wide) * User selectable: Infinity, Pan focus * Face Recognition AF is available only while the camera recognizes the subject's face.
	Focus Lock	By half-pressing shutter release button
Exposure Mechanism	AE metering	Multi-segment metering
	EV Compensation	±2 EV (can be set in 1/3 EV steps)
Scene Modes	Green, Auto Picture, Program, Night Scene, Night Scene Portrait, Half-length Portrait, Movie, Landscape, Flower, Portrait, Surf & Snow, Sport, Digital SR, Kids, Pet, Food, Digital Panorama, Frame Composite, Voice Recording * Face Recognition AE is available only while the camera recognizes the subject's face.	
Movie	Continuous Recording Time	Approx. 1 second - until built-in memory or SD Memory Card is full (There is a limitation of max. 2GB regardless of SD Memory Card capacity.)
Digital Effect	B&W, Sepia, Red, Pink, Purple, Blue, Green, Yellow	
Shutter	Type	Electronic/mechanical shutter
	Shutter Speed	1/2000 sec. - 1/4 sec., 4 sec. at most (Night Scene mode setting)
Built-in Flash	Type	Auto flash with red-eye reduction function
	Flash Modes	Auto (at low illumination), Flash Off, Flash On, Auto + Red-eye, Flash On + Red-eye (Slow synchronization is possible only in Night Scene mode)
	Flash Range	Wide: approx. 0.1 m - 6.0 m (ISO Auto) Tele : approx. 0.35 m - 3.2 m (ISO Auto)
Drive Modes	Single-frame, Self-timer (approx. 10 sec., approx. 2 sec.), Continuous Shooting, 16-frame shooting	
Self-timer	Electronic control type, control time: Approx. 10 sec., 2 sec.	
Time Function	World Time	75 cities (28 time zones)
Power Source	Two AA (alkaline, lithium, nickel manganese or Ni-MH) batteries, AC adapter kit (optional)	

Battery Life (When using AA alkaline batteries)	Number of Recordable Images	200 pictures	* Recording capacity shows approximate number of shots recorded during CIPA- compliant testing (with the display on, flash used for 50% of the shots, and 23 °C). Actual performance may vary according to operating conditions.
	Playback Time	280 min.	
	Movie Recording Time	70 min.	* The playback time/recording time are measured based on in-house testing. Actual time may differ depending on the condition of use.
	Sound Recording Time	420 min.	
Interfaces	USB2.0 (Hi-Speed)/ USB/AV terminal		
Video Output	NTSC/PAL (monaural)		
PictBridge	Printer	PictBridge-compatible printer	
	Print Modes	Print One, Print All, DPOF AUTOPRINT	
	Paper Size	Card, L, 2L, Postcard, 100 mm×150 mm, 4"×6", 8"×10", Letter, 11"×17", A4, A3, printer setting	
	Paper Type	★★★, ★★, ★, printer setting	
	Quality	★★★, ★★, ★, printer setting	
	Border Status	With/without, printer setting	
Dimensions	Approx. 98 (W) × 59 (H) × 25 (D) mm (excluding operating or protruding parts)		
Weight	Approx. 130 g (excluding the batteries and SD Memory Card)		
Weight When Shooting	Approx. 175 g (including the batteries and SD Memory Card)		
Accessories	Two AA alkaline batteries, USB/AV cable, Software (CD-ROM), Strap, Operating Manual/PC Connection Manual (CD-ROM), Quick Guide		

# WARRANTY POLICY

All PENTAX cameras purchased through authorized bona fide photographic distribution channels are guaranteed against defects of material or workmanship for a period of twelve months from date of purchase. Service will be rendered, and defective parts will be replaced without cost to you within that period, provided the equipment does not show evidence of impact, sand or liquid damage, mishandling, tampering, battery or chemical corrosion, operation contrary to operating instructions, or modification by an unauthorized repair shop. The manufacturer or its authorized representatives shall not be liable for any repair or alterations except those made with its written consent and shall not be liable for damages from delay or loss of use or from other indirect or consequential damages of any kind, whether caused by defective material or workmanship or otherwise; and it is expressly agreed that the liability of the manufacturer or its representatives under all guarantees or warranties, whether expressed or implied, is strictly limited to the replacement of parts as hereinbefore provided. No refunds will be made on repairs by non-authorized PENTAX service facilities.

## Procedure During 12-month Warranty Period

Any PENTAX which proves defective during the 12-month warranty period should be returned to the dealer from whom you purchased the equipment or to the manufacturer. If there is no representative of the manufacturer in your country, send the equipment to the manufacturer, with postage prepaid. In this case, it will take a considerable length of time before the equipment can be returned to you owing to the complicated customs procedures required. If the equipment is covered by warranty, repairs will be made and parts replaced free of charge, and the equipment will be returned to you upon completion of servicing. If the equipment is not covered by warranty, regular charges of the manufacturer or of its representatives will apply. Shipping charges are to be borne by the owner. If your PENTAX was purchased outside of the country where you wish to have it serviced during the warranty period, regular handling and servicing fees may be charged by the manufacturer's representatives in that country. Notwithstanding this, your PENTAX returned to the manufacturer will be serviced free of charge according to this procedure and warranty policy. In any case, however, shipping charges and customs clearance fees to be borne by the sender. To prove the date of your purchase when required, please keep the receipt or bills covering the purchase of your equipment for at least a year. Before sending your equipment for servicing, please make sure that you are sending it to the manufacturer's authorized representatives or their approved repair shops, unless you are sending it directly to the manufacturer. Always obtain a quotation for the service charge, and only after you accept the quoted service charge, instruct the service station to proceed with the servicing.

- This warranty policy does not affect the customer's statutory rights.
- The local warranty policies available from PENTAX distributors in some countries can supersede this warranty policy. Therefore, we recommend that you review the warranty card supplied with your product at the time of purchase, or contact the PENTAX distributor in your country for more information and to receive a copy of the warranty policy.



The CE Mark is a Directive conformity mark of the European Union.

## **For customers in USA**

### **STATEMENT OF FCC COMPLIANCE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

## **For customers in Canada**

This Class B digital apparatus complies with Canadian ICES-003.

## **Pour les utilisateurs au Canada**

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

# Declaration of Conformity

According to 47CFR, Parts 2 and 15 for  
Class B Personal Computers and Peripherals

We: PENTAX Imaging Company  
A Division of PENTAX of America, Inc.

Located at: 600 12<sup>th</sup> Street, Suite 300  
Golden, Colorado 80401 U.S.A.  
Phone: 303-799-8000 FAX: 303-790-1131

Declare under sole responsibility that the product identified herein complies with 47CFR Parts 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on the statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. The above named party is responsible for ensuring that the equipment complies with the standards of 47CFR §15.101 to §15.109.

Product Name: PENTAX Digital Still Camera

Model Number: Optio E60

Contact person: Customer Service Manager

Date and Place: August, 2008, Colorado

## Information on disposal for users



### 1. In the European Union

If your product is marked with this symbol, it means that used electrical/electronic products should not be mixed with general household waste. There exists a separate collection system for these products.

Used electric/electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of these products. Following the implementation by member states, private households within the EU states may return their used electrical/electronic equipment to designated collection facilities free of charge\*. In some countries your local retailer may also take back your old product free of charge if you purchase a similar new one.

\*Please contact your local authority for further details.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

### 2. In other countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical/electronic equipment can be returned free of charge to the dealer, even when you don't purchase a new product. Further collection facilities are listed on the home page of [www.swico.ch](http://www.swico.ch) or [www.sens.ch](http://www.sens.ch).

## Symbols

 Rec. Mode] menu .....	47
 button .....	39, 41
[  Setting] menu .....	48
 button .....	39, 42
 Green Mode .....	54
 Green Button .....	40, 42
 Delete .....	38, 108
 Tele .....	73
 Wide .....	73
 Magnify .....	100
 Nine-image display .....	98
 Self-timer .....	85
 16-frame shooting .....	86
 Auto Picture .....	56
 Program .....	57
 Night Scene .....	61
 Night Scene Portrait .....	61
 Half-length Portrait .....	58
 Movie .....	92
 Landscape .....	50
 Flower .....	50
 Portrait .....	58
 Surf & Snow .....	50
 Sport .....	50
 Digital SR .....	62
 Kids .....	58
 Pet .....	60
 Food .....	50
 Digital Panorama .....	64
 Frame Composite .....	67, 124
 Voice Recording .....	137

## Numerics

16-frame shooting  .....	86
---	----

## A

AC adapter .....	21
Auto  .....	79
Auto Power Off .....	154
AV equipment .....	107

## B

Basic mode .....	54
Batteries .....	19
Battery level indicator  .....	20
Brightness Filter .....	122
Brightness level .....	152

## C

Calendar display .....	99
Camera shake .....	62, 74, 84
Capture mode .....	33
Capture Mode Palette .....	49
Changing volume .....	139, 141
Checking the memory card .....	27
Computer .....	150
Connecting to a printer .....	132
Continuous Shooting  .....	86
Copy .....	119
Cropping .....	118

## D

Date and time .....	31, 143
Date Imprint .....	88
Daylight saving time .....	31
Default setting .....	29
Delete  .....	108
Digital Filter .....	121
Digital Panorama  .....	64
Digital SR  .....	62
Digital Zoom .....	75

DPOF printing .....	136	Memory .....	90
DPOF settings .....	129	Movie SR (Movie Shake Reduction) .....	96
<b>F</b>		<b>N</b>	
Face close-up playback ....	101	Nine-image display  .....	98
Face Recognition AF&AE ...	51	NTSC .....	151
File No. ....	90	<b>O</b>	
Flash .....	79	<b>OK/DISPLAY</b> button ....	40, 42
Flash Off  .....	79	Optional accessory .....	162
Flash On  .....	79	<b>P</b>	
Focus lock .....	77	PAL .....	151
Focus Mode .....	76	Pan Focus <b>PF</b> .....	76
Focusing Area .....	78	Photo processing lab .....	129
Folder display .....	99	PictBridge .....	132
Folder Name .....	148	Playback .....	36, 97, 105, 139
Format .....	140	Playback mode .....	36
Four-way controller .....	40, 42	Playback Mode Palette .....	53
Frame Composite .....	67, 124	Playing back movies .....	105
Frame Rate .....	95	Playing back sounds .....	139
<b>G</b>		Power Saving .....	153
Green Button  .....	40, 42	Power supply .....	19, 27
Green Mode  .....	54	Power switch .....	27, 39, 41
<b>H</b>		Press fully (Shutter release button) .....	34
Half-length Portrait .....	58	Press halfway (Shutter release button) .....	34
Hometown .....	31	Printing .....	132
<b>I</b>		Protect  .....	114
Image Storage Capacity ...	167	<b>Q</b>	
Infinity  .....	76	Quality Level .....	26, 71
Initial Settings .....	29	<b>R</b>	
Installing batteries .....	19	Recorded Pixels of movies .....	94
Instant Review .....	34	Recorded Pixels of still pictures .....	69
<b>L</b>		Recording movies .....	92
Language .....	29, 147		
<b>M</b>			
<b>MENU</b> button .....	40, 42		
Macro  .....	76		
Magnify  .....	100		

Recording sounds .....	137
Recovering images .....	113
Red-eye Compensation ....	128
Red-eye reduction   .....	79
Reset .....	155
Resize .....	116
Rotating .....	37

## S

Saving settings .....	90
SD Memory Card .....	23
Select time .....	146
Self-timer  .....	85
Sensitivity .....	81
Setting the exposure .....	83
Shooting information .....	84, 97
Shutter release button .....	34, 39, 41
Slideshow .....	103
Sound settings .....	141
Sound types .....	141
Standard <b>AF</b> .....	76
Storage Capacity .....	167
Strap .....	18

## T

TV .....	107
----------	-----

## U

USB connection mode .....	150
---------------------------	-----

## V

Video output format .....	151
---------------------------	-----

## W

World Time .....	145
------------------	-----

## Z

Zoom    .....	73
Zoom button .....	39, 41

**HOYA Corporation**

PENTAX Imaging Systems Division

2-36-9, Maeno-cho, Itabashi-ku, Tokyo 174-8639, JAPAN  
(<http://www.pentax.jp>)**PENTAX Europe GmbH  
(European Headquarters)**Julius-Vosseler-Strasse 104, 22527 Hamburg, GERMANY  
(HQ - <http://www.pentaxeurope.com>)  
(Germany - <http://www.pentax.de>)**PENTAX U.K. Limited**PENTAX House, Heron Drive, Langley, Slough, Berks  
SL3 8PN, U.K.  
(<http://www.pentax.uk>)**PENTAX France S.A.S.**112 Quai de Bezons, B.P. 204, 95106 Argenteuil  
Cedex, FRANCE  
(<http://www.pentax.fr>)**PENTAX Italia S.r.l.**Via Dione Cassio 15, 20138 Milano, ITALY  
(<http://www.pentaxitalia.it>)**PENTAX (Schweiz) AG**Widenholzstrasse 1, 8304 Wallisellen, Postfach 367,  
8305 Dietlikon, SWITZERLAND  
(<http://www.pentax.ch>)**PENTAX Europe GmbH  
(Tyskland) Filial Sverige**Box 650, 75127 Uppsala, SWEDEN  
(<http://www.pentax.se>)**PENTAX Imaging Company****A Division of PENTAX of America, Inc.**(Headquarters)  
600 12th Street, Suite 300 Golden, Colorado 80401, U.S.A.  
(PENTAX Service Department)  
12000 Zuni Street, Suite 100B Westminster, Colorado  
80234, U.S.A. (<http://www.pentaximaging.com>)**PENTAX Canada Inc.**1770 Argentia Road Mississauga, Ontario L5N 3S7, CANADA  
(<http://www.pentax.ca>)**PENTAX Trading  
(SHANGHAI) Limited**23D, Jun Yao International Plaza, 789 Zhaojiabang Road,  
Xu Hui District, Shanghai, 200032 CHINA  
(<http://www.pentax.com.cn>)**<http://www.pentax.jp/english>**

- Specifications and external dimensions are subject to change without notice.