

REMOTE CONTROLS COMPATIBILITY CHART

MANUFACTURER	CAMERA MODEL	REMOTE CONTROL FEATURES				REMOTE CONTROLS				ACCESSORIES			
		MVR901 ECPL	MVR901 ECLA	MVR901 EPFA	MVR901 ECEX	MVR901 EPK	MVR901 ECCN	MVR911 EJCN	S2AV	MVR901 APCL	S2 AV	S2 SC	S2 RC
SONY	PMW-150				• L								
SONY	PMW 200				• L								
SONY	PMW-300				• L								
SONY	PMW-EX280				• L								
SONY	PMW-EX3				• L								
SONY	PMW-EX1R				• L								
SONY	PMW-EX1				• L								
SONY	PXW-F57	• L			• L								
SONY	HXR-MC2000	• L			• L								
SONY	HXR-MC2500	• L			• L								
SONY	HXR-MC50	• L			• L								
SONY	HXR-NX30	• L			• L								
SONY	HXR-NX3D1	• L			• L								
SONY	HXR-NX3	• L			• L								
SONY	HXR-NX5	• L			• L								
SONY	HXR-NX70	• L			• L								
SONY	NEX-EA50	• L			• L								
SONY	NEX-FS100	• L			• L								
SONY	NEX-FS700	• L			• L								
SONY	NEX-VG20	• L			• L								
SONY	NEX-VG30	• L			• L								
SONY	NEX-VG900	• L			• L								
SONY	HVR-A1	• L			• L								
SONY	HVR-HD1000	• L			• L								
SONY	HVR-S270	• L			• L								
SONY	HVR-V1	• L			• L								
SONY	HVR Z5	• L			• L								
SONY	HVR-Z7	• L			• L								
SONY	HVR-Z1	• L			• L								
SONY	HDR-AX2000	• L			• L								
SONY	HDR-FX1	• L			• L								
SONY	HDR-FX7	• L			• L								
SONY	HDR-FX1000	• L			• L								
SONY	DSR-PD175P	• L			• L								
SONY	DCR-DVxxxx	• L			• L								
SONY	DCR-SRxx	• L			• L								
SONY	DCR-SXxx (except DCR-SX2E)	• L			• L								
SONY	DCR-CXxx	• L			• L								
SONY	DCR-VX2000	• L			• L								
SONY	HDR-SRxx	• L			• L								
SONY	HDR-TGxx	• L			• L								
SONY	HDR-TD30V	• L			• L								
SONY	HDR-XRxx	• L			• L								
SONY	HDR-UX10	• L			• L								
Canon	EOS C100	• L			• L					(3*)			
Canon	EOS C300	• L			• L					(4*)			
Canon	EOS C500	• L			• L					(4*)			
Canon	XF305	• L			• L								
Canon	XF300	• L			• L								
Canon	XF205	• L			• L								
Canon	XF200	• L			• L								
Canon	XF105	• L			• L								
Canon	XF100	• L			• L								
Canon	XA10	• L			• L					(5*)			
Canon	XA20	• L			• L					(5*)			
Canon	XA25	• L			• L					(5*)			
Canon	XL H1S	• L			• L								
Canon	XL H1A	• L			• L								
Canon	XH A1/A1S	• L			• L								
Canon	XH G1/G1S	• L			• L								
Canon	XL H1	• L			• L								
Canon	XM1 / XM2	• L			• L								
Canon	GL1 / GL2	• L			• L								
Canon	HF-G25	• L			• L								
Canon	HF-G30	• L			• L								
Canon	EOS 1Dx						• L						
Canon	EOS 1D						• L						
Canon	EOS 6D						• L						
Canon	EOS 5D mkIII						• L						
Canon	EOS 5D mkII						• L						
Canon	EOS 70D						• L						
Canon	EOS 60D						• L						
Canon	EOS 1D mkIV						• L						
Canon	EOS 7D						• L						
Canon	EOS 600D						• L						
Canon	EOS 550D						• L						
Canon	EOS 500D						• L						
Panasonic	AG-3DA1	• P								(6*)			
Panasonic	AG-3DP1	• P								(6*)			
Panasonic	HDC-Z1000	• P								(6*)			
Panasonic	AG-AC130/130A	• P								(6*)			
Panasonic	AG-AC160/160A	• P								(6*)			
Panasonic	AG-AC90	• P								(6*)			
Panasonic	AG-AF100/101/100A	• P								(6*)			
Panasonic	AG-HMC150/151/150PJ	• P								(6*)			
Panasonic	AG-HMC40/41/40PJ	• P								(6*)			
Panasonic	AG-HMC80/81/80PJ	• P								(6*)			
Panasonic	AG-HPX250/255/250PJ	• P								(6*)			
Panasonic	AG-HPX270PJ	• P								(6*)			
Panasonic	AG-HVX200/201/200A/201A	• P								(6*)			
Panasonic	AG-HPX175	• P								(6*)			
Panasonic	AG-DVX100	• P								(6*)			
Panasonic	AG-DVC80	• P								(6*)			
Panasonic	AG-DVC30	• P											