

---

 
---

## KODAK DC240/DC280 Zoom Digital Camera



## User's Guide

Visit Kodak on the World Wide Web at [www.kodak.com](http://www.kodak.com)



©Eastman Kodak Company, 1999  
Kodak, and Photolife, are trademarks of  
Eastman Kodak Company.

---

---

# Table of Contents

1 Getting Started .....	1
Preparing to Take Pictures .....	2
Loading Batteries .....	2
Turning the Camera On and Off .....	2
Checking Batteries .....	3
Using the Battery Charger .....	4
Using an AC Adapter .....	5
Inserting a Camera Memory Card .....	6
Removing a Camera Memory Card .....	6
Setting the Clock on Your Camera .....	7
Adjusting the LCD Brightness .....	8
2 Taking Pictures .....	9
Previewing a Picture Before it is Taken .....	10
Pressing the Shutter Button .....	11
Zooming in on Your Subject .....	12
Zooming in Even Closer .....	12
Viewing the Picture Just Taken .....	13
Setting a Quickview for Each Picture .....	13
Setting the Flash .....	15
Photographing Distant Subjects .....	16
Photographing Close-Ups .....	17
Putting Yourself in the Picture .....	18
Adding the Date to Your Pictures .....	19
Deleting the Picture Just Taken .....	20

---

---

3	Customizing Your Pictures	21
	Adjusting the Camera Exposure	22
	Adding a Border to Your Picture	23
	Capturing in Black-and-White, Sepia Tone, or Document	24
	Adjusting the Picture Quality	25
	Adjusting the Picture Resolution	26
	Selecting a White Balance for Indoor Pictures	27
	Choosing a Metering System	28
	Adjusting the ISO Setting (DC280 only)	29
	Sharpening and Softening a Picture	30
	Locking in an Exposure Setting	31
4	Reviewing Your Pictures	33
	Viewing Your Pictures	34
	Magnifying Your Pictures	35
	Selecting Pictures for Printing	36
	Cancelling Pictures for Printing	37
	Protecting Your Pictures	38
	Deleting One or All of Your Pictures	39
	Running a Slide Show on Your Television	40
	Viewing Information About a Picture	41
5	Personalizing Your Camera	43
	Setting a Response Beep	44
	Saving Camera Power	45
	Viewing Camera Information	46
	Selecting a Language for the Camera	47
	Formatting Your Camera Memory Card	48
	Adjusting the Video Out Signal	49
	Adjusting the Camera Default Settings	50
	Setting a Border Default	50
	Setting a Flash Default	51
	Setting a White Balance Default	52

---



---

Setting an Exposure Compensation Default .....	53
Setting an Effect Default .....	54
Setting an Auto ISO Default (DC280 only) .....	55
6 Installing Your Software .....	57
Windows-Based System Requirements .....	57
Macintosh System Requirements .....	57
Kodak Software for Windows-Based Computers .....	58
Software Overview .....	58
Kodak Software for Macintosh Computers .....	59
Software Overview .....	59
Installing the Software .....	60
7 Connecting Your Camera .....	61
Using a Serial Cable Connection .....	62
Connecting to a Windows-Based Computer .....	62
Connecting to a Macintosh Computer .....	63
Using a USB Cable Connection .....	64
Starting the Kodak Software for Windows-Based Computers .....	65
Opening Mounter Software .....	65
Opening Digital Access Software (TWAIN Acquire) .....	65
Opening Camera Controls Software .....	65
Opening Border Transfer Software .....	65
Starting the Kodak Software for Macintosh Computers .....	66
Opening Picture Transfer Application .....	66
Opening Digital Access Software (Plug-In Acquire) .....	66
Opening Border Transfer Software .....	66
Navigating to Your Pictures .....	67

---

---

8	Tips and Troubleshooting	69
	Connecting with Your Camera	69
	Communicating with the Computer	69
	Adjusting Your Monitor for Better Viewing	69
	Getting Better Results from Your Printer	70
	Troubleshooting	71
9	Where to Get Help	79
	Software Help	79
	Online Services	79
	Faxed Information	79
	Customer Support	80
10	Warranty and Regulatory Information	83
	Warranty Time Period	83
	Warranty Repair Coverage	83
	Limitations	84
	Application Support	85
	How to Obtain Service	85
	Regulatory Information	86
	FCC Compliance and Advisory	86
	Canadian DOC Statement	86
11	Appendix	87
	Original Camera Default Settings	87
	DC240 Camera Specifications	88
	DC280 Camera Specifications	89
	General Maintenance and Safety	90
	Using Your Batteries	91



---

---

# 1 Getting Started

1

Congratulations on your purchase of the new 1.3 megapixel KODAK DC240 Zoom Digital Camera (DC240) or 2.0 megapixel KODAK DC280 Zoom Digital Camera (DC280)—the cameras that take pictures digitally, without the use of film. With your new camera, picture taking and print making have never been easier or faster. The possibilities are endless. Here is just a few examples of what you can do with your camera:

- Take digital pictures in unbelievable detail, color, and sharpness.
- Transfer your pictures to a computer for instant editing, enhancement, and placement into your document.
- E-mail your pictures in minutes to friends, family, and business associates anywhere in the world.
- Print high-quality pictures at home using KODAK Inkjet Photo Paper, or take your KODAK Picture Card to a KODAK Picture Maker System and create photo-quality enlargements with a touch of a button.
- Display your pictures to a large audience on a television or video monitor.
- Customize your pictures with a company logo or graphic using the KODAK DC240/DC280 Border Transfer Application.

---

---


## Preparing to Take Pictures

Before you start taking pictures with your camera, you first need to install the batteries or connect a Kodak-specified AC adapter for power, and insert a KODAK Picture Card (camera memory card) into the camera.

### Loading Batteries

Your camera uses four AA batteries to power the camera. For your convenience, two sets of batteries are included with your camera: four alkaline batteries, and four Ni-MH rechargeable batteries with battery charger. The alkaline batteries are provided so you can start using your camera immediately. The rechargeable batteries need to be charged first, before using them in the camera. Although both types of batteries work in your camera, do not mix different types of batteries in the camera at the same time.


For information on guidelines for battery usage, see page 91.

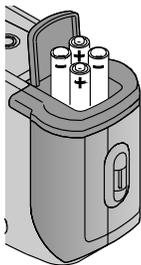

- 1 Place your thumb on the battery door.
- 2 Slide the battery door away from the camera.
- 3 Insert the batteries as indicated on the battery cover, then close the battery door.

### Turning the Camera On and Off

You turn the camera on and off using the POWER switch, located on the back of the camera.

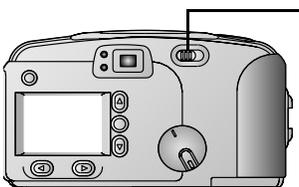

- To turn on the camera, slide the POWER switch to the right.  
The Status Display on top of the camera turns on.
- To turn off the camera, slide the POWER switch again to the right.  
The camera turns off when it is finished processing, deleting, or transferring the picture just taken.


---

---

## Checking Batteries

So you are never caught with dead batteries, your camera indicates the power level of the batteries, in the form of a battery status symbol, which appears in the Status Display when you turn on the camera. For information on guidelines for battery usage, see page 91.

1

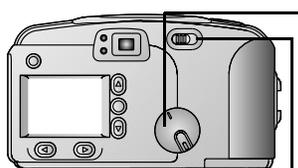

- 1 Set the Mode dial to Capture, Review, or Camera Settings.

The battery status symbol is not visible if you set the camera to Connect.



- 2 Slide the POWER switch to the right to turn on the camera.

- 3 Check the battery status symbol that appears in the Status Display.

**Full (No Icon)**—indicates that batteries are charged and ready to use.

**Low**—indicates batteries are not fully charged and will soon need to be replaced or recharged.

**Exhausted (blinking)**—indicates batteries are too weak to power the camera and need to be replaced.




---

---

## Using the Battery Charger

To ensure that you have a constant supply of freshly charged batteries, a battery charger and four AA Ni-MH rechargeable batteries are provided with some DC240/DC280 cameras. These batteries need to be charged before using and take up to eight hours to fully charge. So you are always prepared to take pictures, keep one set of rechargeable batteries in the camera, and an extra set charged, ready for use. You can purchase additional KODAK Ni-MH Rechargeable Batteries as an accessory. For details about available accessories, ask your dealer of Kodak products, or visit our Website at <http://www.kodak.com/go/accessories>.

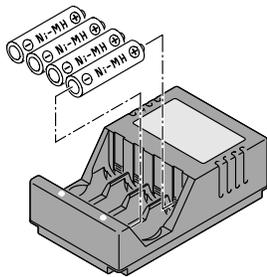


- 1 Verify that you are loading Ni-MH or Ni-Cd rechargeable batteries. If they are any other type, do not load them into the charger.

This charger is for charging Ni-MH or Ni-Cd batteries only, with a maximum of 4 cells, and a maximum charge of 1450mAH.

Do not charge nonrechargeable batteries.

- 2 Align the positive and negative ends of the batteries with the positive and negative contact points in the charger.
- 3 Insert the batteries into the charger until the batteries snap in place.
- 4 Plug the charger into a power outlet.

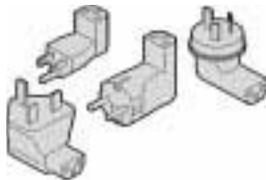

Depending on where you live, some battery chargers are supplied with power plugs that are not attached to the charger. If you have that type of charger, use the plug that matches your power outlet.

- 5 Verify that the charge indicator lights on the charger turn on. If the lights do not turn on, verify that the batteries are inserted correctly.

Batteries are fully charged when the charge indicator lights on the charger turn off, or after 8 hours of charging.

- 6 Unplug the charger and remove the batteries when charging is complete.


---

---


## Using an AC Adapter

If you are taking pictures indoors or when the camera is connected to a computer, you may want to use a Kodak-specified AC adapter to help conserve battery power. It is important to use only a Kodak-specified AC adapter with your DC240/DCD280 camera. If you do not have a Kodak-specified AC adapter, you can purchase one as an accessory. For details about available accessories, ask your dealer of Kodak products, or visit our Website at <http://www.kodak.com/go/accessories>.


1

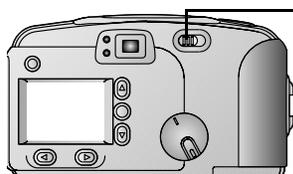


- 1 Slide the POWER switch to the right to turn off the camera.

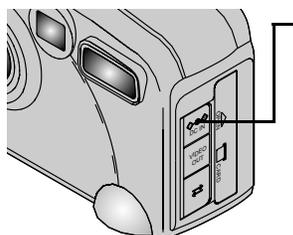

- 2 Open the AC adapter port door on the side of the camera.
- 3 Plug the appropriate end of the AC adapter into the port on the camera.

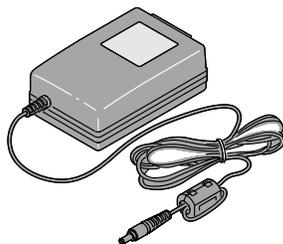

- 4 Plug the AC adapter into the power outlet.  
Depending on where you live, some AC adapters are supplied with power plugs that are not attached. If you have that type of adapter, use the type of plug that matches your power outlet.

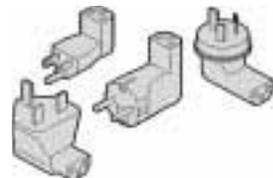

- 5 Slide the POWER switch to the right to turn on the camera.


The camera is now powered by the AC adapter.

---

---

## Inserting a Camera Memory Card

Your camera comes with a KODAK Picture Card (camera memory card), that is used to store pictures you take with the camera. The camera memory card, also referred to as a CompactFlash card, is removable and reusable for easy storage and transfer of your pictures. Before you can take pictures, you need to insert a camera memory card into the camera. You can purchase additional KODAK Picture Cards as an accessory. For details about available accessories, ask your dealer of Kodak products, or visit our Website at <http://www.kodak.com/go/accessories>.

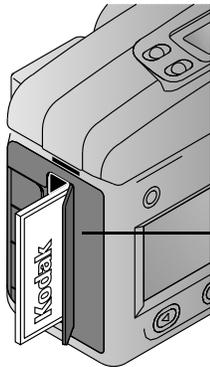


**1** Open the camera memory card door on the camera.

**2** Hold the camera memory card so the connection end is pointed at the camera, and the card label with the MB size is facing toward the back of the camera.

The camera memory card can only be inserted one way into the camera. Forcing the card may damage your camera.

**3** Push the camera memory card all of the way into the card slot and close the door.

## Removing a Camera Memory Card

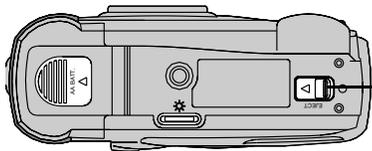

**1** Open the camera memory card door on the camera.

**2** Slide the EJECT button in the direction of the arrow.

The camera memory card partially slides out of the slot.

**3** Remove the camera memory card from the slot and close the door.



**WARNING:** Do not insert or eject a camera memory card when the camera memory card light, located above the card door, is blinking. This may damage your pictures or camera. Use only certified camera memory cards that carry the CompactFlash logo.

---


---

---

## Setting the Clock on Your Camera

Your camera has a built-in clock that maintains the date and time in a 24-hour format. The camera clock needs to be set if you plan to use the Date Stamp feature, which imprints the date on your picture. For information on using the Date Stamp feature, see page 19.


1

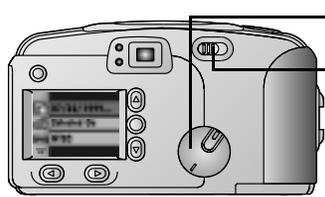

1 Set the Mode dial to Camera Setup.

2 Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*

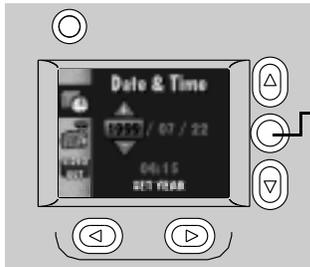

3 Press a ▲/▼ button until the  icon is highlighted.

4 Press the DO-IT button.

*The Date/Time screen appears.*

5 Press a ◀/▶ ▲/▼ buttons to adjust the date and time fields.

6 Press the DO-IT button.

*The camera accepts the setting and returns to the main Camera Setup screen.*


If you remove the batteries from the camera for an extended period of time, or the batteries become exhausted, you may need to reset the clock.

---

---

## Adjusting the LCD Brightness

You can adjust the brightness of the color LCD to suit your particular needs.

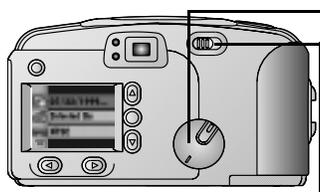


- 1** Set the Mode dial to Camera Setup.

You can set the Mode dial to any setting you want as long as there is an image in the LCD screen to adjust the brightness level.

- 2** Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*

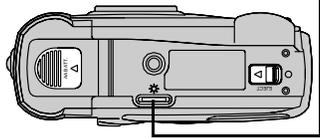

- 3** Use the dial on the bottom of the camera to adjust the brightness of the LCD screen to the brightness level you want.



---

---

## 2 Taking Pictures

2

Your camera makes taking pictures fun. Just set the camera to Capture and you are on your way to creating great pictures. Everything you need is right at your fingertips. With the camera you can:


- Preview the picture before it is taken.
- Automatically lock the focus on the subject when you press the SHUTTER button.
- Zoom in closer on your subject.
- View the picture you just took.
- Vary the flash settings to give you control over the type of flash needed for specific conditions.
- Adjust the camera to take landscapes (Infinity Focus) and close-ups, as well as set the Date Stamp feature and Self-Timer, all available with the touch of a button.
- Delete unwanted pictures right away.

---

---

## Previewing a Picture Before it is Taken

If you want to see what a picture looks like before you take it, you can preview the image on the LCD on the back of your camera. The live image that appears is very helpful for framing your subject, especially when using the Close-Up, Digital Zoom, and Border features. If you want to take pictures in black and white or sepia tone, or to highlight text, Preview can help you make that decision. With Preview, batteries are easily drained, so use a Kodak-specific AC adapter whenever possible.

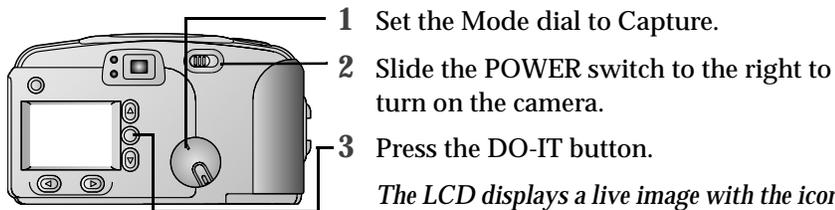

*The LCD displays a live image with the icons of activated camera features.*

The image in the LCD appears in color unless you have turned on an effect, such as black and white or sepia tone, in which case the effect is applied to the displayed image. See page 24 for details.



**Exposure Compensation**—icon appears in the LCD and Status Display if you adjusted the camera exposure. See page 22 for details.



**Exposure Lock**—icon appears in the LCD if you locked the exposure. See page 31 for details.

**Borders**—selected border appears over the picture on the LCD. See page 23 for details.



**Date Stamp**—icon appears in the LCD if you turned on the date stamp. See page 19 for details.


4 To turn off Preview, press the DO-IT button.

---

---

## Pressing the Shutter Button

Taking pictures is a snap with your camera. The SHUTTER button on your camera locks in the auto focus and takes the picture.

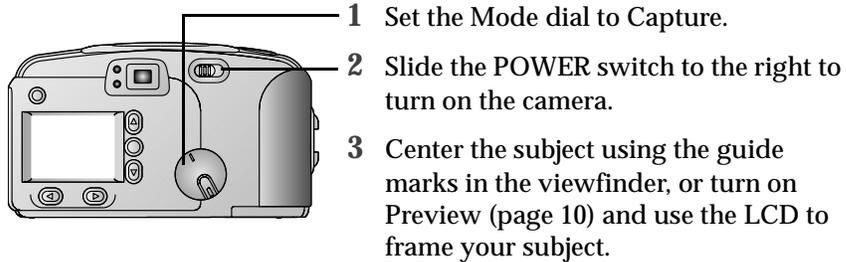

*The camera beeps twice and the green ready light comes on when the camera is set to take a picture.*

If the green ready light next to the viewfinder blinks, then the auto focus is not focused on the subject. Release the SHUTTER button and recompose your picture. Press the SHUTTER button half-way down again to relock the auto focus on the subject.

If the red flash indicator light next to the viewfinder blinks, then the flash is not fully charged. Wait for the flash to charge before taking the picture.

- 5 Press the SHUTTER button completely down to take the picture.


*The camera beeps again to confirm that a picture was taken. The Pictures Remaining icon on the Status Display changes and the camera memory card light blinks as the picture is stored on the card.*

---

---


## Zooming in on Your Subject

With a touch of a button you can zoom from Wide Angle, which gives you more of the surrounding area in pictures, to TelePhoto, which brings the subject in closer.

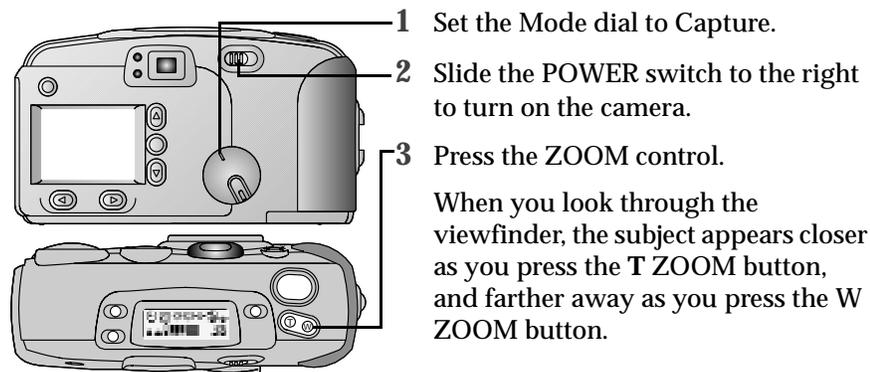

## Zooming in Even Closer

If you need to get closer to your subject, use the Digital Zoom feature. With digital zoom, the center of your picture is magnified so your pictures appear even closer.

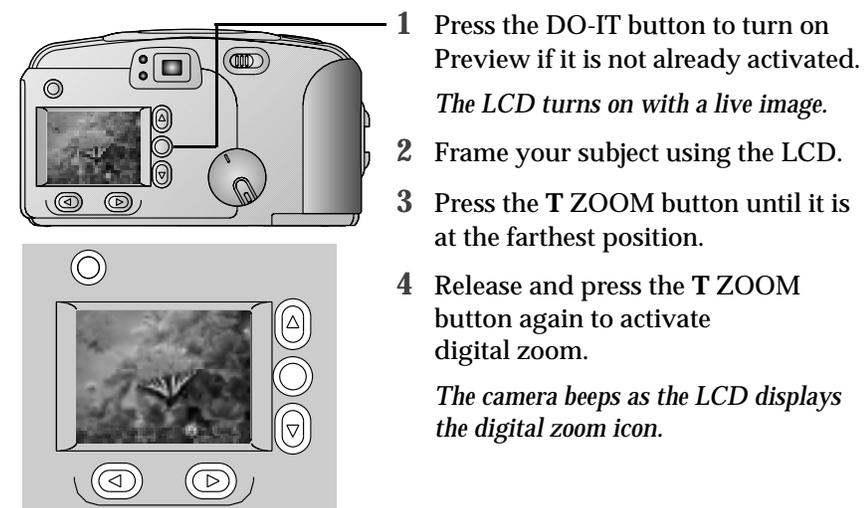


---

---

## Viewing the Picture Just Taken

You can view a picture seconds after it is taken with a touch of a button. It is a handy way to check if your subject was positioned correctly.

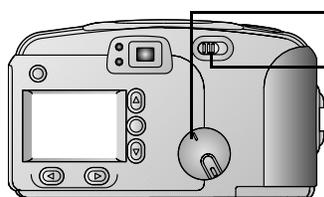

- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.
- 3 Press the SHUTTER button to take a picture.



- 4 Press the ► button.

*The picture just taken appears in the LCD for several seconds with the delete icon above the ◀ button.*

If you want to view the picture again, press the ► button.

- 5 To delete the picture on the LCD, press the ◀ button.

*The LCD displays the Delete Picture screen.*


- 6 Press a ▲/▼ button until YES is highlighted.

- 7 Press the DO-IT button.

*The picture is permanently deleted from the camera memory card.*


## Setting a Quickview for Each Picture

You can set the camera so a quick view of the picture just taken appears in the LCD automatically using the Quickview feature.

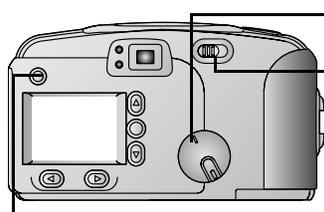

- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.
- 3 Press the MENU button.

*The main Menu screen appears.*

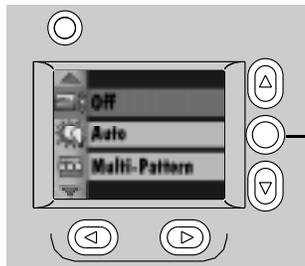


4 Press a ▲/▼ button until the  is highlighted.

5 Press the DO-IT button.

*The LCD displays the Quickview screen. The current setting is checked (✓).*

6 Press a ▲/▼ button until ON is highlighted.

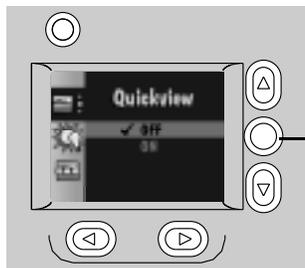

7 Press the DO-IT button.

*The main Menu screen reappears.*

The image appears for several seconds on the LCD in color unless you have turned on an effect, such as black and white or sepia tone, in which case the effect is applied to the displayed image. See page 24 for details.



**Exposure Compensation**—icon appears in the LCD and the Status Display if you adjusted the camera exposure. See page 22 for details.



**Exposure Lock**—icon appears in the LCD if you locked the exposure. See page 31 for details.

**Borders**—selected border appears over the picture. See page 23 for details.



**Date Stamp**—icon appears in the LCD if you turned on the date stamp. See page 19 for details.





**Delete**—icon appears above the ◀ button. Press the button to delete the picture. See page 20 for details.

8 To turn off Quickview, press a ▲/▼ button on the Quickview screen until OFF is highlighted, then press the DO-IT button.

## Setting the Flash

When taking pictures at night, indoors, or outdoors in heavy shadows, your pictures need flash. For everyday picture-taking, use the Auto setting. However, there are times when changing the flash option can improve your pictures. For instance, if you are taking pictures of people indoors or at night, you can help reduce the likelihood of red eye by using the Red-Eye setting. When your subject is outdoors under heavy shadows, you can eliminate those shadows by using the Fill flash. In situations where the use of flash is prohibited, as in museums, you can turn off the flash.

- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.
- 3 Press the FLASH button to scroll through the flash options.  
*The Flash setting icon changes in the Status Display.*
  - Auto (No Icon)**—fires the flash automatically when needed. The camera determines when there is not enough light.
  - Off**—turns off the flash.
  - Fill**—fires the flash every time you take a picture.
  - Red-Eye**—fires the flash once before the picture is taken, then fires again when the picture is taken.
- 4 To return to the Auto setting, press the FLASH button, or turn off the camera.

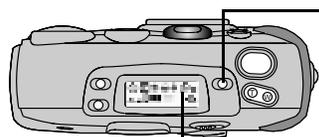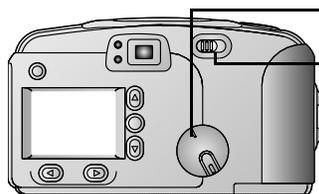


---

---


## Photographing Distant Subjects

If you want to create postcard-like pictures of scenic views, such as a sunset or mountain range, use the Infinity Focus feature. When Infinity Focus is selected, the camera automatically turns off the flash and auto focus so you get sharp, clear pictures. If you have the DC280 camera, you can override the flash setting for situations where flash is needed. For information on setting the flash, see page 15.

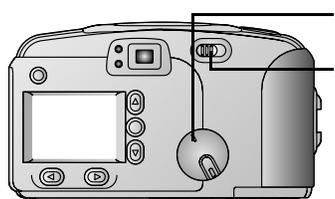

**1** Set the Mode dial to Capture.

**2** Slide the POWER switch to the right to turn on the camera.

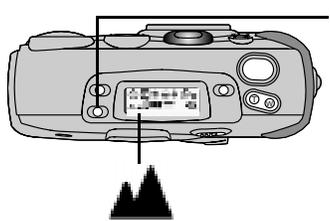

**3** Press the INFINITY FOCUS/CLOSE-UP button.

*The Infinity Focus icon appears in the Status Display.*

**4** Frame your subject in the viewfinder and press the SHUTTER button to take the picture.

**5** To turn off Infinity Focus, press the INFINITY FOCUS/CLOSE-UP button two times, or turn off the camera.


---

---


## Photographing Close-Ups

If you want to take pictures of objects up close, such as flowers or artwork, use the Close-Up feature. When selected, the camera automatically sets the focus distance to 0.8 to 1.6 ft (0.25 to 0.5 m) and sets the flash to ensure detail and clarity. Since the viewfinder on the camera may not accurately frame your picture in Close-Up, the Preview option is automatically activated. For information on Preview, see page 10.

2

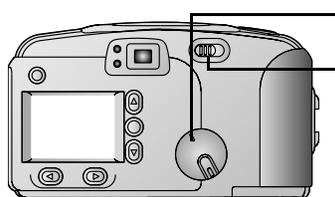

- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.

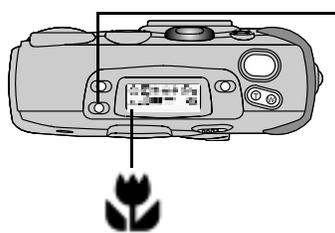

- 3 Press the INFINITY FOCUS/CLOSE-UP button twice.

*The Close-Up icon appears in the Status Display and the LCD Preview feature shows a live image.*

When you use the Close-Up feature, the zoom capabilities on the camera are disabled.


- 4 Frame your subject using the LCD and press the SHUTTER button.
- 5 To turn off Close-Up, press the INFINITY FOCUS/CLOSE-UP button once, or turn off the camera.

---


---

## Putting Yourself in the Picture

There might be times when you want everyone, including yourself, to be in the picture. For these occasions, use the Self-Timer feature to create a 10-second delay between the time you press the SHUTTER button and the time the picture is taken.

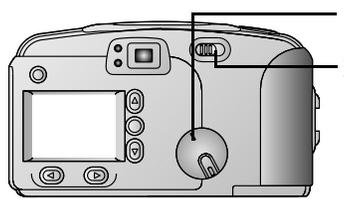

- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.

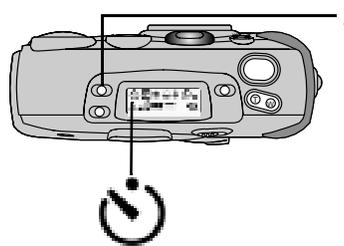

- 3 Press the SELF-TIMER button.  
*The Self-timer icon appears in the Status Display.*

If you want to cancel self-timer before the picture is taken, press the SELF-TIMER button again or turn off the camera.


- 4 Place the camera on a flat, steady surface or tripod.
- 5 Frame your subject in the viewfinder and press the SHUTTER button.

*The red Self-Timer light, located on the front of the camera, turns on and stays lit for 8 seconds, then flashes for 2 additional seconds just before the picture is taken.*

The Self-Timer turns off when the picture is taken.

## Adding the Date to Your Pictures

You may want to keep track of when a picture was taken, perhaps to record a child's first picture or for an insurance claim. Whatever the reason, your camera has the ability to record the date and time directly on your picture using the Date Stamp feature. In order for the feature to imprint the correct date and time, you need to set the camera clock. See page 7 for details. Once a picture is taken with the date stamp, the date stamp cannot be removed.

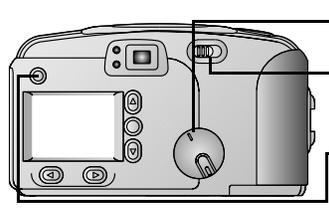


- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.
- 3 Press the MENU button.

*The LCD displays the main Menu screen.*



- 4 Press a ▲/▼ button until the  icon is highlighted.
- 5 Press the DO-IT button.

*The LCD displays the Date Stamp screen. The current setting is checked (✓).*

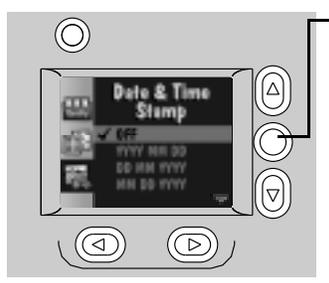

- 6 Press a ▲/▼ button until the Date Stamp option you want is highlighted.
- 7 Press the DO-IT button.

*The main Menu screen reappears.*

The next time you take a picture the date or date and time is recorded in the lower right-hand corner of the picture. The Date Stamp icon appears on the LCD screen if Quickview (page 13) or Preview (page 10) is turned on.



- 8 To turn off Date Stamp, press a ▲/▼ button until OFF is highlighted, then press the DO-IT button.

---

---

## Deleting the Picture Just Taken

If you decide that you do not like a picture, you can delete it quickly from the camera memory card immediately after it is taken. For the Quick Delete feature to work, the picture must be displayed on the LCD, so Quickview needs to be activated. Once you delete the picture, it is permanently removed from the camera memory card.

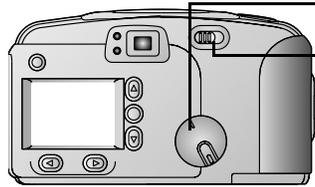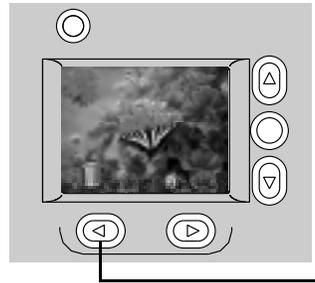- 
- 1 Set the Mode dial to Capture.
  - 2 Slide the POWER switch to the right to turn on the camera.
  - 3 Turn on Quickview (page 13).
- 
- 4 Frame your subject in the viewfinder and press the SHUTTER button.  
*The picture appears on the LCD with the  icon displayed above the ◀ button.*
  - 5 Press the ◀ button.  
*The LCD displays the Delete Picture screen.*
- 
- 6 Press a ▲/▼ button until YES is highlighted.
  - 7 Press the DO-IT button.  
*The picture is permanently deleted from the camera memory card.*



---

---

## 3 Customizing Your Pictures

Chapters 1 and 2 explained the basics for taking great digital pictures. In this chapter, you will learn about some of the custom features available on your camera. Because your camera is so versatile, you have the ability to set the camera for almost any picture taking situation you may encounter. With the camera, you can:

3



- Adjust the exposure for pictures that are too light or too dark.
- Frame your pictures with interesting borders supplied on the camera memory card and software CD.
- Capture pictures in color, black and white, sepia tone, or highlight text in documents.
- Adjust the ISO sensitivity for low light photography without flash (DC280 only).
- Select specific picture quality and resolution settings to meet your demanding picture-taking needs.
- Set white balancing options, so you get great color reproduction in your pictures.
- Adjust the metering system to control how light affects your pictures.
- Sharpen and soften pictures so editing in software can be done easier.
- Lock the exposure for a consistent look in all your pictures.

---

---

## Adjusting the Camera Exposure

If your pictures seem too dark or too light, you can adjust the amount of light allowed into the camera so your pictures are properly exposed. These adjustments in lighting are called Exposure Compensation.

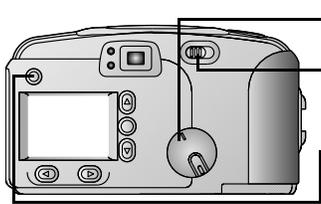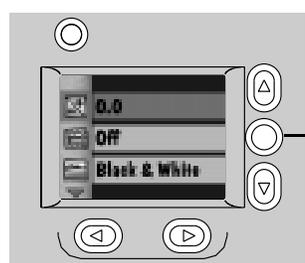- 1 Set the Mode dial to Capture.  
2 Slide the POWER switch to the right to turn on the camera.  
3 Press the MENU button.  
*The LCD displays the main Menu screen.*
- 4 Press a ▲/▼ button until the  icon is highlighted.  
5 Press the DO-IT button.  
*The LCD displays the Exposure Compensation screen.*
- 6 Press a ▲/▼ button to change the exposure number.
  - If your pictures are too dark, increase (+) the exposure number.
  - If your pictures are too light, decrease (-) the exposure number.

You can adjust the exposure numbers from +2.0 to -2.0 in 0.5 increments. An increase of 1.0 doubles the amount of light allowed into the camera. A decrease of 1.0 reduces the amount of light allowed into the camera by half.
- 7 Press the DO-IT button.  
*The main Menu screen reappears and the Exposure Compensation icon appears in the Status Display.*
- 8 To cancel Exposure Compensation, press a ▲/▼ button until 0.0 is highlighted, then press the DO-IT button, or turn off the camera.




---

---

## Adding a Border to Your Picture

You can add a border or logo (or both) to your picture, using the graphics supplied on your camera memory card. When you use the Border feature, the camera Preview is turned on automatically to help you frame the picture and see if the border selected works well with your subject. If you like the border, go ahead and take the picture. If you do not like the border, select a different one. You can also create and add your own borders. For more information, refer to the KODAK DC240/DC280 Border Transfer Application online help or the ReadMe file. Once the picture is taken, the border cannot be removed.

3

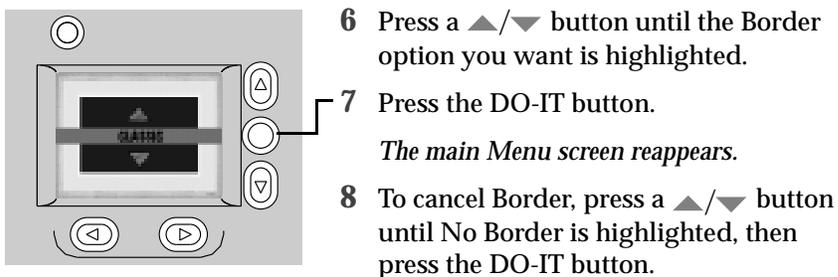
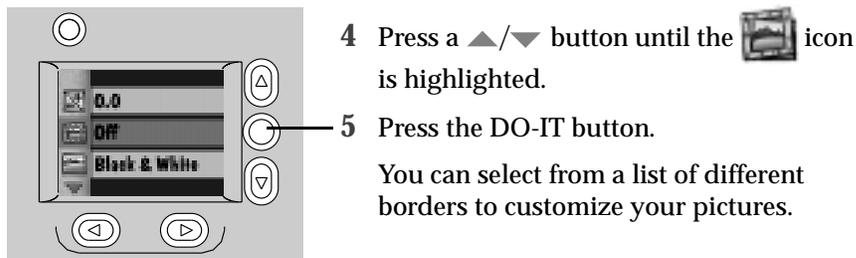
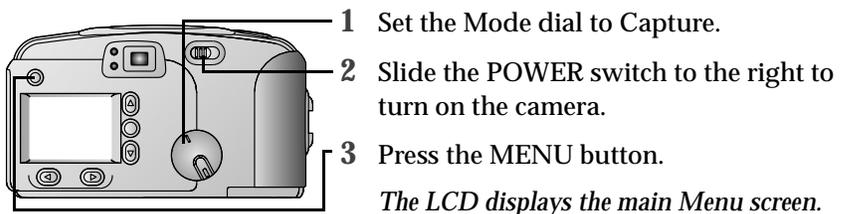


---

---

## Capturing in Black-and-White, Sepia Tone, or Document

If you want to take black-and-white pictures, maybe for a brochure or newspaper; in sepia tone to give your picture an antique look; or of documents so text stands out, use the Effects setting. When activated, the camera Preview is automatically turned on so you can see if the effect selected works well with your subject. If you like the effect, go ahead and take the picture. If you do not like the effect, select a different one before taking the picture. Once the picture is taken with the effect, the effect cannot be removed.

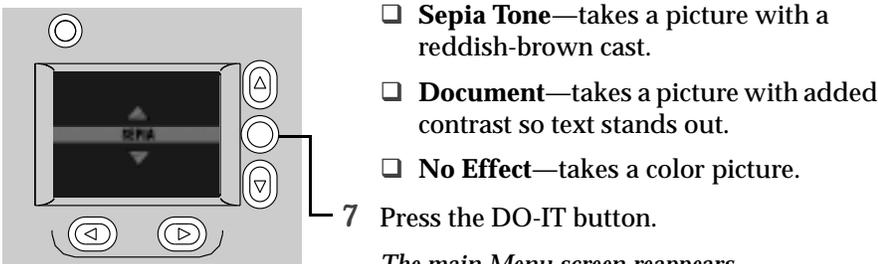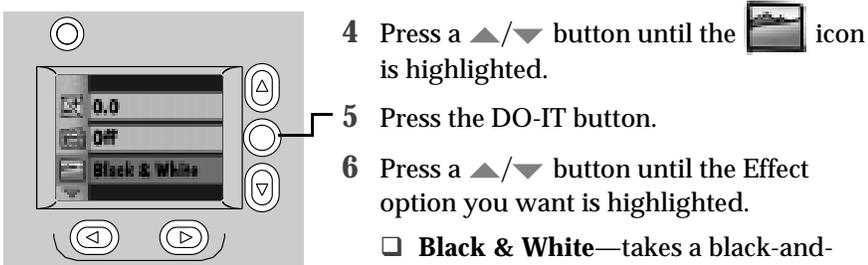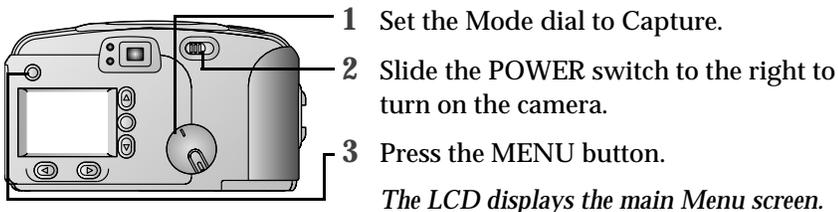



- 8 To cancel Effect, press a ▲/▼ button until No Effect is highlighted, then press the DO-IT button, or turn off the camera.

---

---

## Adjusting the Picture Quality

If you intend to make large prints, you can capture more detail in the picture using the Best setting. However, with this setting more room is used on the camera memory card. For everyday pictures, use the Better setting, which gives you great pictures and more storage space on the camera memory card. If you need to store a large number of pictures on the camera memory card or are going to e-mail or use the pictures online, use the Good setting.

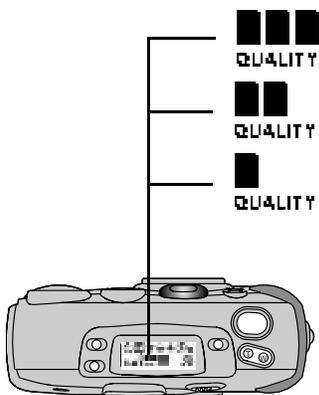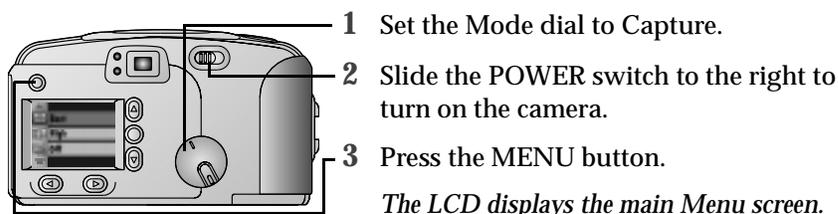




3

---

---

## Adjusting the Picture Resolution

If you want to send pictures through e-mail or use them online, use the Standard resolution setting. With this setting, only the information needed for viewing on a computer or printing small prints is captured. For pictures that are going to be printed, use the High resolution setting. With this setting, more information is captured, but fewer pictures fit on the camera memory card.

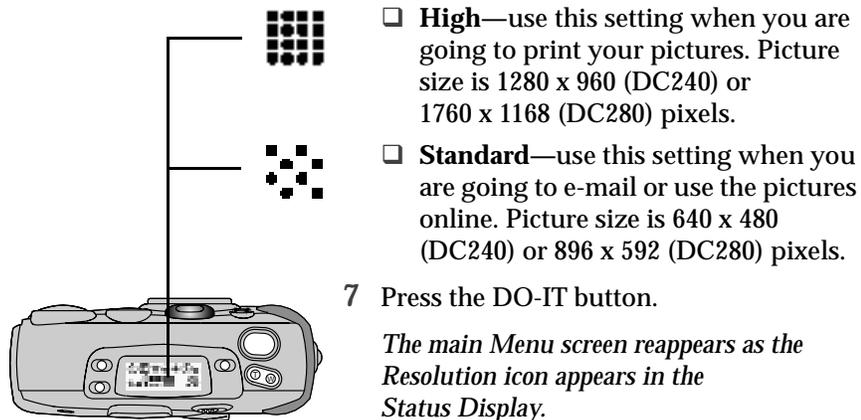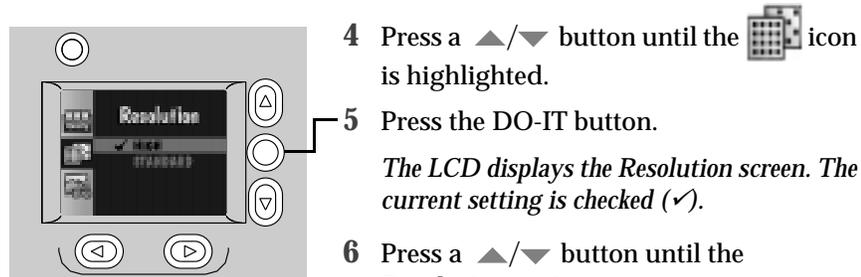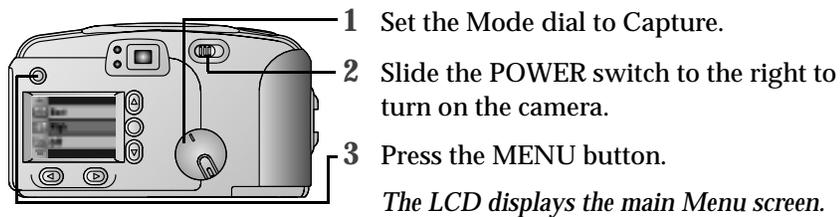


You can switch freely between these two settings when taking pictures.

---

---

## Selecting a White Balance for Indoor Pictures

If you are using your camera indoors where flash is prohibited, your pictures may take on a green tint if captured under fluorescent tube lighting, or a reddish-orange tint if captured under tungsten household lighting. You can correct this problem using the White Balance feature on the camera. Use the Auto setting for everyday pictures. Use the Daylight, Fluorescent, or Tungsten setting for taking pictures under these lighting conditions without flash.

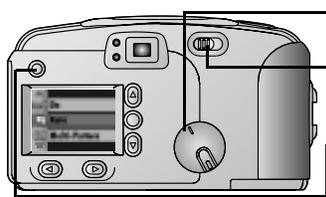

- 1 Set the Mode dial to Capture.
- 2 Slide the POWER switch to the right to turn on the camera.
- 3 Press the MENU button.

*The LCD displays the main Menu screen.*



- 4 Press a ▲/▼ button until the  icon is highlighted.

- 5 Press the DO-IT button.

*The LCD displays the White Balance screen.  
The current setting is checked (✓).*


- 6 Press a ▲/▼ button until the White Balance option you want is highlighted.

- Auto (No Icon)**—automatically adjusts the white balance.
- Daylight**—balances for natural daylight lighting.
- Fluorescent**—corrects for the green cast of fluorescent lighting.
- Tungsten**—corrects for the orange cast of tungsten light bulbs.

- 7 Press the DO-IT button.

*The main Menu screen reappears as the White Balance icon you selected appears in the Status Display.*

Your camera automatically resets to Auto when the camera is turned off.

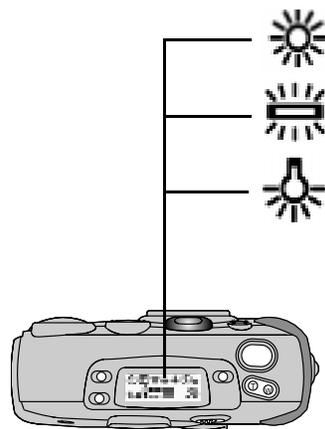




3

---

---

## Choosing a Metering System

You can control the way light affects your pictures using the metering systems available on your camera. If you want a nice even exposure throughout the picture, use the Multi-Pattern setting. This setting is great for everyday pictures. If you want to emphasize the center of your picture, such as a person's face, while at the same time de-emphasizing the background, use the Center-Weighted setting.

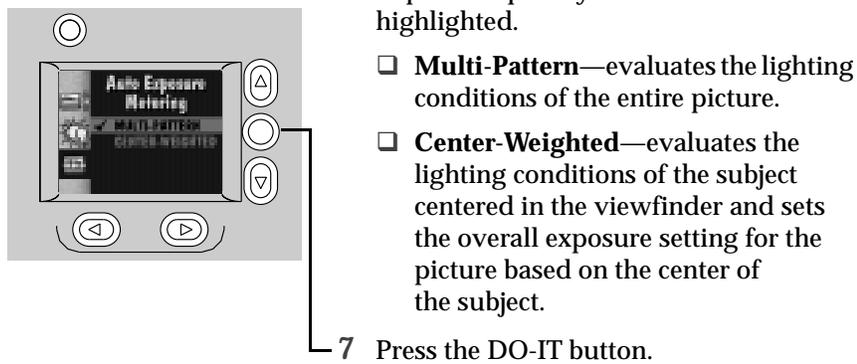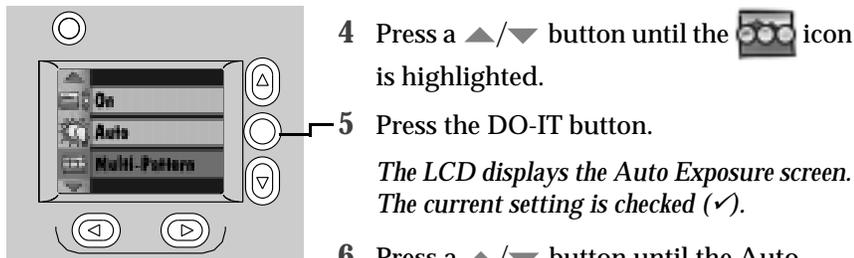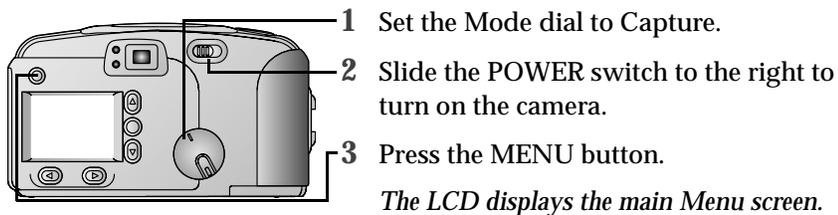

*The main Menu screen reappears.*


You can switch freely between the two settings when taking pictures.

---



---

## Adjusting the ISO Setting (DC280 only)

If you are taking pictures in low light without flash, such as in a museum, you can adjust the Auto ISO sensitivity on the camera to help prevent blurred pictures caused by camera movement. With this feature the shutter speed is automatically increased to make the camera more responsive, while maintaining proper exposure for the picture.

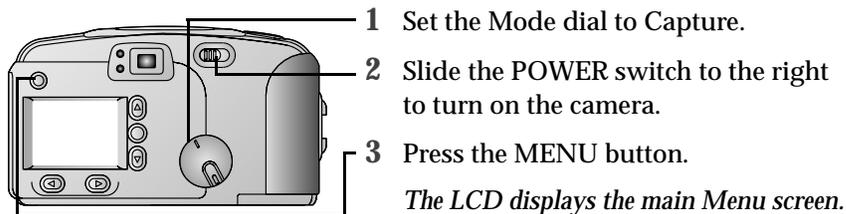

3

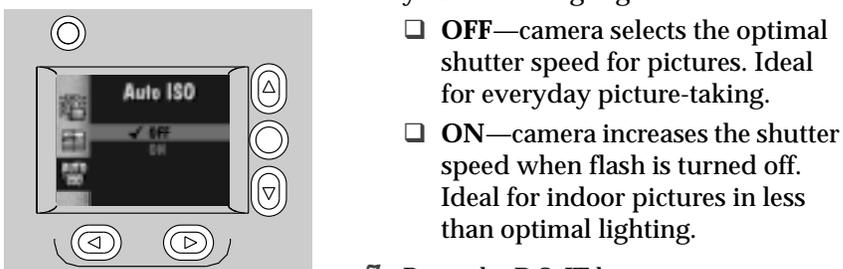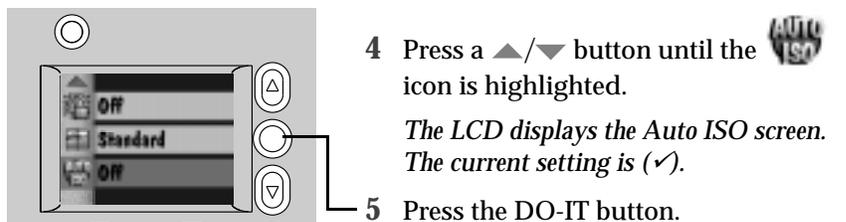




- 7 Press the DO-IT button.
- 8 To cancel Auto ISO, press a ▲/▼ button until OFF is highlighted, then press the DO-IT button, or turn off the camera.

---

---

## Sharpening and Softening a Picture

If you are planning to edit your pictures using image editing software, the Sharpness feature can make some editing processes easier. By selecting the Sharp setting, the edges around the picture are enhanced, making it easier to cut or crop the image. If you want to blend the image into a background, use the Soft setting to de-emphasize the edges. For everyday picture-taking, keep the Sharpness feature set to Standard. The Sharp or Soft settings may increase or decrease the clarity in pictures.

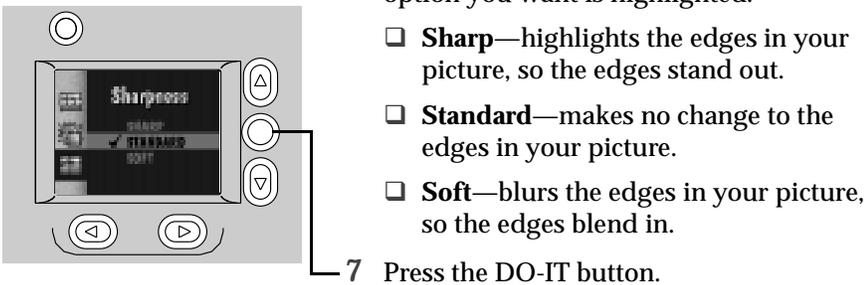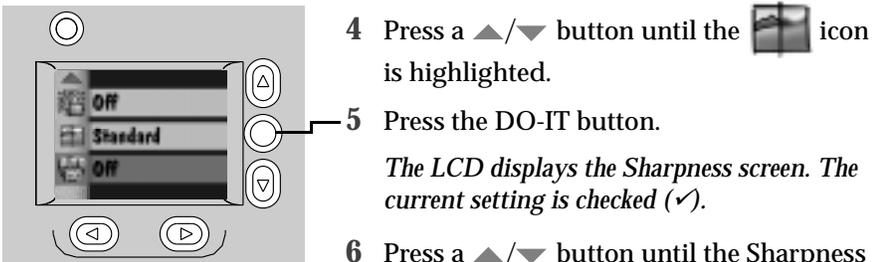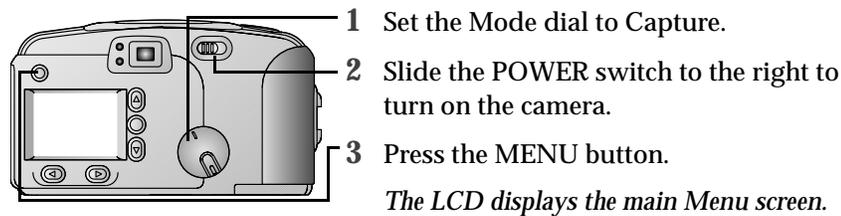

*The main Menu screen reappears.*


You can switch freely among the three settings when taking pictures.

---


---

## Locking in an Exposure Setting

If you are taking a series of pictures that require a consistent look or a constant exposure setting, use the Exposure Lock feature. This feature is great for taking a series of pictures, like a mountain range, and creating a mural with the prints.

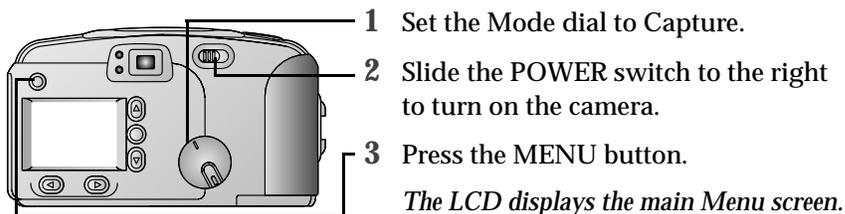

3

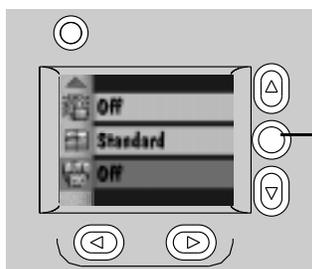

4 Press a ▲/▼ button until the  icon is highlighted.

5 Press the DO-IT button.

*The LCD displays the Exposure Lock screen. The current setting is (✓).*

6 Press a ▲/▼ button until ON is highlighted.


7 Press the DO-IT button.

*The "Please take a picture to lock capture settings" screen appears.*


8 Center the area you want to lock the exposure on in the viewfinder.

9 Press the SHUTTER button to lock in the exposure setting.

10 To cancel Exposure Lock, press a ▲/▼ button until OFF is highlighted, then press the DO-IT button, or turn off the camera.

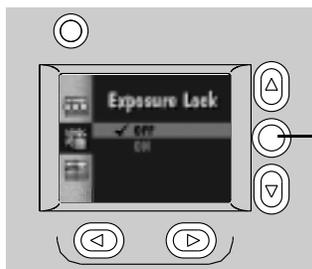



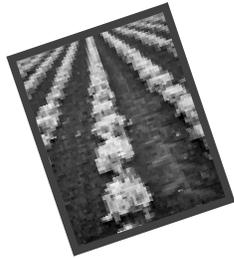

---

---

## 4 Reviewing Your Pictures

Now that you have taken pictures with your camera, it is time to take a look at them by setting the camera to Camera Review. With the camera, you can:

- View your pictures and see how any custom features, if any, were applied to the shot.
- Magnify the picture to check the detail.
- Select specific pictures and quantities to be printed.
- Protect pictures from being deleted from your camera memory card.
- Delete unwanted pictures to free up space on the camera memory card.
- Display and run a slide show on the camera or on a television.
- View specific information about the picture.




---

---

## Viewing Your Pictures

You can view each picture in full LCD size, or you can view up to three smaller thumbnail-size pictures at a one time using the Filmstrip feature.

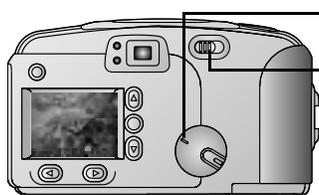

**1** Set the Mode dial to Review.

**2** Slide the POWER switch to the right to turn on the camera.

*The LCD displays the last picture taken with the frame number, and the Print Order and Protect icons, if activated.*



**3** Use the ◀/▶ buttons to scroll through and view the pictures on the LCD.

**4** Press the MENU button to display the filmstrip and the main Review screen.

The DC280 main Review screen has a black bar across the top of the screen.

*The Review Menu icons, filmstrip, and memory bar appear over the current picture.*

The filmstrip displays up to three pictures at a time, in the order taken and stored on the camera memory card.



**5** Use the ◀/▶ buttons to scroll through the filmstrip.

*The picture on the filmstrip appears in the LCD as the memory bar and picture locator needle moves.*

The memory bar indicates the amount of space on the camera memory card. The dark section represents the portion of the card that is filled, while the needle locator shows the position of picture on the card.




**6** To exit, press the MENU button.

---

---

## Magnifying Your Pictures


If you want to zoom in on a specific part of a picture displayed on the LCD, use the Magnify feature. This feature lets you view a section of the current picture at two times the normal LCD size.

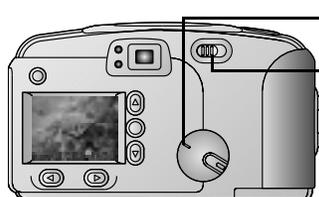

**1** Set the Mode dial to Review.

**2** Slide the POWER switch to the right to turn on the camera.

*The last picture taken appears on the LCD screen.*

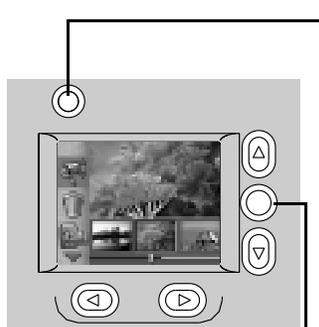

**3** Press the MENU button.

*The main Review Menu screen appears.*

**4** Press a ◀/▶ button until the picture you want to magnify is highlighted on the filmstrip.

*The picture appears in the LCD viewing area.*

**5** Press a ▲/▼ button until the  icon is highlighted.

**6** Press the DO-IT button.

*The LCD displays a magnified view of the selected picture.*

**7** Use the ▲/▼ and ◀/▶ buttons to scroll to different parts of the picture.

**8** To exit Magnify, press the DO-IT button.






**4**

---

---

## Selecting Pictures for Printing

You can scroll through and select certain pictures on the camera memory card to print, as well as create an index of all of the pictures using the Print Order feature. This feature is useful because it saves you time when printing pictures from a KODAK Picture Maker System.

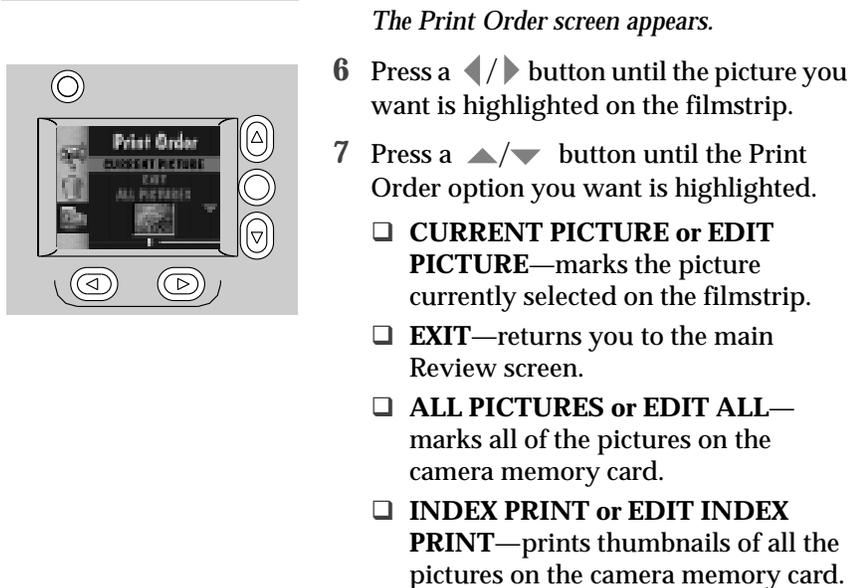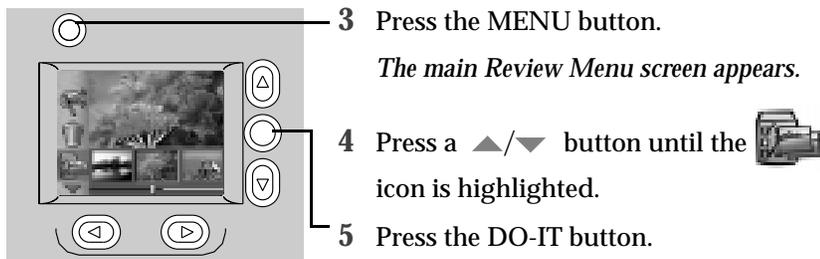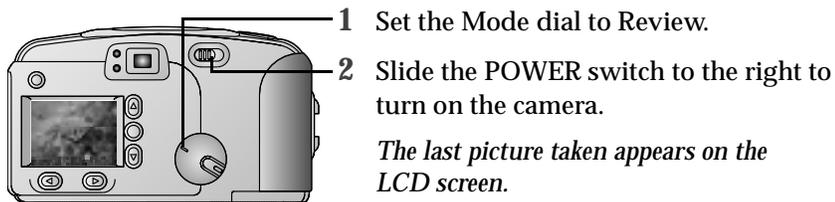



8 Press the DO-IT button.


*The Copies screen appears, unless you selected the Index Print option, which returns you to the main Review screen.*

9 Press a ▲/▼ button until the desired number of prints you want appears.

10 Press the DO-IT button.

*The print order is accepted and the Print Order icon appears in the LCD of each picture marked for printing. The main Print Order screen reappears.*

11 To exit Print Order, highlight EXIT, then press the DO-IT button.

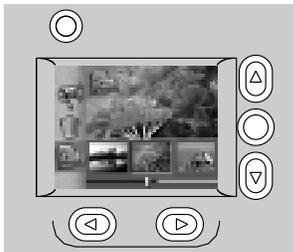

4

## Cancelling Pictures for Printing

If you have second thoughts about the pictures you have selected to print, you can go back and cancel individual pictures or the entire order.



1 Press a ▲/▼ button until the Print Order option you want is highlighted.

**CANCEL CURRENT**—cancels the print order for the selected picture.

**EXIT**—returns you to the main Review Menu screen.

**CANCEL PRINT ORDER**—cancels all the print orders for the pictures.

**CANCEL INDEX PRINT**—cancels the print order for the index print.



2 Press the DO-IT button.

*The print order is cancelled and the Print Order icon is removed. The main Print Order screen reappears.*




3 To exit Print Order, highlight EXIT, then press the DO-IT button.

---

---

## Protecting Your Pictures

You can safeguard your pictures from being deleted accidentally from the camera memory card by using the Protect feature. This feature is very useful if the camera and camera memory card are used by more than one person.

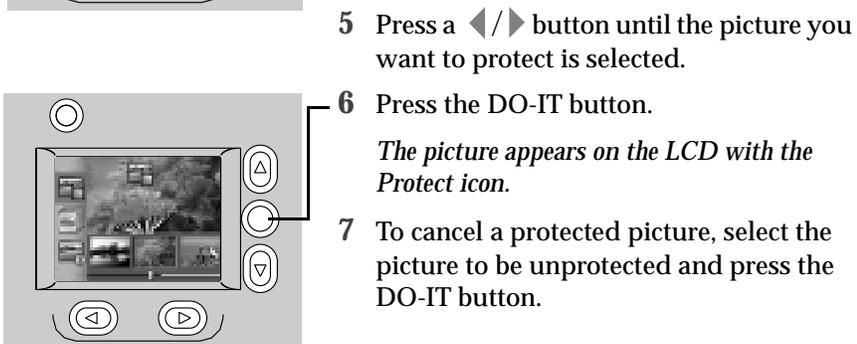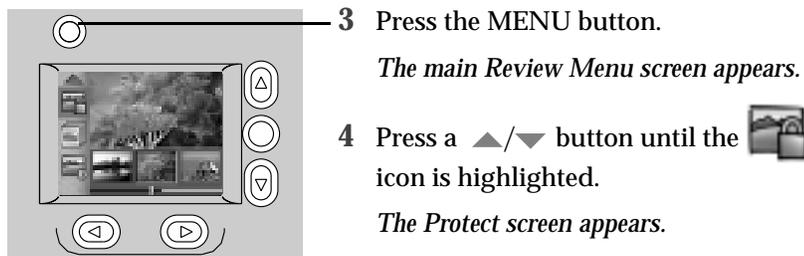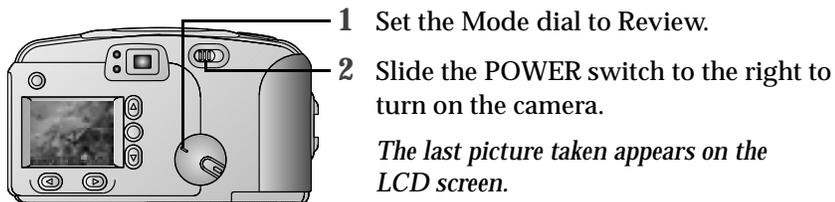



7 To cancel a protected picture, select the picture to be unprotected and press the DO-IT button.

---

---

## Deleting One or All of Your Pictures

If you decide that you do not like the pictures stored on the camera memory card, or you just want to free up space, use the Delete feature to remove one or all of the pictures on the card. If you have marked pictures to be protected, they cannot be deleted until you turn off the Protect feature. See page 38 for details.

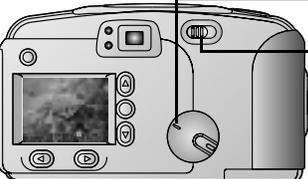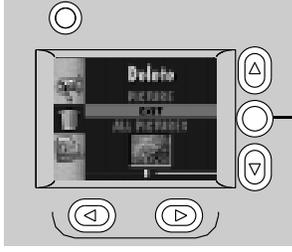
- 
- 1 Set the Mode dial to Review.  
*The last picture taken appears on the LCD screen.*
- 
- 3 Press the MENU button.  
*The main Review Menu screen appears.*
  - 4 Press a ▲/▼ button until the  icon is highlighted.
  - 5 Press the DO-IT button.  
*The Delete screen appears.*
- 
- 6 Press a ◀/▶ button until the picture you want to delete is selected.
  - 7 Press a ▲/▼ button until the Delete option you want is highlighted.
    - PICTURE**—deletes the selected picture from the camera memory card.
    - EXIT**—returns you to the main Review screen without deleting the picture(s).
    - ALL PICTURES**—deletes all of the pictures on the camera memory card.
  - 8 Press the DO-IT button.  
*The picture(s) are deleted from the camera memory card.*
  - 9 To exit Delete, highlight EXIT, then press the DO-IT button.

---

---

## Running a Slide Show on Your Television

You can view your pictures on the camera LCD, or connect your camera to a television and display your pictures to a large audience using the Slide Show feature. The pictures appear on the television for a period of 1 to 99 seconds, a time you set from the camera. The slide show ends after all the pictures have been shown; or, if you are using a Kodak-specified AC adapter, the slide show continues until you stop it.

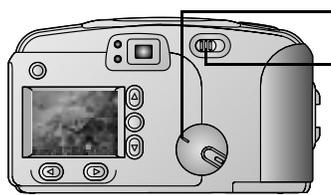

- 1 Set the Mode dial to Review.
- 2 Slide the POWER switch to the right to turn on the camera.

*The last picture taken appears on the LCD screen.*




- 3 Press the MENU button.

*The main Review Menu screen appears.*

- 4 Press a ▲/▼ button until the  icon is highlighted.


- 5 Press the DO-IT button.

*The Slide Show Interval screen appears.*

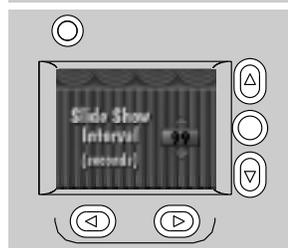

- 6 Use the ▲/▼ buttons to select the number of seconds you want the pictures to appear on the television.

If you want to view a slide show on the camera LCD, press the DO-IT to start and stop the slide show.

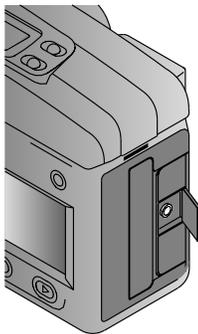

- 7 Insert the video cable into the video-out port on the side of your camera, and connect the other end of the video cable to the video-in port on the television.

- 8 Turn on the television.

You may need to adjust the Video Out setting to NTSC or PAL television signals. See page 49 for details.


- 9 Press the DO-IT button to start and stop the slide show.

---

---

## Viewing Information About a Picture

You can look up specific information about a picture using the Picture Information feature. The information that appears is view-only.

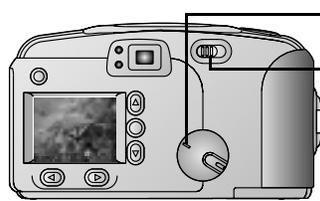

1 Set the Mode dial to Review.

2 Slide the POWER switch to the right to turn on the camera.

*The last picture taken appears on the LCD screen.*



3 Press the MENU button.

*The main Review Menu screen appears.*

4 Press a ▲/▼ button until the  icon is highlighted.

5 Press the DO-IT button.

*The Picture Info screen appears with that picture's information displayed.*



- Quality
- Resolution
- File Name
- Directory Name
- Capture Date/Time
- Flash
- Aperture
- Shutter Speed


The DC280 also displays information on White Balance, Metering, and Exposure Compensation settings for each picture.

6 Press a ◀/▶ button to view information on other pictures.

7 To exit Picture Information, press the DO-IT button.

4



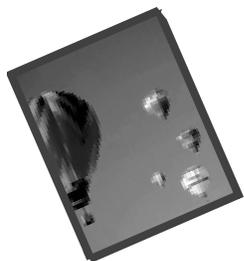

---

---

## 5 Personalizing Your Camera

You can tailor your camera to fit whatever picture-taking needs you have. When you set the camera to Camera Setup, you have the ability to personalize your camera so it performs the way you want, each time you use it. With the camera, you can:




- Set a camera response beep, so you get feedback from the camera when you initiate an action.
- Select a power-save setting to help conserve batteries.
- Access camera information to view a complete history of your camera's use.
- Adjust a language setting, so you can select the language with which you are most comfortable working.
- Format other camera memory cards so they work in your camera.
- Select specific default settings, so your camera is always set for the way you need to use it.

---

---

## Setting a Response Beep

Your camera provides auditory feedback in the form of a beep anytime the SHUTTER button is pressed, or when the camera cannot perform a selected function. If you do not want auditory feedback, you can turn off the beep. This can be especially useful when taking a picture of someone off guard or of wildlife.

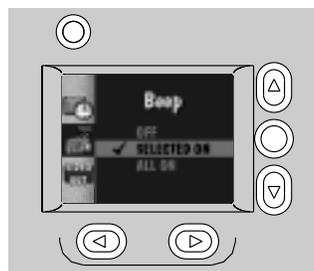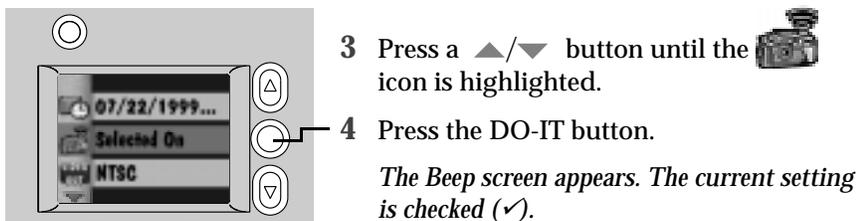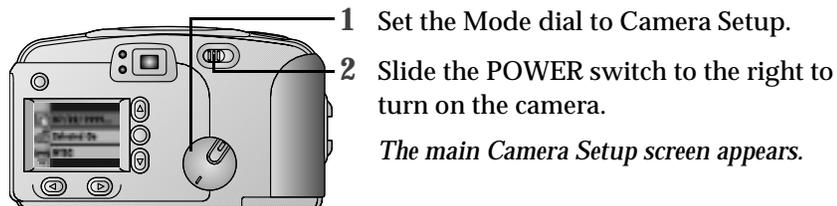



- 5 Press a ▲/▼ button until the Beep option you want is highlighted.
- OFF—provides no auditory feedback.
  - SELECTED ON**—provides auditory feedback when you press the SHUTTER button, as well as any warnings.
  - ALL ON**—provides auditory feedback anytime a button is pressed.
- 6 Press the DO-IT button to accept the changes and return to the main Camera Setup screen.

---

---

## Saving Camera Power

The Power Save feature helps extend battery life by shortening the time that the camera power stays on when not in use. For your convenience, the Power Save setting is activated to help conserve battery power. If situations arise where you need the camera power to stay on for a longer period of inactivity, such as connecting the camera to a computer, turn off the Power Save feature to have more time to work before the camera automatically shuts off.

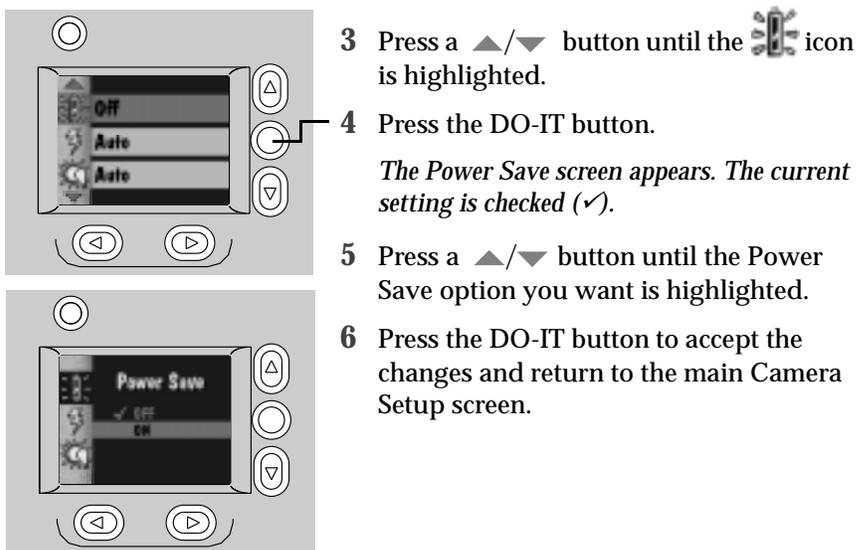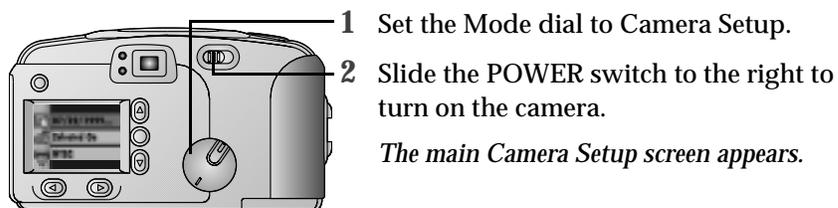


5

---

---

## Viewing Camera Information

Have you ever wondered how many pictures you have taken with your camera or how many times the flash fired? The Camera Information feature keeps a record for you.

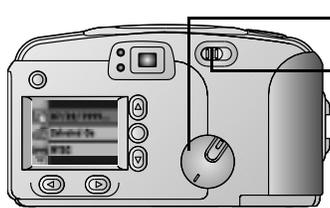


- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.  
*The main Camera Setup screen appears.*



- 3 Press a ▲/▼ button until the  icon is highlighted.
- 4 Press the DO-IT button.  
*The About screen appears.*

The information that appears is view-only and cannot be changed.

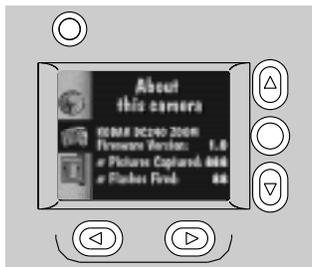


- Firmware Version**—displays the latest firmware version loaded into the camera.
  - # Images Captured**—displays the total number of pictures taken with the camera.
  - # Flash Fired**—displays the total number of times the flash fired in the camera.
- 5 Press the DO-IT button to return to the main Camera Setup screen.

---

---

## Selecting a Language for the Camera

You can select from many different languages for the camera. Once you select a language, the text changes to reflect the language selected.

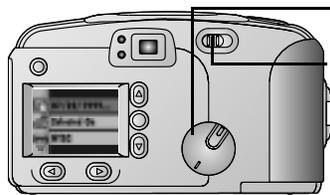

- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*



- 3 Press a ▲/▼ button until the  icon is highlighted.


- 4 Press the DO-IT button.

*The Language screen appears. The current setting is checked (✓).*

- 5 Press a ▲/▼ button until the language you want is highlighted.

*The main Camera Setup screen reappears.*

- 6 Press the DO-IT button to accept the changes and return to the main Camera Setup screen.

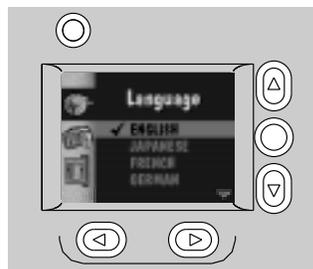

5


---

---

## Formatting Your Camera Memory Card

If you own camera memory cards that have been used in other digital cameras, the card may not be properly formatted for use in your camera, or that data on the card may become corrupted. When these issues arise, your camera indicates that the camera memory card needs to be formatted.

When you format a camera memory card, all of the information on the card is erased. This includes any borders supplied on the card. You can also create and add borders to the camera memory card. For more information, refer to the KODAK DC240/DC280 Border Transfer Application online help or the ReadMe file.

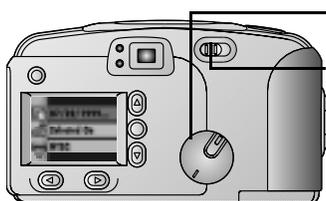

- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*



- 3 Press a ▲/▼ button until the  icon is highlighted.

- 4 Press the DO-IT button.

*The Format Memory Card screen appears.*

- 5 Press a ▲/▼ button until CONTINUE FORMAT is highlighted.

- 6 Press the DO-IT button to format the camera memory card and return to the main Camera Setup screen.




---

---


## Adjusting the Video Out Signal

You can set your camera so it is compatible with NTSC or PAL video signals. The Video Out feature needs to be set correctly if you plan on running a slide show of the pictures from the camera on a television or video monitor. For information on setting up a slide show, see page 40.

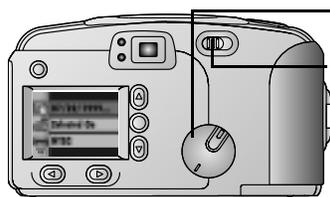


- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*

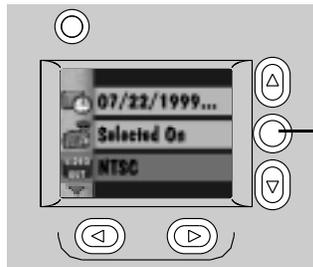

- 3 Press a ▲/▼ button until the  icon is highlighted.
- 4 Press the DO-IT button.

*The Video Out screen appears. The current setting is checked (✓).*

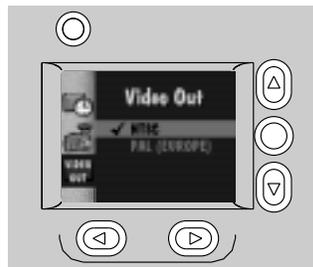

- 5 Press a ▲/▼ button until the video out option you want is highlighted.

- NTSC**—used in most countries except Europe. The United States uses NTSC.
- PAL**—used in European countries.

- 6 Press the DO-IT button to accept the change and return to the main Camera Setup screen.

5

---




---

## Adjusting the Camera Default Settings

You can customize your camera so specific settings are activated automatically each time you turn on the camera. Select settings for Flash, White Balance, Exposure Compensation, Borders, and Effects to suit your particular picture-taking needs.

### Setting a Border Default

You can adjust the camera so your favorite frame or graphic, supplied on the camera memory card is added to each picture you take. This is handy if you take mostly celebration pictures, such as birthdays or children's events. For more information about the Borders feature, see page 23.

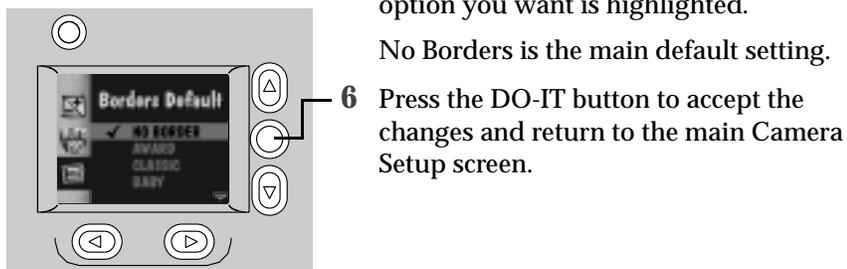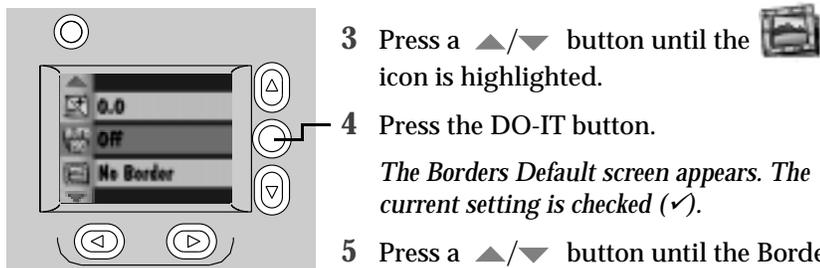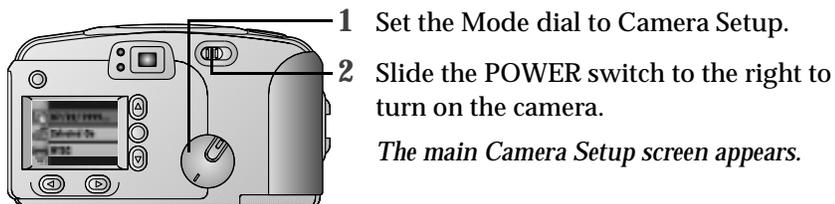


---

---


## Setting a Flash Default

You can adjust your camera so it is set to a specific flash setting every time you turn on the camera. For more information about the Flash setting, see page 15.

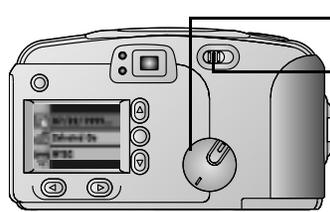

- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*

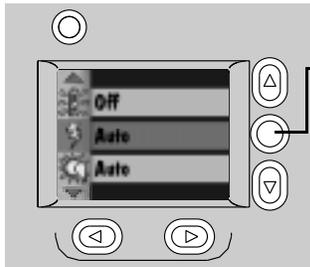

- 3 Press a ▲/▼ button until the ⚡ icon is highlighted.
- 4 Press the DO-IT button.

*The Flash Default screen appears. The current setting is checked (✓).*

- 5 Press a ▲/▼ button until the Flash option you want is highlighted.

- AUTO (Main Default)**—flash fires when needed. Ideal for everyday picture-taking situations.
- FILL**—flash fires every time you take a picture. Ideal for pictures outside under heavy shade.
- RED EYE**—flash fires once so the eyes become accustomed to the flash, then fires again when the picture is taken. Ideal for pictures of people.
- OFF**—flash does not fire. Ideal for taking pictures where flash is prohibited.




- 6 Press the DO-IT button to accept the changes and return to the main Camera Setup screen.

---

---

## Setting a White Balance Default

If you are always using your camera indoors where flash is prohibited, you can set the camera so it is balanced for the type of light source that you take pictures under. For more information about the White Balance feature, see page 27.

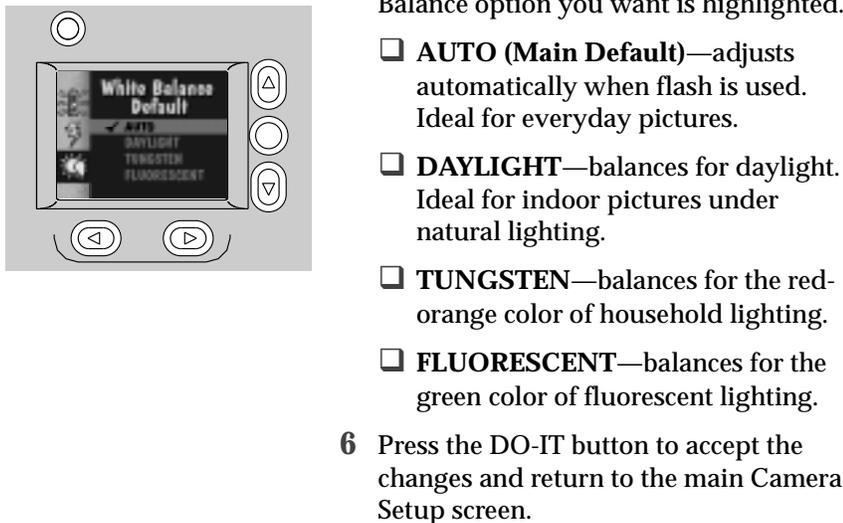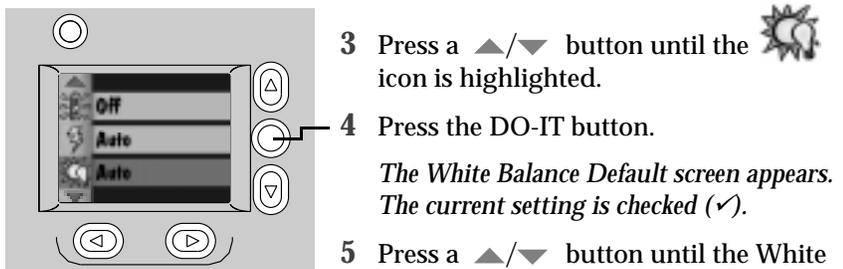
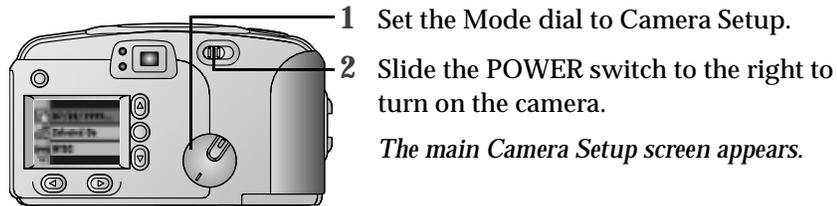


---

---

## Setting an Exposure Compensation Default


You can adjust the Exposure Compensation setting so it is used every time you turn on the camera. For more information about The Exposure Compensation feature, see page 22.

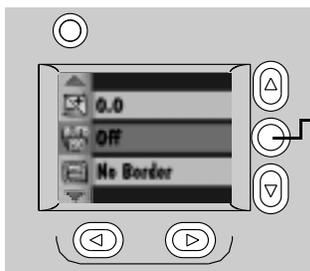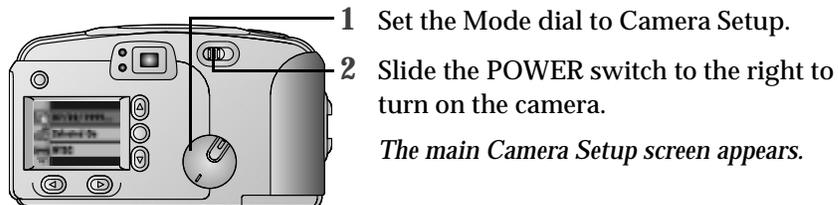

**3** Press a ▲/▼ button until the  icon is highlighted.

**4** Press the DO-IT button.

*The Exposure Compensation Default screen appears.*

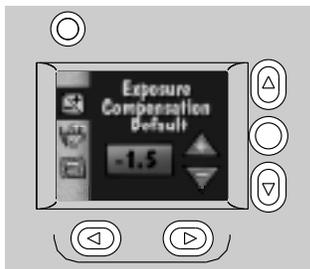

**5** Press a ▲/▼ button until the exposure compensation number you want is highlighted.

If your pictures are too dark, increase (+) the exposure number.

If your pictures are too light, decrease (-) the exposure number.

The main default setting for Exposure Compensation is 0.0.

**6** Press the DO-IT button to accept the changes and return to the main Camera Setup screen.


**5**

---

---


## Setting an Effect Default

If you work for a newspaper or in an office environment where you need to record lecture slides, you can adjust your camera so it takes pictures in black and white, sepia tone, or to highlight text every time you turn on the camera. For more information about the Effects feature, see page 24.

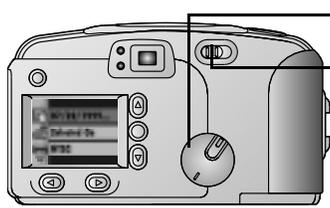

- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.

*The main Camera Setup screen appears.*

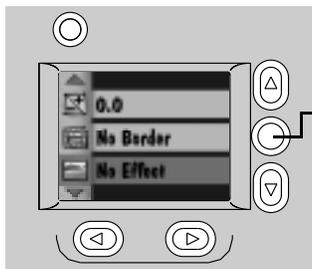

- 3 Press a ▲/▼ button until the  icon is highlighted.

- 4 Press the DO-IT button.

*The Effects Default screen appears. The current setting is checked (✓).*

- 5 Press a ▲/▼ button until the Effects option you want is highlighted.

- No Effect (Main Default)**—captures pictures in full color.
- Black & White**—captures pictures in black-and-white. Ideal for taking pictures for newspapers.
- Sepia**—captures pictures in a red-brown tone. Ideal for giving pictures an antique look.
- Document**—increases picture contrast so text stands out.


- 6 Press the DO-IT button to accept the changes and return to the main Camera Setup screen.

---


---

## Setting an Auto ISO Default (DC280 only)

If you are always using your camera indoors without flash, you can set the camera so it uses a faster shutter speed to help avoid blurry pictures from camera movement. For more information about the Auto ISO feature, see page 29.

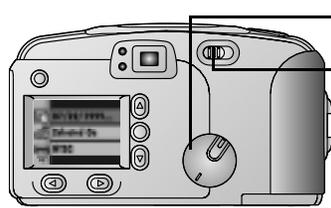

- 1 Set the Mode dial to Camera Setup.
- 2 Slide the POWER switch to the right to turn on the camera.  
*The main Camera Setup screen appears.*

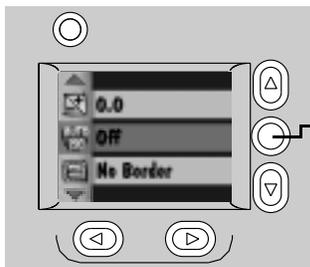


- 3 Press a ▲/▼ button until the  icon is highlighted.

- 4 Press the DO-IT button.

*The Auto ISO Default screen appears. The current setting is checked (✓).*

- 5 Press a ▲/▼ button until the Auto ISO option you want is highlighted.


- OFF (Main Default)**—camera maintains optimal shutter speed ranges. Ideal for everyday pictures.
- ON**—camera increases shutter speed when flash is off. Ideal for indoor pictures in less than optimal lighting.

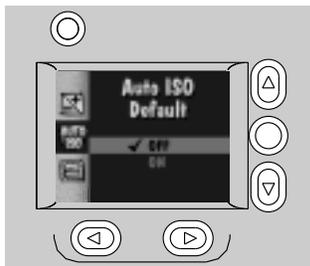

- 6 Press the DO-IT button to accept the changes and return to the main Camera Setup screen.

5



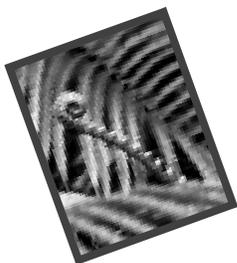

---

---

## 6 Installing Your Software

The KODAK DC240/DC280 Installer Software (Installer) included with your camera contains software for Windows-based personal computers and Macintosh computers. These applications provide a variety of features that let you access and use the pictures stored on the camera memory card. Detailed information on using the software can be found in the online help supplied with each software application.

### Windows-Based System Requirements

- Windows 95, Windows 98, or Windows NT 4.0 operating system.
- Personal computer with Pentium 90-MHz microprocessor (minimum) with CD-ROM drive.
- Color display monitor with a minimum resolution of 640 x 480 (1024 x 768 preferred) and thousands of colors recommended.
- 16 MB or more of available RAM.
- 70 MB of hard disk space available.
- Available serial port, USB port (Windows 98 only), or CF card reader.

6

### Macintosh System Requirements

- PowerPC-based Macintosh computer, with CD-ROM drive.
- Operating system 7.6.1 or later for serial connection. Operating system 8.5.1 or later for USB connection.
- Color display monitor with a minimum resolution of 640 x 480 (1024 x 768 preferred) and 8-bit color (16-bit or 24-bit recommended).
- 16 MB or more of available RAM.
- 70 MB of hard disk space available.
- Available serial port, USB port, or CF card reader.

---

---

## Kodak Software for Windows-Based Computers

There are four Kodak software applications supplied with the camera for use on a Windows-based computer. They are:

- ❑ **KODAK DC240/DC280 Camera Mounter Software (Mounter)**—provides an easy way to view pictures from the camera memory card and copy them to your computer.
- ❑ **KODAK DC240/DC280 Digital Access Software (TWAIN Acquire)**—provides a quick way to view and copy pictures from the camera memory card to a TWAIN-compliant host software program, such as ADOBE Photoshop or ADOBE PhotoDeluxe.
- ❑ **KODAK DC240/DC280 Camera Controls Software (Camera Controls)**—lets you change camera, capture, and communications settings from the computer.
- ❑ **KODAK DC240/DC280 Border Transfer Application (Border)**—lets you convert existing BMP files into the border file format (BDR) and copy the borders to the camera memory card and to the hard disk.

### Software Overview

A brief overview of the software is listed below. Detailed information on the software is available in the online help for each application.

Feature	Mounter	TWAIN Acquire	Camera Controls	Border
View thumbnail images	✓	✓		
Transfer pictures	✓	✓		
Display picture information	✓	✓		
Open pictures on hard drive		✓		
Access Camera Controls	✓	✓	✓	
Take a picture			✓	
Delete pictures	✓		✓	
Format camera memory card	✓		✓	
Add borders to camera memory card				✓
Copy borders to hard disk				✓

---

---

## Kodak Software for Macintosh Computers

There are three Kodak software applications supplied with the camera for use on a Macintosh computer. They are:

- ❑ **KODAK DC240/DC280 Picture Transfer Application (Picture Transfer)**—provides an easy way to view pictures from the camera memory card and copy them to your computer.
- ❑ **KODAK DC240/DC280 Digital Access Software (Plug-In Acquire)**—provides a quick way to view and copy pictures from the camera memory card to any application that supports the ADOBE Photoshop plug-in module, such as ADOBE Photoshop or ADOBE PhotoDeluxe.
- ❑ **KODAK DC240/DC280 Border Transfer Application (Border)**—lets you convert existing BMP and PICT files into the border file format (BDR) and copy the borders to the camera memory card and to the hard disk.

### Software Overview

A brief overview of the software is listed below. Detailed information on the software is available in the online help for each application.

Feature	Picture Transfer	Plug-In Acquire	Border
View thumbnail images	✓	✓	
Transfer pictures	✓	✓	
Display picture information	✓	✓	
Change camera settings		✓	
Take a picture		✓	
Change camera Capture settings		✓	
Delete pictures	✓	✓	
Add borders to camera memory card			✓
Copy borders to hard disk			✓

---

---

## Installing the Software

While the Installer is automatically loading your software, take a few minutes to fill out and send in the camera product registration card. This allows you to receive information regarding software updates and registers some of the products included with the camera.

- 1 Close all other software programs before starting the Installer.
- 2 Place the Installer CD into the CD-ROM drive.
- 3 Load the software.

**On a Windows-based computer**—if Auto Play is enabled, the first install window automatically appears. If the first install window does not automatically appear, choose Run from the Start menu. In the Run dialog box, type the drive letter that contains the CD and type `\setup.exe`. For example: **d:\setup.exe**

**On a Macintosh computer**—double-click the Installer icon.

- 4 Follow the on-screen instructions to install the software.
- 5 If prompted, restart the computer when the software installation is complete.

Detailed information on all the Kodak software is included in the online help for each application.



---

---

## 7 Connecting Your Camera

In order for you to transfer pictures taken with your camera, you first need to connect the camera to your computer. The camera can communicate with your computer using:

- RS-232 serial cable connection for Windows-based computers.
- Serial cable or adapter plug for Macintosh computers.
- Universal Serial Bus (USB) cable connection for both Windows 98-based personal computers and Macintosh computers.
- Card reader. If you do not have a card reader, you can purchase one as an accessory. For details about available accessories, ask a dealer of Kodak products, or visit our Website at <http://www.kodak.com/go/accessories>.

Once the camera is connected to a computer and any required software is installed, you are ready to transfer pictures from the camera to your computer. Refer to the online help for information on each software application supplied with the camera.

7

---


---

## Using a Serial Cable Connection


The most common means of connecting the camera to your computer is by serial cable connection. When connecting the camera, it is a good idea to use a Kodak-specified AC adapter (see page 5).

### Connecting to a Windows-Based Computer

An RS-232 serial cable is provided so you can connect your camera to a Windows-based computer.

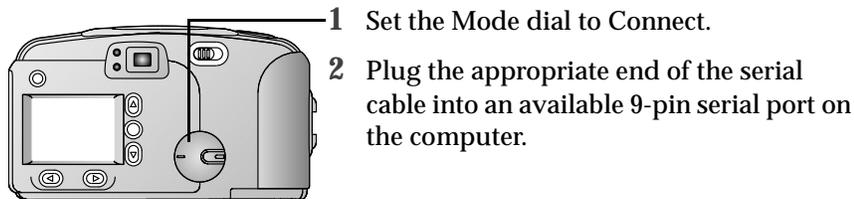


- 1 Set the Mode dial to Connect.
- 2 Plug the appropriate end of the serial cable into an available 9-pin serial port on the computer.

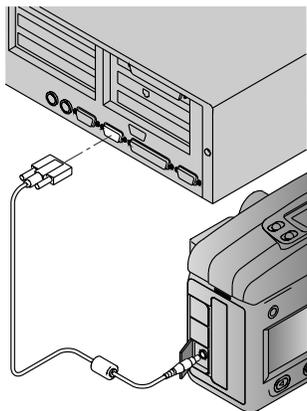

Serial ports are usually labeled COM1 and COM2, or A and B. If your computer has a 25-pin port, you need to use a 9-pin adapter (available at your local computer store) and attach it to the port before attaching the serial cable to the computer.

If the ports are not labeled, see your computer User's Guide for a diagram that illustrates all of the external ports.

- 3 Open the serial/USB port door on the side of the camera.
- 4 Plug the other end of the serial cable into the camera serial port.
- 5 Slide the POWER switch to the right to turn on the camera.

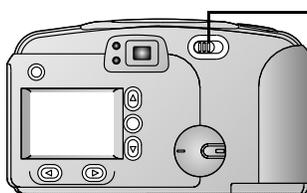


If you get a message on your computer stating that you are not connected, refer to the Serial.PDF document installed with the software, or the online help for troubleshooting information.

---

---


## Connecting to a Macintosh Computer

Either a serial cable for a Macintosh computer or adapter plug for use with the RS-232 serial cable is provided so you can connect your camera through a serial port on a Macintosh computer.

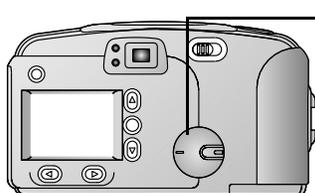

- 1 Set the Mode dial to Connect.
- 2 Connect the serial port adapter plug into the 9-pin end of the serial cable.
- 3 Plug the adapter end of the serial cable into an available serial port on the back of the computer.


If your camera came with a serial cable for a Macintosh computer instead of the serial adapter plug, connect the end of the serial cable labelled MAC into the available serial port on the back of the computer.

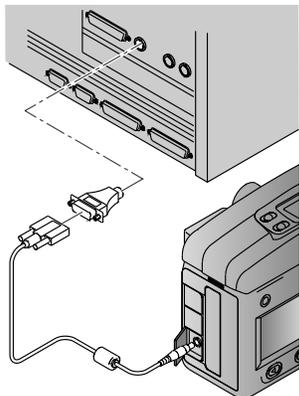

Serial ports on Macintosh computers are usually referred to as modem or printer ports.

If the ports are not labeled, see your computer User's Guide for a diagram that illustrates all of the external ports.

- 4 Open the serial/USB port door on the side of the camera.
- 5 Plug the other end of the serial cable into the camera serial port.

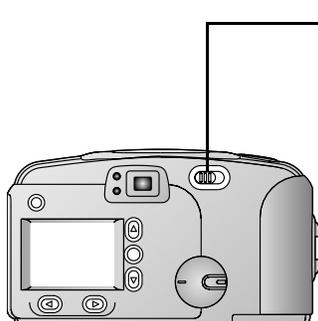

- 6 Slide the POWER switch to the right to turn on the camera.

If you get a message on your computer stating that you are not connected, refer to the Connect.PDF document installed with the software, or the online help for troubleshooting information.


7

---


---

## Using a USB Cable Connection

If you have a personal computer and are running Windows 98, or a Macintosh computer, you may be able to connect the camera using a Universal Serial Bus connection. The USB interface provides an easy and faster alternative to serial cable connection. However, since USB connections are relatively new, Kodak only recommends and supports using the camera with the systems listed above. When connecting the camera, it is a good idea to use a Kodak-specified AC adapter (see page 5).

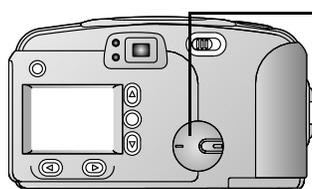


**1** Set the Mode dial to Connect.

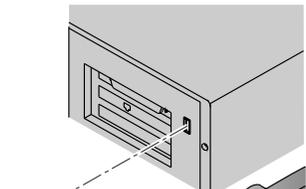

**2** Plug the appropriate end of USB cable into the port on the computer with the USB  symbol.

If the port is not labeled, see your computer User's Guide for a diagram that illustrates all of the external ports.

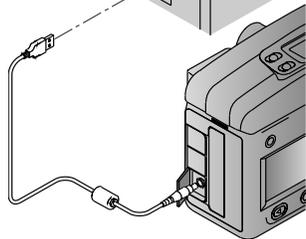


**3** Open the serial/USB port door on the side of the camera.

**4** Plug the other end of the USB cable into the camera serial/USB port.

**5** Slide the POWER switch to the right to turn on the camera.

If you get a message on your computer stating that you are not connected, refer to the USB.PDF document installed with the software, or the online help for troubleshooting information.

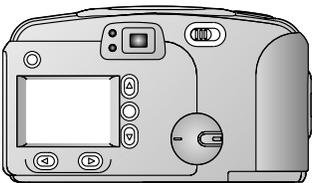

---

---

## Starting the Kodak Software for Windows-Based Computers

With the camera connected to your computer, you are now ready to open and use the software that you installed in Chapter 6. For detailed information on using the software, refer to the online help for each application.

### Opening Mounter Software

- 1 Double-click on the My Computer icon.

*The My Computer window appears.*

- 2 Double-click on the Camera icon.

*The Camera Memory Card window appears listing individual files.*

### Opening Digital Access Software (TWAIN Acquire)

- 1 Open a TWAIN-compliant application, such as ADOBE Photoshop or ADOBE PhotoDeluxe.
- 2 Choose File -> TWAIN Source.
- 3 Select KODAK DC240/DC280 Zoom Acquire.
- 4 Choose File -> TWAIN Acquire.

*The main Digital Access window appears.*

### Opening Camera Controls Software

Double-click on the Camera Control icon on the desktop to open the main Camera Controls window.

### Opening Border Transfer Software

From the Windows Task bar click on Start -> Programs -> DC240/DC280 -> Border Transfer Application.

*The main Border Transfer window appears.*

---

---

## Starting the Kodak Software for Macintosh Computers

With the camera connected to your computer, you are now ready to open and use the software that you installed in Chapter 6. For detailed information on using the software, refer to the online help for each application.

### Opening Picture Transfer Application

- 1** In the KODAK DC240/DC280 Folder, double-click on the Picture Transfer Application folder.

*The Picture Transfer icon appears.*

- 2** Double-click on the Picture Transfer icon.

*The main Picture Transfer window appears.*

### Opening Digital Access Software (Plug-In Acquire)

- 1** Open a Plug-In-compliant application, such as ADOBE Photoshop or ADOBE PhotoDeluxe.
- 2** Choose File -> Acquire -> KODAK DC240/DC280 Acquire.

*The main Digital Access window appears.*

### Opening Border Transfer Software

- 1** In the DC240/DC280 Folder, double-click on the Border Transfer Application folder.
- 2** Double-click on the Border Transfer icon.

*The main Border Transfer window appears.*

---

---

## Navigating to Your Pictures

Pictures are stored on the camera memory card according to a standard agreed upon by many camera manufacturers. This standard allows you to use the camera memory card in different cameras.


Each Kodak application supplied on the Installer CD guides you to your pictures on the camera memory card; however, if you use a card reader to retrieve your pictures or you cannot locate your pictures using the software provided, the following description of the camera file structure may be helpful.

- ❑ Root level folder is named \DCIM. Each time you turn on the camera or insert a camera memory card, any empty folders within the \DCIM folder are removed.
- ❑ Typically, all pictures taken with the camera are stored in the \DCIM\100DC240 folder for the DC240 camera or \DCIM\100DC280 folder for the DC280 folder.
- ❑ Pictures are numbered in the order in which they are taken. The first picture is named DCP\_0001.JPG, which is stored in the \DCIM\100DC240 folder for the DC240 or \DCIM\100DC280 folder for the DC280.
- ❑ When you transfer pictures to the computer, or delete pictures from the camera memory card, the camera uses consecutive numbers for subsequent pictures. For example, if the last picture taken was DCP\_0007.JPG, the next picture is DCP\_0008.JPG.
- ❑ When you insert the camera memory card into another DC240/DC280 camera, the next picture is derived by incrementing either the highest existing picture number, or the highest picture number previously taken by that camera.

Once you take picture DCP\_9999.JPG in the \DCIM\100DC240 folder or \DCIM\100DC280 folder, subsequent pictures will appear in a new folder (\DCIM\101DC240 or \DCIM\101DC280) on the camera memory card, beginning with picture DCP\_0001.JPG.

If you use the camera memory card in a camera other than the DC240/DC280 camera, and that camera manufacturer adheres to this file structure standard, the \DCIM folder will contain a folder named by that camera. Any pictures taken with that camera are stored in the folder using the naming conventions established by the manufacturer. For more information, refer to the documentation that accompanied that camera.



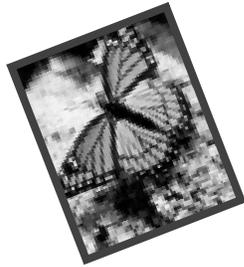

---

---

# 8 Tips and Troubleshooting

There may be times when questions arise from using your camera. This chapter can point you in the right direction for finding the answers quickly, so you can continue using your camera.

## Connecting with Your Camera

If you are getting messages on your computer that state you are not connected, refer to the PDF documents installed with the software, or the online help for troubleshooting information. If you are connecting to a:

- Windows-based Serial connection—refer to Serial.PDF
- Windows-based USB connection—refer to USB.PDF
- Macintosh computer—refer to Connect.PDF

## Communicating with the Computer

If the camera cannot communicate with your computer you may need to adjust the port and/or speed settings. If you are using a Windows-based computer, the port and speed setting can be adjusted using the KODAK DC240/DC280 Camera Controls Software, or the KODAK DC240/DC280 Digital Access Software (TWAIN Acquire). If you are using a Macintosh computer, the port and speed settings can be adjusted using the KODAK DC240/DC280 Digital Access Software (Plug-In Acquire), or the KODAK DC240/DC280 Picture Transfer Application. Information on using these applications can be found in the online help for each software application.

8

## Adjusting Your Monitor for Better Viewing

Your monitor display settings may need to be adjusted to view pictures from the camera. Refer to your computer's User's Guide for information on how to adjust your monitor's display settings.

---

---

## Getting Better Results from Your Printer

You may notice that the colors on your computer screen do not always match those in your documents or prints. This is because monitors and printers use different color systems.

You may be able to achieve more predictable results in your printed documents by:

- Improving the quality of your paper. Copier paper may not offer the same results as coated paper or paper made especially for inkjet printers.
- Adjusting your printer software settings.
- Using fresh ink cartridges. Do not use ink cartridges beyond their life expectancy.

Remember these few tips when it comes time to print your document:

- Color printing takes more time. More complex pictures increase the printing and drying time.
- Color printing is more memory intensive than black and white. If your computer gives you an insufficient memory message, you may need to close some applications, change some settings, or add additional memory.
- Color prints may not photocopy as clearly as black and white. If you plan to photocopy documents, you should consider printing the document in grayscale. This setting is usually changed from the Print dialog box.
- Resizing the picture to a smaller size or printing the picture on glossy paper may increase the quality of the print.

To improve the quality of your prints, you may want to print your pictures on KODAK Inkjet Snapshot Paper (Snapshot Paper). Snapshot Paper is made to work with most inkjet printers to give you clearer, crisper, and more detailed images on your prints.

---

---

## Troubleshooting

If you are experiencing difficulties with your camera, check the following table for possible solutions.

Additional technical information is available in the ReadMe file located in the KODAK DC240/DC280 folder.

<b>Computer Monitor</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
The image on your monitor is jagged or inappropriately colored.	Monitor is not set correctly.	Adjust your monitor display settings. Refer to your computer's User's Guide for details.
<b>Camera Memory Card</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
The camera does not recognize your camera memory card.	The camera memory card may not be CompactFlash certified.	Purchase a certified CompactFlash camera memory card. See page 6.
	The camera memory card may be corrupt or formatted for use in other digital cameras.	Reformat the camera memory card. See page 48.
	Camera memory card is not inserted in camera.	Insert a camera memory card. See page 6.

<b>Camera Communications</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Computer cannot communicate with the camera.	Camera power is off.	Turn on the camera. See page 2.
	The Mode dial is not set to Connect.	Set the Mode dial to Connect.
	Some Advanced Power Management utilities on laptops can turn off ports to save battery life.	See the Power Management section of your laptop User's Guide to disable this feature.
	Conflict with another serial device, such as a modem or PDA	Refer to the serial communication or corresponding section of your computer modem, PDA, and/or operating system User's Guide.
	Camera is not connected to serial or USB cable, or cable is not connected to the computer serial or USB port.	Connect serial or USB cable to camera and computer port. Refer to the online help, or see Chapter 7, "Connecting Your Camera" on page 61.
	Port settings in software may be set to the incorrect COM port.	Change the COM port settings to Auto-Search or to a specific COM port. See the online help.

<b>Camera</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Ready light does not turn on and the camera does not work.	Batteries are low or dead.	Batteries need to be replaced (see page 2), or recharged (see page 4).
	Camera is not turned on.	Turn on the camera. See page 2.
Red ready light comes on and camera does not take a picture.	Batteries are low.	Batteries need to be replaced (see page 2), or recharged (see page 4).
	Camera memory card is full	Transfer pictures to your computer, delete pictures on the card (see page 39), or insert a card with available memory (see page 6).
Red ready light is blinking.	Flash is not charged.	Wait for the flash to charge.
Green ready light is blinking and camera takes a picture.	Auto Focus is not locked	Release the SHUTTER button and recompose you picture. See page 11.
Green ready light is blinking and camera does not take a picture	Picture is being processed and saved to camera memory card.	Wait for the picture to complete processing.


<b>Camera</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
SHUTTER button does not work.	Camera is not turned on.	Turn on the camera. See page 2.
	Mode dial is not set to Capture.	Set the Mode dial to Capture.
	Ready light is blinking. Camera is processing picture.	Wait until Ready light stops blinking before attempting to take another picture.
	The Status Display reads <b>Full</b> . The camera memory card is full.	Transfer pictures to your computer, delete pictures on the card (see page 39), or insert a card with available memory (see page 6).
Camera does not turn on.	Batteries are not properly installed.	Remove and reinstall the batteries. See page 2.
	Batteries are low or dead.	Batteries need to be replaced (see page 2), or recharged (see page 4).

<b>Camera</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Part of the picture is missing.	Something was blocking the lens when the picture was taken.	Keep hands, fingers, or other objects away from the lens when taking pictures.
	Your eye or the picture was not centered correctly in the viewfinder.	Leave space around subject when centering picture in viewfinder.
	Camera Close-Up is activated without using Preview.	Activate Preview when using the Close-Up feature. See page 17.
Picture is too dark.	Flash is not on or did not function.	Turn on the flash. See page 15. Check the flash default setting. See page 51.
	The subject is too far away for the flash to have an effect.	Move so there is no more than 13 ft (4.0 m) between the camera and the subject.
	The subject is in front of a bright light.	Change your position so the light is not behind the subject.
	The Exposure Compensation is set incorrectly.	Increase the Exposure Compensation. See page 22. Check the Exposure Compensation default setting. See page 53.
	The camera Metering setting is set to the Center-Weighted.	Change the Metering setting to Multi-Pattern. See page 28.

<b>Camera</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Picture is too light.	The flash is not needed.	Change to Auto flash. See page 15. Check the flash default setting. See page 51.
	The subject is too close when the flash was used.	Move so there is at least 1.6 ft (0.5 m) between the camera and the subject.
	The light sensor is covered.	Hold the camera so your hands or other objects do not cover the light sensor.
	The Exposure Compensation is set incorrectly.	Decrease the Exposure Compensation. See page 22. Check the Exposure Compensation default setting. See page 53.
Stored pictures are damaged.	The camera memory card was removed when the Ready light was blinking.	Make sure the Ready light is not blinking before removing the card.
Picture is black and white, sepia toned, or has too much contrast.	The Effects setting is set incorrectly.	Change the Effects setting to No Effects. See page 24. Check the Effects default setting. See page 54.

<b>Camera</b>		
<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Pictures remaining number does not decrease after taking a picture.	The image Resolution and Quality settings does not take up sufficient space to decrease the picture remaining number.	The camera is operating normally. Continue taking pictures.
Picture is not clear.	The lens is dirty.	Clean the lens. See page 90.
	Subject too close when taking picture	Stand at least .82 ft (.25m) in wide angle, 1.6 ft (.5m) in telephoto.
	Subject or the camera moved while the picture was taken.	Hold camera steady until the picture is taken.
	The subject is too far away for the flash to be effective.	Move so the subject is less than 13 ft (4.0 m) away.
	The Sharpness setting may be set incorrectly.	Change the Sharpness setting to Standard. See page 30.
Picture is tinted green, blue, or red-orange.	The White Balance setting is set incorrectly.	Change the White Balance setting to Auto. See page 27. Check the White Balance default setting. See page 52.

<b>LCD Messages</b>		
<b>Message</b>	<b>Cause</b>	<b>Solution</b>
Memory Card is Full.	Memory card is full and cannot hold additional pictures	Transfer pictures to your computer, delete pictures on the card (see page 39), or insert a card with available memory (see page 6).
No Memory Card Available.	There is no memory card inserted in the camera.	Insert a memory card into the camera. See page 6.
Memory Card is Corrupted/Unreadable.	Memory card is corrupted.	Insert a new (see page 6) or reformat the memory card (see page 48).
Camera needs service.	The camera is malfunctioning.	Have the camera serviced.

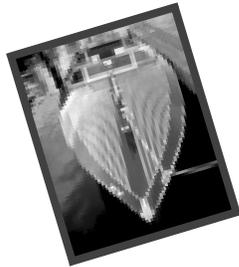

---

---

## 9 Where to Get Help

If you need help with your camera, it is available from a number of resources:

- Chapter 8 “Tips and Troubleshooting”
- Software’s manufacturer
- Product information by fax
- Place of purchase
- World Wide Web
- Technical support

### Software Help

Help with any **software** packaged with your camera can be obtained from the online help, or by contacting the manufacturer.

### Online Services

Contact Kodak via:

- World Wide Web <http://www.kodak.com>  
(click on Service and Support)
- America Online (keyword) KODAK
- CompuServe GO KODAK



### Faxed Information

Kodak offers automated support by fax:

- U.S. and Canada 1-800-295-5531
- Europe 44-0-131-458-6962
- U.K. 44-0-131-458-6962

---

---

## Customer Support

If you have questions concerning the operation of Kodak software or the camera, you may speak directly to a customer support representative. Have the camera connected to your computer, its serial number ready, and be at your computer when you call.

- ❑ **U.S. and Canada**—call toll free, 1-888-375-6325, between the hours of 9:00 a.m. and 8:00 p.m. (Eastern Standard Time) Monday through Friday.
- ❑ **Europe**—call the Kodak Digital Imaging Support Centre toll free number associated with your location, or the U.K. toll line, 44-0-131-458-6714, between the hours of 09.00 and 17.00 (GMT/ CET) Monday through Friday.
- ❑ **Outside the U.S., Canada, and Europe**—call the number on the following pages that is associated with your location.

<b>Country</b>	<b>Help number</b>	<b>Fax</b>
Argentina	54-1-808-300	54-1-808-3328
Australia	1-800-674-831	61-3-9353-2092
Austria	0179-567-357	44-0-131-458-6962
Belgium	02-713-14-45	44-0-131-458-6962
Brazil	0-800-15-0000	55-12-331-8571
Caribbean	78-7-757-5500	78-7-757-8760
Chile	56-2-697-2000	56-2-697-0310
China-Shanghai	8621-64720888	8621-64726582
China-Beijing	8610-63471155	8610-63475641
Colombia	57-1-629-0266	57-1-629-0673
Denmark	3-848-71-30	44-0-131-458-6962
Dominican Republic	809-563-1252	809-563-1264
Egypt	20-2-394-2205	20-2-393-1119
Eire	01-407-3054	44-0-131-458-6962
France	01-55-1740-77	44-0-131-458-6962
Finland	0800-1-17056	44-0-131-458-6962
Germany	069-5007-0035	44-0-131-458-6962
Greece	00800-44125605	44-0-131-458-6962
Hong Kong	852-2564-9777	852-2564-9753

<b>Country</b>	<b>Help number</b>	<b>Fax</b>
Hungary	36-1-269-71-17	36-1-269-71-13
India	91-22-617-5823	91-22-617-6004
Ireland	1-800-409391	44-0-131-458-6962
Italy	02-696-334-52	44-0-131-458-6962
Japan	81-3-5488-2390	81-3-5488-4512
Korea	82-2-708-5400	82-2-708-5500
Latin America	1-305-267-4700	1-305-267-4780
Lebanon	961-1-883822	961-1-881726
Malaysia	60-3-757-2722	60-3-755-5919
Mexico	52-5-449-4300	52-5-449-4400
Middle East	971-4-444-910	971-4-447-059
Netherlands	020-346-9372	44-0-131-458-6962
New Zealand	0800-500-135	64-9-302-8637
Norway	23-16-21-33	44-0-131-458-6962
Panama	52-3-678-6200	52-3-678-6210
Peru	51-1-224-8610	51-1-224-8605
Philippines	63-2-810-0331	63-2-816-6718
Portugal	351-1-4149-500	351-14194-321
Russia	7-095-929-9166	7-095-929-9170
Singapore	65-470-9875	65-479-8397
South Africa	27-11-804-2852	27-11-804-5013
Spain	91-749-76-53	44-0-131-458-6962
Sweden	08-587-704-21	44-0-131-458-6962
Switzerland	01-838-53-51	44-0-131-458-6962
Taiwan	886-2-893-8210	886-2-895-1069
Thailand	66-2-271-3040	66-2-279-5073
Turkey	90-216-342-3332	90-216-343-6743
U.K.	0870-2430270	44-0-131-458-6962
Uruguay	59-2-92-0473	59-2-92-1796
Venezuela	58-2-903-1111	58-2-943-2081





---

---

## 10 Warranty and Regulatory Information

### Warranty Time Period

Kodak warrants the KODAK DC240 Zoom Digital Camera and KODAK DC280 Zoom Digital Camera to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

### Warranty Repair Coverage

This warranty will be honored within the geographical location that the product was purchased.

If the equipment does not function properly during the warranty period due to defects in either materials or workmanship, Kodak will, at its option, either repair or replace the equipment without charge, subject to the conditions and limitations stated herein. Such repair service will include all labor, as well as any necessary adjustments and/or replacement parts.

If replacement parts are used in making repairs, these parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire system, it may be replaced with a remanufactured system.

Kodak will also provide telephone assistance during the warranty period.

---

---

## Limitations

WARRANTY SERVICE WILL NOT BE PROVIDED WITHOUT DATED PROOF OF PURCHASE. PLEASE RETURN THE WARRANTY REGISTRATION CARD WITHIN 30 DAYS OF PURCHASE.

THIS WARRANTY BECOMES NULL AND VOID IF YOU FAIL TO PACK YOUR DC240/DC280 CAMERA IN A MANNER CONSISTENT WITH THE ORIGINAL PRODUCT PACKAGING AND DAMAGE OCCURS DURING PRODUCT SHIPMENT.

THIS WARRANTY DOES NOT COVER: CIRCUMSTANCES BEYOND KODAK'S CONTROL; SERVICE OR PARTS TO CORRECT PROBLEMS RESULTING FROM THE USE OF ATTACHMENTS, ACCESSORIES OR ALTERATIONS NOT MARKETED BY KODAK; SERVICE REQUIRED AS THE RESULT OF UNAUTHORIZED MODIFICATIONS OR SERVICE; MISUSE, ABUSE; FAILURE TO FOLLOW KODAK'S OPERATING, MAINTENANCE OR REPACKAGING INSTRUCTIONS; OR FAILURE TO USE ITEMS SUPPLIED BY KODAK (SUCH AS ADAPTERS AND CABLES).

KODAK MAKES NO OTHER WARRANTIES, EXPRESS, IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE FOR THIS EQUIPMENT OR SOFTWARE.

REPAIR OR REPLACEMENT WITHOUT CHARGE ARE KODAK'S ONLY OBLIGATION UNDER THIS WARRANTY. KODAK WILL NOT BE RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE PURCHASE, USE, OR IMPROPER FUNCTIONING OF THIS EQUIPMENT REGARDLESS OF THE CAUSE. SUCH DAMAGES FOR WHICH KODAK WILL NOT BE RESPONSIBLE INCLUDE, BUT ARE NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, DOWNTIME COSTS, LOSS OF USE OF THE EQUIPMENT, COST OF ANY SUBSTITUTE EQUIPMENT, FACILITIES OR SERVICES, OR CLAIMS OF YOUR CUSTOMERS FOR SUCH DAMAGES.

DEPENDING ON YOUR GEOGRAPHICAL LOCATION, SOME LIMITATIONS AND EXCLUSIONS MAY NOT APPLY.

---

---

---

## Application Support

For application specific support, contact your reseller, systems integrator, software manufacturer, or dealer.

## How to Obtain Service

Visit us on the Internet at <http://www.kodak.com>.

Please refer to the Chapter 9 “Where to Get Help” on page 79 for the support number designated to your location.

When returning a camera for repair, pack the camera in its original packaging materials. A problem report should also be enclosed with the equipment. If the original packaging has been discarded or is not available, packaging will be at the owner's expense.

Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no other warranty or liability exists beyond the information contained above, even though defect, damage or loss may be caused by negligence or other act.

To obtain warranty repair service contact your local Kodak representative. For assistance, refer to Chapter 9 “Where to Get Help” on page 79 for information.

---

---

## Regulatory Information

### FCC Compliance and Advisory

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

### Canadian DOC Statement

**DOC Class B Compliance**—This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the radio interference regulations of the Canadian Department of Communications.

**Observation des normes-Class B**—Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Classe B prescrites dans les règlements sur le brouillage radioélectrique édictés par le Ministère des Communications du Canada.

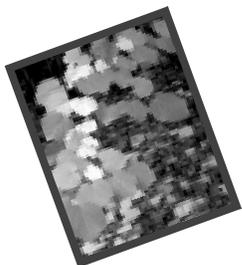

---

---

# 11 Appendix

This appendix serves as a resource for specific technical information and care for your camera, and contains the following information:

- Original default settings.
- Camera Specifications.
- Care and maintenance.
- Battery usage guidelines.

## Original Camera Default Settings

Your camera is set to these settings when you take the camera out of the box for the first time.

<b>Feature</b>	<b>Setting</b>
Digital Zoom	Off
Flash	Auto
Infinity Focus/Close-Up	Off
Self-Timer	Off
Preview	Off
Quickview	On
Exposure Compensation	0.0
Quality	Best
Resolution	High
Date Stamp	Off
Auto ISO (DC280)	Off
White Balance	Auto
Metering	Multi-Pattern
Exposure Lock	Off
Borders	Off
Effects	Off

## DC240 Camera Specifications

DC240 Camera		
<b>Pixel Resolution</b>	<b>CCD</b>	1344 x 971=1.31 millions of pixels (total number of pixels)
	<b>High</b>	1280 x 960=1,228,800
	<b>Standard</b>	640 x 480=307,200
<b>Color</b>		24-bit, millions of colors
<b>Picture File Format</b>		Exif version 2.1 (JPEG base)
<b>Picture Storage</b>		External memory only: ATA compatible CompactFlash card
<b>Viewfinder</b>		Real image
<b>ASA/ISO Sensitivity</b>		130
<b>Flash Range</b>	<b>Wide</b>	1.6 ft to 13.1 ft (0.5 to 4.0 m)
	<b>TelePhoto</b>	1.6 ft to 8.2 ft (0.5 to 2.5 m)
<b>Lens</b>	<b>Type</b>	Optical quality glass
	<b>Maximum Aperture</b>	<b>Wide:</b> F/2.8 <b>TelePhoto:</b> F/4.5
	<b>Zoom</b>	6X: 3X Optical zoom 2X Digital zoom
	<b>Focal Length</b>	39 to 117 mm (equivalent to 35mm camera) 6 to 18 mm (actual)
	<b>Focus Distance</b>	<b>Wide/TelePhoto:</b> 1.6 ft (0.5 m) to infinity <b>Close-Up:</b> 0.82 ft (0.25 m) to 1.6 ft (0.5 m)
<b>Power</b>	<b>Batteries</b>	AA size 1.5-volt alkaline, or AA size 1.2-volt Ni-MH rechargeable
	<b>DC Input</b>	Kodak-specified AC adapter
<b>Tripod Socket</b>		.25 in. (.006 m) threaded
<b>Video Out</b>		NTSC or PAL
<b>Dimensions</b>	<b>Width</b>	5.2 in. (133 mm)
	<b>Length</b>	2.0 in. (51 mm)
	<b>Height</b>	3.0 in. (76 mm)
<b>Weight</b>		11.6 oz. (328 g) without batteries
<b>Operating Temperature</b>		32 to 104° F (0 to 40° C)

## DC280 Camera Specifications

DC280 Camera		
<b>Pixel Resolution</b>	<b>CCD</b>	1901 x 1212 = 2.3 millions of pixels (total number of pixels)
	<b>High</b>	1760 x 1168=2,055,680
	<b>Standard</b>	896 x 592=530,432
<b>Color</b>		24-bit, millions of colors
<b>Picture File Format</b>		Exif version 2.1 (JPEG base)
<b>Picture Storage</b>		External memory only: ATA compatible CompactFlash card
<b>Viewfinder</b>		Real image
<b>ASA/ISO Sensitivity</b>		70
<b>Flash Range</b>	<b>Wide</b>	1.6 ft to 9.8 ft (0.5 to 3.0 m)
	<b>TelePhoto</b>	1.6 ft to 7.9 ft (0.5 to 2.4 m)
<b>Lens</b>	<b>Type</b>	Optical quality glass
	<b>Maximum Aperture</b>	<b>Wide:</b> F/3 <b>TelePhoto:</b> F/3.8
	<b>Zoom</b>	6X: 2X Optical zoom 3X Digital zoom
	<b>Focal Length</b>	30 to 60 mm (equivalent to 35mm camera) 6.5 to 13 mm (actual)
	<b>Focus Distance</b>	<b>Wide/TelePhoto:</b> 1.6 ft (0.5 m) to infinity <b>Close-Up:</b> 0.82 ft (0.25 m) to 1.6 ft (0.5 m)
<b>Power</b>	<b>Batteries</b>	AA size 1.5-volt alkaline, or AA size 1.2-volt Ni-MH rechargeable
	<b>DC Input</b>	Kodak-specified AC adapter
<b>Tripod Socket</b>		.25 in. (.006 m) threaded
<b>Video Out</b>		NTSC or PAL
<b>Dimensions</b>	<b>Width</b>	5.2 in. (133 mm)
	<b>Length</b>	2.0 in. (52 mm)
	<b>Height</b>	3.0 in. (76 mm)
<b>Weight</b>		12.1 oz. (342 g) without batteries
<b>Operating Temperature</b>		32 to 104° F (0 to 40° C)

---

---

## General Maintenance and Safety

- ❑ To keep from damaging your camera, avoid exposing it to moisture and extreme temperatures.
- ❑ Clean the outside of the camera by wiping with a clean, dry cloth. Never use harsh or abrasive cleaners or organic solvents on the camera or any of its parts.
- ❑ Do not allow any chemicals, such as suntan lotion to come into contact with the painted surface of the camera.
- ❑ Never disassemble or touch the inside of the camera. This could result in electrical shock.
- ❑ If you notice smoke or a strange smell coming from the camera, immediately turn off the camera, wait a few minutes until the camera cools, and then remove the batteries.
- ❑ Clean the lens and back LCD screen:

Do not use cleaning solutions unless they are designed specifically for camera lenses. **Do not wipe the camera lens or LCD screen with chemically treated eyeglass lens tissue as it may scratch the lens.**

- 1** Blow gently on the lens or LCD screen to remove dust and dirt.
- 2** Moisten the lens or LCD screen by breathing lightly on it.
- 3** Wipe the lens or LCD screen gently with a soft, lint-free cloth or an untreated lens-cleaning tissue.

Service agreements are available in some countries. Please contact a dealer of Kodak products for more information.

---

---

## Using Your Batteries

- ❑ Kodak recommends KODAK Photolife AA Alkaline Batteries, or KODAK Photolife AA Ni-MH Rechargeable Batteries for use in the camera.
- ❑ Remove the batteries when the camera is stored for extended periods of time.
- ❑ Always follow your battery manufacturer's directions fully. Do not attempt to disassemble, short circuit, or subject the battery to high temperature or fire.
- ❑ Your camera has been designed to operate correctly using a variety of AA-size batteries currently available. These include 1.5-volt alkaline and rechargeable 1.2-volt Nickel Metal Hydride (Ni-MH).
- ❑ Replace all batteries of a set at the same time. New batteries should not be mixed with used ones. Do not mix rechargeable and nonrechargeable batteries. Do not mix alkaline or Ni-MH types of batteries. Do not mix different grades or brands of batteries. Failure to observe this precaution may result in some batteries in a set being driven beyond their normal exhaust point and increase their possibility of leakage.
- ❑ NOT ALL BATTERIES ARE CREATED EQUAL! Battery life depends significantly on age, usage conditions, type, brand, and camera. Digital camera requirements are very demanding on batteries. Not all batteries perform well under these challenging conditions. In Kodak lab tests, Ni-MH rechargeable batteries delivered outstanding results in a variety of conditions. Ni-MH batteries are designed for high-demand devices, such as digital cameras, and do not exhibit the "memory" effects seen with other rechargeable technologies.
- ❑ If you elect to use alkaline batteries in your camera, you will obtain better performance from "photo-flash grade" alkaline batteries, such as KODAK PHOTOLIFE alkaline batteries. These types of batteries last more than twice as long in digital cameras as ordinary alkaline batteries. Alkaline batteries are not rechargeable, do not attempt to recharge them in the battery charger.
- ❑ When using your camera on battery power, we recommend you limit continuous LCD Preview or Review to less than 10-minutes per session. If you are using the camera for longer periods, it is recommended that you do so with the camera powered by the AC adapter.

- 
- 
- ❑ When disposing of batteries, follow the manufacturer's instructions and any local and national regulations. Kodak suggests customers take advantage of any community battery recycling programs that may exist in your area. Contact your local waste remover or recycler for details.



Caution Hot Surface

- ❑ When removing batteries, allow to cool before touching, since the batteries may be hot.

#### Battery Charger Tips:

For charging Ni-Cd or Ni-MH batteries only, with a maximum of 4 cells, and a maximum charge of 1450mAh.

Do not charge nonrechargeable batteries.

Endast för att ladda Ni-Cd eller Ni-MH batterier, med maximalt 4 celler och en maximal laddning av 1450mAh.

Återladda inte batterier som inte är laddningsbara.

---

---

# Index

## A

---

AC adapter 5  
adapter  
    AC 5  
    serial 63  
adjusting  
    auditory feedback 44  
    auto ISO 29  
    border default 50  
    borders 23  
    camera exposure 22  
    clock 7  
    date stamp 19  
    digital zoom 12  
    effects 24  
    exposure compensation 22  
    exposure default 53  
    flash 15  
    flash default 51  
    frames 23  
    ISO default 55  
    language 47  
    LCD brightness 8  
    metering 28  
    monitor 69  
    power save 45  
    quality 25  
    resolution 26  
    response beep 44  
    sharpness 30  
    video out 49  
    white balance 27  
    white balance default 52  
    zoom 12

## appendix

    battery guidelines 91  
    factory default 87  
    maintenance 90  
    safety 90  
    specifications 88, 89  
artificial lighting 27  
ASA/ISO 29  
auditory feedback 44  
auto flash 15  
auto focus 11  
auto ISO  
    as default 55  
    setting 29

## B

---

balance 27  
bar, memory 34  
batteries  
    checking 3  
    guidelines 91  
    loading 2  
    rechargeable 4  
    tips 91  
battery charger 4  
beep 44  
best quality 25  
better quality 25  
black-and-white  
    as default 54  
    pictures 24  
border  
    adding to picture 23  
    as default 50

---

---

brightness, LCD 8

buttons

- close-up 17
- flash 15
- infinity focus 16
- self-timer 18
- shutter 11
- T zoom 12
- telephoto 12
- W zoom 12
- wide angle 12
- zoom 12

C

---

- camera information 46
- camera language 47
- camera memory card
  - formatting 48
  - inserting and removing 6
  - logo 6
- camera specifications 88, 89
- cancelling print order 37
- capturing a picture 11
- card, camera memory
  - formatting 48
  - inserting and removing 6
  - logo 6
- care 90
- center-weighted metering 28
- checking batteries 3
- clock, setting 7
- close-up 17
- CompactFlash card
  - formatting 48
  - inserting and removing 6
  - logo 6
- compliance, FCC 86
- connecting
  - help 69
  - serial cable, Macintosh computer 63

- serial cable, Windows-based computer 62
- USB, Macintosh computer 64
- USB, Windows-based computer 64

- controls, zoom 12
- customer support number 80

D

---

- date stamp 19
- daylight balance 27
- default
  - auto ISO 55
  - border 50
  - effect default 54
  - exposure 53
  - factory 87
  - flash 51
  - white balance 52
- deleting
  - all pictures 39
  - in quickview 14
  - picture just taken 20
  - quick picture delete 13
- digital zoom 12
- directory naming, pictures 41
- document
  - as default 54
  - pictures 24

E

---

- effect default 54
- exposure
  - compensation 22
  - default 53
  - lock 31

---

---

---

## F

---

factory default 87  
FCC compliance 86  
feedback, auditory 44  
file naming, pictures 41  
files, navigating 67  
fill flash 15  
filmstrip 34  
flash  
    auto 15  
    default setting 51  
    fill 15  
    off 15  
    red-eye 15  
fluorescent balance 27  
focus, auto 11  
focus, infinity 16  
formatting camera memory card  
    48  
frames, adding to picture 23

## G

---

good quality 25  
guidelines, batteries 91

## H

---

help  
    camera care, camera 90  
    communicating with  
        computer 69  
    connecting 69  
    customer support numbers 80  
    fax 79  
    online service address 79  
    software 79  
    troubleshooting 71  
    warranty 83  
high resolution 26  
history, camera 46

## I

---

icon  
    battery 3  
    border 23  
    border default 50  
    close-up 17  
    date stamp 19  
    delete 20, 39  
    effect default 54  
    effects 24  
    exposure compensation 22  
    exposure default 53  
    exposure lock 31  
    flash 15  
    flash default 51  
    format camera memory card  
        48  
    infinity focus 16  
    language 47  
    magnify 35  
    metering 28  
    picture information 41  
    power save 45  
    print order 36  
    protect 38  
    quality 25  
    quickview 13  
    resolution 26  
    response beep 44  
    self-timer 18  
    sharpness 30  
    slide show 40  
    video out 49  
    white balance 27  
    white balance default 52  
index print 36  
infinity focus 16  
information, camera 46  
information, pictures 41  
installing software 60  
ISO 29

---

---

## K

---

Kodak software  
  help 79  
  installing 60  
  Macintosh computers 59  
  starting 65  
  Windows-based computers 58

## L

---

landscape photography 16  
language, camera 47  
launching the software 65  
LCD brightness 8  
loading batteries 2  
locking an exposure 31

## M

---

Macintosh system requirements 57  
magnifying pictures 35  
maintenance 90  
memory bar 34  
memory card, camera  
  formatting 48  
  inserting and removing 6  
  logo 6  
metering  
  center-weighted 28  
  multi-pattern 28  
monitor, adjusting 69  
multi-pattern metering 28

## N

---

navigating to pictures 67  
needle locator, pictures 34  
NTSC 49

## O

---

opening the software 65  
ordering prints 36

## P

---

PAL 49  
photography 24  
  black-and-white 24  
  close-up 17  
  distant subjects 16  
  indoor lighting 27  
  landscapes 16  
  of documents 24  
  sepia tone 24  
picture locator needle 34  
pictures  
  artificial lighting 27  
  black-and-white 24  
  cancelling for print 37  
  capturing 11  
  deleting 20  
  deleting all 39  
  directory 41  
  file name 41  
  information about 41  
  magnifying 35  
  marking for print 37  
  of documents 24  
  previewing 10  
  protecting 38  
  quality 25  
  resolution 26  
  review 34  
  sepia tone 24  
  sharpening 30  
  softening 30  
  taking 11  
  viewing 13  
power save 45  
preparing to take pictures 2

---

---

previewing pictures 10  
print ordering 36  
printing  
    cancel print order 37  
    index print 36  
    ordering 36  
    selecting pictures for 36  
    tips 70  
proof sheet 36  
protecting pictures 38

## Q

---

quality 25  
quickview 13

## R

---

rechargeable batteries 4  
red-eye reduction 15  
regulatory information 86  
repair coverage 83  
resolution 26  
response beep 44  
reviewing pictures 34  
RS-232 serial cable 62

## S

---

safeguarding pictures 38  
safety 90  
save power 45  
self-timer 18  
sepia tone  
    as default 54  
sepia tone pictures 24  
serial cable, connecting  
    help 69  
    Macintosh-based computer 63  
    Windows-based computer 62  
service numbers 80  
setting

auto ISO 29  
border 23  
border default 50  
clock 7  
close-up 17  
date stamp 19  
delete all pictures 39  
digital zoom 12  
effect default 54  
effects 24  
exposure compensation 22  
exposure default 53  
exposure lock 31  
flash default 51  
frame 23  
infinity focus 16  
language 47  
magnify 35  
metering 28  
power save 45  
preview 10  
print order 36  
protect 38  
quality 25  
quickview 13  
resolution 26  
response beep 44  
review 34  
self-timer 18  
sharpness 30  
slide show 40  
telephoto 12  
video out 49  
white balance 27  
white balance default 52  
sharpening pictures 30  
shutter button 11  
slide show 40  
softening pictures 30  
software, Kodak  
    help 79  
    installing 60

---

---

Macintosh computers 59  
starting 65  
Windows-based computers 58  
specifications, camera 88, 89  
stamp, date 19  
standard resolution 26  
starting software 65  
support numbers 80  
symbol, USB 64

## T

---

taking a picture 11  
taking pictures, preparing 2  
telephoto, setting  
    wide angle 12  
television, viewing pictures 40  
thumbnails, viewing 34  
tips  
    battery guidelines 91  
    maintenance 90  
    monitor setting 69  
    printing 70  
    safety 90  
troubleshooting 71  
tungsten balance 27

## U

---

USB symbol 64  
USB, connecting  
    help 69  
    Macintosh computer 64  
    Windows-based computer 64

## V

---

video out 49  
video out port 40  
viewing  
    camera information 46  
    filmstrip 34  
    picture information 41  
    pictures on television 40  
    thumbnails 34  
viewing pictures 13

## W

---

warning beep 44  
warranty 83  
white balance  
    auto 27  
    daylight 27  
    fluorescent 27  
    tungsten 27  
white balance default 52  
wide angle 12  
Windows system requirements 57

## Z

---

zoom 12  
zoom control 12  
zoom, digital 12