



Table of Contents

1 Introduction.....	1
2 About the Software.....	2
Installing the Software.....	3
Changing Your Picture Format Settings.....	4
3 Preparing the Camera	6
Installing the Battery	6
Checking the Battery.....	6
Connecting the Camera.....	7
4 Using Your PALMPIX Camera.....	8
Starting the PALMPIX Software	8
Using Your Camera.....	9
Getting PALMPIX Help on the Handheld	10
5 Taking Pictures	11
6 Working With Your Pictures	12
Viewing Pictures	12
Renaming Pictures.....	12
Deleting Pictures	13

Transferring Pictures to Your Computer.....	13
Specifying the Pictures to Transfer.....	14
Beaming Pictures to Another Handheld.....	15
Storing Pictures on Your Handheld.....	15
7 General Tips, Maintenance, and Safety.....	16
PALMPIX Camera Tips	16
Camera Safety and Maintenance.....	16
Using Your Battery	17
PALMPIX Camera Specifications	18
8 Customer Support.....	20
World Wide Web	20
Telephone Customer Support.....	20
9 Warranty and Regulatory	22
Warranty	22
Regulatory Information.....	24
Index.....	27

1 Introduction

Congratulations on purchasing the KODAK PALMPIX Camera for the PALM m100 Handheld (PALMPIX Camera), the camera that turns your PALM m100 Handheld into a digital camera.

With the PALMPIX Camera you can:

- Take great looking pictures in two different resolutions:
640 x 480 (VGA) or 320 x 240 (1/4 VGA).
- Get close to your subject with a 2x digital zoom.
- Transfer pictures by PALM HOTSYNC Technology for instant editing, printing, and placement into documents.
- Save pictures to a PC in JPEG (.JPG) or Bitmap (.BMP) format; to a Macintosh in JPEG or PICT format.
- E-mail pictures in minutes to business associates, friends, and family anywhere in the world.
- Beam pictures to other PALM handheld users.

2 About the Software

The following applications are included on the KODAK PALMPIX Camera CD, supplied with your camera. You must install KODAK PALMPIX Software (PALMPIX Palm Application and PALMPIX Conduit) before you can transfer images from your PALM handheld to the computer.

- **KODAK PALMPIX Palm Application**—runs on the PALM m100 Handheld and controls the camera and picture transfer functions.
- **KODAK PALMPIX Conduit**—is added to the PALM HOTSYNC Manager and lets you transfer pictures from the PALM handheld to the computer using HOTSYNC Technology.
- **ARCISOFT PHOTOIMPRESSION 2000 Software**—installs and runs on your computer. Lets you edit and enhance your pictures, add special effects, add text and borders, create calendars and invitations, and much more.

Before You Begin

Before you install the KODAK PALMPIX Software, make sure you have installed the PALM Desktop software that was provided with your PALM handheld, and that you can perform a HOTSYNC operation with the PALM handheld to your computer.

You cannot install the KODAK PALMPIX Software unless the PALM Desktop software is installed first.

PALM HOTSYNC Technology

PALMPIX uses PALM HOTSYNC Technology to transfer pictures from the PALM handheld to your computer. HOTSYNC is the software that enables you to synchronize the data on the PALM handheld with the data on the computer.

For more information, refer to the guides that came with the PALM handheld.

Installing the Software

- 1 Exit all software programs.
- 2 Place the KODAK PALMPIX Camera CD into the CD-ROM drive.
If the CD does not start automatically:
On a **PC**—from the Start menu, select Run. In the text box, enter the CD drive letter:\setup.exe. For example, d:\setup.exe.
On a **Macintosh**—click the PALMPIX desktop icon and open Installer.
- 3 Select your language, then follow the on-screen instructions to install the software.

On a **PC**:

 


Make sure both PalmPix Conduit and PalmPix Palm Application are checked.

Click Browse to change the Destination folder (Default is C:\Palm\your user name\PalmPix\)

Click Next

On a **Macintosh**:

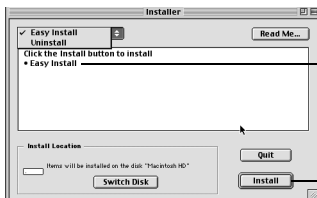

Check Easy Install.

Click Install.

- 4 Select your PALM handheld user name when prompted.

Note: If multiple PALM handheld users share your computer, install the KODAK PALMPIX Software separately for each user, selecting the appropriate user name when prompted.

- 5 After the software is installed on the computer, perform a HOTSYSYNC operation to transfer the PALMPIX Software onto the PALM handheld.


If you have difficulty installing the PALMPIX Palm Application Software on your PALM handheld, refer to the guides that came with your PALM handheld for instructions on installing applications manually.

Changing Your Picture Format Settings

You can change the following settings that determine how and where your pictures are saved on your computer:


Setting	Options	Preset System Default
Picture file format	JPEG, BMP, PICT	JPEG
Delete pictures after transfer?	Yes, No	No
Location where pictures are saved on your computer	You can designate a location	On a PC or a Macintosh : hard drive name\Palm\ your user name\PalmPix\

To change the settings on a PC:

- 1 On your computer desktop, right-click the HOTSYSYNC Manager icon ™, then select Custom.
- 2 Select KODAK PalmPix Camera, with your user name. Then click Change to display the Change HotSync Action window.


Note: For information about this window, refer to the guides that came with the PALM handheld.

 - 3 Click Advanced. In the Advanced PalmPix Actions window, select the options you want, then click Done.

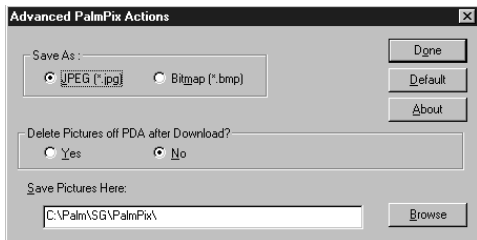

To change the settings on a Macintosh:

 - 1 From the Finder Menu bar, select the PALM icon.
- 2 Select HotSync (with your user name), then Conduit Settings.
- 3 Select KODAK PalmPix Camera, then click Change Settings.
- 4 Click Advanced. In the Advanced PalmPix Actions window, select the options you want, then click Done.

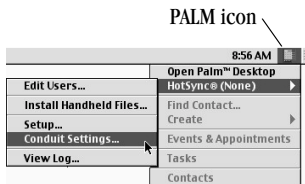


3 Preparing the Camera

Installing the Battery


- 1 Remove the battery door by sliding it to the right.
- 2 Insert the AAA battery into the chamber as shown.
- 3 Replace the battery door, sliding it closed until it clicks into place.

 Note: The camera battery supplies power to the camera when it is connected to the PALM handheld, with the PALMPIX Software running. The PALM handheld batteries do not supply power to the camera.

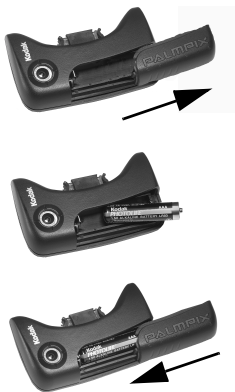

Checking the Battery

You can capture up to 200 pictures on one camera battery.

When you preview a picture (page 11), a battery status symbol  appears on the PALM handheld if the camera battery is nearly exhausted and needs to be replaced.

No symbol appears if the battery can adequately power the camera.

Connecting the Camera

For the camera to work, it must be connected to a PALM m100 Handheld that has the PALMPIX Software installed.

When the camera is connected, the lens faces the back of the PALM handheld.

- 1 Align the PALM handheld connector and the camera connector.



- 2 Push the camera and PALM handheld together until they lock in place.

- 3 To remove the camera, pull it away from the PALM handheld.





CAUTION: Do not remove the camera during a picture transfer (page 11).
Doing so may cause you to lose picture data or information.

4 Using Your PALMPIX Camera


 
When you connect the KODAK PALMPIX Camera to your PALM handheld and start the PALMPIX Software:

- the PALM handheld Date Book button becomes the Preview/Shutter button
- the PALM handheld Scroll button becomes the Zoom button
- the PALM handheld screen becomes the viewfinder

Starting the PALMPIX Software

- 1 Connect the camera and turn on the PALM handheld.
- 2 Tap the Applications button  , then tap the PALMPIX icon  to display the Image List screen.
- 3 To exit the PALMPIX Software, tap the Applications button.

Using Your Camera

- A. **Work with your pictures**—tap a file name to view, rename, or delete the picture. See page 12 for how.
- B. **Set the self-timer**—tap the icon  to turn the self-timer on . Creates a ten-second delay after you press the Shutter button.
- C. **Select a picture resolution**—tap the icon before you take a picture:

 


320 x 240 resolution—use when you will view your pictures online, or when you need extra space for picture-taking. Each picture takes about 30K of available PALM handheld memory.



640 x 480 resolution—use when you will print or e-mail your pictures. Each picture takes about 100K of available PALM handheld memory.

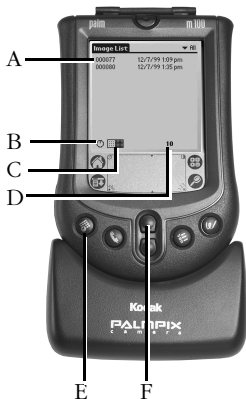


- D. **Check pictures remaining**—the Frame Counter displays approximately how many additional pictures can be stored on the PALM handheld, based on the resolution you select.
- E. **Take a picture**—press the Preview/Shutter button (Date Book button) once to preview the image on the screen, then press it again to take the picture. The LCD screen is your viewfinder.
- F. **Use the zoom**—press the up Zoom button (Scroll button) to magnify the picture up to 2x (2x is displayed on the screen). Press up again to zoom back to 1x.
Zoom is available in 640 x 480 resolution only. If you press the Zoom button



while in 320 x 240 resolution, the camera automatically resets the resolution to 640 x 480.



Getting PALMPIX Help on the Handheld

You can get help using your PALMPIX Camera and Software even if you don't have your User Guide or camera with you.

- 1 With PALMPIX Software running on your PALM handheld, tap Menu , then Options→About PalmPix.
- 2 Tap the  icon in the upper right corner of the screen and scroll through the topics with the  arrows.
- 3 To return to the Image List screen, tap Done, then OK.

5 Taking Pictures

When PALMPIX Software is running on the PALM handheld, the Date Book button becomes the camera Preview/Shutter button.

- 1 Connect the camera to the PALM handheld, then tap the Applications button .
- 2 Tap the PALMPIX icon .
- 3 Press the Preview/Shutter (Date Book) button once to display a live preview of your subject on the screen. To cancel the preview, tap the screen.
- 4 Press the Preview/Shutter button a second time to take the picture.
 - If the Self-Timer is activated, the PALM handheld beeps for ten seconds, then beeps faster just before the picture is taken.
 - A progress bar appears at the bottom of the screen as the picture is transferred from the camera to the PALM handheld. To cancel the transfer, tap the trash can icon.
 - When the picture is transferred to the PALM handheld, it appears in the Image List. See “Viewing Pictures” on page 12.



CAUTION: Do not remove the camera from the PALM handheld during a picture transfer. Doing so may cause you to lose picture data or information.

6 Working With Your Pictures

Viewing Pictures

- 1 With PALMPIX Software running, tap the file name to view the picture.

The picture appears in Image View with the file name, the date and time the picture was taken, and the picture resolution.

- 2 Press the Scroll button to navigate through the pictures.

Note: Pictures beamed between non-color and color handhelds appear as grayscale images on the color handheld.



Renaming Pictures


- 1 With the picture displayed, tap Details.
- 2 In the Details window, select the image name and rename the file.

You can also categorize, delete, and mark the file as private. For more information, refer to the guides that came with the PALM handheld.

- 3 Tap OK, then tap Done to return to the Image List.



Deleting Pictures

To delete a selected picture—tap the file name to be deleted, then tap Menu  → Record → Delete Image.

To delete all pictures—tap Menu  → Options → Delete All.

Note: You cannot access Options → Delete All when a picture is displayed.



Transferring Pictures to Your Computer

PALMPIX uses PALM HOTSYNC Technology (page 2) to transfer pictures from the PALM handheld to your computer.

- 1 Exit the PALMPIX Software and disconnect the camera from the PALM handheld.
- 2 Connect the HOTSYNC cable from the PALM handheld to the computer.
- 3 Press the HOTSYNC Manager button on the cable.

All pictures in the Upload List (page 14) are transferred to your computer.

On a **PC**, pictures are saved in the following folder:

C:\Palm\your user name\PalmPix

On a **Macintosh**, pictures are saved in the following folder:

hard drive name\Palm\your user name\PalmPix


If you wish, you can change the destination folder and its location (page 4).



Specifying the Pictures to Transfer

Only pictures included in the Upload List are transferred to the computer. Each picture is added automatically to the Upload List when you take it.

You can add or remove pictures from the Upload List before you transfer them.

- 1 With PALMPIX Software running, tap Menu , then Options→Select Image Uploads.

Note: You cannot access Options→Select Image Uploads when a picture is displayed.



- 2 In the Image Uploads screen, highlight the file name in the Image List and tap the single arrow button to add the picture to the Upload List.

You can add as many pictures to the Upload List as you want.

To add all the pictures to the Upload List at once, tap the double arrow button.




- 3 To remove pictures from the Upload List, highlight the file name and tap Remove.

To remove all the pictures, tap Remove All.

Beaming Pictures to Another Handheld

You can beam your pictures to another PALM handheld via the IR port. The receiving handheld must have an IR port, have KODAK PALMPIX Software installed, and be at its home screen when you beam the pictures.

- 1 In the PALM Preferences (Prefs) menu, make sure Beam is set to On.
- 2 With PALMPIX Software running, select the picture in the Image List.
- 3 Tap Menu , then Record→Beam Image.

For more information about beaming pictures, refer to the guides that came with the PALM handheld.

If the receiving handheld does not have KODAK PALMPIX Software installed, you can beam the application as well. Refer to the guides that came with the PALM handheld.

Storing Pictures on Your Handheld

Pictures are saved

- Pictures stored on your PALM handheld are saved when you turn off the handheld.

Pictures are not saved

- If the PALM handheld loses power (batteries are exhausted) for an extended period of time, it may lose data, including your pictures. For more information, refer to the guides that came with the PALM handheld.
- If you delete the KODAK PALMPIX Software from the PALM handheld, the pictures are also deleted.

7 General Tips, Maintenance, and Safety

PALMPIX Camera Tips

- To keep your PALM handheld updated with the most current KODAK PALMPIX Software, visit us on the Web at www.kodak.com/go/palmpix.
- Improve your pictures by adjusting the available light or by changing the light source. This is especially true under older fluorescent lighting.
- If pictures appear too dark when viewing on a computer, increase the available light source when taking pictures.
- Adjust the PALM handheld contrast level for better picture viewing on the liquid crystal display (LCD). Refer to the guide that came with your handheld for details.
- Extreme temperatures can affect the PALM handheld display. Hot temperatures can darken the LCD and cold temperatures can lighten it. This does not affect the image you capture, only the display. Refer to the guide that came with your PALM handheld for details on adjusting the display.
- Camera resolution remains at the last setting until you change it.

Camera Safety and Maintenance

- To keep from damaging your camera, avoid exposing it to moisture and extreme temperatures.
- Never disassemble or touch the inside of the camera.
- Clean the outside of the camera by wiping with a clean, dry cloth. Never use harsh or abrasive cleaners or organic solvents on the camera or any of its parts.

- Wipe the lens gently with a soft, lint-free cloth or an untreated lens-cleaning tissue.
- Do not allow any chemicals, such as suntan lotion, to come into contact with the surface of the camera.

Using Your Battery

- Keep all batteries away from children.
- Kodak recommends KODAK PHOTOLIFE Alkaline Batteries (AAA), or KODAK Ni-MH Rechargeable Batteries (AAA).
- Remove the battery when the camera is stored for extended periods of time.
- Always follow your battery manufacturer's directions fully. Do not attempt to disassemble, short circuit, or subject the battery to high temperature or fire.
- If you choose to use alkaline batteries in your camera, you will obtain better performance from “photo-flash grade” alkaline batteries, such as KODAK PHOTOLIFE Alkaline Batteries. These types of batteries last more than twice as long in digital cameras as ordinary alkaline batteries. Alkaline batteries are not rechargeable, do not attempt to recharge them in a charger.
- When disposing of batteries, follow the manufacturer's instructions and all federal, state, and local regulations. Kodak suggests customers take advantage of any community battery recycling programs that may exist in your area. Contact your local waste remover or recycler for details.
- In the unlikely event that battery fluid leaks onto your skin, immediately wash the contaminated skin with soap and plenty of water. Contact your local health care provider or, in the U.S., contact Kodak Health, Safety and Environment Information at 1-716-722-5151.

- In the unlikely event that battery fluid leaks inside the camera, U.S. customers can contact the Kodak Information Center (KIC) at 1-800-242-2424. Customers outside the U.S. can contact their local Kodak Customer Service representative.

PALMPIX Camera Specifications

Imager		VGA, 640 x 480 CMOS image sensor, user selectable to 320 x 240 (1/4 VGA)
VGA resolution	High	640 x 480=307,200 pixels
	Low	320 x 240=76,800 pixels
Image quality settings	Better	640 x 480
	Good	320 x 240
Color		24-bit, millions of colors
Picture file format (when transferred to the computer only, individual picture files do not exist on the PALM handheld)		JPEG, BMP (on a PC) JPEG, PICT (on a Macintosh)
Lens, fixed focus	Aperture	F/2.0
	Zoom	2X digital zoom (in high resolution)
	Focal Length	0.24 in. (6.1 mm)
	Focus Range	36 in. (0.9 m) to infinity
Shutter speed		1/15-1/500 seconds
Exposure		Automatic; auto white balance

General Tips, Maintenance, and Safety

Self-timer	10 seconds
Power (200 images per battery)	1 AAA-size, 1.5-volt alkaline (included) or 1 AAA-size, 1.2-volt Ni-MH rechargeable
Interface	Serial connection to the PALM m100, IrDA between handhelds
Picture storage (at 640 x 480)	Stores one picture for every 100 K of available PALM handheld memory
PALMPIX application storage	PALMPIX Software uses 62 K of PALM handheld memory
Picture transfer	HOTSYNC cable or dock
Dimensions (w x d x h)	1.9 in. x 0.9 in. x 3.3 in. (48 mm x 23 mm x 83 mm)
Weight	0.1 lb. (45 g) without batteries
Operating temperature	32 to 104° F (0 to 40° C)
Certifications	FCC Class B, ICES-003 Class B, CE, VCCI, C-Tick
Warranty	One year

8 Customer Support

World Wide Web

Contact us on the World Wide Web at www.kodak.com/go/palmpix.

Telephone Customer Support

If you have questions concerning the operation of KODAK software or the camera, you may speak directly to a customer support representative.

Before You Call

Before you call to speak to a customer support representative, please have the camera and PALM handheld available. If you are having problems transferring pictures to your computer, have your PALM handheld and HOTSYNC cable and the following information available:

Operating system _____

Processor speed (MHz) _____

PC or Macintosh model _____

Amount of memory (MB) _____

Exact error message you received _____

Version of installation CD _____

Camera serial number _____

Telephone Numbers

- **U.S.**—call toll free, 1-800-235-6325, between the hours of 9:00 a.m. and 8:00 p.m. (Eastern Standard Time) Monday through Friday.

- **Canada**—call toll free, 1-800-465-6325, between the hours of 9:00 a.m. and 8:00 p.m. (Eastern Standard Time) Monday through Friday.
- **Europe**—call the Kodak Digital Imaging Support Centre toll number associated with your location, or the U.K. toll line, 44-0-131-458-6714, between the hours of 09.00 and 17.00 (GMT/CET) Monday through Friday.
- **Outside the U.S., Canada, and Europe**—calls are charged at National Rate.

Austria/Osterreich	0179 567 357
Belgium/Belgique	02 713 14 45
Denmark/Danmark	3 848 71 30
Ireland/Eire	01 407 3054
Finland/Suomi	0800 1 17056
France	01 55 1740 77
Germany/Deutschland	069 5007 0035
Greece	0080044125605
Italy/Italia	02 696 33452
Netherlands/Nederland	020 346 9372
Norway/Norge	23 16 21 33
Portugal	021 415 4125
Spain/Espana	91 749 76 53
Sweden/Sverige	08 587 704 21
Switzerland/Schweiz/Suisse	01 838 53 51
UK	0870 2430270
International Toll Line	+44 131 4586714
International Toll Fax Number	+44 131 4586962

9 Warranty and Regulatory

Warranty

Limited Warranty

Kodak warrants the KODAK PALMPIX Camera for the PALM m100 Handheld (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited Warranty Coverage

THIS LIMITED WARRANTY WILL BE HONORED ONLY WITHIN THE GEOGRAPHICAL LOCATION THAT THE KODAK PALMPIX Camera for the PALM m100 Handheld WAS PURCHASED.

Kodak will REPLACE the KODAK PALMPIX Camera for the PALM m100 Handheld if it fails to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Such replacement is the sole remedy under this warranty. If it is necessary to replace the entire product, it may be replaced with a remanufactured product.

Limitations

Request for Warranty service will not be accepted without proof of date of purchase, such as a copy of the original dated KODAK PALMPIX Camera for the PALM m100 Handheld sales receipt. (Always keep the original for your records.) This warranty doesn't apply to the batteries used in this camera. This warranty does not cover circumstances beyond Kodak's control, nor problems caused by failure to follow the operating instructions in the KODAK PALMPIX Camera for the PALM m100 Handheld User's Guide.

THIS WARRANTY DOES NOT APPLY WHEN FAILURE IS DUE TO SHIPPING DAMAGE, ACCIDENT, ALTERATION, MODIFICATION, UNAUTHORIZED SERVICE, MISUSE, ABUSE, USE WITH INCOMPATIBLE ACCESSORIES OR ATTACHMENTS, FAILURE TO FOLLOW KODAK'S OPERATION, MAINTENENCE OR REPACKING INSTRUCTIONS, FAILURE TO USE ITEMS SUPPLIED BY KODAK (SUCH AS ADAPTERS AND CABLES), OR CLAIMS MADE AFTER THE DURATION OF THIS WARRANTY.

Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date. The option of replacement is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed and excluded herefrom.

Your Rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights, which vary, from state to state or by jurisdiction.

Outside the United States

In countries other than the United States, the terms and conditions of this warranty may be different. Unless specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond

any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

How to Obtain Service

Visit us on the Internet at <http://www.kodak.com>.

When returning a camera for repair, pack the camera in its original packaging materials. A problem report should also be enclosed with the equipment. If the original packaging has been discarded or is not available, packaging will be at the owner's expense.

Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no other warranty or liability exists beyond the information contained above, even though defect, damage or loss may be caused by negligence or other act.

To obtain warranty repair service contact your local Kodak representative.

Regulatory Information

FCC Compliance and Advisory

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.



FOR HOME OR OFFICE USE. Tested to comply with FCC standard.

Canadian DOC Statement

DOC Class B Compliance—This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the radio interference regulations of the Canadian Department of Communications.

Observation des normes-Class B—Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Classe B prescrites dans les règlements sur le brouillage radioélectrique édictés par le Ministère des Communications du Canada.

Index

B

battery

- capacity 6
- checking 6
- guidelines 17
- installing 6
- safety 17
- tips 17

beaming pictures 15

button

- date book 9
- preview/shutter 9
- scroll 9
- zoom 9

C

camera

- connecting to handheld 7
- maintenance 16
- preparing 6
- safety 16
- specifications 18
- taking pictures 11

tips 16

- using handheld as 8

changing picture formats 4

close software 8

color specification 18

computer, transferring pictures 13

connect camera to handheld 7

customer support 20

customizing picture formats 4

D

date book button 9

deleting pictures 13

Details screen 12

E

exit software 8

exposure 18

F

file formats

- changing 4
- specifications 18

file names 9

frame counter 9

G

guidelines, battery 17

H

help

- getting support 20
- online 10

HOTSYNC Technology 13

I

Image List 9

Image View screen 12

installing

- battery 6
- camera to handheld 7
- software 3

L

lens, specifications 18

loading

- battery 6
- software 3

M

maintenance, camera 16

O

online help 10

P

PALMPIX Software

- about 2
- installing 3

pictures

- beaming to another handheld 15

- deleting 13

- renaming 12

- resolution 9

- storing on handheld 15

- taking 11

- transferring to computer 13

- viewing 12

power specifications 19

preview/shutter button 9

R

regulatory information 24

renaming pictures 12

resolution 1, 9, 18

S

safety 16

self-timer 9

service 24

shutter button 9

shutter speed 18

software
 about 2
 changing picture formats 4
 installing 3
 using 8
specifications, camera 18
storing pictures on handheld 15
support, telephone numbers 20

T

taking pictures 11
temperature, operating 19
tips
 battery guidelines 17
 taking pictures 16
 using PALMPIX 16
transferring pictures
 adding to upload list 14
 HOTSYNC 13
 to another handheld 15
 to computer 13

U

upload list 14

V

viewfinder
 use lcd as 9
viewing pictures 12

W

warranty 22
world wide web 20

Z

zoom feature 9