 


1 Installing the software

 
 
IMPORTANT: *Before connecting any cables, install the software that was included with your camera. Follow the on-screen instructions.*

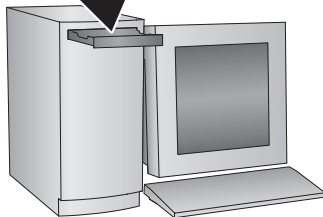

After installing the software, return to this Getting Started Guide.



2 Loading the KLIC-7003 battery

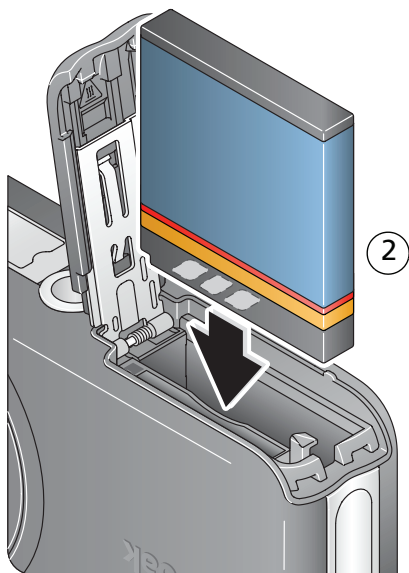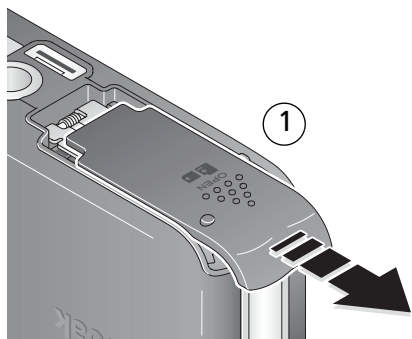


3 Charging the battery

5-volt AC adapter


(included)

 Battery charging lights blink during charging. Charge until all 3 lights stay lit (approximately 2 hours).

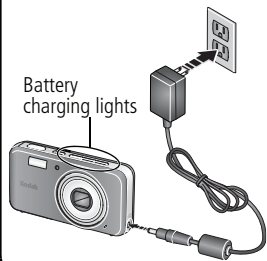


Kodak EasyShare photo frame dock 2

 (may be sold separately)

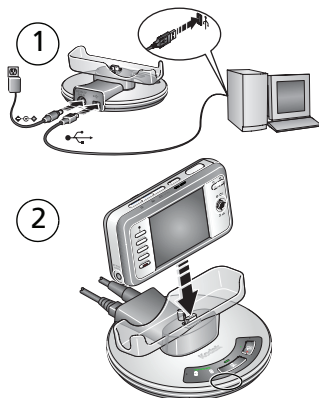

Kodak EasyShare camera or printer dock

 (may be sold separately)

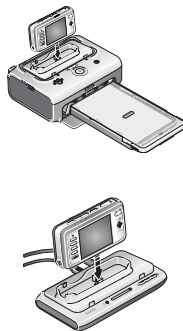

For package contents, see your product package.

 
To use a dock, see its Getting Started Guide.

For dock compatibility, visit www.kodak.com/go/dockcompatibility.


To purchase accessories, visit www.kodak.com/go/v803accessories or www.kodak.com/go/v1003accessories.

www.kodak.com/go/v803support or [v1003support](http://www.kodak.com/go/v1003support)

4 Turning on the camera

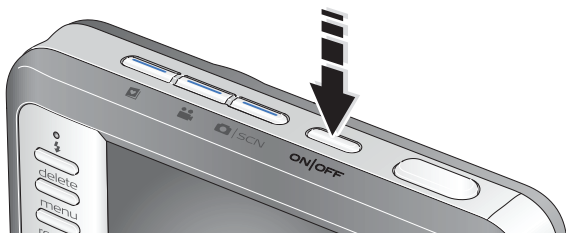

5 Setting the language, date/time

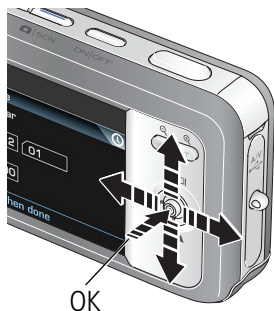 

- Language:**
- 1 ▲/▼ to change.
 - 2 OK to accept.

- Date/Time:**
- 1 At the prompt, press OK.
 - 2 ▲/▼ to change.
◀/▶ for previous/next field.
OK to accept.

To update these settings in the future, see the User's Guide.

6 Taking a picture/video

Pictures



- 1 Press the On/Off or the Auto/SCN mode button to turn on the camera.
- 2 Press the Shutter button **halfway** to focus and set exposure.
When the Ready light or framing marks turn green, press the Shutter button **completely down**.

Videos



- 1 Press the Video mode button.
- 2 Press the Shutter button **completely down**, then release it.
To stop recording, press and release the Shutter button again.

7 Reviewing pictures/videos



- 1 Press Review.
(Press again to exit.)
- 2 ◀/▶ for previous/next.

 
Videos:

- ▼ Play. (Press OK to pause/unpause.)
- ▲/▼ During playback to adjust the volume.
- ▶ During playback to play at 2X speed; press again for 4X.
- ◀ During playback to reverse at 2X speed; press again for 4X.
- ◀/▶ Press and hold for 4 seconds to jump to a bookmark.

8 Transferring pictures/videos


USB cable (U-8)

(included)

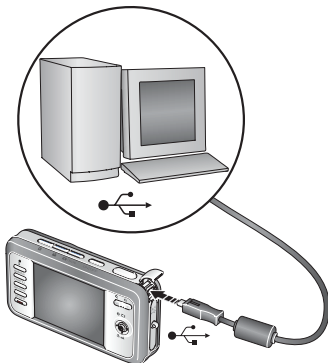


Kodak EasyShare photo frame dock 2

 (may be sold separately)

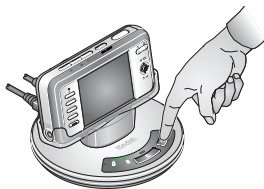

Kodak EasyShare camera or printer dock

 (may be sold separately)

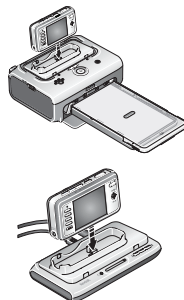

For package contents, see your product package.

To use a dock, see its Getting Started Guide.

For dock compatibility, visit www.kodak.com/go/dockcompatibility.

To purchase accessories, visit www.kodak.com/go/v803accessories or www.kodak.com/go/v1003accessories.

www.kodak.com/go/v803support or [v1003support](http://www.kodak.com/go/v1003support)

9 Keep learning about your camera!

Congratulations!

You have:

- set up your camera
- taken pictures
- transferred pictures to your computer

Keep learning!

Finish reading this book, so you can take and share your best pictures!

To better understand each menu option, use camera Help.

 
(Highlight a menu choice, then press the Zoom telephoto T button.)


**Visit www.kodak.com/go/v803support or
www.kodak.com/go/v1003support for:**

- the user's guide
- interactive troubleshooting and repairs
- interactive tutorials
- FAQs
- downloads
- accessories
- printing information
- product registration





Front View

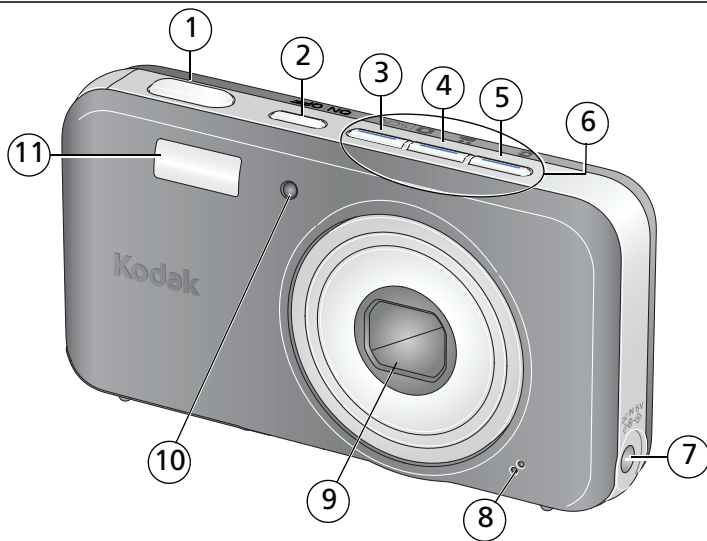

- | | | | |
|---|------------------------------|----|--|
| 1 | Shutter button | 6 | Mode/Battery charging lights |
| 2 | On/Off button | 7 | DC-In (5V)  |
| 3 | Auto/SCN (scene) mode button | 8 | Microphone |
| 4 | Video mode button | 9 | Lens |
| 5 | Favorites mode button | 10 | Video light/Self-timer light/AF assist light |
| | | 11 | Flash |

 
Back View

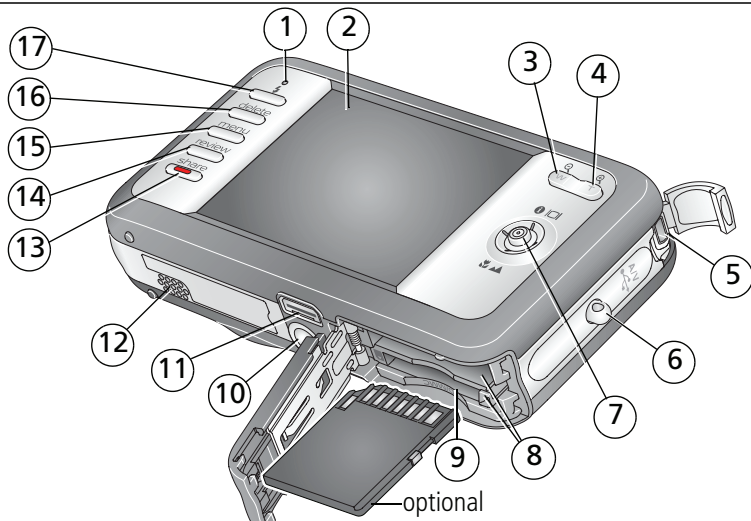

- | | | |
|-------------------------|--|------------------|
| 1 Ready light | 7 Joystick  OK button (press) | 13 Share button |
| 2 LCD | 8 Battery lock; battery compartment | 14 Review button |
| 3 Wide angle button | 9 Optional SD or MMC card; card slot | 15 Menu button |
| 4 Telephoto/Help button | 10 Tripod socket | 16 Delete button |
| 5 USB, A/V Out | 11 Dock connector | 17 Flash button |
| 6 Strap post | 12 Speaker | |

1 Doing more with your camera

 Using optical zoom

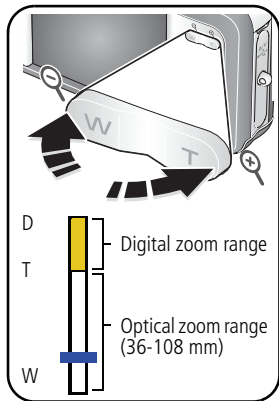

- 1 Use the LCD to frame your subject.
- 2 To zoom in, press Telephoto (T).
To zoom out, press Wide Angle (W).
The zoom indicator shows the zoom status.
- 3 Take the picture or video.

 
Using digital zoom

Use digital zoom in any picture-taking mode to get up to 3X magnification beyond optical zoom. (You cannot use digital zoom for video recording.) Press Telephoto (T) until the slider is at the top of the optical zoom range. Release (T), then press it again.

NOTE: You may notice decreased image quality when using digital zoom. The slider pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.

Using the self-timer

Use the self-timer when you want to be included in a picture, or to ensure a steady Shutter button press. Place camera on a tripod or flat surface

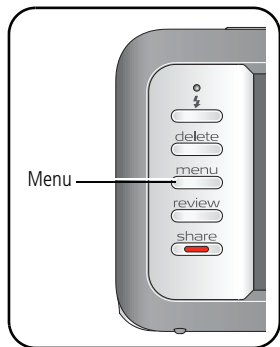

- 1 In any Still mode, press the Menu button.
- 2 Press ▲/▼ to highlight Self-Timer, then press OK.
- 3 Press ▲/▼ to choose:

10 seconds—A picture is taken after a 10-second delay (so you have time to get into the scene).


2 seconds—A picture is taken after a 2-second delay (for a steady, auto-shutter release on a tripod).

2 shot—The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later.

- 4 Press OK, then the Menu button.
- 5 Compose the scene. Press the Shutter button **halfway**, then **completely down**.

 
The camera takes the picture/pictures after the delay.

Use the same procedure to take a video, but:

- Press the Video mode button .
- Press the Shutter button **completely down**.



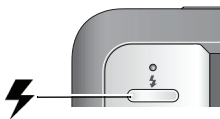

NOTE: The video stops when no storage space remains. Only the 2- and 10-second options are available in video mode.

Using the flash


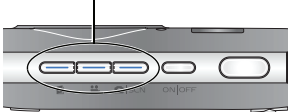 








Press the flash button repeatedly to scroll through flash modes.

The current flash mode is shown in the LCD status area.

Flash modes	Flash fires
 Auto	When the lighting conditions require it.
 Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is “backlit” (when light is behind the subject). In low light, hold the camera steady or use a tripod.
 Red Eye	<p>In Red Eye flash, you can reduce red-eye by using a preflash or by using automatic red eye reduction. To make the camera:</p> <ul style="list-style-type: none"> ■ Preflash, turn the Red Eye Preflash on. (The first flash shrinks the eye pupil to reduce the chance of red eye.) ■ Flash once and automatically remove red eye, turn the Red Eye Preflash off. <p>NOTE: When automatic red eye reduction is on, the camera cannot take more than 2 pictures in quick succession. Take more pictures when the Ready light turns green.</p>
 Off	Never

Using different modes

Use this mode	For	
 SCN	Auto: General picture taking—offers an excellent balance of image quality and ease of use.	<p data-bbox="619 333 891 351">Press a button to choose a mode.</p> 
 SCN	Scene: Point-and-shoot simplicity when taking pictures under special conditions. (See page 15 .)	
	Video: Capturing video with sound. (See page 5 .)	
	Favorites: Viewing favorite pictures.	
	Landscape: Far-away scenes. The camera uses infinity auto-focus. Auto-focus framing marks are not available in Landscape.	 <p data-bbox="609 736 902 781">Press until the Macro or Landscape icon appears in the LCD status area.</p>
	Macro: Close range. The camera automatically sets the focus distance depending on the zoom position. Use available light instead of flash, if possible.	

Using Scene (SCN) modes

Choose a Scene mode—for great pictures in practically any situation!

 
- 1 Press the Auto/SCN button until the Scene icons appear on the LCD.
- 2 Press to view scene mode descriptions.

The date/time and the mode description appear. If the mode description turns off before you finish reading it, press the OK button.


- 3 Press the OK button to choose a Scene mode.

Using camera Help

To better understand each menu option, use camera Help.
Highlight a menu choice, then press the Zoom telephoto (T) button.

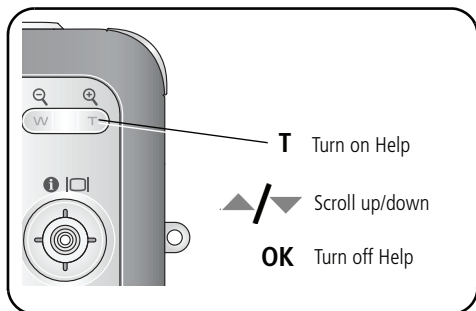

Understanding the picture-taking icons

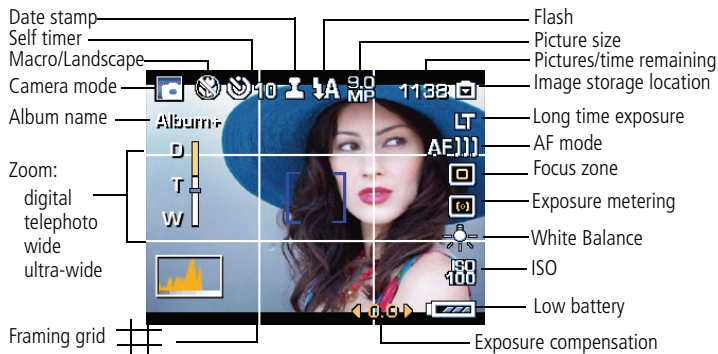 

2 Working with pictures/videos

 
Reviewing pictures/videos

Press the Review button to view and work with your pictures/videos.




- 1 Press the Review button.
- 2 Press ◀/▶ for previous/next picture/video.



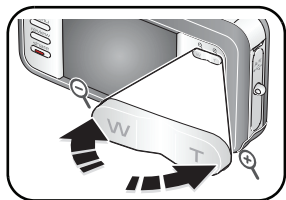


Magnifying a picture

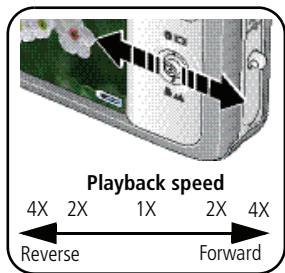 


- 1 Press T to magnify 1X–8X.
- 2 Press ▲/▼ ◀/▶ to view other parts of a picture.
- 3 Press the OK button to return to 1X.


Playing a video



- Press  to play a video. Press the OK button to pause/unpause.
- Press  during playback to adjust the volume.
- Press  during playback to play at 2X speed; press again for 4X.
- Press  to reverse at 2X speed; press again for 4X.
- Press and hold  for 4 seconds to jump to a bookmark.

 Deleting pictures/videos

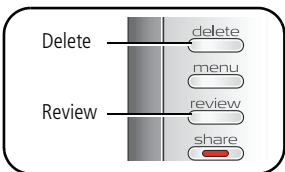

- 1 Press the Review button.
- 2 Press  for previous/next picture/video.
- 3 Press the Delete button.
- 4 Follow the screen prompts.

Using the undo delete feature

If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a single picture.

Using Kodak Perfect Touch technology

Kodak Perfect Touch technology helps ensure better, brighter pictures.

- 1 Press the Review button, then ◀/▶ for previous/next picture.
- 2 Press the Menu button, choose Perfect Touch tech, then press OK.
The enhancement is previewed. Press ◀/▶ to view other parts of the picture.
- 3 Press OK. Follow the screen prompts to replace the original picture or to save the enhanced picture as a new one.

 
Enhanced pictures cannot be enhanced again on the camera. Kodak Perfect Touch technology can only be used with pictures, not video.

- Press the Menu button to exit the menu.

Editing videos

Making a picture from a video

You can choose a single frame from a video, then make a picture suitable for a 4 x 6-inch (10 x 15 cm) print.

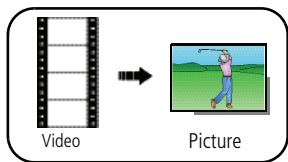

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press Menu, choose Make Picture, then press OK.
- 3 Follow the screen prompts.

 
A picture is created. (The original video is saved.)

- Press the Menu button to exit the menu.

Using video bookmarks


You can set bookmarks at interesting places in your video, then jump from one bookmark to another.

Setting bookmarks

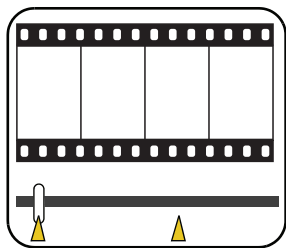

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, choose Edit Video, then press the OK button. Choose Bookmark, then press OK.
- 3 Press ▼ to add bookmarks. When finished adding up to 9 bookmarks, press ▲.
 - Press the Menu button to exit the menu.

 
Using bookmarks

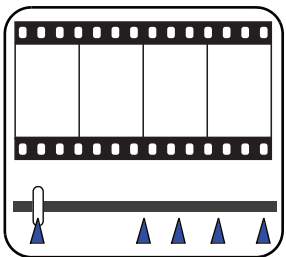

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press ▼ to play the video. To jump to the first bookmark, press and hold ◀/▶ for 4 seconds while the video is playing.
 - After you jump to a bookmark, press ◀/▶ to jump to other bookmarks.
 - To view all bookmarked video frames, press the Zoom wide angle (W) button. To return to normal view, press the telephoto (T) button.

Making a video action print

 From a video, you can make a 4-, 9-, or 16-up picture, suitable for a 4 x 6-inch (10 x 15 cm) print.

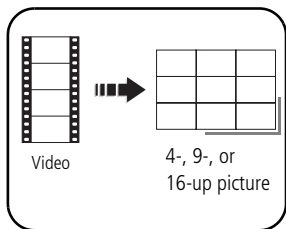


- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, choose Edit Video, then press the OK button. Choose Action Print, then press the OK button.
- 3 Choose an option, then press the OK button.

A 4-, 9-, or 16-up picture is created. If you have less than 4 or 9 bookmarks, equally-spaced video frames are used.

- Press the Menu button to exit the menu.

Selecting multiple pictures/videos

 Use the multi-select feature when you have two or more pictures/videos to print, transfer, delete, etc.

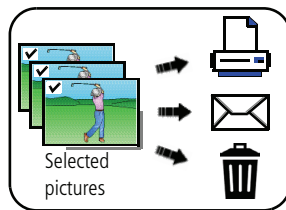

- 1 Press the Review button, then ◀/▶ to find a picture/video.
- 2 Press the OK button to select pictures/videos.

A check mark appears on the picture. You can now print, transfer, delete, etc. the selected pictures. You can press OK a second time to remove a check mark.

3 Solving camera problems

Camera problems

Status	Solution
Camera does not turn on	■ Make sure the battery is charged and installed correctly (page 2).
Camera does not turn off and the lens does not retract	
Camera buttons and controls do not function	
Lens does not extend when camera turns on or does not retract	■ Make sure the battery is charged and installed correctly (page 2). ■ Turn the camera off, then on again. (The lens does not extend in Favorites mode.)
In Review, a blue or black screen is displayed instead of a picture	■ Transfer <i>all</i> pictures to the computer (page 7). ■ Take another picture. If the problem continues, change the image storage location to internal memory.
Flash does not fire	■ Check the flash setting, and change as needed (page 13). NOTE: The flash does not fire in all modes.

4 Appendix

Important safety instructions



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit www.kodak/go/accessories.
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations. Visit www.kodak.com/go/kes.

- Do not charge non-rechargeable batteries.

For more information on batteries, visit www.kodak.com/go/batterytypes.

- Read and follow all warnings and instructions supplied by the battery manufacturer.

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). Visit www.kodak.com/go/v803downloads, www.kodak.com/go/v1003downloads.

Care and maintenance

- If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or www.kodak.com/go/v803support, www.kodak.com/go/v1003support.

Limited warranty

Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a

Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

www.kodak.com/go/v803support or [v1003support](http://www.kodak.com/go/v1003support)

FCC compliance and advisory



Kodak EasyShare V803/V1003 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



In the European Union, do not discard this product as unsorted municipal waste. Contact your local authorities or go to www.kodak.com/go/recycle for recycling program information.

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づいたクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Australian C-Tick



Korean Class B ITE

이 기기는 가정용으로 전자파적합등록된 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

Kodak

Eastman Kodak Company

Rochester, New York 14650

© Eastman Kodak Company, 2006

Kodak, EasyShare, and Perfect Touch are trademarks of Eastman Kodak Company.

4J6961_en

www.kodak.com/go/v803support or [v1003support](http://www.kodak.com/go/v1003support)