


OLYMPUS[®]

DIGITAL CAMERA

FE-360/X-875/C-570 ***FE-20/X-15/C-25***

Instruction Manual

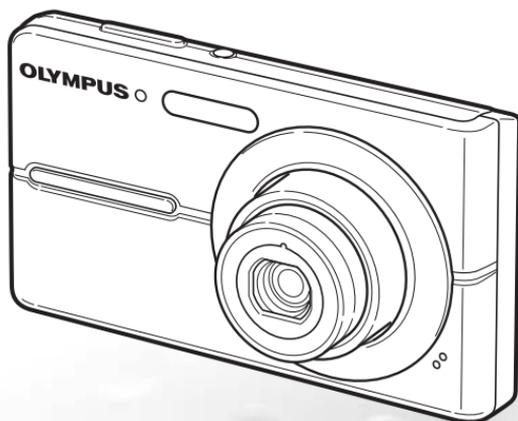

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving products, Olympus reserves the right to update or modify information contained in this manual.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product. Unless otherwise specified, the explanation about these illustrations is provided for FE-360/X-875/C-570.

Step 1

Preparing the Camera

"Preparing the Camera" (p. 10)

Step 2

Shooting and Playing Back Images

"Shooting, Playback, and Erasing" (p. 14)

Step 3

How to Use the Camera

"Three Types of Setting Operations" (p. 3)

Step 4

Printing

"Direct printing (PictBridge)" (p. 34)

"Print Reservations (DPOF)" (p. 37)

Contents

➤ Names of Parts	6	➤ Menus for Playback, Editing, and Printing Functions.....	28
➤ Preparing the Camera	10	➤ Menus for Other Camera Settings	31
➤ Shooting, Playback, and Erasing.....	14	➤ Printing	34
➤ Using Shooting Modes.....	17	➤ Using OLYMPUS Master 2.....	39
➤ Using Shooting Functions.....	19	➤ Usage Tips	41
➤ Using Playback Features	22	➤ Appendix	45
➤ Menus for Shooting Functions.....	24	➤ Index	59



Three Types of Setting Operations

Using the Menu

Various camera settings can be accessed through the menus, including functions used during shooting and playback and the date/time and screen display.

- There may be unavailable menus depending on other related settings or the **SCENE** mode (p. 17).

This example describes how to use the menus to set **[POWER SAVE]**.

▶ **SETUP** (shooting mode/playback mode top menu) ▶ **POWER SAVE** (Submenu 1) ▶ **ON** (Submenu 2)

1 Press the **MENU** button.

 
- Press the **MENU** button to return to the previous screen in any Step after Step 2.




Shooting mode top menu

2 Use \leftarrow \rightarrow \uparrow \downarrow to select the desired menu, and press the **OK** button.

- Pressing and holding the **?** button displays an explanation (menu guide) of the selected option.



Submenu 1

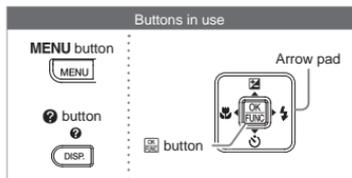


3 Use \leftarrow \rightarrow \uparrow \downarrow to select the desired Submenu 1, and press the **OK** button.

Page tab



Submenu 2

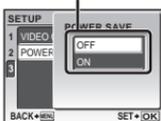


- To quickly move to the desired submenu, press \rightarrow to highlight the page tab, and then use \leftarrow \rightarrow to move the page. Press \leftarrow to return to the submenu.
- Some menus include submenus that appear by pressing the **OK** button.

4 Use \leftarrow \rightarrow \uparrow \downarrow to select the Submenu 2, and press the **OK** button.

- Once a setting is made, the display returns to the previous screen.

 
- There may be additional operations. "Menu Settings" (p. 24 to 33)



5 Press the **MENU** button to complete the setting.

Using the Direct Buttons (p. 19 to 23)

Frequently used shooting functions can be accessed using the direct buttons.

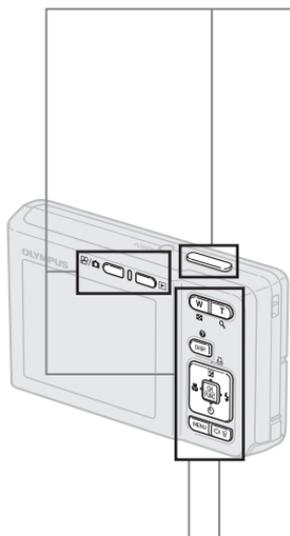


-  Shutter button (p. 14)
-   button (shooting) (p. 14)
-   button (playback) (p. 15)
-  Zoom buttons (p. 19)
-   button (exposure compensation) (p. 19)
-   button (macro) (p. 20)
-   button (flash) (p. 19)
-   button (self-timer) (p. 20)
-   button (information display change/
menu guide) (p. 21, 22/p. 17)
-   button (EASY PRINT) (p. 36)
-   button (backlight boost/erase) (p. 20/p. 16)

Using the FUNC Menu (p. 21)

Frequently used shooting menu functions can be set with less Steps using the FUNC menu.


-  button (p. 21)

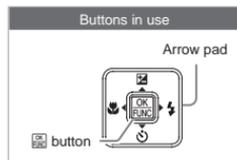

Menu Index

Menus for Shooting Functions

In the shooting mode, settings can be adjusted.

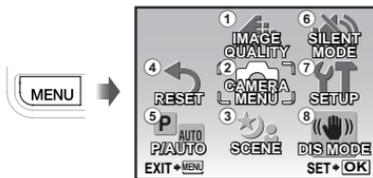


Shooting mode top menu

- | | | | | | |
|---|---|---|--------------------------------------|-------|---------------------------|
| ① | ⇐ IMAGE QUALITY..... p. 24 | ④ | ↶ RESET p. 27 | 📷/📺/📽 | p. 31 |
| ② | 📷 CAMERA MENU | ⑤ | 📷 P/AUTO p. 26 | 💾 | SAVE SETTINGS p. 32 |
| | WB..... p. 25 | ⑥ | 🔇 SILENT MODE p. 33 | 🎨 | MENU COLOR p. 32 |
| | ISO..... p. 25 | ⑦ | 🔧 SETUP | 🔊 | BEEP..... p. 32 |
| | 🗣️ (Still images/
movies)..... p. 25 | | MEMORY FORMAT/
FORMAT p. 31 | 📺 | MONITOR p. 32 |
| | PANORAMA p. 26 | | BACKUP p. 31 | 🕒 | (Date/time)..... p. 32 |
| | FACE DETECT p. 26 | | 🗣️ (Language)..... p. 31 | 📺 | VIDEO OUT..... p. 33 |
| ③ | 🎭 SCENE p. 27 | | PIXEL MAPPING..... p. 31 | 🔇 | POWER SAVE..... p. 33 |
| | | | | ⑧ | 🔇 DIS MODE p. 27 |

Menus for Playback, Editing, and Printing Functions

In the playback mode, settings can be adjusted.

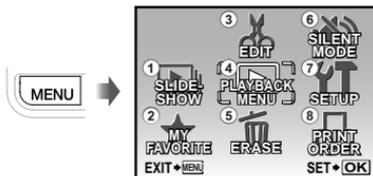


Playback mode top menu

- | | | | | | |
|---|---------------------------|---|---|----|---|
| ① | 📺 SLIDESHOW..... p. 28 | ④ | 📺 PLAYBACK MENU | 🗑️ | ERASE..... p. 29 |
| ② | ★ MY FAVORITE p. 28 | | 🔒 (Protect) p. 29 | 🔇 | SILENT MODE p. 33 |
| ③ | ✂️ EDIT | | 🔄 (Rotate)..... p. 29 | 🔧 | SETUP' |
| | 📏 (Resize) p. 28 | | 🗣️ (Add sound to still
images) p. 29 | | Same as "Menus for
Shooting Functions" |
| | 📏 (Crop) p. 28 | | | ⑧ | 📄 PRINT ORDER..... p. 37 |




Names of Parts

Camera unit

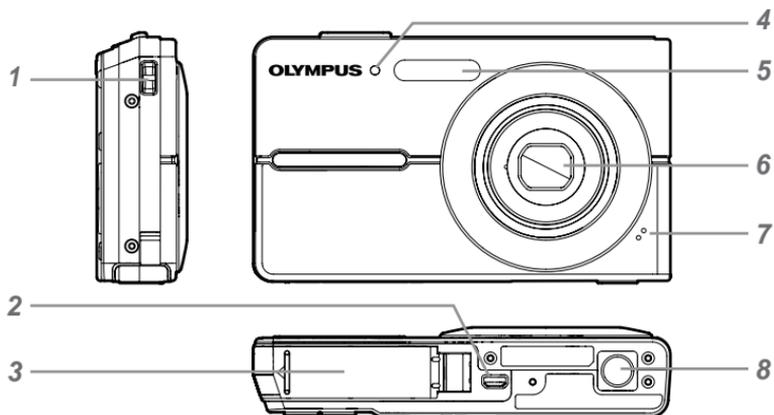


- | | | | |
|---|--|---|---------------------------|
| 1 | Strap eyelet..... p. 10 | 5 | Flash..... p. 19 |
| 2 | Multi-connector p. 33, 34, 39 | 6 | Lens p. 45, 53 |
| 3 | Battery/
card compartment cover p. 11 | 7 | Microphone..... p. 25, 29 |
| 4 | Self-timer lamp..... p. 20 | 8 | Tripod socket p. 50 |

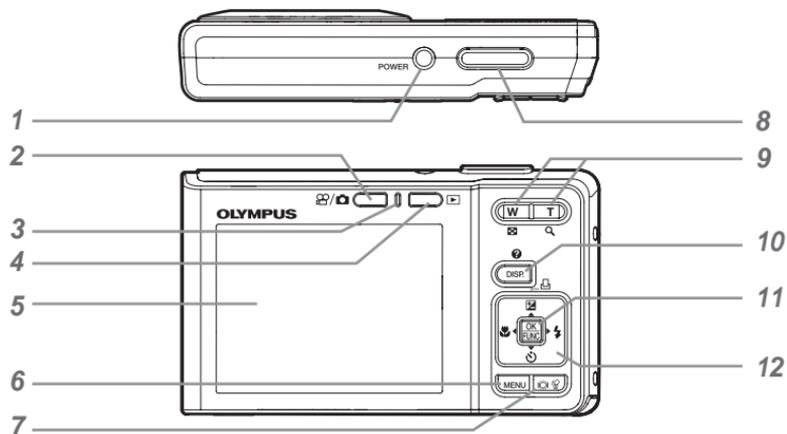


- | | | | |
|---|--|----|--|
| 1 | POWER button p. 13 | 10 | DISP./ button
(information display change/
menu guide)..... p. 21, 22/p. 17 |
| 2 | / button (shooting) p. 14 | 11 | button p. 3 |
| 3 | Card access lamp p. 46 | 12 | Arrow pad p. 3 |
| 4 | button (playback) p. 15 | | / button
(exposure compensation/
print) p. 19/p. 34, 36 |
| 5 | Monitor..... p. 14, 41 | | button (macro) p. 20 |
| 6 | MENU button..... p. 3 | | button (self-timer) p. 20 |
| 7 | / button (backlight boost/
erase)..... p. 20/p. 16, 23, 29 | | button (flash)..... p. 19 |
| 8 | Shutter button p. 14 | | |
| 9 | Zoom buttons..... p. 19 | | |

Shooting mode display

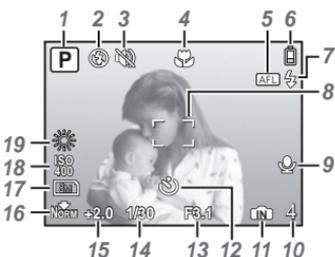

Still image

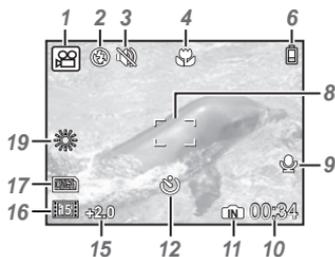


Movie

- 1 Shooting mode..... p. 14
- 2 Flash mode..... p. 19
- 3 Silent mode..... p. 33
- 4 Macro/super macro..... p. 20
- 5 AF lock..... p. 17
- 6 Battery check..... p. 10
- 7 Flash standby/
camera shake warning/
flash charge p. 19, p. 41
- 8 AF target mark..... p. 14
- 9 Recording with sound p. 25

- 10 Number of storable still images/
remaining recording time ... p. 14/p. 18
- 11 Current memory..... p. 47
- 12 Self-timer p. 20
- 13 Aperture value p. 14
- 14 Shutter speed p. 14
- 15 Exposure compensation p. 19
- 16 Compression/frame rate p. 24
- 17 Image size p. 24
- 18 ISO..... p. 25
- 19 White balance p. 25

Playback mode display

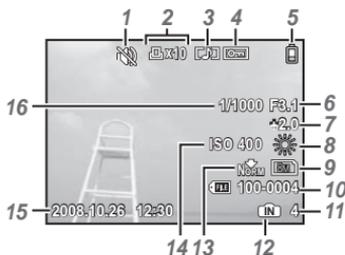

Still image



Movie

- | | |
|---|---|
| <p>1 Silent mode..... p. 33</p> <p>2 Print reservations/
number of prints..... p. 37/p. 36</p> <p>3 Adding sound..... p. 29</p> <p>4 Protect p. 29</p> <p>5 Battery check..... p. 10</p> <p>6 Aperture value p. 14</p> <p>7 Exposure compensation p. 19</p> <p>8 White balance p. 25</p> <p>9 Image size p. 24</p> | <p>10 File number..... -</p> <p>11 Frame number
elapsed time/
total recording time p. 15, 16</p> <p>12 Current memory..... p. 47</p> <p>13 Compression/frame rate p. 24</p> <p>14 ISO..... p. 25</p> <p>15 Date and time p. 13</p> <p>16 Shutter speed p. 14</p> |
|---|---|



Preparing the Camera

Checking the contents of the box



Digital camera



Strap



LI-42B Lithium Ion Battery



LI-40C Battery Charger



USB cable



AV cable




OLYMPUS Master 2
CD-ROM



microSD Attachment


Other accessories not shown: Instruction Manual (this manual), warranty card.
Contents may vary depending on purchase location.

Attaching the camera strap

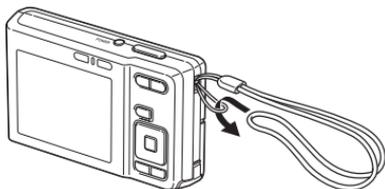

- ⚠ Pull the strap tight so that it does not come loose.


Charging the battery

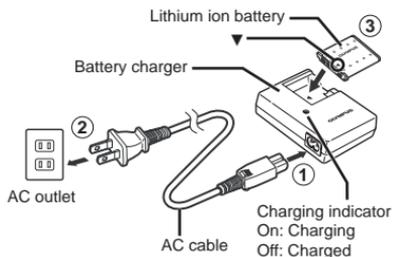

- ⚠ Battery comes partially charged. Before use, be sure to charge the battery until the charging indicator goes off (for approx. 5 hours).
- ⚠ For details on the battery and the charger, see **"Battery and charger"** (p. 45).



When to charge the batteries

Charge the battery when the error message shown below appears.

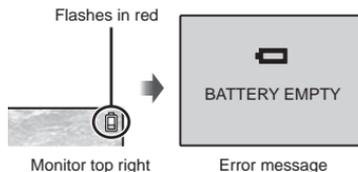


Loading the battery and the xD-Picture Card™ (sold separately) into the camera

- ⚠ Do not insert anything other than an xD-Picture Card or the microSD Attachment into the camera.

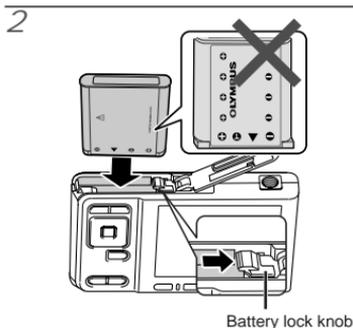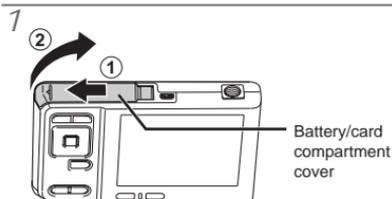


- ⚠ Insert the battery by putting in the ▼ marked side first, with the ⊕ marks toward the battery lock knob. Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.
- ⚠ Insert the battery while sliding the battery lock knob in the direction of the arrow.
- ⚠ Slide the battery lock knob in the direction of the arrow to unlock, and then remove the battery.

3

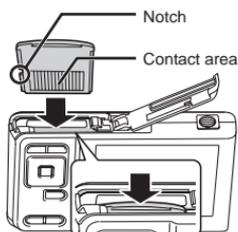


- ⚠ Insert the card straight until it clicks into place.
- ⚠ Do not touch the contact area directly.

4

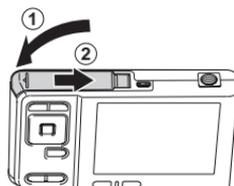

- ⚠ This camera allows the user to take pictures using the internal memory even when no xD-Picture Card (sold separately) is inserted. **“Using an xD-Picture Card”** (p. 46)
- ⚠ **“Number of storable pictures (still pictures)/recording length (movies) in the internal memory and xD-Picture Card”** (p. 47)

Removing the xD-Picture Card

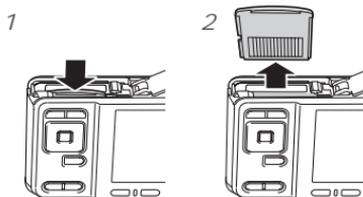


- ⚠ Press the card in until it clicks and comes out slightly, then grab the card and pull it out.

Using the microSD card/ microSDHC card (sold separately)


A microSD card or microSDHC card (hereafter both will be referred to as microSD card) is also compatible with this camera using the microSD Attachment.

! “Using the microSD Attachment” (p. 48)


1 Insert the microSD card into the microSD Attachment.

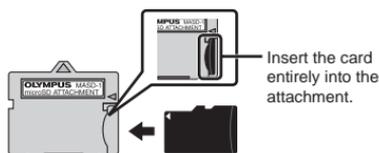

2 Insert the microSD Attachment into the camera.

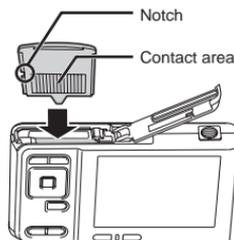

To remove the microSD card


 


Pull the microSD card straight out.


! Do not touch the contact area of the
microSD Attachment and/or microSD card.

Arrow pad and operation guide

The symbols \triangle ∇ \triangleleft \triangleright \blacktriangleleft \blacktriangleright \updownarrow displayed on various setting and movie playback screens indicate that the arrow pad be used.

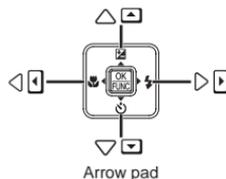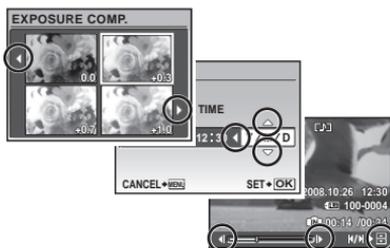

Operation guides displayed at the bottom of the screen indicate that the **MENU** button, \square button, zoom buttons, or ⏏ button be used.

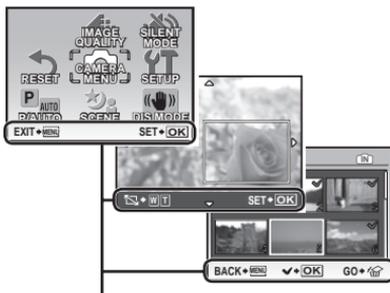


Operation guide

Setting the date and time

The date and time set here are saved to image file names, date prints, and other data.


1 Press the POWER button to turn on the camera.

- The date and time setting screen is displayed when the date and time are not set.

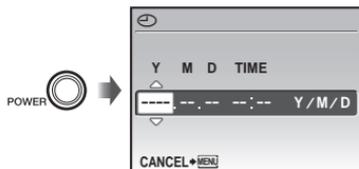


Date and time setting screen

2 Use the left and right arrow keys to select the year for [Y].

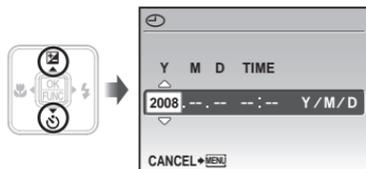

3 Press the OK button to save the setting for [Y].

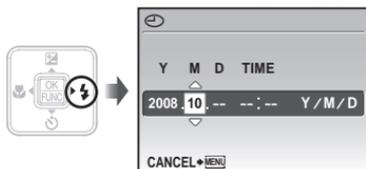

4 As in Steps 2 and 3, use the left and right arrow keys and the OK button to set [M] (month), [D] (day), [TIME] (hours and minutes), and [Y/M/D] (date order).

- For a more accurate setting, press the OK button when the time signal hits 00 seconds.
- To change the date and time, adjust the setting from the menu. [MENU] (Date/time) (p. 37)


Changing the display language

The language for the menu and error messages displayed on the monitor is selectable.

1 Press the MENU button, and press the left, right, and OK buttons to select [YT SETUP].



2 Press the OK button.

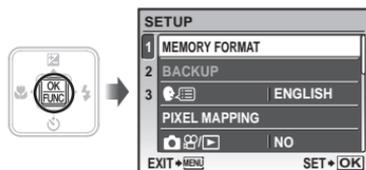

3 Use the left and right arrow keys to select [LANGUAGE] and press the OK button.



4 Use the left, right, and OK buttons to select your language and press the OK button.

5 Press the MENU button.




Shooting, Playback, and Erasing

Shooting with automatic settings (**AUTO** mode)

This is a fully automatic mode that allows the user to take pictures by simply pressing the shutter button without using the menu to make detailed settings.


1 Press the **POWER** button to turn on the camera.

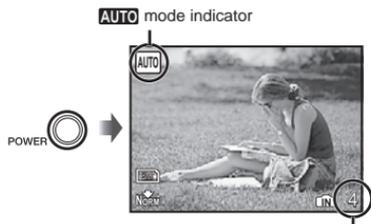

Number of storable still images (p. 47)
Monitor
(standby mode screen)

When the mode is not **AUTO**, change the mode as follows:


1 Press the **DISP** button.

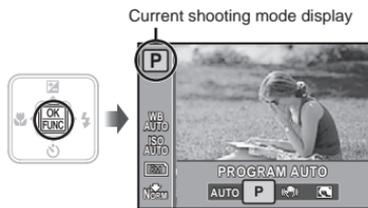

2 Use \blacktriangleleft / \blacktriangleright to select the current shooting mode display, and use \blacktriangleright / \blacktriangleleft to select **AUTO**.


3 Press the **DISP** button.

2 Hold the camera and compose the shot.

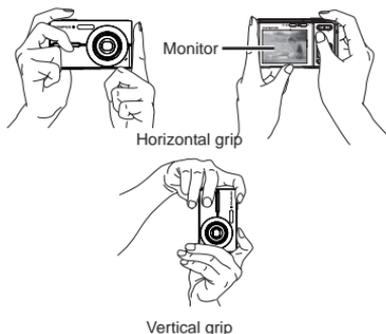


3 Press the shutter button halfway down to focus on the subject.

- When the camera focuses on the subject, the exposure is locked (shutter speed and aperture value are displayed), and the AF target mark changes to green.
- The camera was unable to focus if the AF target mark flashes red. Try focusing again.

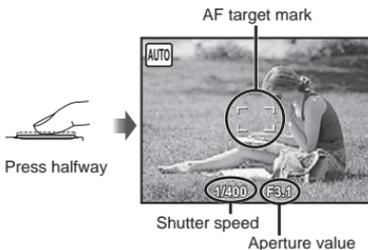

! "Focusing" (p. 43)

- 4 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.

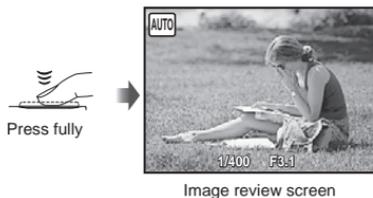

To view images during shooting

Pressing the button enables playback of images. To return to shooting, either press the button or press the shutter button halfway down.

To shoot movies


“Shooting movies (mode)” (p. 18)

When shooting is finished


Press the **POWER** button to turn off the camera.

Viewing images

- 1 Press the button.

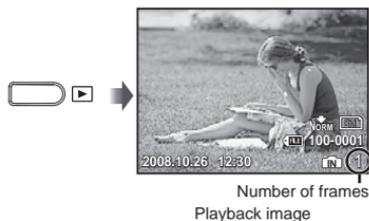

- 2 Use to select an image.

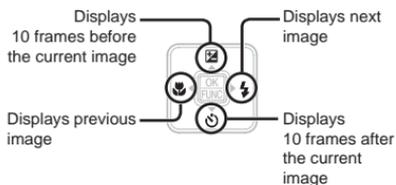

- The display size of the images can be changed. “Index view and closeup view” (p. 22)

To play back movies

Select a movie, and press the button.




- The sound when recorded in movie can not be played back with this camera. To listen to the sound, connect to a TV or PC.

Operations during movie playback

Fast-forward: Press and hold down .

Rewind: Press and hold down .

Pause: Press the  button.

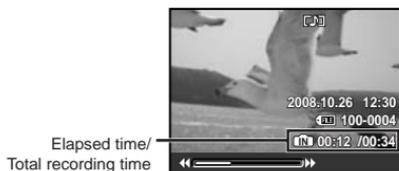

During playback

First (last) frame/frame advance:
During pause, press  to display the first frame, and press  to display the last frame.

Press and hold down  to play a movie, and press and hold down  to play a movie in reserve.

Press the  button to resume playback.



During pause

To stop movie playback

Press the **MENU** button.

Erasing images during playback (Single image erase)

- 1 Press the  button when the image to be erased is displayed.



- 2 Press  to select [YES], and press the  button.

 [ ERASE] (p. 29)

Using Shooting Modes

Using the best mode for the shooting scene (**SCENE mode**)

! [SCENE] (p. 27)

- 1 Press the **MENU** button.
- 2 Use \leftarrow \rightarrow \uparrow \downarrow to select [**SCENE**], and press the **OK** button.



- An explanation of the selected mode is displayed while the **INFO** button is pressed and held.

- 3 Use \leftarrow \rightarrow \uparrow \downarrow to select the best shooting mode for the scene, and press the **OK** button.

Icon indicating the scene mode that is set



To take underwater photos (Available in the FE-360/X-875/C-570 only)


Select [**1 UNDERWATER WIDE1**], [**2 UNDERWATER WIDE2**]¹, or [**3 UNDERWATER MACRO**].

¹ When set to [**2 UNDERWATER WIDE2**], the focus distance is automatically fixed to approx. 5.0 m (16.4 ft).

- ! Be sure to use an underwater case.

To lock the focus distance for underwater shoots (AF lock) (Available in the FE-360/X-875/C-570 only)

When [**1 UNDERWATER WIDE1**], or, [**3 UNDERWATER MACRO**] is selected, press $\left[\text{AF-L}$.

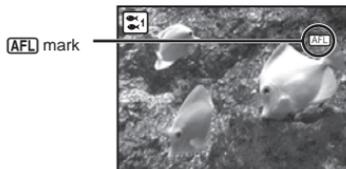


- ! To cancel, press $\left[\text{AF-L}$ again to clear the **AF-L** mark.

Shooting with optimum aperture value and shutter speed (**P mode**)

In this mode, automatic camera shooting can be used while also allowing changes to a wide range of other shooting menu functions such as exposure compensation, white balance, and so forth as needed.


- 1 Press the **OK** button.

Current shooting mode display

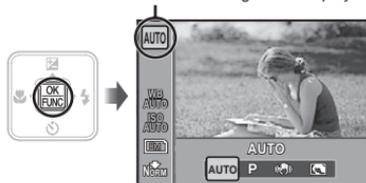

- 2 Use \leftarrow \rightarrow \uparrow \downarrow to select the current shooting mode display, and use $\left[\text{P}$ to select **P**.

3 Press the button.

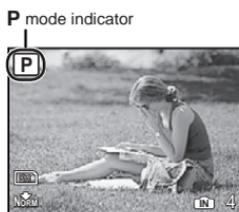

Using the digital image stabilization mode (mode)


This mode enables the user to reduce blurring that is caused by a camera shake and subject movement.

1 Press the button.



2 Use to select the current shooting mode display, and use to select .


3 Press the button.

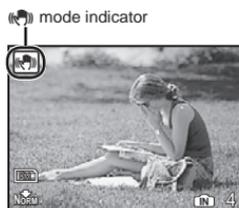

! By switching to another mode, most function settings in  mode will be changed to the default settings of each mode.


Shooting movies (mode)

1 Confirm the mode indicator is .

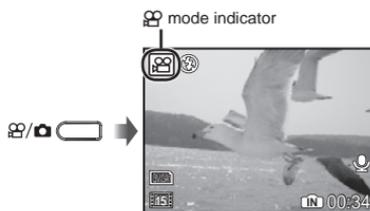

! When the mode indicator is not , press  button.

2 Press the shutter button halfway down to focus on the subject, and gently press the button all the way down to start recording.

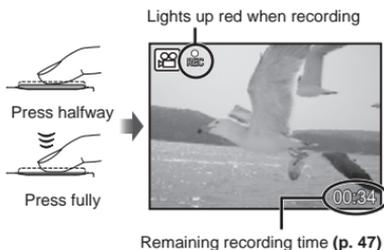

3 Gently press the shutter button all the way down to stop recording.

- ! Audio is recorded simultaneously with the movie.
- ! During audio recording, only the digital zoom can be used. To record a movie with optical zoom, set **[Z]** (movies) (p. 25) to [OFF].
- ! To return to shooting still images, press the  button.

 


Using Shooting Functions

Using the zoom

Pressing the zoom buttons adjusts the shooting range.


Pressing the wide (W) button Pressing the telephoto (T) button



Zoom bar

- Optical zoom: 3x, digital zoom: 4x
- Use of mode (p. 27) is recommended when shooting with the telephoto zoom.
- The zoom bar appearance identifies the status of the digital zoom.

When using optical zoom and digital zoom

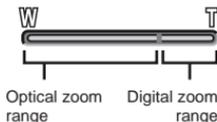

Using the flash

The flash functions can be selected to best match the shooting conditions.

1 Press the button.




2 Use to select the setting option, and press the button to set.

Option	Description
FLASH AUTO	The flash fires automatically in low-light or backlight conditions.
REDEYE	Pre-flashes are emitted to reduce the occurrence of red eye in your photos.
FILL IN	The flash fires regardless of the available light.
FLASH OFF	The flash does not fire.

Adjusting the brightness (Exposure compensation)

The standard brightness (appropriate exposure) set by the camera based on the shooting mode can be adjusted brighter or darker to obtain a desired shot.

1 Press the button.

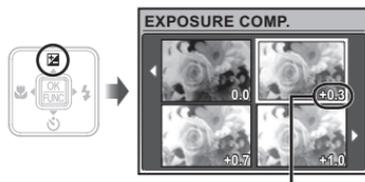

Exposure compensation value

2 Use </>/>/> to select the desired brightness, and press the button.

Shooting closeups (Macro shooting)

This function enables the camera to focus and shoot subjects at close distances.

1 Press the button.



2 Use to select the setting option, and press the button to set.

Option	Description
OFF	Macro mode is deactivated.
MACRO	This enables shooting as close as 10 cm/3.9 in. ¹ (60 cm/23.6 in. ²) to the subject.
SUPER MACRO ³	This enables shooting as close as 5 cm/2.0 in. to the subject.

¹ When the zoom is at the widest (W) position.

² When the zoom is at the most telephoto (T) position.

³ The zoom is automatically fixed.

 The **flash (p. 19)** and **zoom (p. 19)** cannot be set during super macro shooting.

Using the self-timer

After the shutter button is pressed all the way down, the picture is taken after a time delay.

1 Press the button.



2 Use to select the setting option, and press the button to set.

Option	Description
OFF	This cancels the self-timer.
ON	The self-timer lamp turns on for approx. 10 seconds, then blinks for approx. 2 seconds, and then the picture is taken.

 Self-timer shooting is automatically canceled after one shot.

To cancel the self-timer after it starts

Press the  button again.

Increasing the brightness of the monitor (Backlight boost)

Press  in shooting mode. The monitor becomes brighter. If there is no operation for 10 seconds, the previous brightness resumes.

Changing the shooting information display

The display of the screen information can be changed to best match the situation, such as for the need of clear view of the screen or for making a precise composition by using the grid display.

1 Press the DISP. button.

- The displayed shooting information changes in the order shown below each time the button is pressed. "Shooting mode display" (p. 8)

Normal



Grid



No information




Using the FUNC menu

The shooting mode can be changed to **AUTO/P/SCENE**.

- The **SCENE** is changed to the scene mode which was selected [**SCENE**] (p. 27) in the shooting mode in top menu. And, the FUNC menu provides the following menu functions that can be quickly accessed, adjusted and set.

- [WB] (p. 25)
- [IMAGE QUALITY] (p. 24)
- [ISO] (p. 25)

1 Press the FUNC button.

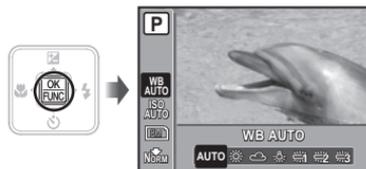

- ### 2 Use to select the menu function and to select the setting option, and then press the button to set.


 


Using Playback Features

Index view and closeup view

Index view enables quick selection of a target image. Closeup view (up to 10x magnification) allows checking of image details.

1 Press the zoom buttons.

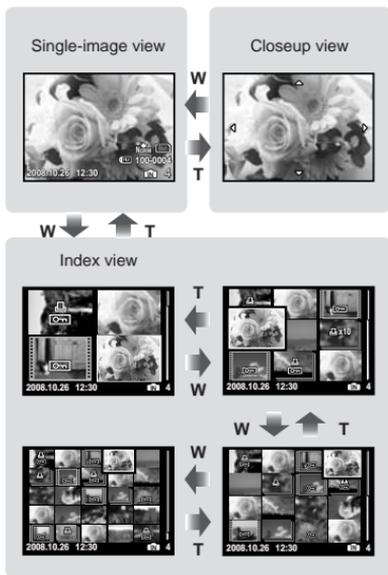

To select an image in index view

Use to select an image, and press the button to display the selected image in single-image view.

To scroll an image in closeup view


Use to move the viewing area.

Changing the image information display

Shooting information settings displayed on the screen can be changed.

1 Press the DISP. button.

- The displayed image information changes in the order shown below each time the button is pressed.

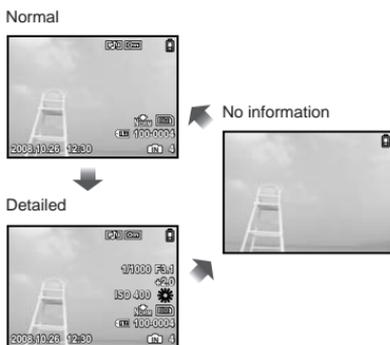

Playing back My Favorite images

My Favorite images can be registered to the internal memory. (9 images maximum)

- Registered images won't be erased even if the internal memory is formatted.

1 Register images as My Favorite images.

- "Registering images to the internal memory as My Favorite images [★ MY FAVORITE]" (p. 28)

2 Press the MENU button during playback.

3 Use to select [MY FAVORITE], and press the button.


4 Use to select [VIEW FAVORITE], and press the button.



5 Use to select My Favorite image.

To play back My Favorite images automatically (Slideshow)

- Press the **MENU** button while playing back My Favorite images.

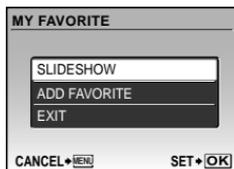

- Use   to select [SLIDESHOW], and press the  button.

To register additional My Favorite images

- Press the **MENU** button while playing back My Favorite images.
- Use   to select [ADD FAVORITE], and press the  button.
- Use   to select an image to register, and press the  button.

To erase registered My Favorite images

- Use     to select My Favorite image, and press the  button.
 - Use   to select [YES], and press the  button.
- Erasing a picture from My Favorite does not erase the original picture recorded in the internal memory or to the card.

To return to normal playback mode

- Press the **MENU** button while playing back My Favorite images.
- Use   to [EXIT], press  button.

Menus for Shooting Functions

In shooting mode, settings can be adjusted.

-  indicates mode in which the function can be set.
-  The default settings of the function are highlighted in .

Selecting the appropriate image quality for your application [IMAGE QUALITY]



Still images

-  JPEG (compression) images can be viewed and printed directly with a personal computer or other device.

Submenu 1	Submenu 2	Application
IMAGE SIZE	8M (3264x2448)	Suitable for printing pictures over A3 (11x17 in.).
	5M (2560x1920)	Suitable for printing pictures at A4 (8.5x11 in.).
	3M (2048x1536)	Suitable for printing pictures up to A4 (8.5x11 in.).
	2M (1600x1200)	Suitable for printing pictures at A5 (5x7 in.).
	1M (1280x960)	Suitable for printing pictures at postcard size.
	VGA (640x480)	Suitable for viewing pictures on a TV or using pictures on emails and web sites.
	16:9 (1920x1080)	Suitable for playing pictures on wide screen TV.
COMPRESSION	FINE	Shooting at high quality.
	NORMAL	Shooting at normal quality.

Movies

Submenu 1	Submenu 2	Application
IMAGE SIZE	VGA (640x480) / QVGA (320x240)	Select the image quality based on the image size and frame rate. Higher frame rate provides smoother video images.
FRAME RATE	 30fps ^{*1} /  15fps ^{*1}	

*1 frames per second



Adjusting to a natural color scheme [WB]

CAMERA MENU ▶ WB

: P SCENE

Submenu 2	Application
AUTO	The camera automatically adjusts the white balance according to the shooting scene.
	For shooting outdoors under a clear sky
	For shooting outdoors under a cloudy sky
	For shooting under tungsten lighting
	For shooting under daylight fluorescent lighting (household lighting, etc.)
	For shooting under neutral fluorescent lighting (desk lamps, etc.)
	For shooting under white fluorescent lighting (offices, etc.)

Selecting the ISO sensitivity [ISO]

CAMERA MENU ▶ ISO

: P

- In the ISO setting, although smaller values result in less sensitivity, sharp images can be taken under fully lit conditions. Larger values result in higher sensitivity, and images can be taken at fast shutter speeds even under dimly lit conditions. High sensitivity introduces noise into the resulting picture, which may give it a grainy appearance.

Submenu 2	Application
AUTO	The camera automatically adjusts the sensitivity according to the shooting scene.
64/100/200/400/ 800/1000	The value of the ISO sensitivity is fixed.

Recording sound when shooting still images [U]

CAMERA MENU ▶

: P SCENE

Submenu 2	Application
OFF	No sound is recorded.
ON	The camera automatically starts recording for approx. 4 seconds after taking the picture. This is useful for recording notes or comments about the picture.

- When recording, aim the microphone (p. 6) at the source of the sound you want to record.
- The sound when recorded in still REC can not be played back with this camera. To listen to the sound, connect to a TV or PC.

Selecting sound setting for movies [U]

CAMERA MENU ▶

:

Submenu 2	Application
OFF	No sound is recorded.
ON	Sound is recorded.

- When set to [ON], only the digital zoom can be used during movie recording. To record the movie with the optical zoom, set (movies) to [OFF].
- The sound when recorded in movie REC cannot be played back with this camera. To listen to the sound, connect to a TV or PC.


Creating panoramic images [PANORAMA]

CAMERA MENU ▶ PANORAMA

: P SCENE

Panorama shooting lets you create a panoramic picture, using the OLYMPUS Master 2 software on the provided CD-ROM.

- ❗ An Olympus xD-Picture Card is required for panoramic shooting. Cards by other manufacturers do not support panoramic shooting.
 - ❗ Panoramic shooting is not available using a microSD card in the microSD Attachment.
 - ❗ The focus, exposure (p. 19), zoom position (p. 19), and [WB] (p. 25) are locked at the first frame.
 - ❗ The flash (p. 19) is fixed to (FLASH OFF) mode.
- ① Use to select the direction that the frames are combined.
 - ② Press the shutter button to take the first frame, and then compose the second shot.
 - The part of the previous picture where it will be joined to the next picture does not remain in the frame. You have to remember what the part in the frame looked like and take the next picture so it overlaps.

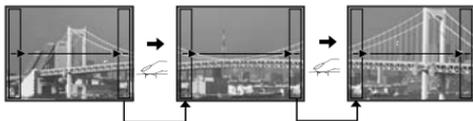

- ③ Repeat Step ② until the number of required frames is taken, and then press the button when done.
- ❗ When the mark is displayed, you cannot continue shooting any further. Panorama shooting is possible for up to 10 frames.
 - ❗ Refer to the OLYMPUS Master 2 help guide for details on how to make panorama images.

Selecting the focusing on a face [FACE DETECT]

CAMERA MENU ▶ FACE DETECT

: P SCENE

Submenu 2	Application
OFF	The camera does not focus on a face.
ON ¹	This is used for taking pictures of people. The camera automatically detects and focuses on a face.

¹ For some subjects, the frame may not appear or may take some time to appear.

Shooting with P or **AUTO** [P/AUTO]

P/AUTO

: SCENE

If you select [P/AUTO] when mode or SCENE mode has been set, the mode will change to P or **AUTO**.



Selecting a scene mode according to the shooting situation [SCENE]

SCENE

: SCENE

- ! In SCENE modes, the optimum shooting settings are pre-programmed for specific shooting scenes. For this reason, settings may not be changed in some modes.

Submenu 1	Application
PORTRAIT/ LANDSCAPE/ NIGHT+PORTRAIT ¹ / SPORT/ INDOOR/ CANDLE/ SELF PORTRAIT/ SUNSET ¹ / FIREWORKS ¹ / BEHIND GLASS/ CUISINE/ DOCUMENTS/ AUCTION/ 1 UNDERWATER WIDE1 ² / 2 UNDERWATER WIDE2 ² / UNDERWATER MACRO ²	<p>The camera takes a picture in the mode for the shooting scene.</p>

¹ When the subject is dark, noise reduction is automatically activated. This approximately doubles the shooting time, during which no other pictures can be taken.

² Available in the FE-360/X-875/C-570 only.

To select a mode

"Using the best mode for the shooting scene (SCENE mode)" (p. 17)

Shooting with DIS MODE

[DIS MODE]

DIS MODE

: AUTO P SCENE

If you select [DIS MODE] when P mode, AUTO mode, or SCENE mode has been set, the mode will change to DIS MODE.

When the mode is set to DIS MODE, the mode cannot be changed by selecting [DIS MODE].

Restoring the shooting functions to the default settings [RESET]

RESET

: AUTO P SCENE

Submenu 1	Application
YES	<p>Restores the following menu functions to the default settings.</p> <ul style="list-style-type: none"> Flash (p. 19) Exposure compensation (p. 19) Macro (p. 20) Self-timer (p. 20) [IMAGE QUALITY] (p. 24) [SCENE] (p. 27) Shooting information display (p. 21) Menu functions in [CAMERA MENU] (p. 24 to 27)
NO	<p>The current settings are not changed.</p>

Menus for Playback, Editing, and Printing Functions

Settings can be adjusted during image playback.

Playing back pictures automatically [SLIDESHOW]

SLIDESHOW

To start a slideshow

After pressing the button, the slideshow starts. To stop the slideshow, press the button or the **MENU** button.

- ! The sound when recorded in slideshow can not be played back with this camera.
To listen to the sound, connect to a TV or PC.

Registering images to the internal memory as My Favorite images [★ MY FAVORITE]

★ MY FAVORITE

- ! Up to 9 images can be registered.
- ! “Playing back My Favorite images” (p. 23)

To register images as My Favorite images

- Use to select [SET], and press the button.
- Use to select an image to register, and press the button.
 - The selected image is registered to the internal memory as a separate My Favorite image.



- ! Registered pictures cannot be erased even by formatting the internal memory.
- ! The following is not available for registered My Favorite images: Editing, printing, backup to a card, transferring to a computer, and playback on a computer.

Changing the image size []

EDIT

Submenu 2	Application
VGA 640 × 480	This saves a high-resolution image as a separate image with a smaller size for use in e-mail attachments and other applications.
QVGA 320 × 240	

Cropping image []

EDIT

- Use to select an image, and press the button.
- Use the zoom buttons to select the size of the cropping frame, and use to move the frame.



- Press the button.
 - The edited image will be saved as a separate image.



Protecting images [O-T]

▶ PLAYBACK MENU ▶ O-T

- ⚠ Protected images cannot be erased by [ERASE] (p. 16), [SEL. IMAGE], or [ALL ERASE] (p. 29), but all images are erased by [MEMORY FORMAT]/[FORMAT] (p. 31).

Submenu 2	Application
OFF	Images can be erased.
ON	Images are protected so that they cannot be erased except by formatting of the internal memory/card.

- Use to select an image.
- Use / to select [ON].
- If necessary, repeat Steps ① and ② to protect other images, and press the button.

Rotating images [R-T]

▶ PLAYBACK MENU ▶ R-T

Submenu 2	Application
+90°	The image is rotated 90° clockwise.
0°	The image is not rotated.
-90°	The image is rotated 90° counter-clockwise.


- Use to select an image.
 - Use / to select the rotation direction.
 - If necessary, repeat Steps ① and ② to make settings for other images, and press the button.
- ⚠ The new picture orientations will be saved even after the power is turned off.

Adding sound to still images [U]

▶ PLAYBACK MENU ▶ U

Submenu 2	Application
YES	The camera adds (records) sound for approx. 4 seconds while playing back the image. This is useful for recording notes or comments about the image.
NO	No sound is recorded.

 - Use to select an image, and press the button.
- Aim the microphone towards the sound source.



- Use / to select [YES], and press the button.
 - Recording starts.

Erasing images [W ERASE]

W ERASE

Submenu 1	Application
SEL. IMAGE	Images are individually selected and erased.
ALL ERASE	All images in the internal memory or card will be erased.

- ⚠ When erasing pictures in the internal memory, do not insert the card into the camera.
- ⚠ When erasing pictures from the card, insert a card into the camera in advance.

To individually select and erase images [SEL. IMAGE]

- ① Use $\blacktriangleleft/\blacktriangleright$ to select [SEL. IMAGE], and press the OK button.
- ② Use $\blacktriangleleft/\blacktriangleright$ to select the image to be erased, and press the OK button to add a ✓ mark to the image.



- ③ Repeat Step ② to select the images to be erased, and then press the DISP button to erase the selected images.
- ④ Use $\blacktriangleleft/\blacktriangleright$ to select [YES], and press the OK button.
 - The images with a ✓ mark are erased.

To erase all images [ALL ERASE]

- ① Use $\blacktriangleleft/\blacktriangleright$ to select [ALL ERASE], and press the OK button.
- ② Use $\blacktriangleleft/\blacktriangleright$ to select [YES], and press the OK button.

Saving print settings to the image data [PRINT ORDER]

PRINT ORDER

- ! "Print reservations (DPOF)" (p. 37)
- ! Print reservation can be set only for still images that are recorded to a card.



Menus for Other Camera Settings

Erasing data completely [MEMORY FORMAT]/[FORMAT]

⏏ SETUP ▶ MEMORY FORMAT/FORMAT

- ⚠ Before formatting, check that no important data is left in the internal memory or card.
- ⚠ Non-Olympus cards and cards that have been formatted by a computer must be formatted with this camera before use.

Submenu 2	Application
YES	Completely erases the image data in the internal memory ¹⁾ or card (including protected images).
NO	Cancels formatting.

¹⁾ Be sure to remove the card before formatting the internal memory.

Copying images in the internal memory to the card [BACKUP]

⏏ SETUP ▶ BACKUP

Submenu 2	Application
YES	Backs up image data in the internal memory to the card.
NO	Cancels the backup.

- ⚠ It takes some time to back up data. Check that the battery has sufficient power before starting the backup.

Changing the display language [🌐]

⏏ SETUP ▶ 🌐

- ⚠ "Changing the display language" (p. 13)

Submenu 2	Application
Languages ¹⁾	The language for the menus and error messages displayed on the monitor is selected.

¹⁾ The available languages vary depending on the country and/or region where the camera was purchased.

Adjusting the CCD and the image processing function [PIXEL MAPPING]

⏏ SETUP ▶ PIXEL MAPPING

- ⚠ This function has already been adjusted at factory shipping, and no adjustment is needed right after purchase. Approximately once a year is recommended.
- ⚠ For best results, wait at least one minute after taking or viewing pictures before performing pixel mapping. If the camera is turned off during pixel mapping, be sure to perform it again.

To adjust the CCD and to adjust the image processing function

Press the button when [START] (Submenu 2) is displayed.

- The camera checks and adjusts the CCD and the image processing function at the same time.

Turning on the camera with the / or button [/

⏏ SETUP ▶ /

Submenu 2	Application
YES	Pressing turns on the camera and starts the camera in the shooting mode. Pressing turns on the camera and starts the camera in the playback mode.
NO	The power is not turned on. To turn on the camera, press the POWER button.

Saving the mode when the camera is turned off [SAVE SETTINGS]

Y/T SETUP ► SAVE SETTINGS

Submenu 2	Application
NO	The camera starts in AUTO mode.
YES	The camera starts in the mode in effect when turned off.

! When set to [YES], the following settings will be saved.

- Flash
- Exposure compensation
- White balance
- Still REC
- Macro
- ISO
- Face detect

! All shooting settings, except for **P** mode, [IMAGE QUALITY], and the selected scene mode, return to default settings when the camera is turned off.

Selecting the menu screen color and background [MENU COLOR]

Y/T SETUP ► MENU COLOR

Submenu 2	Application
NORMAL/ COLOR 1/ COLOR 2/ COLOR 3	Selects the menu screen color or background image according to your preference.

Selecting the operation sound [BEEP]

Y/T SETUP ► BEEP

Submenu 2	Application
OFF/ON	Selects the operating sound/warning sound of the camera buttons.

Adjusting the brightness of the monitor [MONITOR]

Y/T SETUP ► MONITOR

Submenu 2	Application
BRIGHT/ NORMAL	Selects the monitor brightness depending on the surrounding brightness.

Setting the date and time [DATE/TIME]

Y/T SETUP ► DATE/TIME

! "Setting the date and time" (p. 13)

To select the date display order

- 1 Press after setting Minute, and use / to select the date display order.





Selecting a video signal system to match your TV [VIDEO OUT]

⏪ SETUP ► VIDEO OUT


- ⚠ The TV video signal system varies depending on the countries and regions. Before viewing camera images on your TV, select the video output according to your TV's video signal type.

Submenu 2	Application
NTSC	Connecting the camera to a TV in North America, Taiwan, Korea, Japan, and so on.
PAL	Connecting the camera to a TV in European countries, China, and so on.

- ⚠ The factory default settings differ according to the region where the camera is sold.

To play back camera images on a TV

- 1 Connect the TV and camera.

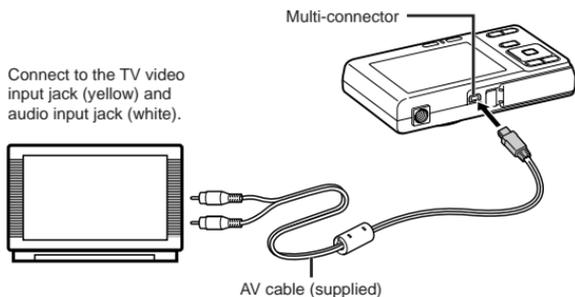

- 2 Use the camera to select the same video signal system as the one of connected TV ([NTSC]/[PAL]).
- 3 Turn on the TV, and change "INPUT" to "VIDEO (an input jack connected to the camera)."
- ⚠ For details on changing the input source of the TV, refer to the TV's instruction manual.
- 4 Press the button, and use to select the image for playback.
- ⚠ Depending on the TV's settings, the displayed images and information may become cropped.

Saving battery power between shots [POWER SAVE]

⏪ SETUP ► POWER SAVE

Submenu 2	Application
OFF	Cancels [POWER SAVE].
ON	When the camera is not being used for approx. 10 seconds, the monitor automatically turns off to save battery power.

To resume standby mode

Press any button.

Turning off the camera sounds [SILENT MODE]

SILENT MODE

Submenu 1	Application
OFF	Button operation sound/shutter sound/warning sound/sound of image playback of pictures are not muted.
ON	The electronic sounds (operation sound, shutter sound, warning sound) and playback sounds are muted.

- ⚠ [BEEP] (p. 32)

Printing

Direct printing (PictBridgeTM)

By connecting the camera to a PictBridge-compatible printer, you can print images directly without using a computer.

To find out if your printer supports PictBridge, refer to the printer's instruction manual.

¹ PictBridge is a standard for connecting digital cameras and printers of different makers and printing out pictures directly.


- ! The printing modes, paper sizes, and other parameters that can be set with the camera vary depending on the printer that is used. For details, refer to the printer's instruction manual.
- ! For details on the available paper types, loading paper, and installing ink cassettes, refer to the printer's instruction manual.

Printing images at the printer's standard settings [EASY PRINT]

1 Display the image to be printed on the monitor.

- ! "Viewing images" (p. 15)
- ! Printing can also be started when the camera is turned off. After performing Step 2, use \leftarrow / \rightarrow / \uparrow / \downarrow to select [EASY PRINT], press the $\left[\text{OK}\right]$ button. Use \leftarrow / \rightarrow to select an image, and proceed to Step 3.

2 Turn on the printer, and then connect the printer and camera.

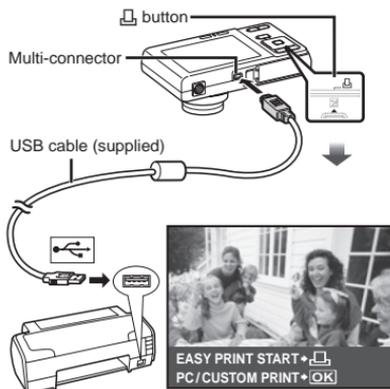

3 Press the $\left[\text{OK}\right]$ button to start printing.

4 To print another image, use \leftarrow / \rightarrow to select an image, and press the $\left[\text{OK}\right]$ button.


To exit printing

After a selected image is displayed on the screen, disconnect the USB cable from the camera and printer.



Changing the printer's settings for printing [CUSTOM PRINT]

- 1 Follow Steps 1 and 2 for [EASY PRINT] (p. 34), and press the  button.

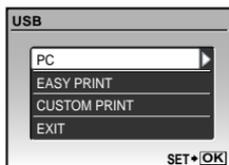

- 2 Use   to select [CUSTOM PRINT], and press the  button.


- 3 Use   to select the print mode, and press the  button.

Submenu 2	Application
PRINT	This prints the image selected in Step 6.
ALL PRINT	This prints all images stored in the internal memory or card.
MULTI PRINT	This prints one image in a multiple layout format.
ALL INDEX	This prints an index of all images stored in the internal memory or card.
PRINT ORDER ¹⁾	This prints images based on the print reservation data on the card.

¹⁾ [PRINT ORDER] is available only when print reservations have been made. "Print Reservations (DPOF)" (p. 37)

- 4 Use   to select [SIZE] (Submenu 3), and press .

-  If the [PRINTPAPER] screen is not displayed, the [SIZE], [BORDERLESS], and [PICS/SHEET] are set to the printer's standard.

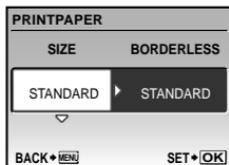

- 5 Use   to select the [BORDERLESS] or [PICS/SHEET] settings, and press the .

Submenu 4	Application
OFF/ON ¹⁾	The image is printed with a border around it ([OFF]). The image is printed to fill the entire paper ([ON]).
(The number of images per sheet varies depending on the printer.)	The number of images per sheet ([PICS/SHEET]) is selectable only when [MULTI PRINT] is selected in Step 3.

¹⁾ The available settings for [BORDERLESS] vary depending on the printer.

-  If [STANDARD] is selected in Steps 4 and 5, the image is printed at the printer's standard settings.




- 6 Use   to select an image.

- 7 Press the  button to make a print reservation for the current image. Press   to make the detailed printer settings for the current image.

To make the detailed printer settings

- ① Use     to select the setting, and press the .

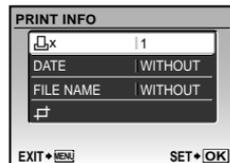

Submenu 5	Submenu 6	Application
	0 to 10	This selects the number of prints.
DATE	WITH/ WITHOUT	Selecting [WITH] prints the images with the date. Selecting [WITHOUT] prints the images without the date.
FILE NAME	WITH/ WITHOUT	Selecting [WITH] prints the file name on the image. Selecting [WITHOUT] does not print any file name on the image.
	(Proceeds to the setting screen.)	This selects a portion of the image for printing.

To crop an image []


- Use the zoom buttons to select the size of the cropping frame, use to move the frame, and then press the button.



- Use to select [OK], and press the button.


- If necessary, repeat Steps 6 to 7 to select the image to be printed, make the detailed settings, and set [SINGLEPRINT].

- Press the button.

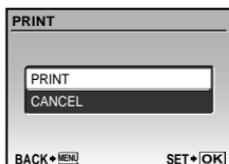


- Use to select [PRINT], and press the button.

- Printing starts.
- When [OPTION SET] is selected in [ALL PRINT] mode, [PRINT INFO] screen is displayed.
- When printing is finished, the [PRINT MODE SELECT] screen is displayed.

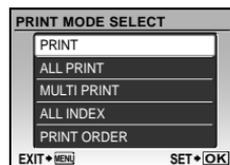

To cancel printing

- When [TRANSFERRING] is displayed, press the button, use to select [CANCEL], and then press the button again.

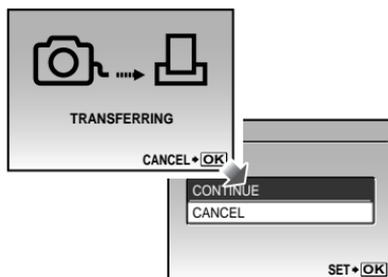

- Press the MENU button.

- When the message [REMOVE USB CABLE] is displayed, disconnect the USB cable from the camera and printer.

Print Reservations (DPOF¹)


In print reservations, the number of prints and date imprint option are saved in the image on the card. This enables easy printing at a printer or print shop supporting DPOF by using only the print reservations on the card without a computer or a camera.

¹ DPOF is a standard for storing automatic printout information from digital cameras.

- ❗ Print reservations can be set only for the images stored on the card. Insert a card with recorded images before making print reservations.
- ❗ DPOF reservations set by another DPOF device cannot be changed by this camera. Make changes using the original device. Making new DPOF reservations with this camera will erase the reservations made by the other device.
- ❗ DPOF print reservations can be made for up to 999 images per card.

Single-frame print reservations [P]

- 1 Press the button, and then press the MENU button to display the top menu.
- 2 Use to select [PRINT ORDER], and press the button.

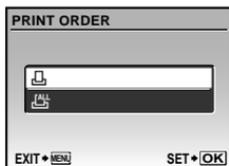

- 3 Use to select [P], and press the button.



- 4 Use to select the image for print reservation. Use to select the quantity. Press the button.



To crop an image for printing

Make the cropping settings before pressing the button in Step 4. "To crop an image [P]" (p. 36)

- 5 Use to select the [D] (date print) screen option, and press the button.

Submenu 2	Application
NO	This prints the image only.
DATE	This prints the image with the shooting date.
TIME	This prints the image with the shooting time.




- 6 Use to select [SET], and press the button.

Reserving one print each of all images on the card [All]

- 1 Follow Steps 1 and 2 in [] (p. 37).
- 2 Use to select [All], and press the button.
- 3 Follow Steps 5 to 6 in [].
 - Cropping is not available in [All].

Resetting all print reservation data

- 1 Press the button, and then press the MENU button to display the top menu.
- 2 Use to select [PRINT ORDER], and press the button.
- 3 Select either [] or [All], and press the button.

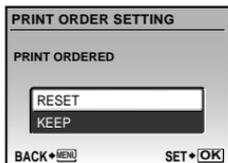

- 4 Use to select [RESET], and press the button.

Resetting the print reservation data for selected images

- 1 Follow Steps 1 and 2 of “Resetting all print reservation data” (p. 38).
- 2 Use to select [], and press the button.
- 3 Use to select [KEEP] and press the button.
- 4 Use to select the image with the print reservation you want to cancel. Use to set the print quantity to “0”.
- 5 If necessary, repeat Step 4, and then press the button when finished.
- 6 Use to select the [] (date print) screen option, and press the button.
 - The settings are applied to the remaining images with the print reservation data.
- 7 Use to select [SET], and press the button.

Using OLYMPUS Master 2

System requirements and installation of OLYMPUS Master 2

Install the OLYMPUS Master 2 software by referring to the included installation guide.


Connecting the camera to a computer

1 Make sure the camera is turned off.

- The monitor is off.
- The lens is retracted.

2 Connect the camera to a computer.

- The camera automatically turns on.

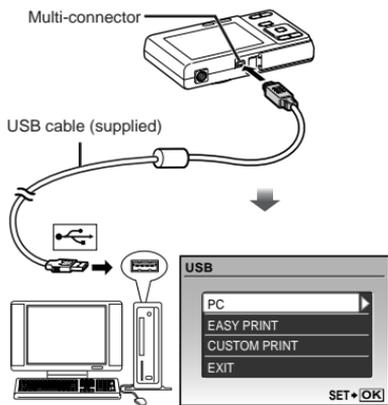

- ! Locate the position of the USB port by referring to your computer's instructions manual.

3 Use to select [PC], and press the button.

- The computer automatically detects the camera as a new device on the first connection.

Windows

After the computer detects the camera, a message indicating the completion of the setting appears. Confirm the message and click "OK". The camera is recognized as a removable disk.

Macintosh

When iPhoto has started, exit iPhoto and start OLYMPUS Master 2.

- ! While the camera is connected to the computer, shooting functions are disabled.
- ! Connecting the camera to a computer via a USB hub may cause unstable operation.
- ! When [MTP] is set for the submenu that appears by pressing after selecting [PC] in Step 3, images cannot be transferred to a computer using OLYMPUS Master 2.

Starting OLYMPUS Master 2

1 Double-click the OLYMPUS Master 2 icon.

Windows

appears on the desk top.

Macintosh

appears in the OLYMPUS Master 2 folder.

- Browse window appears after starting the software.
- ! When you start OLYMPUS Master 2 for the first time after installation, "Default Settings" and "Registration" screen appear. Follow the instructions on the screen.

Operating OLYMPUS Master 2

When OLYMPUS Master 2 is started, Quick Start Guide appears on the screen that helps you to handle the camera without any question. When the Quick Start Guide is not displayed, click  in the tool bar to show the Guide.



For details on the operation, refer to the help guide of the software.

Transferring and saving images without using OLYMPUS Master 2

This camera is compatible with the USB Mass Storage Class. You can transfer and save the image data on your computer while the camera and the computer are connected.

System requirements

Windows : Windows 2000 Professional/
XP Home Edition/
XP Professional/Vista

Macintosh : Mac OS X v10.3 or later

-  On a computer running Windows Vista, if [MTP] is set for the submenu that appears by pressing  after selecting [PC] in Step 3 of “**Connecting the camera to a computer**” (p. 39), Windows Photo Gallery will become available.
-  Even if a computer has USB ports, proper operation is not guaranteed in the following cases.
 - computers with USB ports installed using an expansion card, etc.
 - computers without a factory-installed OS and home-built computers

Usage Tips

If the camera does not work as intended, or if an error message is displayed on the screen, and you are unsure of what to do, refer to the information below to fix the problem(s).

Troubleshooting

Battery

"The camera does not work even when batteries are installed".

- Insert recharged batteries in the correct direction.
"Charging the battery" (p. 10), "Loading the battery (supplied) and the xD-Picture Card™ (sold separately) into the camera" (p. 11)
- Battery performance may have been reduced temporarily due to low temperature. Take the batteries out of the camera, and warm them by putting them in your pocket for a while.

Card/Internal memory

"An error message is displayed".

"Error message" (p. 42)

Shutter button

"No picture is taken when the shutter button is pressed".

- Cancel sleep mode.
To save battery power, the camera automatically goes into sleep mode and the monitor turns off if there is no operation for 3 minutes when the camera is turned on. No picture is taken even if the shutter button is fully pressed in this mode. Operate the zoom buttons or other buttons to restore the camera from sleep mode before taking a picture. If the camera is left for another 12 minutes, it automatically turns off. Press **POWER** to turn the camera on.
- Press   button to set a shooting mode.
- Wait until  (flash charge) stops blinking before taking pictures.

Monitor

"Difficult to see".

- Condensation¹ may have occurred. Turn off the power, and wait for the camera body to become acclimated to the surrounding temperature and dry out before taking pictures.
¹ Dew drops can form in the camera when it is suddenly taken from a cold location into a warm, humid room.

"Vertical lines appear on the screen".

- This condition may occur when the camera is pointed at an extremely bright subject under a clear sky and so on. The lines do not appear, however, in the final image.


"The light is caught in the picture".

- Shooting with flash in dark situations results in an image with many flash reflections on dust in the air.

Date and time function



"Date and time settings return to the default setting".

- If the batteries are removed and left out of the camera for about a day², the date and time settings return to the default setting, and must be reset.
² The time until the date and time settings return to the default setting varies depending on how long the batteries have been loaded.
- "Setting the date and time" (p. 13)**

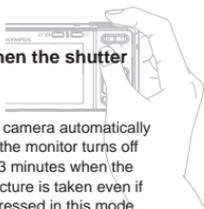

Error message

  -  When one of the messages below is displayed on the monitor, check the corrective action.

Error message	Corrective action
 CARD ERROR	Card problem Insert a new card.
 WRITE PROTECT	Card problem Use a computer to cancel the read-only setting.
 MEMORY FULL	Internal memory problem <ul style="list-style-type: none"> Insert a card. Erase unwanted images.¹
 CARD FULL	Card problem <ul style="list-style-type: none"> Replace the card. Erase unwanted images.¹
 CARD SETUP 	Card problem <ul style="list-style-type: none"> Use   to select [CLEAN CARD], and press the  button. Take out the card, wipe the contact area (p. 46) with a soft, dry cloth, and then load the card again. Use   to select [FORMAT], and press the  button. Next, use   to select [YES], and press the  button.²
 MEMORY SETUP 	Internal memory problem Use   to select [MEMORY FORMAT], and press the  button. Next, use   to select [YES], and press the  button. ²
 NO PICTURE	Internal memory/Card problem Take pictures before viewing them.
 PICTURE ERROR	Problem with selected image Use photo retouch software, etc. to view the image on a computer. If the image still cannot be viewed, the image file is corrupted.
 THE IMAGE CANNOT BE EDITED	Problem with selected image Use photo retouch software, etc. to edit the image on a computer.

 CARD-COVER OPEN	Operation problem Close the battery/card compartment cover.
 BATTERY EMPTY	Battery problem Charge the battery.
 NO CONNECTION	Connection problem Connect the camera and computer or printer correctly.
 NO PAPER	Printer problem Load paper into the printer.
 NO INK	Printer problem Refill the ink in the printer.
 JAMMED	Printer problem Remove the jammed paper.
 SETTINGS CHANGED³	Printer problem Return to the status where the printer can be used.
 PRINT ERROR	Printer problem Turn off the camera and printer, check the printer for any problems, and then turn the power on again.
 CANNOT PRINT⁴	Problem with selected image Use a computer to print.

¹ Before erasing important images, download them to a computer.

² All data will be erased.

³ This is displayed, for instance, when the printer's paper tray has been removed. Do not operate the printer while making the print settings on the camera.

⁴ This camera may be unable to print images taken by other cameras.

Shooting tips

When you are unsure of how to take a picture that you envision, refer to the information below.

Focusing



“Focusing on the subject”

- Taking a picture of a subject not in the center of the screen

After focusing on an object at the same distance as the subject, compose the shot, and take the picture.

Pressing the shutter button halfway (p. 14)

AF lock (p. 17)

- Taking a picture of subjects where autofocus is difficult

In the following cases, after focusing on an object (by pressing the shutter button halfway down) with high contrast at the same distance as the subject, compose the shot, and take the picture.

 
Subjects with low contrast



When extremely bright objects appear in the center of the screen



Object with no vertical lines¹



¹ It is also effective to compose the shot by holding the camera vertically to focus, and then returning to the horizontal position to take the picture.

When objects are at different distances



Fast-moving object



The subject is not in the center of the frame



Camera shake



“Taking pictures without camera shake”

- Taking pictures using **[M]** mode (p. 18).
- Select **[SPORT]** in **SCENE mode** (p. 27)

The **[SPORT]** mode uses a fast shutter speed and can reduce the blur incurred by a moving subject.

- Taking pictures at a high ISO sensitivity.

If a high ISO sensitivity is selected, pictures can be taken at a high shutter speed even at locations where a flash cannot be used.

[ISO] (p. 25)

Exposure (brightness)



“Taking pictures with the right brightness”

- Taking pictures using **[FACE DETECT]** (p. 26)

Appropriate exposure is obtained for a face against backlight, and the face is brightened.

- Taking pictures using **[FILL IN]** (p. 19) flash

A subject against backlight is brightened.

- Taking pictures using **exposure compensation** (p. 19)

Adjust the brightness while viewing the screen for taking the picture. Normally, taking pictures of white subjects (such as snow) results in images that are darker than the actual subject. Use the **[+]** button to adjust in the positive direction to express whites as they appear. When taking pictures of black subjects, on the other hand, it is effective to adjust in the negative direction.

“Taking pictures with colors at the same shade as they appear”● **Taking pictures by selecting [WB] (p. 25)**

Best results in most environments can normally be obtained with the AUTO setting, but for some subjects, you should try experimenting with different settings. (This is especially true for sunshade under a clear sky, mixed natural and artificial light settings, and so on.)

● **Taking pictures using [FILL IN] (p. 19) flash**

Use of the flash is also effective for shooting under fluorescent and other artificial lighting.

**Taking sharper pictures**● **Taking pictures with the optical zoom**

Avoid using digital zoom (p. 19) to take pictures.

● **Taking pictures at a low ISO sensitivity**

If the picture is taken with a high ISO sensitivity, noise (small colored spots and color unevenness that were not in the original image) can occur, and the image can appear grainy. The resulting image is grainier than with low ISO sensitivity as well.

[ISO] (p. 25)

**“Making batteries last longer”**● **Avoid any of the following operations when not actually taking pictures because they deplete the battery power.**

- Repeatedly pressing the shutter button halfway
- Repeatedly using the zoom

● **Set [POWER SAVE] (p. 33) to [ON].****“Playing images in the internal memory and card”**

“Loading the battery and the xD-Picture card™ (sold separately) into the camera” (p. 11)

“Using the microSD card/microSDHC card (sold separately)” (p. 12)

**“Erasing the sound recorded to a still image”**● **Record over the sound with silence when playing back the image**

“Adding sound to still images [Ⓜ]” (p. 29)

Appendix

Camera care

Exterior

- Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

Monitor

- Wipe gently with a soft cloth.

Lens

- Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner.

Battery/Charger

- Wipe gently with a soft, dry cloth.
 - ! Do not use strong solvents such as benzene or alcohol, or chemically treated cloth.
 - ! Mold may form on the lens surface if the lens is left dirty.

Storage

- When storing the camera for extended periods, remove the battery and card, and keep in a cool, dry place that is well ventilated.
- Periodically insert the battery and test the camera functions.
 - ! Avoid leaving the camera in places where chemical products are handled since this may result in corrosion.

Battery and charger


- This camera uses one Olympus lithium ion battery (LI-42B/LI-40B). No other type of batteries can be used.
- Power consumption by the camera varies depending on which functions are used.
- During the conditions described below, power is consumed continuously and the battery becomes exhausted quickly.
 - The zoom is used repeatedly.
 - The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus.
 - A picture is displayed on the monitor for an extended period of time.
 - The camera is connected to a computer or printer.
- Using an exhausted battery may cause the camera to turn off without displaying the battery level warning.
- The rechargeable battery is not fully charged at the time of purchase. Charge the battery fully with the LI-40C charger before use.
- The provided rechargeable battery usually takes approximately 5 hours to charge (varies on usage).
- The supplied LI-40C battery charger is used only for LI-42B/LI-40B batteries. Do not charge any other type of battery with the supplied battery charger. It might cause explosion, leaking, overheating or fire.
- This power unit is intended to be correctly orientated in a vertical or floor mount position.

Using your charger abroad

- The charger can be used in most home electrical sources within the range of 100 V to 240 V AC (50/60Hz) around the world. However, depending on the country or area you are in, the AC wall outlet may be shaped differently and the charger may require a plug adapter to match the wall outlet. For details, ask at your local electrical shop or travel agent.
- Do not use travel voltage converters as they could damage your charger.

Using an xD-Picture Card

A card (and internal memory) also corresponds to the film that records images in a film camera. Otherwise, the recorded images (data) can be erased, and retouching is also available with the use of a computer. Cards can be removed from the camera and exchanged, but this is not possible with the internal memory. Use of larger capacity cards enables you to take more pictures.

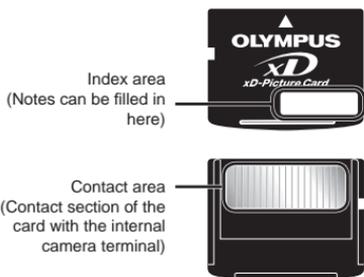

⚠ Do not touch the contact area directly.

Cards compatible with this camera

xD-Picture Card (16MB to 2GB) (TypeH/M/M+, Standard)

Using a new card

Before using a non-Olympus card or a card that was used for another purpose in a computer or other device, use **[MEMORY FORMAT]/[FORMAT]** (p. 31) to format the card.


Checking the image saving location

The memory indicator shows whether the internal memory or card is being used during shooting and playback.

Current memory indicator

[M]: Internal memory is being used


None: Card is being used

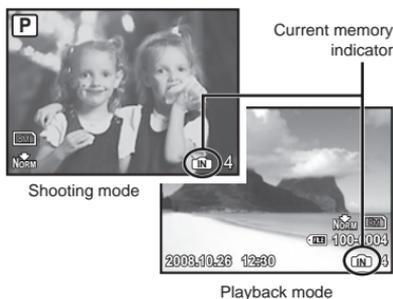

⚠ Even if **[MEMORY FORMAT]/[FORMAT]**, **[ERASE]**, **[SEL. IMAGE]**, or **[ALL ERASE]** is performed, the data in the card is not completely erased. When disposing of the card, damage the card to prevent the disclosure of personal data.

Readout/recording process of the card

 Never open the battery/card compartment cover while the camera is reading or writing data, which is indicated by blinking of the card access lamp. This can not only damage the image data but also render the internal memory or card unusable.



Number of storable pictures (still pictures)/recording length (movies) in the internal memory and xD-Picture Card

Still images

IMAGE SIZE		COMPRES- SION	Number of storable still pictures			
			Internal memory		Using a 1GB xD-Picture Card	
			With sound	Without sound	With sound	Without sound
8M	3264×2448	FINE	4	4	221	223
		NORM	8	8	429	438
5M	2560×1920	FINE	7	7	353	359
		NORM	13	14	673	695
3M	2048×1536	FINE	11	11	566	576
		NORM	22	23	1,102	1,142
2M	1600×1200	FINE	18	19	913	940
		NORM	35	38	1,728	1,881
1M	1280×960	FINE	28	29	1,390	1,453
		NORM	52	59	2,558	2,907
VGA	640×480	FINE	93	118	4,568	5,814
		NORM	163	217	7,995	10,660
16:9	1920×1080	FINE	17	17	841	876
		NORM	33	35	1,640	1,728

Movies

IMAGE SIZE		FRAME RATE	Recording length			
			Internal memory		Using a 1 GB xD-Picture Card	
			With sound	Without sound	With sound	Without sound
VGA	640×480	30	10 sec.	11 sec.*	8 min. 54 sec.*	9 min. 5 sec.*
		15	21 sec.	22 sec.	17 min. 48 sec.	18 min. 11 sec.
QVGA	320×240	30	29 sec.	30 sec.	24 min. 2 sec.	25 min. 28 sec.
		15	58 sec.	1 min. 1 sec.	48 min. 4 sec.	50 min. 56 sec.

! The maximum file size of a single movie is 2 GB, regardless of the capacity of the card.

* The maximum continuous recording length of a single movie will be 10 seconds.

Increasing the number of pictures that can be taken

Either erase unwanted images, or connect the camera to a computer or other device to save the images, and then erase the images in the internal memory or card.

[ERASE] (p. 16), [SEL. IMAGE] (p. 29), [ALL ERASE] (p. 29), [MEMORY FORMAT]/[FORMAT] (p. 31)

- ❗ Do not use the attachment with Olympus digital cameras that do not support this microSD Attachment, as well as with other brands of digital cameras, computers, printers, and other devices that support xD-Picture Card. Doing so not only may damage the pictures taken, but may also result in the malfunction of the device.
- ❗ If the microSD card cannot be removed, do not use force. Contact authorized distributors/service centers.

Cards compatible with this camera

microSD card/microSDHC card

- ❗ For a list of tested microSD cards, please visit our website (<http://www.olympus.com/>).

Sending images

You can send images to a computer or printer by using the USB cable provided with the camera.

To send data to other devices, remove the attachment from the camera and use a commercially available microSD card adapter.

Handling precautions

Do not touch the contact area of the attachment or microSD card. Doing so may cause failure in reading the images. When fingerprints or stains are found on the contact area, wipe the area with a soft dry cloth.

	CAUTION RISK OF ELECTRICAL SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.</p>		

-  An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.
-  **DANGER** If the product is used without observing the information given under this symbol, serious injury or death may result.
-  **WARNING** If the product is used without observing the information given under this symbol, injury or death may result.
-  **CAUTION** If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

WARNING!
TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

General Precautions

- Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.
- Cleaning** — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.
- Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.
- Water and Moisture** — For precautions on products with weatherproof designs, read the weatherproofing sections.
- Location** — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.
- Power Source** — Connect this product only to the power source described on the product label.
- Foreign Objects** — To avoid personal injury, never insert a metal object into the product.
- Heat** — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

Handling the Camera

WARNING

- **Do not use the camera near flammable or explosive gases.**
- **Do not use the flash and LED on people (infants, small children, etc.) at close range.**
 - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- **Keep young children and infants away from the camera.**
 - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
 - Becoming entangled in the camera strap, causing strangulation.
 - Accidentally swallowing the battery, cards or other small parts.
 - Accidentally firing the flash into their own eyes or those of another child.
 - Accidentally being injured by the moving parts of the camera.
- **Do not look at the sun or strong lights with the camera.**
- **Do not use or store the camera in dusty or humid places.**
- **Do not cover the flash with a hand while firing.**
- **Do not insert anything into the microSD attachment other than the microSD card.** Other types of cards cannot be inserted into microSD Attachment.
- **Do not insert anything other than an xD-Picture Card or the microSD Attachment into the camera.**

If you insert a card by mistake, such as a microSD card, do not use force. Contact authorized distributors/service centers. Damages such as scratches on the microSD Attachment or card could result in the camera overheating and/or malfunctioning.

CAUTION

- **Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.**
 - Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- **Never hold or operate the camera with wet hands.**
- **Do not leave the camera in places where it may be subject to extremely high temperatures.**
 - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- **Handle the camera with care to avoid getting a low-temperature burn.**
 - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
 - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
 - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- **Be careful with the strap.**
 - Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

Battery Handling Precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.

DANGER

- The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, solder, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.

WARNING

- Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Insert the battery carefully as described in the operating instructions.
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never subject batteries to strong shocks or continuous vibration.

CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

Caution for Usage Environment

- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
 - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
 - In sandy or dusty environments.
 - Near flammable items or explosives.
 - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
 - In places prone to strong vibrations.
- Never drop the camera or subject it to severe shocks or vibrations.
- When mounted on a tripod, adjust the position of the camera with the tripod head. Do not twist the camera.
- Do not touch electric contacts on cameras.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the CCD, or may possibly cause fires.
- Do not push or pull severely on the lens.
- Before storing the camera for a long period, remove the batteries. Select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter button to make sure that it is operating normally.
- Always observe the operating environment restrictions described in the camera's manual.

Battery Handling Precautions

- This camera uses a lithium ion battery specified by Olympus. Do not use any other type of battery.
- If the battery's terminals get wet or greasy, camera contact failure may result. Wipe the battery well with a dry cloth before use.
- Always charge a battery when using it for the first time, or if it has not been used for a long period.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare battery as warm as possible. A battery that has run down at low temperatures may be restored after it is warmed at room temperature.
- The number of pictures you can take may vary depending on the shooting conditions or battery.
- Before going on a long trip, and especially before traveling abroad, purchase extra batteries. A recommended battery may be difficult to obtain while traveling.
- Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure to cover their terminals and always observe local laws and regulations.

LCD Monitor

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged on the monitor. This is not a malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the LCD monitor may take a long time to turn on or its color may change temporarily. When using the camera in extremely cold places, it is a good idea to occasionally place it in a warm place. An LCD monitor exhibiting poor performance due to low temperatures will recover in normal temperatures.
- The LCD used for the monitor is made with high-precision technology. However, black spots or bright spots of light may appear constantly on the LCD Monitor. Due to its characteristics or the angle at which you are viewing the monitor, the spot may not be uniform in color and brightness. This is not a malfunction.

Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages, so the above limitations may not apply to you.
- Olympus reserves all rights to this manual.

Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

Copyright Notice

 
All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

FCC Notice

- Radio and Television Interference
- Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Adjust or relocate the receiving antenna.
 - Increase the distance between the camera and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult your dealer or an experienced radio/TV technician for help. Only the OLYMPUS-supplied USB cable should be used to connect the camera to USB enabled personal computers (PC).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate it.

Representative plug of power supply cord of countries/regions around the world



A Type
(American Type)



B Type
(British Type)



BF Type
(British Type)



B3 Type
(British Type)



C Type
(CEE Type)



SE Type
(CEE Type)



O Type
(Oceania Type)

The representative supply voltage and plug type are described in this chart.
Depending on the area, different types of plugs and supply voltages are used.

Attention: Power cord meeting demands from each country shall be used.

- For only the United States

Use a UL Listed, 1.8 - 3 m (6 - 10 ft), Type SPT-2 or NISPT-2, AWG no. 18 power supply cord, rated for 125 V 7 A, with a non-polarized NEMA 1-15P plug rated for 125 V 15 A".

Europe

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Austria	230	50	C
Belgium	230	50	C
Czech	220	50	C
Denmark	230	50	C
Finland	230	50	C
France	230	50	C
Germany	230	50	C
Greece	220	50	C
Hungary	220	50	C
Iceland	230	50	C
Ireland	230	50	C/BF
Italy	220	50	C
Luxemburg	230	50	C
Netherlands	230	50	C
Norway	230	50	C
Poland	220	50	C
Portugal	230	50	C
Romania	220	50	C
Russia	220	50	C
Slovak	220	50	C
Spain	127/230	50	C
Sweden	230	50	C
Switzerland	230	50	C
UK	240	50	BF

Asia

Countries/Regions	Voltage	Frequency (Hz)	Plug type
China	220	50	A
Hong Kong	200/220	50	BF
India	230/240	50	C
Indonesia	127/230	50	C
Japan	100	50/60	A
Korea (rep)	220	60	C
Malaysia	240	50	BF
Philippines	220/230	60	A/C
Singapore	230	50	BF
Taiwan	110	60	A
Thailand	220	50	C/BF
Vietnam	220	50	A/C

Oceania

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Australia	240	50	O
New Zealand	230/240	50	O

North America

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Canada	120	60	A
USA	120	60	A

Central America

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Bahamas	120/240	60	A
Costa Rica	110	60	A
Cuba	110/220	60	A/C
Dominican (rep)	110	60	A
El Salvador	110	60	A
Guatemala	120	60	A
Honduras	110	60	A
Jamaica	110	50	A
Mexico	120/127	60	A
Nicaragua	120/240	60	A
Panama	110/220	60	A

South America

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Argentina	220	50	C/BF/O
Brazil	127/220	60	A/C
Chile	220	50	C
Colombia	120	60	A
Peru	220	60	A/C
Venezuela	120	60	A

Middle East

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Iran	220	50	C/BF
Iraq	220	50	C/BF
Israel	230	50	C
Saudi Arabia	127/220	50	A/C/BF
Turkey	220	50	C
UAE	240	50	C/BF

Africa

Countries/Regions	Voltage	Frequency (Hz)	Plug type
Algeria	127/220	50	C
Congo (dem)	220	50	C
Egypt	220	50	C
Ethiopia	220	50	C
Kenya	240	50	C/BF
Nigeria	230	50	C/BF
South Africa	220/230	50	C/BF
Tanzania	230	50	C/BF
Tunisia	220	50	C

For customers in North and South America

For customers in USA

Declaration of Conformity

Model Number : FE-370/X-880/C-575

Trade Name : OLYMPUS

Responsible Party :
OLYMPUS IMAGING AMERICA INC.

Address : 3500 Corporate
Parkway, P.O. Box
610, Center Valley, PA
18034-0610, U.S.A.

Telephone Number : 484-896-5000

Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Use Only Dedicated Rechargeable Battery and Battery Charger

We strongly recommend that you use only the genuine Olympus dedicated rechargeable battery and battery charger with this camera. Using a non-genuine rechargeable battery and/or battery charger may result in fire or personal injury due to leakage, heating, ignition or damage to the battery. Olympus does not assume any liability for accidents or damage that may result from the use of a battery and/or battery charger that are not genuine Olympus accessories.

OLYMPUS WORLDWIDE LIMITED WARRANTY - IMAGING PRODUCTS

Olympus warrants that the enclosed Olympus® imaging product(s) and related Olympus® accessories (individually a "Product" and collectively the "Products") will be free from defects in materials and workmanship under normal use and service for a period of one (1) year from the date of purchase.

If any Product proves to be defective within the one-year warranty period, the customer must return the defective Product to any of Olympus Service Centers, following the procedure set forth below (See "WHAT TO DO WHEN SERVICE IS NEEDED").

Olympus, at its sole discretion, will repair, replace, or adjust the defective Product, provided that Olympus investigation and factory inspection disclose that (a) such defect developed under normal and proper use and (b) the Product is covered under this limited warranty.

Repair, replacement, or adjustment of defective Products shall be Olympus's sole obligation and the customer's sole remedy hereunder.

The customer is liable and shall pay for shipment of the Products to the Olympus Service Center. Olympus shall not be obligated to perform preventive maintenance, installation, deinstallation, or maintenance.

Olympus reserves the right to (i) use reconditioned, refurbished, and/or serviceable used parts (that meet Olympus's quality assurance standards) for warranty or any other repairs and (ii) make any internal or external design and/or feature changes on or to its products without any liability to incorporate such changes on or to the Products.

WHAT IS NOT COVERED BY THIS LIMITED WARRANTY

Excluded from this limited warranty and not warranted by Olympus in any fashion, either express, implied, or by statute, are:

- (a) products and accessories not manufactured by Olympus and/or not bearing the "OLYMPUS" brand label (the warranty coverage for products and accessories of other manufacturers, which may be distributed by Olympus, is the responsibility of the manufacturers of such products and accessories in accordance with the terms and duration of such manufacturers' warranties);
- (b) any Product which has been disassembled, repaired, tampered with, altered, changed, or modified by persons other than Olympus's own authorized service personnel unless repair by others is made with the written consent of Olympus;
- (c) defects or damage to the Products resulting from wear, tear, misuse, abuse, negligence, sand, liquids, impact, improper storage, nonperformance of scheduled operator and maintenance items, battery leakage, use of non-"OLYMPUS" brand accessories, consumables, or supplies, or use of the Products in combination with non-compatible devices;
- (d) software programs;
- (e) supplies and consumables (including but not limited to lamps, ink, paper, film, prints, negatives, cables and batteries); and/or
- (f) Products which do not contain a validly placed and recorded Olympus serial number, unless they are a model on which Olympus does not place and record serial numbers.

EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE, OLYMPUS MAKES NO AND DISCLAIMS ALL OTHER REPRESENTATIONS, GUARANTIES, CONDITIONS, AND WARRANTIES CONCERNING THE PRODUCTS, WHETHER DIRECT OR INDIRECT, EXPRESS OR IMPLIED, OR ARISING UNDER ANY STATUTE, ORDINANCE, COMMERCIAL USAGE OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OR REPRESENTATION AS TO THE SUITABILITY, DURABILITY, DESIGN, OPERATION, OR CONDITION OF THE PRODUCTS (OR ANY PART THEREOF) OR THE MERCHANTABILITY OF THE PRODUCTS OR THEIR FITNESS FOR A PARTICULAR PURPOSE, OR RELATING TO THE INFRINGEMENT OF ANY PATENT, COPYRIGHT, OR OTHER PROPRIETARY RIGHT USED OR INCLUDED THEREIN.

IF ANY IMPLIED WARRANTIES APPLY AS A MATTER OF LAW, THEY ARE LIMITED IN DURATION TO THE LENGTH OF THIS LIMITED WARRANTY.

SOME STATES MAY NOT RECOGNIZE A DISCLAIMER OR LIMITATION OF WARRANTIES AND/OR LIMITATION OF LIABILITY SO THE ABOVE DISCLAIMERS AND EXCLUSIONS MAY NOT APPLY.

THE CUSTOMER MAY ALSO HAVE DIFFERENT AND/OR ADDITIONAL RIGHTS AND REMEDIES THAT VARY FROM STATE TO STATE.

THE CUSTOMER ACKNOWLEDGES AND AGREES THAT OLYMPUS SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES THAT THE CUSTOMER MAY INCUR FROM DELAYED SHIPMENT, PRODUCT FAILURE, PRODUCT DESIGN, SELECTION, OR PRODUCTION, IMAGE OR DATA LOSS OR IMPAIRMENT OR FROM ANY OTHER CAUSE, WHETHER LIABILITY IS ASSERTED IN CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT PRODUCT LIABILITY) OR OTHERWISE. IN NO EVENT SHALL OLYMPUS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND (INCLUDING WITHOUT LIMITATION LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR DAMAGE.

Representations and warranties made by any person, including but not limited to dealers, representatives, salespersons, or agents of Olympus, which are inconsistent or in conflict with or in addition to the terms of this limited warranty, shall not be binding upon Olympus unless reduced to writing and approved by an expressly authorized officer of Olympus. This limited warranty is the complete and exclusive statement of warranty which Olympus agrees to provide with respect to the Products and it shall supersede all prior and contemporaneous oral or written agreements, understandings, proposals, and communications pertaining to the subject matter hereof. This limited warranty is exclusively for the benefit of the original customer and cannot be transferred or assigned.

WHAT TO DO WHEN SERVICE IS NEEDED

The customer must transfer any image or other data saved on a Product to another image or data storage medium and/or remove any film from the Product prior to sending the Product to Olympus for service.

IN NO EVENT SHALL OLYMPUS BE RESPONSIBLE FOR SAVING, KEEPING OR MAINTAINING ANY IMAGE OR DATA SAVED ON A PRODUCT RECEIVED BY IT FOR SERVICE, OR ON ANY FILM CONTAINED WITHIN A PRODUCT RECEIVED BY IT FOR SERVICE, NOR SHALL OLYMPUS BE RESPONSIBLE FOR ANY DAMAGES IN THE EVENT ANY IMAGE OR DATA IS LOST OR IMPAIRED WHILE SERVICE IS BEING PERFORMED (INCLUDING, WITHOUT LIMITATION, DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR IMPAIRMENT.

Package the Product carefully using ample padding material to prevent damage in transit and either deliver it to the Authorized Olympus Dealer that sold you the Product or ship it postage prepaid and insured to any of our Olympus Service Centers.

When returning Products for service, your package should include the following:

- 1 Sales receipt showing date and place of purchase.
- 2 Copy of this limited warranty **bearing the Product serial number corresponding to the serial number on the Product** (unless it is a model on which Olympus does not place and record serial numbers).
- 3 A detailed description of the problem.
- 4 Sample prints, negatives, digital prints (or files on disk) if available and related to the problem.

When service is completed, the Product will be returned to you postage prepaid.

WHERE TO SEND PRODUCT FOR SERVICE

See "WORLDWIDE WARRANTY" for the nearest service center.

INTERNATIONAL WARRANTY SERVICE

International warranty service is available under this warranty.

Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- xD-Picture Card™ is a trademark.
- microSD is a trademark of the SD Association.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design rule for Camera File system/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

Lithium ion battery (LI-42B)

Product type	: Lithium ion rechargeable battery
Standard voltage	: DC 3.7 V
Standard capacity	: 740 mAh
Battery life	: Approx. 300 full charges (varies on usage)
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (charging) / -10°C to 60°C (14°F to 140°F) (operation) / -20°C to 35°C (-4°F to 95°F) (storage)
Dimensions	: 31.5 mm (W) x 39.5 mm (H) x 6.0 mm (D) (1.2 x 1.5 x 0.2 in.)
Weight	: Approx. 15 g (0.5 oz)

Battery charger (LI-40C)

Power requirements	: AC 100 to 240 V (50 to 60 Hz)
Output	: DC 4.2 V, 200 mA
Charging time	: Approx. 5 hours
Operating environment	
Temperature	: 0 °C to 40 °C (32 °F to 104 °F) (operation) / -20 °C to 60 °C (-4 °F to 140 °F) (storage)
Dimensions	: 62.0 mm (W) x 23.0 mm (H) x 90.0 mm (D) (2.4 x 0.9 x 3.5 in.)
Weight	: Approx. 65 g (2.5 oz)

microSD Attachment

Product type	: Attachment for microSD card
Operating Environment	
Temperature	: -10 to 40 °C (14 °F to 104 °F) (operation) / -20 to 65 °C (-4 °F to 149 °F) (storage)
Humidity	: 95 % and below (operation) / 85 % and below (storage)
Dimensions	: 25.0 mm (W) x 20.3 mm (H) x 1.7 mm (D) (1.0 x 0.8 x 0.07 in.) (Handle:2.2 mm (0.09 in.))
Weight	: Approx. 0.9 g (0.03 oz)

Design and specifications subject to change without notice.

SPECIFICATIONS

Camera

Product type	: Digital camera (for shooting and displaying)
Recording system	
Still pictures	: Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))
Applicable standards	: Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge
Sound with still pictures	: Wave format
Movie	: AVI Motion JPEG
Memory	: Internal memory xD-Picture Card (16 MB to 2 GB) (TypeH/M/M+, Standard) microSD card/microSDHC card (when the supplied microSD Attachment is used.)
No. of effective pixels	: 8,000,000 pixels
Image pickup device	: 1/2.35" CCD (primary color filter), 8,500,000 pixels (gross)
Lens	: Olympus lens 6.3 to 18.9 mm, f3.1 to 5.9 (equivalent to 36 to 108 mm on a 35 mm camera)
Photometric system	: Digital ESP metering system
Shutter speed	: 4 to 1/2000 sec.
Shooting range	: 0.6 m (2.0 ft.) to ∞ (W), 1.0 m (3.3 ft.) to ∞ (T) (normal) 0.1 m (0.3 ft.) to ∞ (W), 0.6 m (2.0 ft.) to ∞ (T) (macro mode) 0.05 m (0.16 ft.) (super macro mode)
Monitor	: 2.5" TFT color LCD display, 154,000 dots
Connector	: Multi-connector (USB connector, A/V OUT jack)
Automatic calendar system	: 2000 up to 2099
Operating environment	
Temperature	: 0 °C to 40 °C (32 °F to 104 °F) (operation) / -20 °C to 60 °C (-4 °F to 140 °F) (storage)
Humidity	: 30 % to 90 % (operation)/10 % to 90 % (storage)
Power supply	: One Olympus lithium ion battery (LI-42B / LI-40B)
Dimensions	: FE-360/X-875/C-570: 93.9 mm (W) × 55.6 mm (H) × 20.3 mm (D) (3.7 × 2.2 × 0.8 in.) (excluding protrusions) FE-20/X-15/C-25: 95.9 mm (W) × 57.2 mm (H) × 21.5 mm (D) (3.8 × 2.3 × 0.8 in.) (excluding protrusions)
Weight	: FE-360/X-875/C-570: 99 g (3.5 oz) (excluding battery and card) FE-20/X-15/C-25: 88 g (3.1 oz) (excluding battery and card)

Index

A		F	
Arrow pad	12	FACE DETECT	26
AUTO mode	14	Flash	
AV cable	33	FILL IN	19
B		FLASH AUTO	19
Backlight boost	20	REDEYE	19
BACKUP	31	FORMAT	31
Battery charger	10, 45	Frame rate	24
Beep	32	FUNC menu	21
Brightness		I	
Backlight boost	20	IMAGE QUALITY 	24
Exposure compensation	19	Image size	24
Monitor brightness 	32	Information display	21, 22
C		ISO sensitivity	25
Card		L	
microSD Card	12, 48	Lithium ion Battery	10, 11, 45
xD-Picture Card	11, 46	M	
Compression	24	Macro 	20
Connecting		Maintenance	
PC	39	Camera care	45
Printer	34	PIXEL MAPPING	31
TV	33	MEMORY FORMAT	31
CUSTOM PRINT	35	MENU COLOR	32
D		microSD Attachment	12, 48
Date and time 	13, 32	MY FAVORITE 	28
DIS MODE 	27	N	
Display language 	13, 31	Natural color	25
E		O	
EASY PRINT	34	OLYMPUS Master 2	39
Edit (still images)		Operation guide	12
Cropping 	28	O	
Resize 	28	O	
ERASE 		O	
ALL ERASE	29	O	
SEL. IMAGE	29	O	
Single image erase	16	O	
Error message	42	O	

P		W	
P/AUTO 	26	WB	25
PANORAMA	26		
PictBridge	34	Z	
Playback image		Zoom	19
Closeup view	22		
Index view	22		
Movies	15		
My Favorite	23		
On TV	33		
Viewing images	15		
P mode	17		
POWER SAVE	33		
Print	34		
Print Reservations (DPOF)	37		
Protecting images 	29		
R			
RESET 	27		
Rotating images 	29		
S			
SCENE mode	17, 27		
Self-timer	20		
Shooting	14		
Shooting movies 	18		
SILENT MODE 	33		
SLIDESHOW 	28		
Sound recording 	25		
Strap	10		
SUPER MACRO 	20		
T			
Turning on the camera	13		
  	31		
U			
USB cable	34, 39		
Using the Menu	3		
V			
VIDEO OUT	33		

OLYMPUS®

<http://www.olympusamerica.com/>

OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

Technical Support (USA)

24/7 online automated help: <http://www.olympusamerica.com/support>

Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm (Monday to Friday) ET

<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at: <http://www.olympusamerica.com/digital>

To find the nearest Service Centers, please visit: <http://www.olympusamerica.com/digital>, and click on the Worldwide Warranty icon at the bottom of the page.

Service Centers

U.S.A.:

California Olympus Imaging America Inc.
10805 Holder Street Suite 170
Cypress, CA 90630-5145
Tel: (888) 553-4448

New York Olympus Imaging America Inc.
400 Rabro Drive
Hauppauge, NY 11788-4258
Tel: (888) 553-4448

Canada: Olympus Canada Inc.
Consumer Products Group
151 Telson Road
Markham, Ontario Canada L3R 1E7
Tel. (888)553-4448

Mexico: Olympus Imaging de Mexico S.A. de C.V.
WTC Mexico,
Montecito No.38 - Lobby - Office 3
Col. Napoles, Mexico D.F. 03810
Tel. (01800)800-2128
E-mail: oimx@olympus.com

Argentina: Jesus Labrador
Paraguay 755 PB, C1057AAI - Buenos Aires
Tel: (011) 4313-3174 Fax: (011) 4312-5239
E-Mail: olympus@jesuslabrador.com.ar
Jesus Labrador
Bartolome Mitre 860
C1036AAP - Buenos Aires
Tel: (011) 4331-1227 Fax: (011) 4331-1247
E-mail: service@basr.com.ar

Brazil:

Olympus Optical do Brasil Ltda.
Rua do Rocio 430 - 2 andar - Vila Olimpia
CEP 04552-906 - São Paulo - Brasil
Tel: +55 11 3046-6427
Fax: +55 11 3046-6412
E-mail: obl-cameras@olympus.com

Chile:

REIFSCHEIDER S.A.
Camino El Conquistador del Monte 5024
Huechuraba, Santiago
Tel: 56-2-6781200 Fax: 56-2-6781202
E-mail : olympus@reifschneider.cl,
serviciotecnico@reifschneider.cl

Colombia:

CV Tronica LTDA
Calle 68 No 12-57, Bogota
Tel: (0571)235-7260/348-1573
Fax: (0571) 348-1574
E-mail: servicio@cvtronica.com
CV Tronica LTDA
Cra 9 No 23-49 Local 215 C.C Intercentro, Bogota
Tel: (0571)284-4365
CV Tronica LTDA
Av. Cra 15 No 105A-22 Piso 2 Local 5, Bogota
Tel: (0571)637-3540

Panama:

FOTOSER
Edif. El Paical, Oficina No3, P.A.
Urb. Herbruger, Transistmica
(Detras del S/M Riba Smith),
Tel/Fax: (507) 261-0436
E-mail: rearanda@rocketmail.com

Peru:

Electrónica Lau Si
Av. Oscar R. Benavides 4707 Callao
(Ex-Av. Colonial) Lima, Peru
Tel:452-1333 Fax:451-6403
Nextel:9816-5578
E-mail:Olympus@elausi.com.pe

Uruguay:

Fotocamara S.R.L.
Rondeau 1470 Montevideo
Tel: (02) 900-2004 Fax: (02) 900-8430
E-mail: FOTOCAM@ADINET.COM.UY

Venezuela:

Micron C.A.
4ta. transversal Urb. Horizonte,
Edificio América, Mezanine, Caracas 1070-A
Tel: (0212) 238-3526 Fax: (0212) 239-8598
E-mail: serviciotecnico@micron.com.ve