


OLYMPUS[®]

DIGITAL CAMERA

Stylus-1070/μ-1070

Instruction Manual

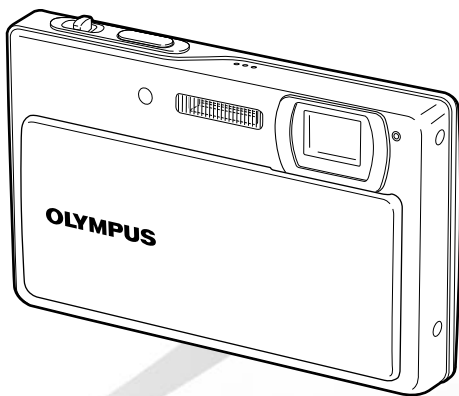

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving products, Olympus reserves the right to update or modify information contained in this manual.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product.

Step 1

Checking the contents of the box



Digital Camera



Strap



LI-42B Lithium Ion Battery



LI-41C Battery Charger



USB Cable



AV Cable



OLYMPUS Master 2
CD-ROM



microSD
Attachment

Other accessories not shown: Instruction Manual (this manual), warranty card
Contents may vary depending on purchase location.

Step 2

Preparing the Camera

"Preparing the Camera" (p. 10)

Step 3

Shooting and Playing Back Images

"Shooting, Playback, and Erasing" (p. 14)

Step 4

How to Use the Camera

"Three Types of Setting Operations" (p. 3)

Step 5

Printing

"Direct printing (PictBridge)" (p. 41)
"Print reservation (DPOF)" (p. 44)

Contents

➤ Names of Parts	6	➤ Menus for Playback, Editing, and Printing Functions	31
➤ Preparing the Camera	10	➤ Menus for Other Camera Settings	36
➤ Shooting, Playback, and Erasing	14	➤ Printing	41
➤ Using Shooting Modes	17	➤ Using OLYMPUS Master 2	46
➤ Using Shooting Functions	20	➤ Usage Tips	48
➤ Using Playback Features	23	➤ Appendix	52
➤ Menus for Shooting Functions	25	➤ Index	64

Three Types of Setting Operations


Using the Menu

Various camera settings can be accessed through the menus, including functions used during shooting and playback and the date/time and screen display.

- There may be unavailable menus depending on the other related settings or the selected **SCN** mode (p. 17).

1 Press the **MENU** button.


- This example describes how to use the menus to set the [DIGITAL ZOOM].

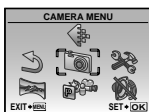


Shooting mode top menu

2 Use **▲▼▶◀** to select the desired menu, and press the **DISP** button.

- Pressing and holding the **DISP** button displays an explanation (menu guide) of the selected option.

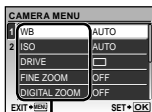


Submenu 1

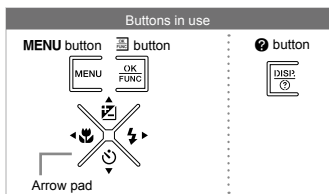


3 Use **▲▼** to select the desired Submenu 1, and press the **DISP** button.

Page tab

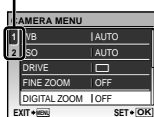


Submenu 2

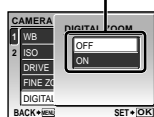

- To quickly move to the desired Submenu, press **◀** to highlight the page tab, and then use **▲▼** to move the page tab. Press **▶** to return to the Submenu 1.
- Some menus include Submenus that appear by pressing the **DISP** button.

4 Use **▲▼** to select the desired Submenu 2, and press the **DISP** button.


- Once a setting is made, the display returns to the previous screen.
- There may be additional operations. "Menu Settings" (p. 25 to 40)

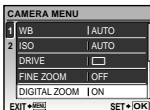

5 Press the **MENU** button to complete the setting.

Using the Direct Buttons


Frequently used shooting functions can be accessed using the direct buttons.

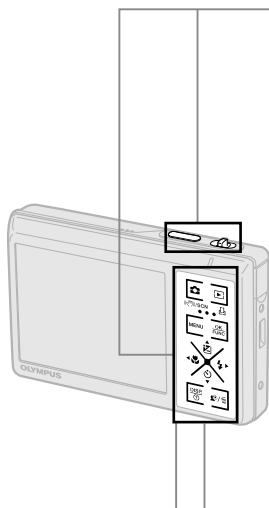

Shutter button (p. 14)



Zoom lever (p. 20, 23)

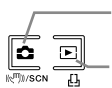

SCN button (**P**/**i**/**AUTO**/**SCN**/**B** mode) (p. 5, 14, 17, 18)



Playback/print button (playback/print) (p. 5, 15, 41)



Exposure compensation button (p. 20)

Macro button (macro) (p. 21)

Flash button (flash) (p. 20)

Self-timer button (self-timer) (p. 21)



DISP button (information display change/menu guide) (p. 21, 3)




Panorama/Shadow Adjustment Technology/multi window/backlight boost/erase button (p. 22, 16)

Using the FUNC Menu (p. 22)

Frequently used shooting functions can be set with less steps using the FUNC menu.


FUNC button (p. 3, 22)

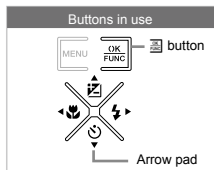

Menu Index

Menus for Shooting Functions

Settings can be made when a shooting mode is set.

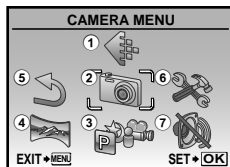


Shooting mode top menu

- | | | | | | | | | | |
|---|---|-------------------------|-------|---------------|-------|---------------------|-------|------------------|-------|
| ① | ← | IMAGE QUALITY..... | p. 25 | IAUTO..... | p. 17 | SOUND SETTINGS..... | p. 37 | | |
| ② | 📷 | CAMERA MENU | | DIS MODE..... | p. 17 | REC VIEW..... | p. 38 | | |
| | | WB..... | p. 26 | SCN..... | p. 17 | FILE NAME..... | p. 38 | | |
| | | ISO..... | p. 26 | BEAUTY..... | p. 18 | PIXEL MAPPING..... | p. 38 | | |
| | | DRIVE..... | p. 26 | ④ | 📺 | PANORAMA..... | p. 28 | | |
| | | FINE ZOOM..... | p. 26 | ⑤ | ↺ | RESET..... | p. 30 | | |
| | | DIGITAL ZOOM..... | p. 27 | ⑥ | 🔧 | SETUP | | | |
| | | ESP/📺..... | p. 27 | | | MEMORY FORMAT/ | | | |
| | | AF MODE..... | p. 27 | | | FORMAT..... | p. 36 | | |
| | | 🎤 (Sound recording).... | p. 27 | | | BACKUP..... | p. 36 | | |
| | | SHADOW ADJ..... | p. 28 | | | 🗨️ (Language)..... | p. 36 | | |
| | | DIS MOVIE MODE..... | p. 28 | | | 📷/📺..... | p. 36 | | |
| ③ | 🔄 | SWITCH SHOOTING | | | | SAVE SETTINGS..... | p. 36 | | |
| | | MODES..... | p. 28 | | | PW ON SETUP..... | p. 37 | | |
| | | P..... | p. 14 | | | MENU COLOR..... | p. 37 | | |
| | | | | | | ⑦ | 🔇 | SILENT MODE..... | p. 40 |

Menus for Playback, Editing, and Printing Functions

Settings can be made when the image is played back by pressing the button.

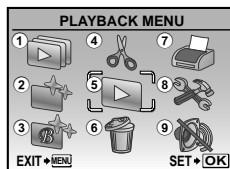


Playback mode top menu

- | | | | | | | | | | |
|---|---|-------------------|-------|-----------------|-------|------------------------------------|-------|--|-------|
| ① | 📺 | SLIDESHOW..... | p. 31 | CALENDAR..... | p. 33 | ⑥ | 🗑️ | ERASE..... | p. 35 |
| ② | 👉 | PERFECT FIX..... | p. 31 | FACE FOCUS..... | p. 33 | ⑦ | 🖨️ | PRINT ORDER..... | p. 35 |
| ③ | 👉 | BEAUTY FIX..... | p. 31 | INDEX..... | p. 33 | ⑧ | 🔧 | SETUP* | |
| ④ | 🔧 | EDIT | | EDIT..... | p. 33 | | | * Same as "Menus for Shooting Functions" | |
| | | 📏 (Resize)..... | p. 32 | ⑤ | 📺 | PLAYBACK MENU | | | |
| | | 📏 (Cropping)..... | p. 32 | | | 🔒 (Protect)..... | p. 34 | | |
| | | COLOR EDIT..... | p. 32 | | | 🔄 (Rotate)..... | p. 34 | | |
| | | | | | | 🎤 (Add sound to still images)..... | p. 34 | | |
| | | | | | | ⑨ | 🔇 | SILENT MODE..... | p. 40 |




Names of Parts

Camera unit

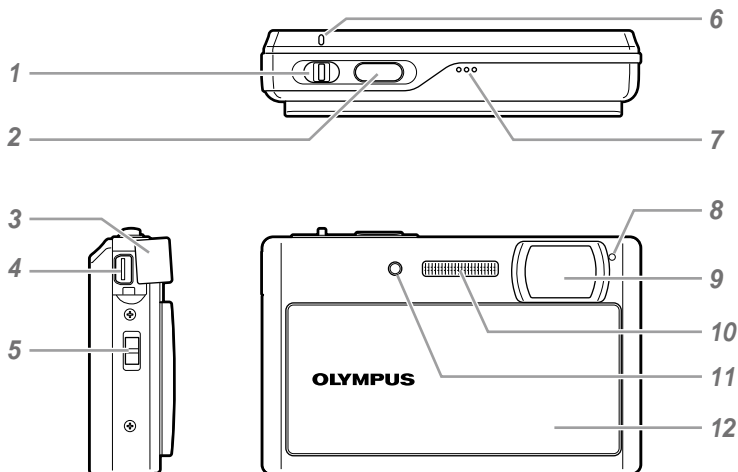

- | | | | |
|--------------------------------|---------------|--------------------------------|-----------|
| 1 Zoom lever | p. 20, 23 | 7 Speaker | — |
| 2 Shutter button | p. 14, 48 | 8 Microphone | p. 27, 34 |
| 3 Connector cover | p. 40, 41, 46 | 9 Lens | p. 52 |
| 4 Multi-connector | p. 40, 41, 46 | 10 Flash | p. 20 |
| 5 Strap eyelet..... | p. 10 | 11 Self-timer lamp..... | p. 18, 21 |
| 6 Card access lamp..... | p. 54 | 12 Lens barrier..... | p. 13, 14 |

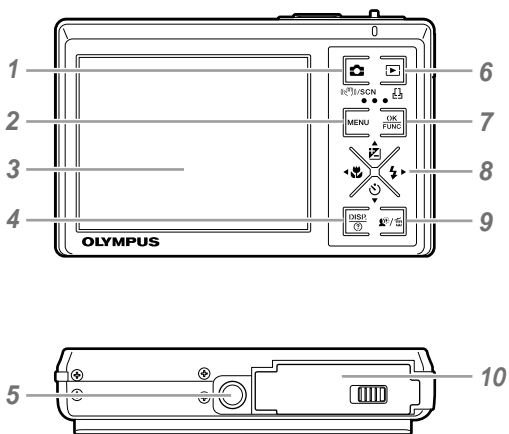


- | | |
|--|--|
| <p>1 / / button (P/i/AUTO/ / mode) p. 5, 14, 17, 18</p> <p>2 MENU button p. 3, 5</p> <p>3 Monitor p. 8, 14, 38, 48</p> <p>4 DISP./ button (information display change/menu guide) p. 3, 13, 21</p> <p>5 Tripod socket —</p> <p>6 button (playback/print) p. 5, 15, 41</p> <p>7 button (OK/FUNC) p. 3, 22</p> | <p>8 Arrow pad p. 3, 12</p> <p> button (exposure compensation) p. 20</p> <p> button (macro) p. 21</p> <p> button (self-timer) p. 21</p> <p> button (flash) p. 20</p> <p>9 button (panorama/Shadow Adjustment Technology/multi window/backlight boost/erase) p. 16, 22</p> <p>10 Battery/ card compartment cover p. 11, 49</p> |
|--|--|

Shooting mode display




Still image

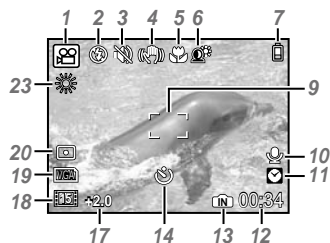


Movie

- | | | | |
|-----------|---|-----------|--|
| 1 | Shooting mode..... p. 14, 17, 28, 36 | 12 | Number of storable still pictures/
remaining recording time ... p. 14, 54, 55 |
| 2 | Flash mode p. 20 | 13 | Current memory p. 54 |
| 3 | Silent mode p. 40 | 14 | Self-timer p. 21 |
| 4 | Digital image stabilization p. 28 | 15 | Aperture value p. 14 |
| 5 | Macro/super macro p. 21 | 16 | Shutter speed p. 14 |
| 6 | Shadow Adjustment Technology
..... p. 22, 28 | 17 | Exposure compensation p. 20 |
| 7 | Battery check p. 10, 49 | 18 | Compression/frame rate p. 25 |
| 8 | Flash standby/camera shake warning/
flash charge p. 48 | 19 | Image size p. 25 |
| 9 | AF target mark p. 14 | 20 | Metering p. 27 |
| 10 | Sound record p. 19, 27 | 21 | Drive p. 26 |
| 11 | Dualtime p. 39 | 22 | ISO p. 26 |
| | | 23 | White balance p. 26 |

Playback mode display

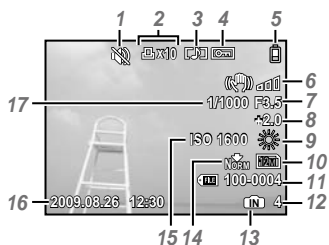

Still image

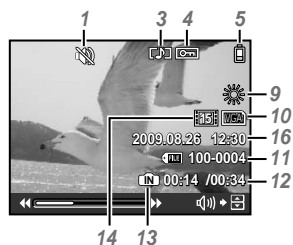


Movie

- | | | | |
|----------|---|-----------|--|
| 1 | Silent mode..... p. 40 | 10 | Image size p. 25 |
| 2 | Print reservation/
number of prints..... p. 35 | 11 | File number p. 38 |
| 3 | Sound record p. 19, 27, 34, 51 | 12 | Frame number
Elapsed time/total recording time... p. 15 |
| 4 | Protect p. 34 | 13 | Current memory..... p. 54 |
| 5 | Battery check..... p. 10, 49 | 14 | Compression/frame rate p. 25 |
| 6 | Camera shake indicator..... p. 31 | 15 | ISO..... p. 26 |
| 7 | Aperture value p. 14 | 16 | Date and time p. 13, 39 |
| 8 | Exposure compensation p. 20 | 17 | Shutter speed p. 14 |
| 9 | White balance p. 26 | | |

Preparing the Camera

Attaching the camera strap

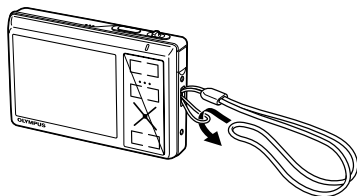


- ⚠ Pull the strap tight so that it does not come loose.

Charging the battery

- ⚠ The included battery charger (AC cable type or plug-in type) differs depending on the region where you purchased the camera. If you received a plug-in type battery charger, plug it directly into an AC outlet.


Example: AC cable type battery charger

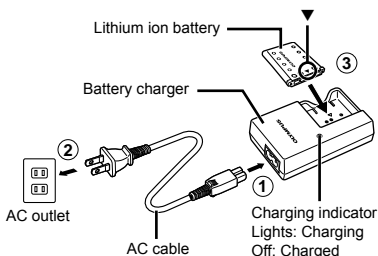

- ⚠ Battery comes partially charged. Before use, be sure to charge the battery until the charging indicator goes off (for approx. 2 hours).
- ⚠ If the charging indicator does not light or it blinks, the battery may not be inserted correctly or the battery or the charger may be broken.
- ⚠ For details of the battery and the charger, see "Battery and charger" (p. 52).

When to charge the battery


Charge the battery when the error message shown below appears.

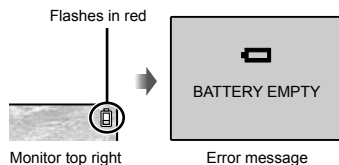


Loading the battery and the xD-Picture Card™ (sold separately) into the camera

- ⚠ Never insert anything other than the xD-Picture Card or the microSD Attachment into the camera.

1

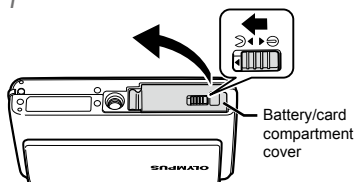


2

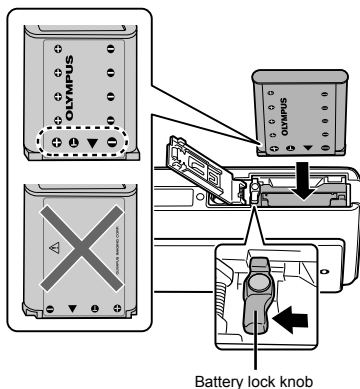


- ⚠ Insert the battery from the ▼ end, with the ⊕ symbol facing toward the battery lock knob. If the battery is not inserted correctly, the camera does not operate.
- ⚠ Insert the battery while sliding the battery lock knob in the direction of the arrow.
- ⚠ Sliding the battery lock knob in the direction of the arrow to unlock, and then remove the battery.
- ⚠ Turn off the camera before opening or closing the battery/card compartment cover.

3

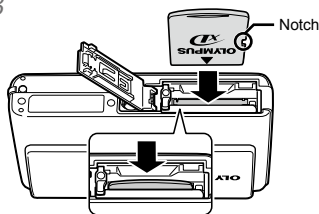

- ⚠ Insert the card straight in until it clicks into place.
- ⚠ Do not touch the contact area directly.


4

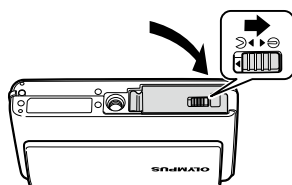


- ⚠ This camera allows the user to take pictures using the internal memory even when no xD-Picture Card (sold separately) is inserted. "Using an xD-Picture Card" (p. 53)
- ⚠ "Number of storable pictures (still pictures)/ continuous recording length (movies) in the internal memory and xD-Picture Card" (p. 54)

To remove the xD-Picture Card

1

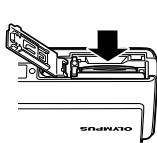

2

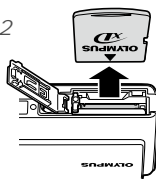


- ⚠ Press in the card until it clicks and comes out slightly, and then grasp the card to pull it out.

Using a microSD card/ microSDHC card (sold separately)


microSD card/microSDHC card (hereafter called microSD card) is also compatible with this camera by using the microSD Attachment.

! "Using a microSD Attachment" (p. 55)

1 Insert the microSD card into the Attachment.

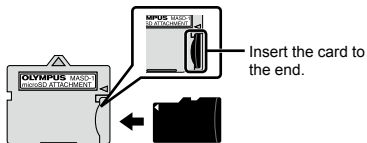

2 Insert the microSD Attachment into the camera.

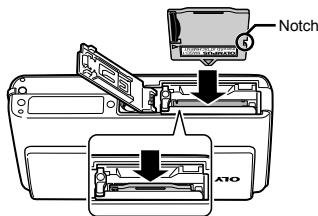


To remove the microSD card




- ! Pull the card out straight.
- ! Do not touch the contact area of the microSD Attachment or microSD card.

Arrow pad and operation guide

The symbols \triangleleft \triangle \triangleright \triangleright , \blacktriangleleft \blacktriangleright \blacktriangleright \blacktriangleright displayed on various setting and movie playback screens indicate that the arrow pad is used.

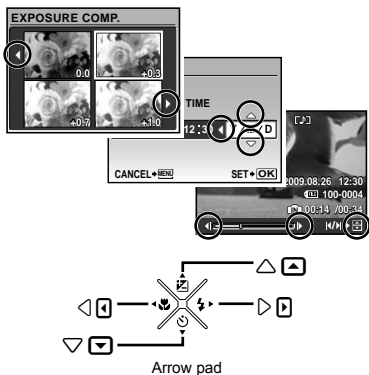

Operation guides displayed at the bottom of the screen indicate that the **MENU** button, \square button, \square button, or \square button is used.

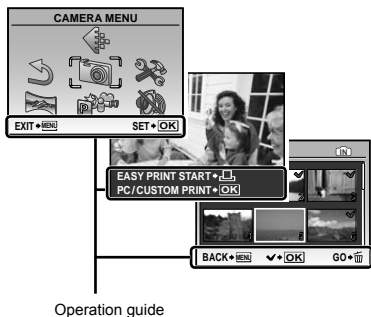


Setting the date and time


The date and time set here are saved to image file names, date prints, and other data.

1 Slide the lens barrier down to turn on the camera.


- The date and time setting screen is displayed when the date and time are not set.

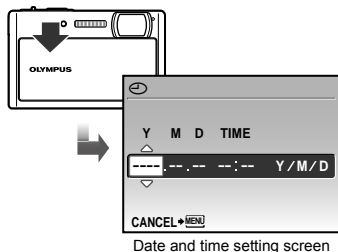



2 Use ▲▼ to select the year for [Y].

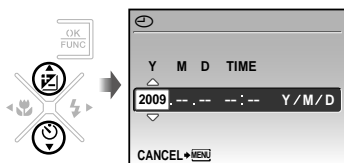

3 Press ► to save the setting for [Y].

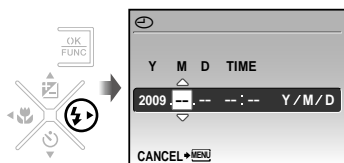

4 As in Steps 2 and 3, use ▲▼◀▶ and the button to set [M] (month), [D] (day), [TIME] (hours and minutes) and [Y/M/D].

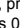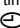- For precise time setting, press the  button as the time signal strikes 00 seconds.
- To change the date and time, make the setting from the menu.  (Date/time) (p. 39)


To check the date and time

Press the DISP. button while the camera is turned off. The current date and time are displayed for approx. 3 seconds.


Changing the display language

The language for the menu and error messages displayed on the monitor is selectable.


1 Press the MENU button, and press ▲▼◀▶ to select (SETUP).

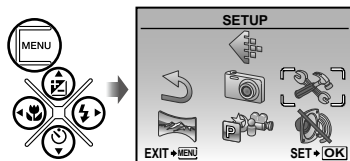

2 Press the button.

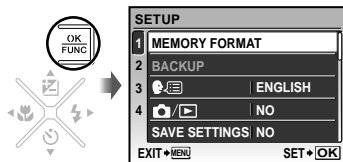

3 Use ▲▼ to select , and press the button.

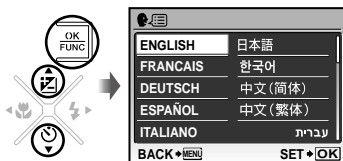

4 Use ▲▼◀▶ to select your language and press the button.


5 Press the MENU button.

Shooting, Playback, and Erasing


Shooting with optimum aperture value and shutter speed (P mode)

In this mode, automatic camera shooting can be used while also allowing changes to a wide range of other shooting menu functions, such as exposure compensation, white balance, and so on when needed.

1 Slide the lens barrier down to turn on the camera.


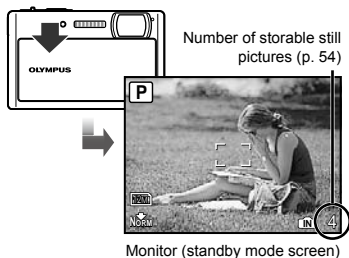


! If the **P** mode is not displayed, press the button a few times to change the mode.

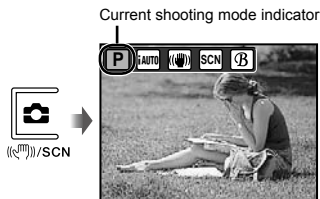


! Slide the lens barrier back up to turn off the camera.

2 Hold the camera, and compose the shot.

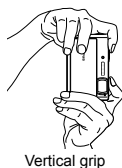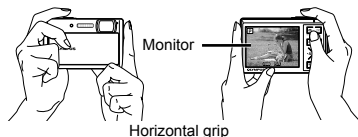

3 Press the shutter button halfway down to focus on the subject.

- When the camera focuses on the subject, the exposure is locked (shutter speed and aperture value are displayed), and the AF target mark changes to green.
- The camera was unable to focus if the AF target mark flashes red. Try focusing again.

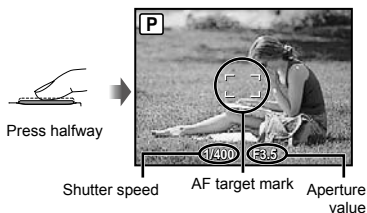

! "Focusing" (p. 50)

- 4 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.



Image review screen

To view images during shooting

Pressing the button enables playback of images. To return to shooting, either press the button or press the shutter button halfway down.

To shoot movies

"Shooting movies (mode)" (p. 19)

Viewing images

- 1 Press the button.



- 2 Use to select an image.

Displays 10 frames before the current image

Displays next image

Displays previous image

Displays 10 frames after the current image

- The display size of the images can be changed. "Index view, calendar view, and close-up view" (p. 23)

To play back movies

Select a movie, and press the button.



Movie

Operations during movie playback

Volume: During playback, press .

Fast-forward: While is pressed, the movie is fast-forwarded.

Rewind: While is pressed, the movie is rewound.

Pause: Press the button.



Elapsed time / total recording time

During playback

First (last) frame/frame advance: During pause, press to display the first frame, and press to display the last frame. While is pressed, the movie is played in reverse and while is pressed, the movie is played normally. Press the button to resume playback.



During pause



To stop movie playback

Press the **MENU** button.

Erasing images during playback (Single image erase)

- 1 Press the  button when the playback image to be erased is displayed.



- 2 Use  to select [YES], and press the  button.

 [ERASE] (p. 35)

Using Shooting Modes


- 1 The shooting mode changes in the order of **P** **iAUTO** **(SCN)** each time the **⏏** button is pressed. By switching to another shooting mode, most settings in modes other than **P** mode will be changed to the default settings of the respective shooting mode.

Shooting with automatic settings (**iAUTO** mode)

The camera automatically selects the best shooting mode for the scene from [PORTRAIT], [LANDSCAPE], [NIGHT+PORTRAIT], [SPORT] and [MACRO]. This is a fully automatic mode that allows the user to take pictures using the best mode for the shooting scene simply by pressing the shutter button. Shooting-related settings are not available in **iAUTO** mode.

- 1 Press the **⏏** button a few times to set **iAUTO**.

iAUTO mode indicator
The indicator changes to the icon for the scene mode selected by the camera.

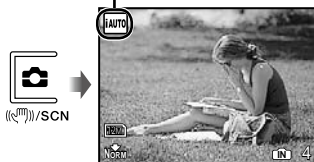


- To check which shooting mode the camera has automatically selected, press the shutter button halfway or press the **DISP.** button.
- 1 Depending on the shooting scene, the camera may not select the intended shooting mode.
- 1 If the camera cannot determine the best shooting mode, the picture will be taken in **P** mode.

Using the digital image stabilization mode (**(IS)** mode)

This mode enables the user to reduce blurring that is caused by a camera shake and subject movement.

- 1 Press the **⏏** button a few times to set **(IS)**.

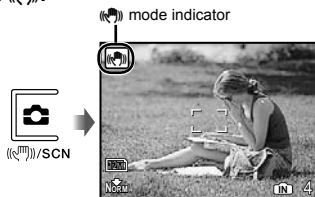

Using the best mode for the shooting scene (**SCN** mode)

- 1 Press the **⏏** button a few times to set **SCN**.



- An explanation of the selected mode is displayed while the **DISP.** button is pressed and held.

- 2 Use **▲ ▼** to select the best shooting mode for the scene, and press the **DISP.** button.

Icon indicating the scene mode that is set



- ! In **SCN** mode, the optimum shooting settings are pre-programmed for specific shooting scenes. For this reason, settings may not be changed in some modes.

- ! To change to another scene mode, use the menu: [MENU] SWITCH SHOOTING MODES (p. 28)

Submenu 1	Application
👤 PORTRAIT/🏞️ LANDSCAPE/ 🌃 NIGHT SCENE ^{1/} / 🌃 NIGHT+PORTRAIT/ 🏃 SPORT/🏠 INDOOR/ 🕯️ CANDLE/👤 SELF PORTRAIT/ 🌅 SUNSET ^{1/} /🎆 FIREWORKS ^{1/} / 🍷 CUISINE/📄 DOCUMENTS/ 😊 SMILE SHOT ^{2/} / 🏖️ BEACH & SNOW/ 🎬 PRE-CAPTURE MOVIE/ 🎬 MOVIE	The camera takes a picture in the mode for the shooting scene.

¹ When the subject is dark, noise reduction is automatically activated. In this case, shooting takes twice as long as normal and the next shot cannot be taken while the previous picture is being processed.

² The focus is locked at the first frame.

To release the shutter automatically when the camera detects a smiling face ([😊 SMILE SHOT] mode)

- Select [😊 SMILE SHOT] and point the camera toward the subject.
 - The self-timer lamp turns on. When the camera detects a smiling face, it automatically takes 3 frames sequentially.
- ! Pictures can also be taken manually by pressing the shutter button.
- ! Depending on your subject, a smiling face may not be detected.
- ! [IMAGE SIZE] is limited to [3M] or lower.


Capturing the perfect moment when shooting ([🎬 PRE-CAPTURE MOVIE] mode)

- Use ▲ ▼ to select [🎬 PRE-CAPTURE MOVIE], and press the [OK] button to set.
 - This function is ready for shooting immediately after setting this option.
- Press the shutter button to start movie shooting.
 - After shooting stops, the camera saves a 7-second movie, including up to 2 seconds of recording time taken before the shutter button was pressed, to the memory card.
 - The optical zoom and auto focus function are available during movie recording.
- ! Sound is not recorded.
- ! The AF target mark is not displayed.
- ! Select [IMAGE SIZE] from [VGA] or [QVGA], and select [FRAME RATE] from [30fps] or [15fps].

Smoothing out skin tone and texture ([B] mode)

The camera finds a person's face and gives the skin a smooth, translucent look for taking the picture.

- Press the [📷] button a few times to set [B].

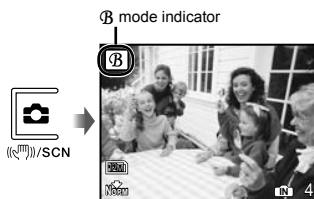

2 Point the camera toward the subject. Check the frame appearing around the face detected by the camera, and then press the shutter button to take the picture.


- The unedited image and edited image are both saved.
- If the image cannot be retouched, only the unedited image is saved.
- ! The frame may not appear or may take some time to appear for some subjects. In addition, this function may have no visible effect on some subjects.
- ! The [IMAGE SIZE] of the retouched image is limited to [2M] or lower.

Shooting movies (MOVIE mode)

Sound is recorded at the same time.

1 Press the  button a few times to set SCN.


2 Use   to select [MOVIE], and press the  button to set.

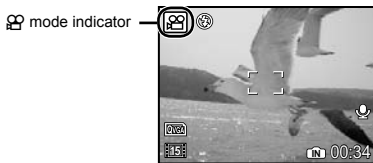

To use the zoom

The optical zoom is not available during movie recording. Use [DIGITAL ZOOM] (p. 27).

3 Press the shutter button halfway down to focus on the subject, and gently press the button all the way down to start recording.

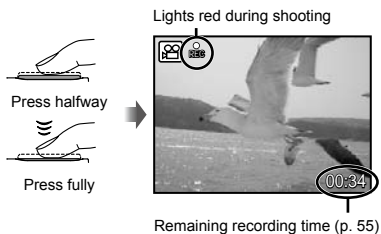


4 Gently press the shutter button all the way down to stop recording.

Using Shooting Functions

Using the optical zoom

Pressing the zoom lever adjusts the shooting range.

Press toward W (Wide) Press toward T (Telephoto)

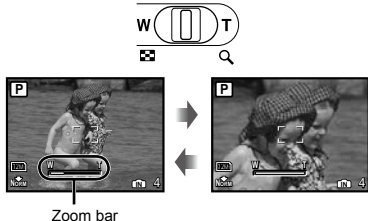

Optical zoom: 3×, digital zoom: 5×

To take larger images without reducing image quality

[FINE ZOOM] (p. 26)

To take larger images

[DIGITAL ZOOM] (p. 27)


The zoom bar appearance identifies the status of the fine zoom/digital zoom.

When using optical zoom




Optical zoom range

When using fine zoom

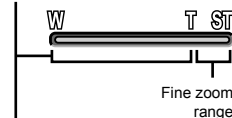

Fine zoom range

When using digital zoom

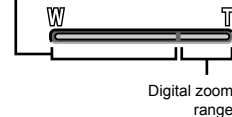




Digital zoom range

Using the flash

The flash functions can be selected to best match the shooting conditions and render the desired image.

1 Press the  button.




2 Use   to select the setting option, and press the  button to set.

Item	Description
FLASH AUTO	The flash fires automatically in low-light or backlight conditions.
REDEYE	This emits pre-flashes to reduce the occurrence of red eye in your photos.
FILL IN	The flash fires regardless of the available light.
FLASH OFF	The flash does not fire.


Adjusting the brightness (Exposure compensation)

The exposure value automatically set by the camera can be adjusted brighter or darker to obtain a desired shot. This function is not available in the **i**AUTO shooting mode.

1 Press the  button.

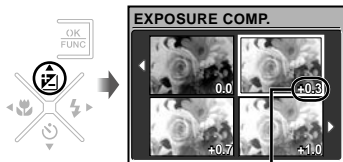


Exposure compensation value


- 2 Use ▲▼◀▶ to select the desired brightness image, and press the  button.

Shooting closeups (Macro shooting)

This function enables the camera to focus and shoot subjects at close distances.

- 1 Press the  button.

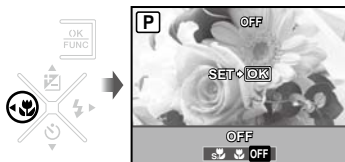


- 2 Use ◀▶ to select the setting option, and press the  button to set.

Item	Description
OFF	Macro mode is deactivated.
MACRO	This enables shooting as close as 20 cm/7.9 in. ¹ (30 cm/11.8 in. ²) to the subject.
SUPER MACRO ³	This enables shooting as close as 7 cm/2.8 in. to the subject. Subjects at 50 cm/19.7 in. or farther cannot be brought into focus.

¹ When the zoom is at the widest (W) position.

² When the zoom is at the most telephoto (T) position.

³ The zoom is automatically fixed.


-  The flash (p. 20) and zoom (p. 20) cannot be set during super macro shooting.

Using the self-timer


After the shutter button is pressed all the way down, the picture is taken after a time delay.

- 1 Press the  button.




- 2 Use ▲▼ to select the setting option, and press the  button to set.

Item	Description
OFF	This cancels the self-timer.
ON	The self-timer lamp turns on for approx. 10 seconds, and then blinks for approx. 2 seconds, and then the picture is taken.

-  Self-timer shooting is automatically canceled after one shot.

To cancel the self-timer after it starts

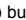Press the  button again.

Changing the shooting information display

The display of the screen information can be changed to best match the situation, such as clearing the information from the screen or to make a precise composition by using the grid display.

- 1 Press the DISP. button.

- The displayed shooting information changes in the order shown below each time the button is pressed. "Shooting mode display" (p. 8)

Normal



Histogram



No information



Grid




Reading a histogram

If the peak fills too much of the frame, the image will appear mostly white.

If the peak fills too much of the frame, the image will appear mostly black.

The green section shows luminance distribution within the screen's center.

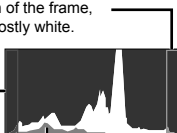


Using the FUNC menu

The FUNC menu provides the following menu functions that can be quickly called and set.

- [WB] (p. 26)
- [ISO] (p. 26)
- [DRIVE] (p. 26)
- [ESP/] (p. 27)
- [IMAGE QUALITY] (p. 25)

1 Press the button.

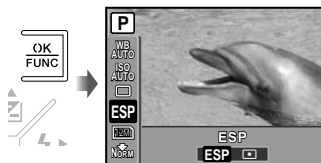


2 Use to select the menu function and to select the setting option, and then press the button to set.

Quickly calling and using shooting functions

The following menu functions can be quickly called and used.

- [PANORAMA] (p. 28)
- [SHADOW ADJ.] (p. 28)
- [MULTI WINDOW] (p. 22)

1 Press the button.

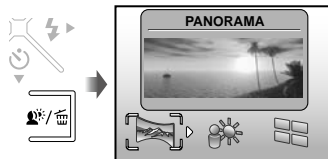

2 Use to select the menu function, and press the button to set.

To use the effects preview screen (Multi window)

Selecting an option from [ZOOM], [EXPOSURE COMP.], [WB] or [ESP/] shows 4 preview images that reflect the adjusted values of the selected shooting function. Use to select the desired image, and press the button.

Brightening the monitor (Backlight boost)



Pressing and holding the button brightens the monitor. The monitor returns to the original brightness if no operation is performed for 10 seconds.

Using Playback Features

Index view, calendar view, and close-up view

Index view and calendar view enable quick selection of a target image. Close-up view (up to 10× magnification) allows checking of image details.

- 1 Press toward W or T on the zoom lever.

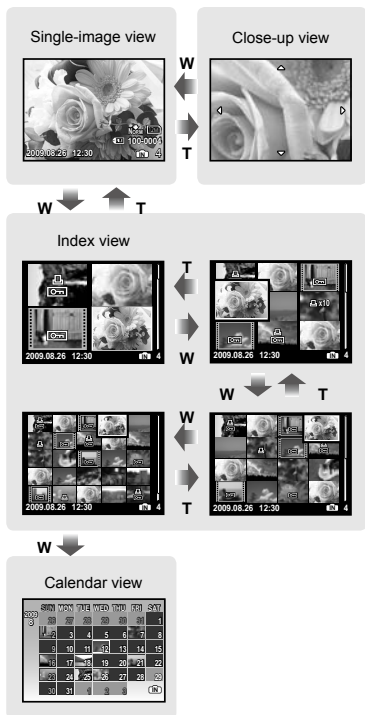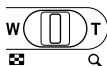

To select an image in index view

Use ▲▼◀▶ to select an image, and press the button to display the selected image in single-image view.

To select images in calendar view

Use ▲▼◀▶ to select a date, and press the button or press toward T on the zoom lever to view the images taken on the selected date.

To scroll an image in close-up view


Use ▲▼◀▶ to move the viewing area.

Changing the image information display

A set of shooting information displayed on the screen can be changed.

- 1 Press the DISP. button.

- The displayed image information changes in the order shown below each time the button is pressed.

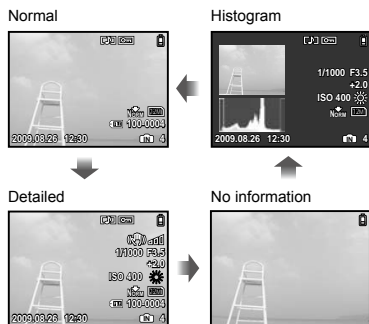

! "Reading a histogram" (p. 22)

Playing back panorama images

Panorama images that were combined together using [COMBINE IN CAMERA 1] or [COMBINE IN CAMERA 2] can be scrolled for viewing.


! [PANORAMA] (p. 28)

1 Select a panorama image during playback.

! "Viewing images" (p. 15)



2 Press the [OK/FUNC] button.

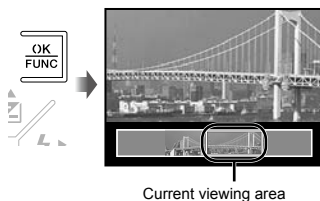

To control panorama image playback

Zoom in/Zoom out: Press toward W or T on the zoom lever.

Playback direction: Press ▲ ▼ ◀ ▶ to scroll in the direction of the pressed button.



Pause: Press the [OK/FUNC] button.

Restart scrolling: Press the [OK/FUNC] button.

Stop playback: Press the MENU button.

Menus for Shooting Functions

When a shooting mode is set, settings can be made.

-  indicates the shooting modes at which the function can be set.
-  The default settings of the function are highlighted in .

Selecting the appropriate image quality for your application [IMAGE QUALITY]



 IMAGE QUALITY

 P iAUTO  SCN B 


Still images

Submenu 1	Submenu 2	Application
IMAGE SIZE	12M (3968 × 2976)	Suitable for printing pictures over A3 (11 × 17 in.).
	5M (2560 × 1920)	Suitable for printing pictures at A4 (8.5 × 11 in.).
	3M (2048 × 1536)	Suitable for printing pictures up to A4 (8.5 × 11 in.).
	2M (1600 × 1200)	Suitable for printing pictures at A5 (5 × 7 in.).
	1M (1280 × 960)	Suitable for printing pictures at postcard size.
	VGA (640 × 480)	Suitable for viewing pictures on a TV or using pictures on emails and web sites.
	16:9 (1920 × 1080)	Suitable for playing pictures on wide screen TV.
COMPRESSION	FINE	Shooting at high quality.
	NORMAL	Shooting at normal quality.

Movies

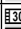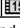Submenu 1	Submenu 2	Application
IMAGE SIZE	VGA (640 × 480)/ QVGA (320 × 240)	Select the image quality based on the image size and frame rate. Higher frame rates provide smoother video images.
FRAME RATE	 30fps ^{*1} /  15fps ^{*1}	

*1 frames per second

-  *Number of storable pictures (still pictures)/continuous recording length (movies) in the internal memory and xD-Picture Card" (p. 54)

Adjusting to a natural color scheme [WB]

CAMERA MENU ► WB

P SCN

Submenu 2	Application
AUTO	The camera automatically adjusts the white balance according to the shooting scene.
	For shooting outdoors under a clear sky
	For shooting outdoors under a cloudy sky
	For shooting under tungsten lighting
	For shooting under daylight fluorescent lighting (household lighting, etc.)
	For shooting under neutral fluorescent lighting (desk lamps, etc.)
	For shooting under white fluorescent lighting (offices, etc.)

Selecting the ISO sensitivity [ISO]

CAMERA MENU ► ISO

P

- In the ISO setting, although smaller values result in less sensitivity, sharp images can be taken under fully lit conditions. Larger values result in higher sensitivity, and images can be taken at fast shutter speeds even under dimly lit conditions. However, high sensitivity introduces electrical noise into the resulting picture, which may give it a grainy appearance.

Submenu 2	Application
AUTO	The camera automatically adjusts the sensitivity according to the shooting scene.
50/100/200/400/800/1600	The ISO sensitivity is fixed.

Shooting pictures sequentially while the shutter button is held down [DRIVE]

CAMERA MENU ► DRIVE

P

Submenu 2	Application
	One frame is shot each time the shutter button is pressed.
¹⁾	Sequential shooting at a focus, brightness (exposure) and white balance that is locked in the first frame.
	The camera takes sequential shots at a faster speed than in .
	The camera takes sequential shots at approximately 10 frames/sec.

¹⁾ The shooting speed varies depending on the settings for [IMAGE QUALITY] (p. 25).

- When set to , the flash is limited to either or . When set to , the flash is fixed to .
- When set to or , [IMAGE SIZE] is limited to or lower, and [ISO] is fixed to [AUTO]. Moreover, [FINE ZOOM] (p. 26) and [DIGITAL ZOOM] (p. 27) are not available.
- When set to , , or , (sound recording) (p. 27) is not available.

Shooting at higher magnifications than optical zoom without reducing the image quality [FINE ZOOM]

CAMERA MENU ► FINE ZOOM

P SCN

Submenu 2	Application
OFF	Only optical zoom is used to zoom in for shooting.
ON	Optical zoom and image cropping are combined to zoom in for shooting (up to 19×).

- ! This function will not reduce the image quality since it does not convert the data with fewer pixels into the data with larger pixels.
- ! When set to [ON], [IMAGE SIZE] is limited to [5M] or lower.
- ! When [DIGITAL ZOOM] is set to [ON], this setting is not available.
- ! This function is not available when [s] SUPER MACRO (p. 21) is selected.

Shooting at higher magnifications than optical zoom [DIGITAL ZOOM]

CAMERA MENU ► DIGITAL ZOOM

P SCN

Submenu 2	Application
OFF	Only optical zoom is used to zoom in for shooting.
ON	Optical zoom and digital zoom are combined to zoom in for shooting (Approx. 15× (max.)).

- ! When [FINE ZOOM] is set to [ON], this setting is not available.
- ! This function is not available when [s] SUPER MACRO (p. 21) is selected.

Selecting the range for measuring the brightness [ESP/

CAMERA MENU ► ESP/

P SCN

Submenu 2	Application
ESP	Shoots to obtain a balanced brightness over the entire screen. (Meters the brightness at the center and surrounding areas of the screen separately.)
(spot)	Shoots the subject at the center during backlighting.

- ! When set to [ESP], the center may appear dark when shooting against strong backlighting.

Selecting the focusing area [AF MODE]

CAMERA MENU ► AF MODE

P SCN

Submenu 2	Application
FACE DETECT ¹	This is used for taking pictures of people (The camera automatically detects a face and a frame appears. Press the shutter button halfway down, and when the face is in focus, the green AF target mark appears. The orange target mark indicates that the area other than the face is in focus).
IESP	This enables you to compose the shot without worrying about the focusing position. The camera finds the subject to focus on and automatically adjusts the focus.
SPOT	The camera focuses on the subject located within the AF target mark.

¹ For some subjects, the frame may not appear or may take some time to appear.

Recording sound when shooting still images [

CAMERA MENU ►

P SCN

Submenu 2	Application
OFF	No sound is recorded.
ON	The camera automatically starts recording for approx. 4 seconds after taking the picture. This is useful for recording notes or comments about the picture.

- ! When recording, aim the microphone (p. 6) at the source of the sound you want to record.

Brightening the subject against backlight [SHADOW ADJ]

CAMERA MENU ► SHADOW ADJ

P SCN B Z

Submenu 2	Application
OFF	Shoots without using [SHADOW ADJ].
ON	The camera finds a person's face that has been darkened by backlight and makes it appear brighter for taking the picture. (Point the camera toward the subject. Check the frame that appears around the face detected by the camera, and then press the shutter button to take the picture.)

- For some subjects, the frame may not appear or may take some time to appear.
- When set to [ON], [ESP/] (p. 27) is automatically fixed to [ESP], and [AF MODE] (p. 27) is automatically fixed to [FACE DETECT].

Reducing blur due to camera shake during movie shooting [DIS MOVIE MODE]

CAMERA MENU ► DIS MOVIE MODE

Submenu 2	Application
OFF	Shoots without using the image stabilizing function. (Use when shooting with the camera fixed to a tripod or similar.)
ON	Shoots using the image stabilizing function.

- Image stabilization may not prevent motion blur caused by movement of the subject or by extreme movement of the camera.
- When set to [ON], shooting is slightly zoomed in.

Switching the shooting mode [SWITCH SHOOTING MODES]

SWITCH SHOOTING MODES

P iAUTO SCN B Z

Submenu 1	Application
P	Shoots with optimum aperture value and shutter speed. (p. 14)
iAUTO	Shoots with automatic settings. (p. 17)
DIS MODE	Reduces blurring caused by camera shake or subject movement. (p. 17)
SCN	Uses the best mode for the shooting scene. (p. 17)
BEAUTY	Smooths out skin tone and texture. (p. 18)

Creating panoramic images [PANORAMA]

PANORAMA

P SCN

Submenu 2	Application
COMBINE IN CAMERA 1 ^{1,2,3}	Three frames are taken and combined by the camera. The user only composes the shots so that the target marks and pointers overlap, and the camera automatically releases the shutter. The shooting functions are already preset to the optimum settings for panoramic shooting.
COMBINE IN CAMERA 2 ^{1,2}	Three frames are taken and combined by the camera. The user composes the shots using the guide frame and manually releases the shutter.
COMBINE IN PC	The frames that were taken are combined into a panorama image using the OLYMPUS Master 2 software from the provided CD-ROM. Pictures are taken in the last [ISO] or [SCN] settings (except for certain scenes).

¹ The [IMAGE QUALITY] (p. 25) setting cannot be changed.

² Not available in mode (p. 17).

³ Not available in **SCN** mode (p. 17).

- ! The focus, exposure (p. 14), zoom position (p. 20), and [WB] (p. 26) are locked at the first frame.
- ! The flash is fixed to (FLASH OFF) mode (p. 20).
- ! "Playing back panorama images" (p. 24)

Taking pictures with [COMBINE IN CAMERA 1]

- ① Press the shutter button to take the first frame.
- ② Move the camera slightly in the direction of the second frame.



Screen when combining images from left to right

- ③ Move the camera slowly while keeping it straight, and stop the camera where the pointer and target mark overlap.


- The camera releases the shutter automatically.



- ! To combine only two pictures, press the [] button before taking the third frame.
- ④ Take the third frame in the same way as Step ③.
 - After the third frame is taken, the camera automatically processes the frames and the combined panorama image is displayed.
- ! To cancel making panoramic picture during shooting, press the **MENU** button.
- ! When the shutter does not automatically release, try [COMBINE IN CAMERA 2] or [COMBINE IN PC].


Taking pictures with [COMBINE IN CAMERA 2]

- ① Use ◀ ▶ to select the direction that the frames are combined.

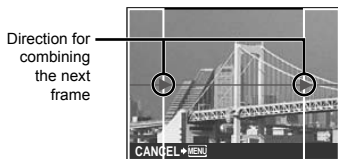

- ② Press the shutter button to take the first frame.

- A guide frame appears as a reference.

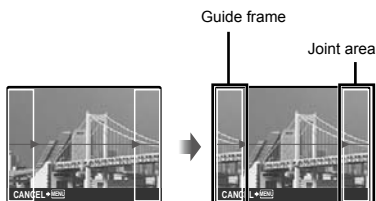



- ③ Compose the second shot so that the joint area overlaps the guide frame.



Composition of the 2nd frame

- ④ Press the shutter button to take the second frame.
- ! To combine only two pictures, press the [] button before taking the third frame.
- ⑤ Take the third frame in the same way as Steps ③ to ④.
 - After the third frame is taken, the camera automatically processes the frames and the combined panorama image is displayed.
- ! To cancel making panoramic picture during shooting, press the **MENU** button.




Taking pictures with [COMBINE IN PC]

- ① Use ▲ ▼ ◀ ▶ to select the direction that the frames are combined.
 - ② Press the shutter button to take the first frame, and then compose the second shot.
 - Compose the shot using the guide frame so that the two adjacent frames overlap.
 - ③ Repeat Step ② until the number of required frames are taken, and then press the  button when done.
- ! When the  mark is displayed, you cannot continue shooting any further. Panorama shooting is possible for up to 10 frames.
- ! Refer to the OLYMPUS Master 2 help guide for details on how to make panorama images.

Restoring the shooting functions to the default settings [RESET]

 RESET

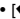 P   SCN  B 

Submenu 1	Application
YES	Restores the following menu functions to the default settings. <ul style="list-style-type: none">• Flash (p. 20)• Exposure compensation (p. 20)• Macro (p. 21)• Self-timer (p. 21)• [ IMAGE QUALITY] (p. 25)• [ PANORAMA] (p. 28)• SCN mode (p. 17)• Shooting information display (p. 21)• Menu functions in [ CAMERA MENU] (p. 25 to 30)
NO	The current settings are not changed.

Menus for Playback, Editing, and Printing Functions

Settings can be made when the image is played back by pressing the button.

Playing back pictures automatically [SLIDESHOW]

SLIDESHOW

Submenu 1	Submenu 2	Submenu 3	Application
ALL/STILL PICTURE/ MOVIE/CALENDAR	NORMAL/SCROLL/ FADER/SLIDE/ ZOOM DOWN/ ZOOM UP/ CHECKERBOARD/ BLINDS/SWIVEL/ RANDOM	OFF/1/2	Selects the coverage of images for the slideshow, the type of transition effect used between images (TYPE), and the background music (BGM).

To start a slideshow

After making the [BGM] settings and pressing the button, the slideshow starts. To stop the slideshow, press the button or the **MENU** button.

Retouching images [PERFECT FIX]

PERFECT FIX

- Edited or retouched images cannot be retouched again.
- Depending on the picture, the editing may not be effective.
- The retouching process may lower the image resolution.

Submenu 1	Application
ALL	[DIS EDIT], [LIGHTING FIX] and [REYEYE FIX] are applied together.
DIS EDIT	Blur caused by camera shake is corrected. displayed during playback indicate the degree of blur. indicates an unblurred or retouched image.
LIGHTING FIX	Only sections darkened by backlighting and dim lighting are brightened.
REYEYE FIX	Eyes that are reddened by the flash are corrected.

- ① Use to select a correction method, and press the button.
- ② Use to select an image for retouching, and press the button.
 - The retouched image is saved as a separate image.

Retouching the skin and eyes

[BEAUTY FIX]


BEAUTY FIX

- Depending on the picture, the editing may not be effective.

Submenu 1	Submenu 2	Application
ALL	—	[CLEAR SKIN], [SPARKLE EYE] and [DRAMATIC EYE] are applied together.
CLEAR SKIN	SOFT/AVG/ HARD	Makes skin look smooth and translucent. Select from 3 levels while viewing the effect on the screen.
SPARKLE EYE	—	Enhances the contrast of the eyes.
DRAMATIC EYE	—	Enlarges the subject's eyes.



- ① Use to select a correction method, and press the button.
- ② Use to select an image for retouching, and press the button.
 - The retouched image is saved as a separate image.

When [CLEAR SKIN] is selected



Use ▲▼ to select the retouching level, and press the  button.



Changing the image size [


 EDIT 

Submenu 2	Application
VGA 640 × 480	This saves a high-resolution image as a separate image with a smaller size for use in e-mail attachments and other applications.
QVGA 320 × 240	

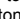
- 1 Use ◀▶ to select an image, and press the  button.
- 2 Use ▲▼ to select the image size, and press the  button.
 - The resized image is saved as a separate image.

Cropping a picture [

 EDIT 

- 1 Use ◀▶ to select an image, and press the  button.
- 2 Use the zoom lever to select the size of the cropping frame, and use ▲▼◀▶ to move the frame.





- 3 Press the  button after you have selected the area to trim.
 - The edited image is saved as a separate image.

Changing the color tone of image [COLOR EDIT]

 EDIT  COLOR EDIT


Submenu 2	Application
Black & white	This changes the image to black and white.
Sepia	This changes the image to a sepia tone.
Saturation (hard)	This increases the color saturation of the image.
Saturation (soft)	This slightly increases the color saturation of the image.

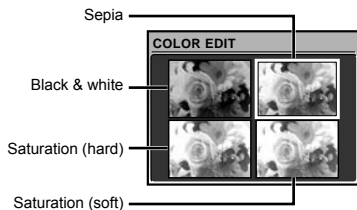

- 1 Use ▲▼◀▶ to select the desired color, and press the  button.
 - The image with the selected color is saved as a separate image.

Adding a calendar to an image [CALENDAR]

EDIT ► CALENDAR

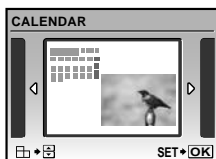

- Use ◀▶ to select an image, and press the button.
- Use ◀▶ to select a calendar. Use ▲▼ to select the image orientation, and then press the button.
- Use ▲▼ to select the Year of the calendar, and press ▶.
- Use ▲▼ to select the Month of the calendar, and press the button.
 - The edited image is saved as a separate image.

Highlighting a face with blurry effect around it [FACE FOCUS]

EDIT ► FACE FOCUS

- A face that is largest and facing front in the picture is detected as a target. In some images, such target may not be detected, and editing cannot be performed.
- Use ◀▶ to select an image, and press the button.
 - The edited image is saved as a separate image.

Creating an index of 9 frames from a movie [INDEX]

EDIT ► INDEX



- Use ◀▶ to select a movie, and press the button.
- Use ▲▼◀▶ to select the first frame, and press the button.
- Use ▲▼◀▶ to select the last frame, and press the button.
 - 9 frames are extracted and saved as a single still image (INDEX).

Extracting a clip from a movie [EDIT]

EDIT ► EDIT

Submenu 2	Application
NEW FILE	The original movie is left unchanged, and a clip from the movie is saved as a separate movie.
OVERWRITE	A portion of the original movie overwrites and replaces the original movie.

- Use ◀▶ to select an image.
- Use ▲▼ to select either [NEW FILE] or [OVERWRITE] and press the button.
- Use ◀▶ to select the first frame of the clip to be extracted, and press the button.
 - While selecting the first or last frame, pressing ▲▼ moves to the first/last frame of the movie.
- Use ◀▶ to select the last frame of the clip to be extracted, and press the button.
 - The extracted movie clip is saved.

Protecting images [ON]

▶ PLAYBACK MENU ▶

- Protected images cannot be erased by [ERASE] (p. 16), [SEL. IMAGE], or [ALL ERASE] (p. 35), but all images are erased by [MEMORY FORMAT]/[FORMAT] (p. 36).

Submenu 2	Application
OFF	Images can be erased.
ON	Images are protected so that they cannot be erased except by formatting of the internal memory/card.

- Use to select an image.
- Use to select [ON].
- If necessary, repeat Steps ① and ② to protect other images, and press the button.

Rotating images [

▶ PLAYBACK MENU ▶

Submenu 2	Application
+90°	The image is rotated 90° clockwise.
0°	The image is not rotated.
-90°	The image is rotated 90° counter-clockwise.

- Use to select an image.
- Use to select the rotation direction.
- If necessary, repeat Steps ① and ② to make settings for other images, and press the button.


- The new picture orientations will be saved even after the power is turned off.

Adding sound to still images [

▶ PLAYBACK MENU ▶

Submenu 2	Application
YES	The camera adds (records) sound for approx. 4 seconds while playing back the image. This is useful for recording notes or comments about the image.
NO	No sound is recorded.

- Use to select an image.
- Aim the microphone towards the sound source.

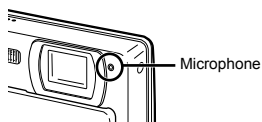

- Use to select [YES], and press the button.
 - Recording starts.

Erasing images [ERASE]


ERASE

- Before erasing, check that no important data will be erased.



Submenu 1	Application
SEL. IMAGE	Images are individually selected and erased.
ALL ERASE	All images in the internal memory or card are erased.

- When erasing pictures in the internal memory, do not insert the card into the camera.
- When erasing pictures from the card, insert a card into the camera in advance.



To individually select and erase images [SEL. IMAGE]

- Use ▲▼ to select [SEL. IMAGE], and press the  button.
- Use ▲▼◀▶ to select the image to be erased, and press the  button to add a ✓ mark to the image.

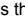

- Repeat Step ② to select the images to be erased, and then press the  button to erase the selected images.
- Use ▲▼ to select [YES], and press the  button.
 - The images with a ✓ mark are erased.

To erase all images [ALL ERASE]

- Use ▲▼ to select [ALL ERASE], and press the  button.
- Use ▲▼ to select [YES], and press the  button.

Saving print settings to the image data [PRINT ORDER]

PRINT ORDER

- "Print reservations (DPOF)" (p. 44)
- Print reservation can be set only for still images that are recorded to the card.

Menus for Other Camera Settings

These settings can be made from the shooting mode top menu or playback mode top menu.

Erasing data completely [MEMORY FORMAT]/[FORMAT]

 SETUP ► MEMORY FORMAT/FORMAT

- ! Before formatting, check that no important data is left in the internal memory or card.
- ! Non-Olympus cards and cards that have been formatted by a computer must be formatted with this camera before use.

Submenu 2	Application
YES	Completely erases the image data in the internal memory ^{*1} or card (including protected images).
NO	Cancels formatting.

^{*1} Be sure to remove the card before formatting the internal memory.

Copying images in the internal memory to the card [BACKUP]

 SETUP ► BACKUP

Submenu 2	Application
YES	Backs up image data in the internal memory to the card.
NO	Cancels the backup.

- ! It takes some time to back up data. Check that the battery has sufficient power before starting the backup, or use an AC adapter.

Changing the display language

 SETUP ► 


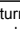
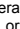
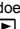
- ! "Changing the display language" (p. 13)

Submenu 2	Application
Languages ^{*1}	The language for the menus and error messages displayed on the monitor is selected.

^{*1} The available languages vary depending on the country and/or region where the camera was purchased.

Using the / buttons to turn on the camera /

 SETUP ► / 

Submenu 2	Application
YES	Pressing  turns on the camera in shooting mode (Slide the lens barrier down when shooting). Pressing  turns on the camera in playback mode.
NO	The camera does not turn on when  or  is pressed. To turn on the camera, slide the lens barrier down.

Saving the shooting mode when the camera is turned off [SAVE SETTINGS]

 SETUP ► SAVE SETTINGS

Submenu 2	Application
YES	The shooting mode is saved when the camera is turned off and is reactivated the next time the camera is turned on.
NO	The shooting mode is set to P mode when the camera is turned on.


Setting the startup display screen and sound when the camera is turned on [PW ON SETUP]

 SETUP ► PW ON SETUP

Submenu 2	Submenu 3	Application
SCREEN	OFF	No image is displayed.
	1	A preset image* is displayed.
	2	A still image stored in the internal memory or card is registered for display. (This option leads to the setup screen.)
VOLUME	OFF (No sound)/LOW/HIGH	The volume of the startup sound is selected.

* This image cannot be changed.

To register a startup image

- ① Select [2] in Submenu 3 for [SCREEN].
- ② Use ◀ ▶ to select the image to be registered, and press the  button.



Selecting the menu screen color and background [MENU COLOR]

 SETUP ► MENU COLOR

Submenu 2	Application
NORMAL/ COLOR 1/ COLOR 2/ COLOR 3	Selects the menu screen color or background image according to your preference.

Selecting the camera sound and its volume [SOUND SETTINGS]

 SETUP ► SOUND SETTINGS

Submenu 2	Submenu 3	Submenu 4	Application
BEEP	SOUND TYPE	1/2	Selects the operating sound and volume of the camera buttons (except the shutter button).
	VOLUME	OFF (No sound)/LOW/HIGH	
SHUTTER SOUND	SOUND TYPE	1/2/3	Selects the shutter sound and volume.
	VOLUME	OFF (No sound)/LOW/HIGH	
	OFF (No sound)/LOW/HIGH	—	Adjusts the warning sound volume.
 VOLUME	OFF (No sound), level 1 to 5	—	Adjusts the image playback volume.

 To turn off all sounds at once, make the setting from  SILENT MODE] (p. 40).

Viewing the image immediately after shooting [REC VIEW]


🔧 SETUP ▶ REC VIEW

Submenu 2	Application
OFF	The image being recorded is not displayed. This allows the user to prepare for the next shot while following the subject in the monitor after shooting.
ON	The image being recorded is displayed. This allows the user to make a brief check of the image that was just taken.

⚠️ Even when set to [ON], you can resume shooting while the image is being displayed.

Resetting the file name numbers of pictures [FILE NAME]

🔧 SETUP ▶ FILE NAME

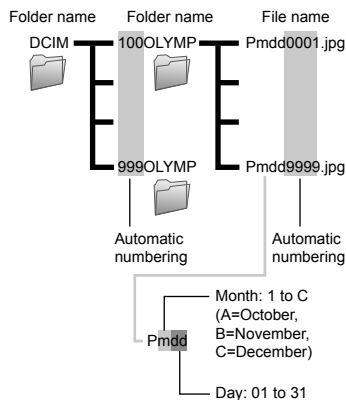

Submenu 2	Application
RESET	This resets the sequential number for the folder name and file name whenever a new card is inserted. ¹ This is useful when grouping images on separate cards.
AUTO	Even when a new card is inserted, this continues the numbering for the folder name and file name from the previous card. This is useful for managing all image folder names and files names with sequential numbers.

¹ The number for the folder name is reset to 100, and the one for the file name is reset to 0001.

Adjusting the CCD and adjusting the image processing function [PIXEL MAPPING]

🔧 SETUP ▶ PIXEL MAPPING

- ⚠️ This function has already been adjusted at factory shipping, and no adjustment is needed right after purchase. Approximately once a year is recommended.
- ⚠️ For best results, wait at least one minute after taking or viewing pictures before performing pixel mapping. If the camera is turned off during pixel mapping, be sure to perform it again.

To adjust the CCD and the image processing function

Press the button when [START] (Submenu 2) is displayed.

- The camera checks and adjusts the CCD and the image processing function at the same time.

Adjusting the brightness of the monitor [!]

SETUP ► [!]

To adjust the monitor brightness

- Use ▲ ▼ to adjust the brightness while viewing the screen, and then press the [!]
button.




Setting the date and time [⌚]

SETUP ► [⌚]

- "Setting the date and time" (p. 13)

To select the date and time display order

- Press ► after setting Minute, and use ▲ ▼ to select the date display order.

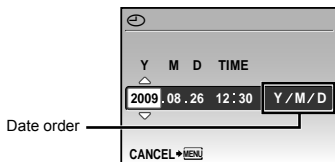

Setting the date and time for another time zone [DUALTIME]

SETUP ► DUALTIME

- When [DUALTIME] is set to [ON], the date and time set here are used in image file names, dated prints and other data.

Submenu 2	Submenu 3	Application
OFF	—	Switches to the date and time set in [⌚].
ON	(Proceeds to the setting screen ¹ .)	The date and time settings from [DUALTIME] are used in file names, dated prints and other data.

¹ The setting procedure is identical to that in "Setting the date and time" (p. 13).

- The date display order is the same as that set with [⌚].

Selecting the video signal system to match your TV [VIDEO OUT]

SETUP ► VIDEO OUT


- The TV video signal system varies depending on the countries and regions. Before viewing camera images on your TV, select the video output according to your TV's video signal type.

Submenu 2	Application
NTSC	Connecting the camera to a TV in North America, Taiwan, Korea, Japan, and so on
PAL	Connecting the camera to a TV in European countries, China, and so on

The factory default settings differ according to the region where the camera is sold.

To play back camera images on a TV

- Connect the TV and camera.

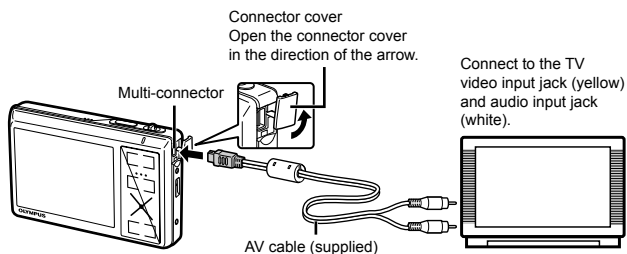

- Use the camera to select the same video signal system as the one of connected TV ([NTSC]/[PAL]).
 - Turn on the TV, and change "INPUT" to "VIDEO (an input jack connected to the camera)."
- For details on changing the input source of the TV, refer to the TV's instruction manual.
 - Press the button, and use to select the image for playback.
 - Depending on the TV's settings, the displayed images and information may become cropped.

Saving battery power between shots [POWER SAVE]

SETUP ► POWER SAVE

Submenu 2	Application
OFF	Cancels [POWER SAVE].
ON	When the camera is not being used for approx. 10 seconds, the monitor automatically turns off to save battery power.

To resume standby mode

Press any button or press the zoom lever.

Turning off the camera sounds [SILENT MODE]

SILENT MODE

Submenu 1	Application
OFF	The individually set electronic sounds and volume levels are enabled in [SOUND SETTINGS].
ON	The electronic sounds (operating sound, shutter sound, warning sound) and playback sounds are muted.

- [SOUND SETTINGS] (p. 37)

Printing

Direct printing (PictBridge¹)

By connecting the camera to a PictBridge-compatible printer, you can print images directly without using a computer.


To find out if your printer supports PictBridge, refer to the printer's instruction manual.

¹ PictBridge is a standard for connecting digital cameras and printers of different makers and printing out pictures directly.

- ❗ The printing modes, paper sizes, and other parameters that can be set with the camera vary depending on the printer that is used. For details, refer to the printer's instruction manual.
- ❗ For details on the available paper types, loading paper, and installing ink cassettes, refer to the printer's instruction manual.

Printing images at the printer's standard settings [EASY PRINT]


1 Display the image to be printed on the monitor.

- ❗ "Viewing images" (p. 15)
- ❗ Printing can also be started when the camera is turned off. After performing Step 2, use ▲▼ to select [EASY PRINT], and press the  button. Use ◀▶ to select an image, and proceed to Step 3.

2 Turn on the printer, and then connect the printer and camera.



Connector cover
Open the connector cover in the direction of the arrow.

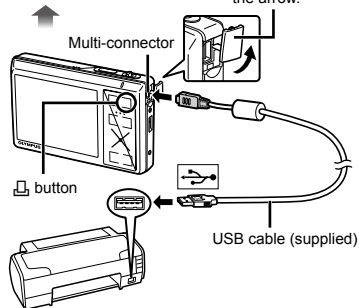

3 Press the button to start printing.


4 To print another image, use ◀▶ to select an image, and press the button.


To exit printing




After a selected image is displayed on the screen, disconnect the USB cable from the camera and printer.



Changing the printer's settings for printing [CUSTOM PRINT]

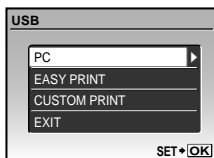- 1 Follow Steps 1 and 2 for [EASY PRINT] (p. 41), and press the  button.

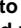





- 2 Use   to select [CUSTOM PRINT], and press the  button.


- 3 Use   to select the print mode, and press the  button.




Submenu 2	Application
PRINT	This prints the image selected in Step 6.
ALL PRINT	This prints all images stored in the internal memory or card.
MULTI PRINT	This prints one image in a multiple layout format.
ALL INDEX	This prints an index of all images stored in the internal memory or card.
PRINT ORDER ¹	This prints images based on the print reservation data on the card.

¹ [PRINT ORDER] is available only when print reservations have been made. "Print reservations (DPOF)" (p. 44)

- 4 Use   to select [SIZE] (Submenu 3), and press .

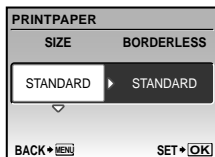
 If the [PRINTPAPER] screen is not displayed, the [SIZE], [BORDERLESS], and [PICS/SHEET] are set to the printer's standard.

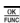

- 5 Use   to select the [BORDERLESS] or [PICS/SHEET] settings, and press the  button.


Submenu 4 ([BORDERLESS]/ [PICS/SHEET])	Application
OFF/ON ¹	The image is printed with a border around it ([OFF]). The image is printed to fill the entire paper ([ON]).
(The number of images per sheet varies depending on the printer.)	The number of images per sheet ([PICS/SHEET]) is selectable only when [MULTI PRINT] is selected in Step 3.

¹ The available settings for [BORDERLESS] vary depending on the printer.

 If [STANDARD] is selected in Steps 4 and 5, the image is printed at the printer's standard settings.






6 Use ◀ ▶ to select an image.

- 7 To make a [SINGLEPRINT] reservation for the current image, press the  button. To make detailed settings for the current image, press ▼.


To make detailed settings

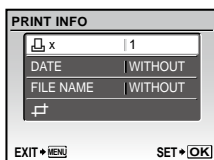- ① Use ▲ ▼ ◀ ▶ to make the settings, and press the  button.




Submenu 5	Submenu 6	Application
 x	0 to 10	This selects the number of prints.
DATE	WITH/ WITHOUT	Selecting [WITH] prints the images with the date. Selecting [WITHOUT] prints the images without the date.
FILE NAME	WITH/ WITHOUT	Selecting [WITH] prints the file name on the image. Selecting [WITHOUT] does not print any file name on the image.
	(Proceeds to the setting screen.)	This selects a portion of the image for printing.

To crop an image ()

- ① Use the zoom lever to select the size of the cropping frame, use ▲ ▼ ◀ ▶ to move the frame, and then press the  button.




- ② Use ▲ ▼ to select [OK], and press the  button.




- 8 If necessary, repeat Steps 6 and 7 to select the image to be printed, make the detailed settings, and set [SINGLEPRINT].

- 9 Press the  button.

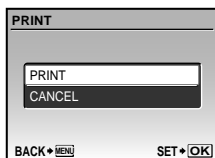



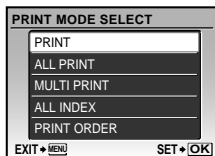


- 10 Use ▲ ▼ to select [PRINT], and press the  button.

- Printing starts.
- Selecting [OPTION SET] in [ALL PRINT] mode displays the [PRINT INFO] screen.
- When printing is finished, the [PRINT MODE SELECT] screen is displayed.



To cancel printing

- 1 Press the  button while [TRANSFERRING] is displayed.
- 2 Use   to select [CANCEL], and then press the  button again.

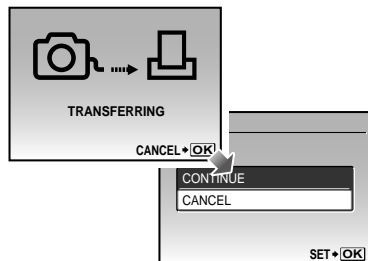

11 Press the MENU button.

12 When the message [REMOVE USB CABLE] is displayed, disconnect the USB cable from the camera and printer.








Print reservations (DPOF^{*1})


In print reservations, the number of prints and date imprint option are saved in the image on the card. This enables easy printing at a printer or print shop supporting DPOF by using only the print reservations on the card without a computer or a camera.




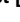
^{*1} DPOF is a standard for storing automatic printout information from digital cameras.


- 1 Print reservations can be set only for the images stored on the card. Insert a card with recorded images before making print reservations.
- 2 DPOF reservations set by another DPOF device cannot be changed by this camera. Make changes using the original device. Making new DPOF reservations with this camera will erase the reservations made by the other device.
- 3 DPOF print reservations can be made for up to 999 images per card.



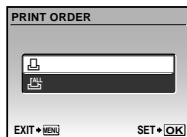


Single-frame print reservations

- 1 Press the  button, and then press the MENU button to display the top menu.
- 2 Use     to select [ PRINT ORDER], and press the  button.

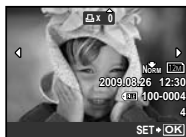

- 3 Use   to select [], and press the  button.



- 4 Use   to select the image for print reservation. Use   to select the quantity. Press the  button.



- 5 Use ▲▼ to select the [☺] (date print) screen option, and press the button.

Submenu 2	Application
NO	This prints the image only.
DATE	This prints the image with the shooting date.
TIME	This prints the image with the shooting time.



- 6 Use ▲▼ to select [SET], and press the button.


Reserving one print each of all images on the card []

- 1 Follow Steps 1 and 2 in [] (p. 44).
- 2 Use ▲▼ to select [], and press the button.
- 3 Follow Steps 5 and 6 in [].

Resetting all print reservation data

- 1 Press the button, and then press the MENU button to display the top menu.
- 2 Use ▲▼◀▶ to select [] PRINT ORDER], and press the button.

- 3 Use ▲▼ to select either [] or [], and press the button.

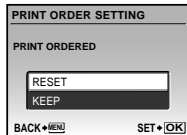

- 4 Use ▲▼ to select [RESET], and press the button.

Resetting the print reservation data for selected images

- 1 Follow Steps 1 and 2 of “Resetting all print reservation data” (p. 45).
- 2 Use ▲▼ to select [], and press the button.
- 3 Use ▲▼ to select [KEEP] and press the button.
- 4 Use ◀▶ to select the image with the print reservation you want to cancel. Use ▲▼ to set the print quantity to “0”.
- 5 If necessary, repeat Step 4, and then press the button when finished.

- 6 Use ▲▼ to select the [☺] (date print) screen option, and press the button.

- The settings are applied to the remaining images with the print reservation data.

- 7 Use ▲▼ to select [SET], and press the button.

Using OLYMPUS Master 2

System requirements and installation of OLYMPUS Master 2

Install the OLYMPUS Master 2 software by referring to the included installation guide.


Connecting the camera to a computer

1 Make sure the camera is turned off.

- The monitor is off.
- The lens barrier is closed.

2 Connect the camera to a computer.

- The camera automatically turns on.

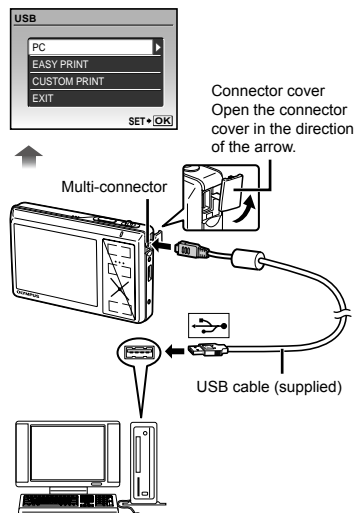

- ! Locate the position of the USB port by referring to your computer's instructions manual.

3 Use ▲ ▼ to select [PC], and press the button.

- The computer automatically detects the camera as a new device on the first connection.

Windows

After the computer detects the camera, a message indicating the completion of the setting appears. Confirm the message and click "OK". The camera is recognized as a removable disk.

Macintosh

When iPhoto started, exit iPhoto and start OLYMPUS Master 2.

- ! While the camera is connected to the computer, shooting functions are disabled.
- ! Connecting the camera to a computer via a USB hub may cause unstable operation.
- ! When [MTP] is set for the Submenu that appears by pressing ► after selecting [PC] in Step 3, images cannot be transferred to a computer using OLYMPUS Master 2.

Starting OLYMPUS Master 2

1 Double-click the OLYMPUS Master 2 icon.

Windows

appears on the desktop.


Macintosh

appears in the OLYMPUS Master 2 folder.

- Browse window appears after starting the software.

- ! When you start OLYMPUS Master 2 for the first time after installation, "Default Settings" and "Registration" screens appear. Follow the instructions on the screen.

Operating OLYMPUS Master 2

When OLYMPUS Master 2 is started, Quick Start Guide appears on the screen that helps you to handle the camera without any question. When the Quick Start Guide is not displayed, click  in the toolbar to show the Guide.



For details on the operation, refer to the help guide of the software.




Transferring and saving images without using OLYMPUS Master 2

This camera is compatible with the USB Mass Storage Class. You can transfer and save the image data on your computer while the camera and the computer are connected.

System requirements

Windows : Windows 2000 Professional/
XP Home Edition/
XP Professional/Vista

Macintosh : Mac OS X v10.3 or later

-  On a computer running Windows Vista, if [MTP] is set for the Submenu that appears by pressing  after selecting [PC] in Step 3 of "Connecting the camera to a computer" (p. 46), Windows Photo Gallery will become available.
-  Even if a computer has USB ports, proper operation is not guaranteed in the following cases.
 - Computers with USB ports installed using an expansion card, etc.
 - Computers without a factory-installed OS and home-built computers



Usage Tips


If the camera does not work as intended, or if an error message is displayed on the screen, and you are unsure of what to do, refer to the information below to fix the problem(s).

Troubleshooting

Battery

"The camera does not work even when battery is installed."

- Insert recharged battery in the correct direction. "Charging the battery" (p. 10), "Loading the battery and the xD-Picture Card™ (sold separately) into the camera" (p. 11)
- Battery performance may have been reduced temporarily due to low temperature. Take the battery out of the camera, and warm them by putting them in your pocket for a while.

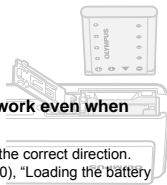

Card/Internal memory


"An error message is displayed."


"Error message" (p. 49)



Shutter button

"No picture is taken when the shutter button is pressed."

- Slide the lens barrier down.
- Cancel sleep mode.
To save battery power, the camera goes into sleep mode and the monitor automatically turns off when no operation is performed for 3 minutes. When the shutter button is pressed in this state, no picture is taken. To cancel sleep mode, press the zoom lever or any other button. If the camera is left unoperated for a further 12 minutes, it turns off completely. To turn the camera on again, slide the lens barrier up and then slide it down again.
- Wait until  (flash charge) stops blinking before taking pictures.

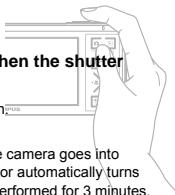


- The camera may automatically stop working if the internal temperature rises due to extended use. Remove the battery and allow the camera to cool. The outside of the camera may become hot during use, but this is not a malfunction.

Monitor

"Difficult to see."

- Condensation¹ may have occurred. Turn off the power, and wait for the camera body to become acclimated to the surrounding temperature and dry out before taking pictures.
¹ Dew drops can form in the camera when it is suddenly taken from a cold location into a warm, humid room.

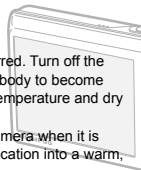

"Vertical lines appear on the screen."

- Vertical lines may appear on the screen when the camera is pointed at an extremely bright subject under a clear sky and so on. The lines do not appear, however, in the final image.


"The light is caught in the picture."

- Shooting with flash in dark situations results in an image with many flash reflections on dust in the air.

Date and time function

"Date and time settings return to the default setting."

- If the battery is removed and left out of the camera for about 3 days², the date and time settings return to the default setting, and must be reset.
² The time until the date and time settings return to the default setting varies depending on how long the battery has been loaded.
"Setting the date and time" (p. 13)

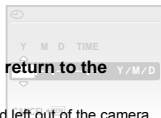









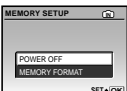

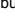

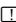
Other







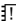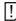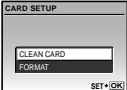


"There is a noise coming from inside the camera during shooting."

- The movement of the lens may make a noise even if the camera is not being operated because the autofocus function is active when the camera is ready to shoot.

Error message

- ! When one of the messages below is displayed on the monitor, check the corrective action.

Error message	Corrective action
 CARD ERROR	Card problem Insert a new card.
 WRITE PROTECT	Card problem Use a computer to cancel the read-only setting.
 MEMORY FULL	Internal memory problem <ul style="list-style-type: none"> • Insert a card. • Erase unwanted images.¹
 CARD FULL	Card problem <ul style="list-style-type: none"> • Replace the card. • Erase unwanted images.¹
	Card problem <ul style="list-style-type: none"> • Use ▲ ▼ to select [CLEAN CARD], and press the  button. Take out the card, wipe the contact area (p. 53) with a soft, dry cloth, and then load the card again. • Use ▲ ▼ to select [FORMAT], and press the  button. Next, use ▲ ▼ to select [YES], and press the  button.²
	Internal memory problem Use ▲ ▼ to select [MEMORY FORMAT], and press the  button. Next, use ▲ ▼ to select [YES], and press the  button. ²
 NO PICTURE	Internal memory/Card problem Take pictures before viewing them.
 PICTURE ERROR	Problem with selected image Use photo retouch software, etc. to view the image on a computer. If the image still cannot be viewed, the image file is corrupted.

 THE IMAGE CANNOT BE EDITED	Problem with selected image Use photo retouch software, etc. to edit the image on a computer.
 CARD-COVER OPEN	Operation problem Close the battery/card compartment cover.
THE LENS BARRIER IS CLOSED.	Operation problem Slide the lens barrier down when shooting.
 BATTERY EMPTY	Battery problem Charge the battery.
 NO CONNECTION	Connection problem Connect the camera and computer or printer correctly.
 NO PAPER	Printer problem Load paper into the printer.
 NO INK	Printer problem Refill the ink in the printer.
 JAMMED	Printer problem Remove the jammed paper.
SETTINGS CHANGED ³	Printer problem Return to the status where the printer can be used.
 PRINT ERROR	Printer problem Turn off the camera and printer, check the printer for any problems, and then turn the power on again.
 CANNOT PRINT ⁴	Problem with selected image Use a computer to print.

¹ Before erasing important images, download them to a computer.

² All data will be erased.

³ This is displayed, for instance, when the printer's paper tray has been removed. Do not operate the printer while making the print settings on the camera.

⁴ This camera may be unable to print images taken by other cameras.

Shooting tips

When you are unsure of how to take a picture that you envision, refer to the information below.

Focusing



“Focusing on the subject”

- **Taking a picture of a subject not in the center of the screen**

After focusing on an object at the same distance as the subject, compose the shot, and take the picture.


Pressing the shutter button halfway (p. 14)

- **Set [AF MODE] (p. 27) to [IESP].**

- **Taking a picture of subjects where autofocus is difficult**

In the following cases, after focusing on an object (by pressing the shutter button halfway down) with high contrast at the same distance as the subject, compose the shot, and take the picture.


Subjects with low contrast

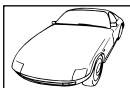

When extremely bright objects appear in the center of the screen



Object with no vertical lines¹

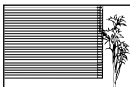


¹ It is also effective to compose the shot by holding the camera vertically to focus, and then returning to the horizontal position to take the picture.

When objects are at different distances



Fast-moving object

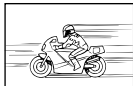

The subject is not in the center of the frame



Camera shake



“Taking pictures without camera shake”

- **Taking pictures using [M] mode (p. 17) or [DIS MOVIE MODE] (p. 28)**

- **Taking pictures at a high ISO sensitivity**

If a high ISO sensitivity is selected, pictures can be taken at a high shutter speed even at locations where a flash cannot be used. [ISO] (p. 26)

- **Setting the scene mode to [SPORT]**

Selecting [SPORT] enables pictures to be taken at a high shutter speed, thereby reducing blur caused by movement of the subject.

- **Applying [DIS EDIT] to blurred images (p. 31)**

Exposure (brightness)



“Taking pictures with the right brightness”

- **Taking pictures of a subject against a backlight**
A face against the backlight is brightened. [SHADOW ADJ] (p. 22, 28)
- **Taking pictures using [FACE DETECT] for [AF MODE] (p. 27)**
Appropriate exposure is obtained for a face against the backlight, and the face is brightened.
- **Taking pictures using [□] for [ESP/□] (p. 27)**
The brightness is adjusted according to the subject in the center of the screen without being influenced by the background light.
- **Taking pictures using [FILL IN] (p. 20) flash**
A face against the backlight is brightened.
- **Taking pictures of a white beach or snow scene**
Set the **SCN** mode to [1/4 BEACH & SNOW]. (p. 17)
- **Taking pictures using exposure compensation (p. 20)**
Adjust the brightness while viewing the screen for taking the picture. Normally, taking pictures of white subjects (such as snow) results in images that are darker than the actual subject. Use the [□] button to adjust in the positive direction to express whites as they appear.
When taking pictures of black subjects, on the other hand, it is effective to adjust in the negative direction.

Color hue



“Taking pictures with colors at the same shade as they appear”

- **Taking pictures by selecting [WB] (p. 26)**
Best results in most environments can normally be obtained with the AUTO setting, but for some subjects, you should try experimenting with different settings. (This is especially true for sunshade under a clear sky, mixed natural and artificial light settings, and so on.)

Image quality



“Taking sharper pictures”

- **Taking pictures with the optical zoom**
Avoid using [DIGITAL ZOOM] (p. 27) to take pictures.
- **Taking pictures at a low ISO sensitivity**
If the picture is taken with a high ISO sensitivity, noise (small colored spots and color unevenness that were not in the original image) can occur, and the image can appear grainy. [ISO] (p. 26)

Panorama



“Taking pictures so that the frames are stitched smoothly”

- **A tip for panoramic shooting**
Taking pictures by pivoting with the camera at the center prevents shifting of the image. When taking pictures of close objects in particular, pivoting with the lens end at the center produces favorable results.

Batteries



“Making batteries last longer”

- **Avoid performing the following operations as much as possible as they use up battery power even if no pictures are actually taken.**
 - Repeatedly pressing the shutter button halfway
 - Repeated use of the zoom
- **Set [POWER SAVE] (p. 40) to [ON].**

Playback/Editing tips

Playback



“Playing images in the internal memory/card”

- **Remove the card when playing images in the internal memory.**
 - “Loading the battery and the xD-Picture Card™ (sold separately) into the camera” (p. 11)
 - “Using a microSD card/microSDHC card (sold separately)” (p. 12)

Editing



“Erasing the sound recorded to a still image”

- **Record over the sound with silence when playing back the image** [🔇] (Add sound to still images) (p. 34)

Camera care

Exterior

- Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

Monitor

- Wipe gently with a soft cloth.

Lens

- Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner.

Battery/Charger

- Wipe gently with a soft, dry cloth.
 - ❗ Do not use strong solvents such as benzene or alcohol, or chemically treated cloth.
 - ❗ Mold may form on the lens surface if the lens is left dirty.

Storage

- When storing the camera for extended periods, remove the battery, AC adapter and card, and keep in a cool, dry place that is well ventilated.
- Periodically insert the battery and test the camera functions.
 - ❗ Avoid leaving the camera in places where chemical products are handled since this may result in corrosion.

Battery and charger

- This camera uses one Olympus lithium ion battery (LI-42B/LI-40B). No other type of batteries can be used.
 - ❗ **CAUTION:**
There is a risk of explosion if the battery is replaced with the incorrect battery type. Dispose of the used battery following the instructions. "Battery Handling Precautions" (p. 58)
- Power consumption by the camera varies depending on which functions are used.
- During the conditions described below, power is consumed continuously and the battery becomes exhausted quickly.
 - The zoom is used repeatedly.
 - The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus.
 - A picture is displayed on the monitor for an extended period of time.
 - The camera is connected to a computer or printer.
- Using an exhausted battery may cause the camera to turn off without displaying the battery level warning.
- The rechargeable battery is not fully charged at the time of purchase. Charge the battery fully with LI-41C/LI-40C charger before use.
- The provided rechargeable battery usually takes approximately 2 hours to charge (varies on usage).
- The supplied LI-41C battery charger is used only for LI-42B/LI-40B battery. Do not charge other type of battery with the supplied battery charger. It might cause explosion, leaking, overheating or fire.
- For plug-in type battery charger:
This power unit is intended to be correctly orientated in a vertical or floor mount position.

Using an AC adapter


An AC adapter is useful for time-consuming tasks such as image downloads to a computer or when running a slideshow for a long period of time. To use an AC adapter for this camera, the multi-adapter (CB-MA1/accessory) is required. Do not use any other AC adapter with this camera.

Using your charger and AC adapter abroad

- The charger and AC adapter can be used in most home electrical sources within the range of 100 V to 240 V AC (50/60Hz) around the world. However, depending on the country or area you are in, the AC wall outlet may be shaped differently and the charger and AC adapter may require a plug adapter to match the wall outlet. For details, ask at your local electrical shop or travel agent.
- Do not use travel voltage converters as they could damage your charger and AC adapter.

Using an xD-Picture Card

A card (and internal memory) also corresponds to the film that records images in a film camera. Otherwise, the recorded images (data) can be erased, and retouching is also available with the use of a computer. Cards can be removed from the camera and exchanged, but it is not possible to remove or exchange the internal memory. Use of larger capacity cards enables you to take more pictures.

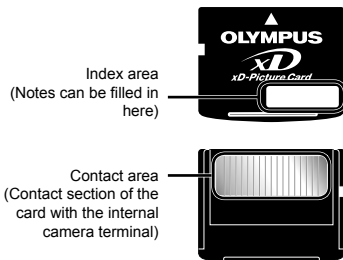

⚠ Do not touch the contact area directly.

Cards compatible with this camera

xD-Picture Card (16MB to 2GB)
(TypeH/M/M+, Standard)

Using a new card

Before using a non-Olympus card or a card that was used for another purpose in a computer or other device, use [MEMORY FORMAT]/[FORMAT] (p. 36) to format the card.


Checking the image saving location

The memory indicator shows whether the internal memory or card is being used during shooting and playback.

Current memory indicator

MEM: Internal memory is being used


None: Card is being used

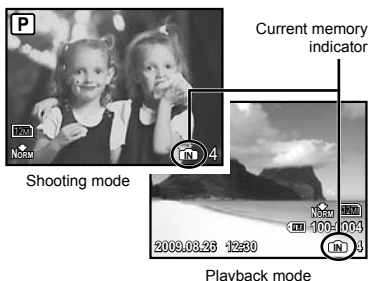

- ! Even if [MEMORY FORMAT]/[FORMAT], single image erase, [SEL. IMAGE], or [ALL ERASE] is performed, the data in the card is not completely erased. When disposing of the card, damage the card to prevent the disclosure of personal data.

Readout/recording process of the card

Never open the battery/card compartment cover or unplug the USB cable while the camera is reading or writing data, which is indicated by blinking of the card access lamp. This can not only damage the image data but also render the internal memory or card unusable.

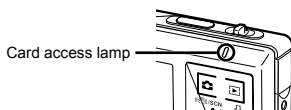

Number of storable pictures (still pictures)/continuous recording length (movies) in the internal memory and xD-Picture Card

Still pictures

IMAGE SIZE	COMPRESSION	Number of storable still pictures			
		Internal memory		Using a 1 GB xD-Picture Card	
		With sound	Without sound	With sound	Without sound
12M 3968 × 2976	FINE	7	7	170	171
	NORM	14	14	329	329
5M 2560 × 1920	FINE	18	18	410	415
	NORM	34	35	789	809
3M 2048 × 1536	FINE	28	28	633	646
	NORM	53	55	1,206	1,254
2M 1600 × 1200	FINE	44	46	1,015	1,048
	NORM	83	88	1,881	1,998
1M 1280 × 960	FINE	64	67	1,453	1,522
	NORM	113	122	2,558	2,781
VGA 640 × 480	FINE	202	235	4,568	5,330
	NORM	314	404	7,107	9,137
16:9 1920 × 1080	FINE	41	42	940	969
	NORM	78	83	1,776	1,881

Movies

IMAGE SIZE	FRAME RATE	Continuous recording length	
		Internal memory	Using a 1 GB xD-Picture Card
		With sound	With sound
VGA 640 × 480	30B	24 sec.	9 min. 25 sec.*
	15B	49 sec.	18 min. 44 sec.
QVGA 320 × 240	30B	1 min. 7 sec.	25 min. 26 sec.
	15B	2 min. 12 sec.	50 min. 7 sec.

- ! The maximum file size of a single movie is 2 GB, regardless of the capacity of the card.
- * The maximum length is 40 seconds when using a TypeM or Standard xD-Picture Card.

Increasing the number of pictures that can be taken

Either erase unwanted images, or connect the camera to a computer or other device to save the images, and then erase the images in the internal memory or card.

Single image erase (p. 16), [SEL. IMAGE] (p. 35), [ALL ERASE] (p. 35), [MEMORY FORMAT]/[FORMAT] (p. 36)

Using a microSD Attachment

- ! Do not use the Attachment with Olympus digital cameras that do not support this microSD Attachment, as well as with other brands of digital cameras, computers, printers, and other devices that support xD-Picture Card. Doing so not only may damage the pictures taken, but may also result in the malfunction of the device.
- ! If the microSD card cannot be removed, do not use force. Contact authorized distributors/service centers.

Cards compatible with this camera

microSD card/microSDHC card

- ! For a list of tested microSD cards, please visit our website (<http://www.olympus.com/>).

Sending images


You can send images to a computer or printer by using the USB cable provided with the camera.

To send data to other devices, remove the Attachment from the camera and use a commercially available microSD card adapter.

Handling precautions

Do not touch the contact area of the Attachment or microSD card. Doing so may cause failure in reading the images. When fingerprints or stains are found on the contact area, wipe the area with a soft dry cloth.

SAFETY PRECAUTIONS

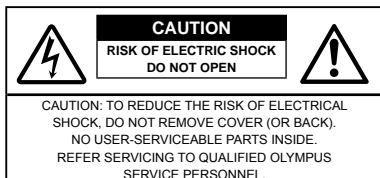

An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.



DANGER

If the product is used without observing the information given under this symbol, serious injury or death may result.



WARNING

If the product is used without observing the information given under this symbol, injury or death may result.



CAUTION

If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

WARNING!

TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

General Precautions

Read All Instructions — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

Attachments — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — For precautions on products with weatherproof designs, read the weatherproofing sections.

Location — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

Power Source — Connect this product only to the power source described on the product label.

Lightning — If a lightning storm occurs while using an AC adapter, remove it from the wall outlet immediately.

Foreign Objects — To avoid personal injury, never insert a metal object into the product.

Heat — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

Handling the Camera

WARNING

- Do not use the camera near flammable or explosive gases.
- Do not use the flash and LED on people (infants, small children, etc.) at close range.
 - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- Keep young children and infants away from the camera.
 - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
 - Becoming entangled in the camera strap, causing strangulation.
 - Accidentally swallowing the battery, cards or other small parts.
 - Accidentally firing the flash into their own eyes or those of another child.
 - Accidentally being injured by the moving parts of the camera.
- Do not look at the sun or strong lights with the camera.
- Do not use or store the camera in dusty or humid places.
- Do not cover the flash with a hand while firing.
- Do not insert anything into the microSD Attachment other than the microSD card. This Attachment is exclusive for use of microSD cards only. Other types of cards cannot be installed.
- Do not insert anything other than an xD-Picture Card or the microSD Attachment into the camera.

If you insert a card by mistake, such as a microSD card, do not use force. Contact authorized distributors/service centers.

CAUTION

- **Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.**
 - Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- **Never hold or operate the camera with wet hands.**
- **Do not leave the camera in places where it may be subject to extremely high temperatures.**
 - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger or AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- **Handle the camera with care to avoid getting a low-temperature burn.**
 - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
 - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
 - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- **Be careful with the strap.**
 - Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

Battery Handling Precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.

DANGER

- The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, solder, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.

WARNING

- Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Insert the battery carefully as described in the operating instructions.
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never subject batteries to strong shocks or continuous vibration.

CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

Caution for Usage Environment

- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
 - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
 - In sandy or dusty environments.
 - Near flammable items or explosives.
 - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
 - In places prone to strong vibrations.
- Do not get water or sand on the camera when using it at the beach or in sandy places as this may lead to damage or malfunction.
- Never drop the camera or subject it to severe shocks or vibrations.
- When mounted on a tripod, adjust the position of the camera with the tripod head. Do not twist the camera.
- Do not touch electric contacts on cameras.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the CCD, or may possibly cause fires.
- Do not push or pull severely on the lens.
- Before storing the camera for a long period, remove the batteries. Select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter button to make sure that it is operating normally.
- Always observe the operating environment restrictions described in the camera's manual.

Battery Handling Precautions

- This camera uses a lithium ion battery specified by Olympus. Do not use any other type of battery.
- If the battery's terminals get wet or greasy, camera contact failure may result. Wipe the battery well with a dry cloth before use.
- Always charge a battery when using it for the first time, or if it has not been used for a long period.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare battery as warm as possible. A battery that has run down at low temperatures may be restored after it is warmed at room temperature.
- The number of pictures you can take may vary depending on the shooting conditions or battery.
- Before going on a long trip, and especially before traveling abroad, purchase extra batteries. A recommended battery may be difficult to obtain while traveling.
- Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure to cover their terminals and always observe local laws and regulations.

LCD Monitor

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged on the monitor. This is not a malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the LCD monitor may take a long time to turn on or its color may change temporarily. When using the camera in extremely cold places, it is a good idea to occasionally place it in a warm place. An LCD monitor exhibiting poor performance due to low temperatures will recover in normal temperatures.
- The LCD used for the monitor is made with high-precision technology. However, black spots or bright spots of light may appear constantly on the LCD monitor. Due to its characteristics or the angle at which you are viewing the monitor, the spot may not be uniform in color and brightness. This is not a malfunction.

Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages, so the above limitations may not apply to you.
- Olympus reserves all rights to this manual.

Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

Copyright Notice

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

For customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" mark cameras are intended for sales in Europe.



This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the EU countries. Please do not throw the equipment into the domestic refuse.

Please use the return and collection systems available in your country for the disposal of this product.



This symbol [crossed-out wheeled bin Directive 2006/66/EC Annex II] indicates separate collection of waste batteries in the EU countries. Please do not throw the batteries into the domestic refuse. Please use the return and collection systems available in your country for the disposal of the waste batteries.

Use Only Dedicated Rechargeable Battery and Battery Charger

We strongly recommend that you use only the genuine Olympus dedicated rechargeable battery and battery charger with this camera. Using a non-genuine rechargeable battery and/or battery charger may result in fire or personal injury due to leakage, heating, ignition or damage to the battery. Olympus does not assume any liability for accidents or damage that may result from the use of a battery and/or battery charger that are not genuine Olympus accessories.

Provisions of warranty

- 1 If this product proves to be defective, although it has been used properly (in accordance with the written Safety Precautions and Operating instructions supplied with it), during a period of two years from the date of purchase from an authorized Olympus distributor within the business area of Olympus Imaging Europa GmbH as stipulated on the website: <http://www.olympus.com> this product will be repaired, or at Olympus's option replaced, free of charge. To claim under this warranty the customer must take the product and this Warranty Certificate before the end of the two year warranty period to the dealer where the product was purchased or any other Olympus service station within the business area of Olympus Imaging Europa GmbH as stipulated on the website: <http://www.olympus.com>. During the one year period of the World Wide Warranty the customer may turn the product in at any Olympus service station. Please notice that not in all countries such Olympus service station exists.

- 2 The customer shall transport the product to the dealer or Olympus authorized service station at his own risk and shall be responsible for any costs incurred in transporting the product.
- 3 This warranty does not cover the following and the customer will be required to pay repair charge, even for defects occurring within the warranty period referred to above.
 - a. Any defect that occurs due to mishandling (such as an operation performed that is not mentioned in the Safety Precautions or other sections of the instructions, etc.)
 - b. Any defect that occurs due to repair, modification, cleaning, etc. performed by anyone other than Olympus or an Olympus authorized service station.
 - c. Any defect or damage that occurs due to transport, a fall, shock, etc. after purchase of the product.
 - d. Any defect or damage that occurs due to fire, earthquake, flood damage, thunderbolt, other natural disasters, environmental pollution and irregular voltage sources.
 - e. Any defect that occurs due to careless or improper storage (such as keeping the product under conditions of high temperature and humidity, near insect repellents such as naphthalene or harmful drugs, etc.), improper maintenance, etc.
 - f. Any defect that occurs due to exhausted batteries, etc.
 - g. Any defect that occurs due to sand, mud, etc. entering the inside of the product casing.
 - h. When this Warranty Certificate is not returned with the product.
 - i. When any alterations whatsoever are made to the Warranty Certificate regarding the year, month and date of purchase, the customer's name, the dealer's name, and the serial number.
 - j. When proof of purchase is not presented with this Warranty Certificate.

- 4 This Warranty applies to the product only; the Warranty does not apply to any other accessory equipment, such as the case, strap, lens cap and batteries.
- 5 Olympus's sole liability under this warranty shall be limited to repairing or replacing the product. Any liability for indirect or consequential loss or damage of any kind incurred or suffered by the customer due to a defect of the product, and in particular any loss or damage caused to any lenses, films, other equipment or accessories used with the product or for any loss resulting from a delay in repair or loss of data, is excluded. Compelling regulations by law remain unaffected by this.

Notes regarding warranty maintenance

- 1 This warranty will only be valid if the Warranty Certificate is duly completed by Olympus or an authorized dealer or other documents contain sufficient proof. Therefore, please make sure that your name, the name of the dealer, the serial number and the year, month and date of purchase are all completed or the original invoice or the sales receipt (indicating the dealer's name, the date of purchase and product type) is attached to this Warranty Certificate. Olympus reserves the right to refuse free-of-charge service if neither Warranty Certificate is completed nor the above document is attached or if the information contained in it is incomplete or illegible.
- 2 Since this Warranty Certificate will not be re-issued, keep it in a safe place.
 - * Please refer to the list on the website: <http://www.olympus.com> for the authorized international Olympus service network.

Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- xD-Picture Card™ is a trademark.
- microSD is a trademark of the SD Association.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design rule for Camera File system/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

SPECIFICATIONS

Camera

Product type	: Digital camera (for shooting and displaying)
Recording system	
Still pictures	: Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))
Applicable standards	: Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge
Sound with still pictures	: Wave format
Movie	: AVI Motion JPEG
Memory	: Internal memory xD-Picture Card (16 MB to 2 GB) (TypeH/MM+, Standard) microSD card/microSDHC card (when using the supplied microSD Attachment)
No. of effective pixels	: 12,000,000 pixels
Image pickup device	: 1/2.3" CCD (primary color filter), 12,700,200 pixels (gross)
Lens	: Olympus lens 6.7 to 20.1 mm, f3.5 to 5.0 (equivalent to 38 to 114 mm on a 35 mm camera)
Photometric system	: Digital ESP metering, spot metering system
Shutter speed	: 4 to 1/1000 sec.
Shooting range	: 0.5 m (1.6 ft.) to ∞ (W/T) (normal) 0.2 m (0.7 ft.) to ∞ (W), 0.3 m (1.0 ft.) to ∞ (T) (macro mode) 0.07 m (2.8 in.) to 0.5 m (1.6 ft.) (W only) (super macro mode)
Monitor	: 2.7" TFT color LCD display, 230,000 dots
Connector	: Multi-connector (DC-IN jack, USB connector, AV OUT jack)
Automatic calendar system	: 2000 up to 2099
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (operation)/ -20°C to 60°C (-4°F to 140°F) (storage)
Humidity	: 30% to 90% (operation)/10% to 90% (storage)
Power supply	: One Olympus lithium ion battery (LI-42B/LI-40B) or Olympus AC adapter
Dimensions	: 89.0 mm (W) × 55.5 mm (H) × 20.0 mm (D) (3.5 × 2.2 × 0.8 in.) (excluding protrusions)
Weight	: 105 g (3.7 oz) (excluding battery and card)

Lithium ion battery (LI-42B)

Product type	: Lithium ion rechargeable battery
Standard voltage	: DC 3.7 V
Standard capacity	: 740 mAh
Battery life	: Approx. 300 full charges (varies on usage)
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (charging)/ -10°C to 60°C (14°F to 140°F) (operation)/ -20°C to 35°C (-4°F to 95°F) (storage)
Dimensions	: 31.5 mm (W) × 39.5 mm (H) × 6.0 mm (D) (1.2 × 1.6 × 0.2 in.)
Weight	: Approx. 15 g (0.5 oz)

Battery charger (LI-41C)


Model No.	: LI-41CAA/LI-41CAB/LI-41CBA/LI-41CBB
Power requirements	: AC 100 to 240 V (50/60 Hz)
Output	: DC 4.2 V, 600 mA
Charging time	: Approx. 2 hours (when charging the supplied LI-42B battery)
Operating environment	
Temperature	: 0°C to 40°C (32°F to 104°F) (operation)/ -20°C to 60°C (-4°F to 140°F) (storage)
Dimensions	: 62.0 mm (W) × 23.5 mm (H) × 90.0 mm (D) (2.4 × 0.9 × 3.5 in.)
Weight	: Approx. 65 g (2.3 oz)

microSD Attachment



Product type	: Attachment for microSD
Operating Environment	
Temperature	: -10°C to 40°C (14°F to 104°F) (operation)/ -20°C to 65°C (-4°F to 149°F) (storage)
Humidity	: 95% and below (operation)/85% and below (storage)
Dimensions	: 25.0 mm (W) × 20.3 mm (H) × 1.7 mm (D) (1.0 × 0.8 × 0.07 in.) (Handle: 2.2 mm (0.09 in.))
Weight	: Approx. 0.9 g (0.03 oz)

Design and specifications subject to change without notice.





A

AC adapter	53
AF MODE	27
ALL (BEAUTY FIX)	31
ALL (PERFECT FIX)	31
ALL INDEX	42
ALL PRINT	42
All-frame reservation 	45
AUTO (FILE NAME)	38
AUTO (ISO)	26
AUTO (WB)	26
AV cable	2, 40




B

BACKUP	36
Battery	2, 11, 48, 51, 52
Battery charger	2, 52
BEAUTY FIX 	31
BEEP	37
Black & white	32
 mode	18

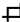


C

CALENDAR	33
Calendar view	23
CAMERA MENU 	25
Card	11, 12, 53
CLEAR SKIN	31
Close-up view	23
Cloudy day 	26
COLOR 1/2/3	37
COLOR EDIT	32
COMBINE IN CAMERA 1/2	29
COMBINE IN PC	30
COMPRESSION	25
Connecting	
TV	40
PC	46
Printer	41
Cropping (EDIT) 	32
Cropping (PRINT INFO) 	43
CUSTOM PRINT	42



D

DATE (Date print)	45
DATE (PRINT INFO)	43
Date and time 	13, 39
Digital image stabilization mode 	17
DIGITAL ZOOM	27
Direct printing	41
DIS EDIT (PERFECT FIX)	31
DIS MOVIE MODE (CAMERA MENU)	28
Display language 	13, 36
DPOF	44
DRAMATIC EYE	31
DRIVE	26
DUALTIME	39

E

EASY PRINT	41
EDIT (Movie)	33
EDIT menu 	32, 33
ERASE	
Single image erase	16
ERASE 	35
ALL ERASE	35
SEL. IMAGE	35
ESP	27
ESP/ 	27
Exposure compensation	20


F

FACE DETECT	27
FACE FOCUS	33
FILE NAME	38
FILE NAME (PRINT INFO)	43
FILL IN	20
FINE ZOOM	26
Flash	20
FLASH AUTO	20
FLASH OFF 	20
Fluorescent lamp 1/2/3 	26
FORMAT	36
FRAME RATE	25
FUNC menu	22

H

High speed sequential shooting 1/2 26



I

iAUTO mode 17
IESP 27
Image information display 23
IMAGE QUALITY  25
IMAGE SIZE 25
INDEX 33
Index view 23
Information display change 23
Internal memory 11, 54
ISO 26


L

LIGHTING FIX 31

M

MACRO 21
MEMORY FORMAT 36
MENU COLOR 37
Menu guide 3
microSD Attachment 2, 12, 55
microSD card/microSDHC card 12, 55
Monitor brightness  39
MOVIE mode  19
Movie playback 15
MULTI PRINT 42
Multi window 22









N

NEW FILE 33
NO (Date print) 45
NORMAL (MENU COLOR) 37
NTSC 40
Number of prints (PRINT INFO)  43


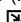
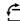
O

OLYMPUS Master 2 2, 28, 46
Optical zoom 20
OVERWRITE 33





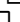


P



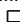

PAL 40
PANORAMA  28
Panorama playback 24
PC (USB) 46
PERFECT FIX  31
PictBridge 41
PIXEL MAPPING 38
PLAYBACK MENU  34
Playback mode  15
Playback mode top menu 5
P mode 14
Power on   36
POWER SAVE 40
PRINT 42
PRINT ORDER  35, 42, 44
Protecting images  34
PW ON SETUP 37

R


REC VIEW 38
REDEYE 20
REDEYE FIX 31
RESET  30
RESET (FILE NAME) 38
Resize  32
Rotating images  34

S

Saturation (hard/soft) 32
SAVE SETTINGS 36
SCN mode 17
SCREEN 37
Self-timer 21
Sepia 32
Sequential shooting  26
SETUP menu  36
SHADOW ADJ 22, 28
Shooting information display 21
Shooting mode top menu 5
SHUTTER SOUND 37
SILENT MODE  40
Single-frame reservation  44
Single-frame shooting  26
SLIDESHOW  31
Sound recording  27, 34
SOUND SETTINGS 37

SPARKLE EYE	31
Spot  (ESP/ )	27
SPOT (AF MODE)	27
Strap	2, 10
Sunny day 	26
SUPER MACRO	21
SWITCH SHOOTING MODES 	28


T

TIME (Date print)	45
Tungsten light 	26


U

USB cable	2, 41, 46
-----------------	-----------

V

VIDEO OUT	40
VOLUME  (SOUND SETTINGS)	37
VOLUME (PW ON SETUP)	37

W

Warning sound 	37
WB	26

X

xD-Picture Card	11, 53
-----------------------	--------

OLYMPUS®

<http://www.olympus.com/>

OLYMPUS IMAGING CORP.

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo, Japan

OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

Technical Support (USA)

24/7 online automated help: <http://www.olympusamerica.com/support>

Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8am to 10pm

(Monday to Friday) and 9am to 5pm (Sunday) ET

<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at: <http://www.olympusamerica.com/digital>

OLYMPUS IMAGING EUROPA GMBH

Premises: Wendenstrasse 14-18, 20097 Hamburg, Germany

Tel: +49 40-23 77 3-0 / Fax: +49 40-23 07 61

Goods delivery: Bredowstrasse 20, 22113 Hamburg, Germany

Letters: Postfach 10 49 08, 20034 Hamburg, Germany

European Technical Customer Support:

Please visit our homepage <http://www.olympus-europa.com>

or call our TOLL FREE NUMBER* : **00800 - 67 10 83 00**

for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg, Netherlands,
Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom

* Please note some (mobile) phone services providers do not permit access or request an
additional prefix to +800 numbers.

For all European Countries not listed and in case that you can't get connected

to the above mentioned number, please make use of the following

CHARGED NUMBERS: **+49 180 5 - 67 10 83** or **+49 40 - 237 73 4899**

Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday)