

---

# KODAK PLAYSPORT Video Camera



## Extended user guide

Model Zx3

[www.kodak.com](http://www.kodak.com)

For interactive tutorials:

[www.kodak.com/go/howto](http://www.kodak.com/go/howto)

For help with your camera:

[www.kodak.com/go/support](http://www.kodak.com/go/support)

---

# Kodak

Eastman Kodak Company  
Rochester, New York 14650  
© Kodak, 2009

All screen images are simulated.

Kodak and PlaySport are trademarks of Eastman Kodak Company.

ArcSoft and Medialmpression are trademarks of ArcSoft, Inc.

Apple, iLife, iWeb, MobileMe, iTunes, iPhone, iPod, and Apple TV are trademarks of Apple, Inc.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Facebook and the Facebook logo are trademarks of Facebook, Inc.


YouTube and the YouTube logo are trademarks of YouTube, LLC.

4H6810\_en



## Front view


 
## Back view

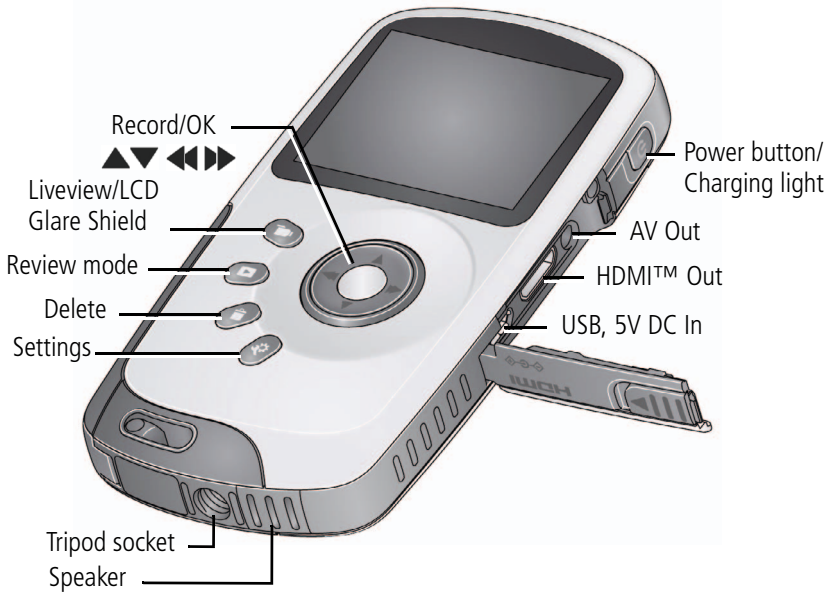

# Understanding the status icons

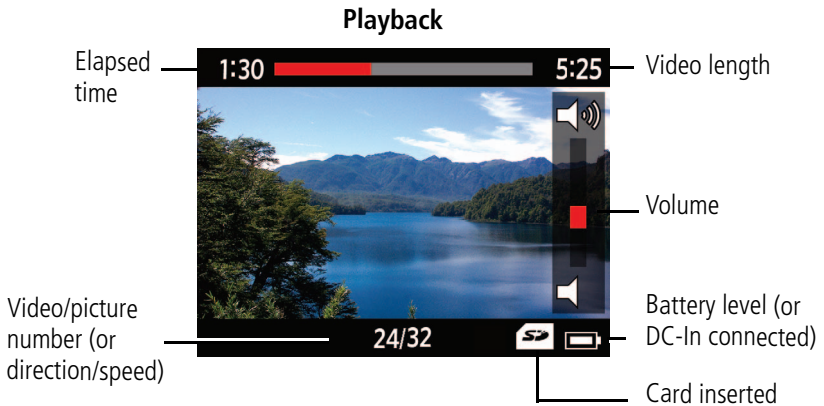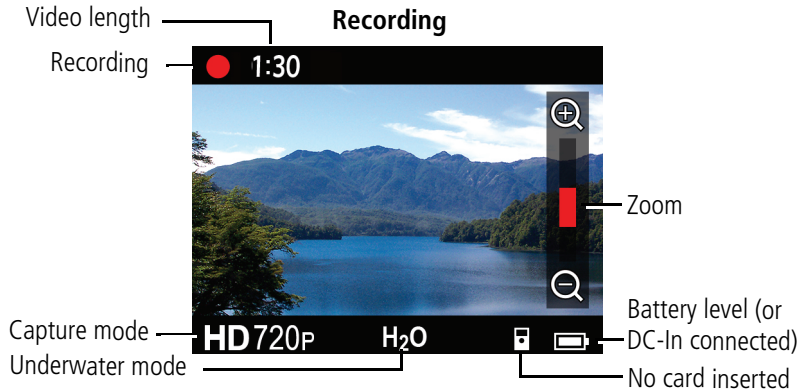  

See important Alert icons [see page 14](#)

---

# Table of contents

 
<b>1</b>	<b>Setting up your camera</b>	<b>1</b>
	Charging the battery (approximately 2 hours)	1
	Charging using external charger or USB	2
	Inserting an SD or SDHC Card	3
	Connecting a strap	4
<b>2</b>	<b>Using your camera</b>	<b>5</b>
	Turning on the camera	5
	Setting the date/time	5
	Recording videos, taking pictures	6
	Playing videos	7
	Transferring, editing, sharing online	8
	Deleting videos/pictures	9
	Viewing on a TV	10
	Accessing the settings menu	11
	Using the camera under water	12
	Using the optional remote control	13
<b>3</b>	<b>Getting help</b>	<b>14</b>
	Troubleshooting	14
	Getting help on the Web	16
<b>4</b>	<b>Appendix</b>	<b>17</b>
	Specifications	17
	Safety	18
	Care and maintenance	20
	Limited warranty	20
	Regulatory compliance	22

# 1

## Setting up your camera

### Charging the battery (approximately 2 hours)


Use this procedure to charge the battery or power the camera with AC power.

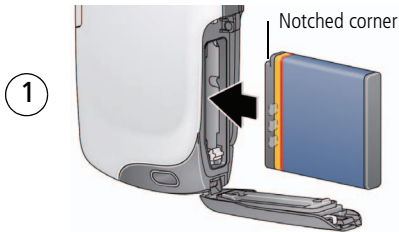

Charge the battery whenever necessary.

Do not charge the battery near water.

 2 Turn off the camera, then connect it.

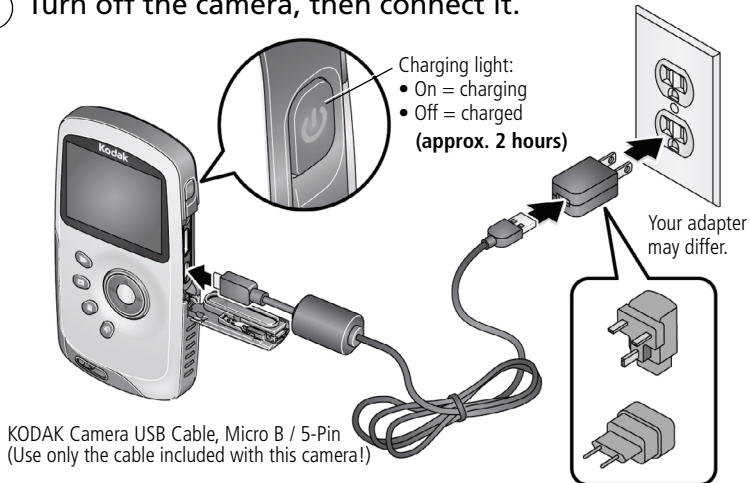


**Keep the camera watertight** Tightly close all doors

**See other charging solutions** [see page 2](#)

## Charging using external charger or USB

 
Do not charge the battery near water.

### Charger

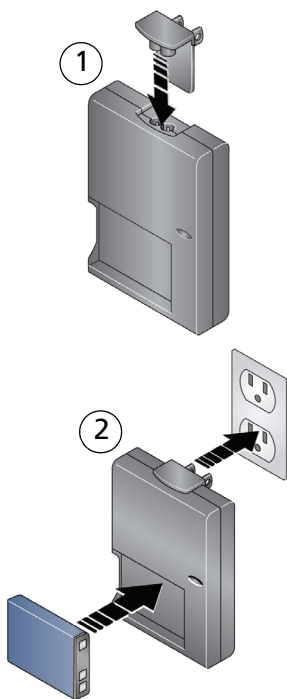

### USB

 Connect the camera, then turn it off to start charging.

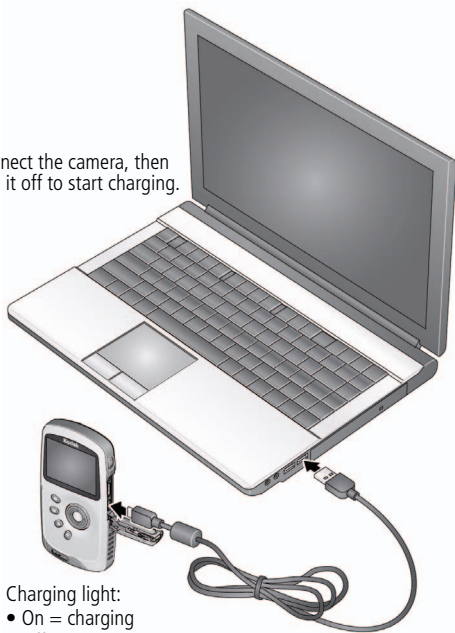

Charging light:  
• On = charging  
• Off = charged  
(**approx. 4 hours**)

KODAK Camera USB Cable, Micro B / 5-Pin (Use only the cable included with this camera!)

---

**Keep the camera watertight**

Tightly close all doors

---

**Purchase extra KLIC-7004 batteries**

[www.kodak.com/go/playsportaccessories](http://www.kodak.com/go/playsportaccessories)

---



 
## Inserting an SD or SDHC Card

Your camera has limited internal memory—perfect for a few practice videos/pictures. We strongly suggest that you purchase an SD or SDHC Card to store more. (Maximum supported card size is 32 GB.)



### CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the video/pictures, the card, or the camera.

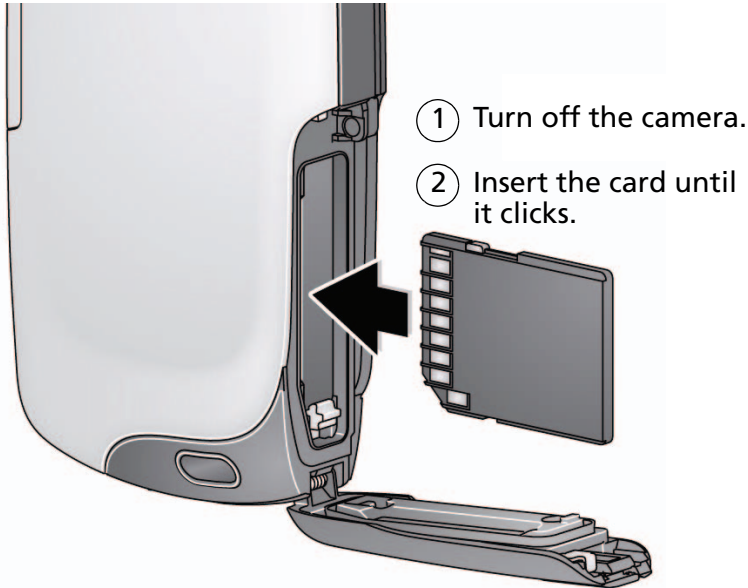

---

**Keep the camera watertight** Tightly close all doors

---

**Purchase accessories** [www.kodak.com/go/playsportaccessories](http://www.kodak.com/go/playsportaccessories)

---

## Connecting a strap



## 2

# Using your camera

## Turning on the camera



## Setting the date/time



At the prompt, press OK.

▲▼ to change current field.

◀▶ for previous/next field.

OK to accept.

---








Change date/time later [see page 11](#)

---



## Recording videos, taking pictures



When you turn on the camera, it's ready to record.

OK	Start/stop recording
	In Liveview, press to cycle LCD Glare Shield filters  →  →  Normal      High Saturation      B&W (black & white) NOTE: The LCD Glare Shield must be turned on in the Settings menu. See page 11.
	In Review or on a menu, press to go to Liveview
	Zoom in/out
	Change recording modes

### Recording modes

1080p	720p/60 fps	720p	WVGA	Still
best for viewing on an HDTV	best for sports and action	best for viewing on a computer, sharing on YouTube™ and Facebook  	best for conserving memory card space	for 5 MP pictures

**Purchase extra cards, batteries**



[www.kodak.com/go/playsportaccessories](http://www.kodak.com/go/playsportaccessories)








**Use the optional remote control**

[see page 13](#)

## Playing videos



- ①  Review
- ②  Previous/next video
- ③ **OK** Play/Pause  
(Press and hold to Stop)

	Volume
	Delete video/pictures
	While playing, play in slow motion. While paused, press for different views:    1-up      Thumbnail view      Timeline view
	While playing, fast-forward/rewind 2X/4X/8X/16X. While paused, go forward/reverse one frame.

Use the optional remote control [see page 13](#)

## Transferring, editing, sharing online

- 1 Connect the camera.  
(It turns on automatically.)
- 2 If this is the first time you've connected to this WINDOWS OS-based computer, follow the prompts to install ARCSOFT MEDIAIMPRESSION for KODAK Software. You can then transfer and share videos.



KODAK Camera USB Cable, Micro B / 5-Pin  
(Use only the cable included with this camera!)

Videos and pictures can be used with the APPLE ILIFE suite of products to edit, personalize, make DVDs, share via YouTube and APPLE Online Sharing Services (IWEB and MOBILEME), or with ITUNES for syncing with IPHONE, IPOD, or APPLE TV.

---

Get ArcSoft product support

[www.arcsoft.com/support](http://www.arcsoft.com/support)

---


See HD video system requirements

 
[www.kodak.com/go/HDsysreq](http://www.kodak.com/go/HDsysreq)

---

## Deleting videos/pictures



- ①  Review
- ②  Previous/next
- ③  Delete
- ④  to highlight a choice, then press OK

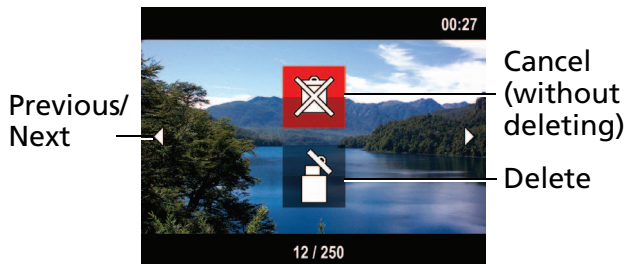


## Viewing on a TV

### HDMI Cable


 
### AV Cable

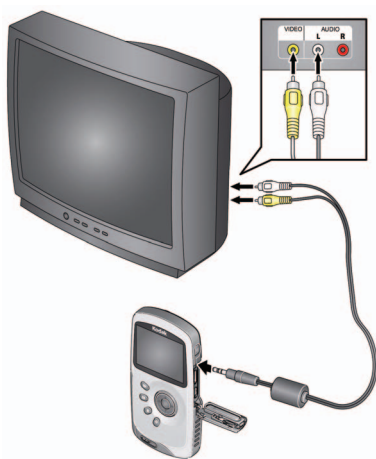

Set TV input to match your connection.  
For stereo playback, use the HDMI cable.

---

**Set Video Out (NTSC/PAL)**

[see page 11](#)

---

**Power the camera by AC power**

[see page 1](#)

---

**Purchase accessories**

 
[www.kodak.com/go/playsportaccessories](http://www.kodak.com/go/playsportaccessories)

---



## Accessing the settings menu

Press the Settings button to access the Settings menu.

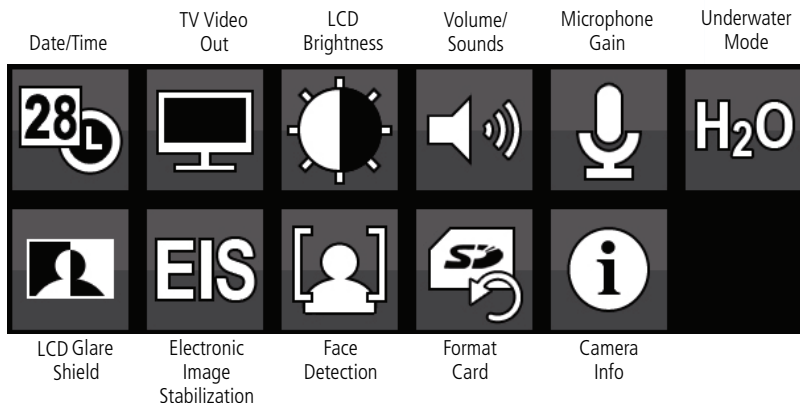

**Date/Time**—Set the date/time.

**TV Video Out**—Choose the setting (NTSC, PAL) for your region.

**LCD Brightness**—Set LCD brightness. (Auto lets the camera set it for you.)

**Volume/Sounds**—Turn sounds on/off. (When off, the Video Recording light is also turned off.)

**Microphone Gain**—Choose sensitivity of the internal microphone.

**Underwater Mode**—Turn on if taking videos/pictures under water. (See page 12.)

**LCD Glare Shield**—Turn on to improve LCD viewability in bright, outdoor conditions.

**Electronic Image Stabilization**—Turn on to reduce video blur.

**Face Detection**—Turn face detection on/off.




**Format Card**—Erase, format the card.


**Camera Info**—View firmware and ARCSOFT Software versions.

## Using the camera under water
 
### CAUTION:

The camera does not float. To prevent it from sinking, secure it with the strap. To keep the camera waterproof, tightly close all doors. Do not open doors in water or when hands are wet. Waterproof integrity may be compromised if the camera is dropped. For more information, [see page 20](#).

- 1 Press the Settings button, then choose Underwater Mode .
- 2 Press  to choose the checkmark, then press OK.
- 3 Press the Liveview  button, then take videos/pictures as you normally do.
- 4 When finished taking underwater videos/pictures, turn Underwater Mode off.

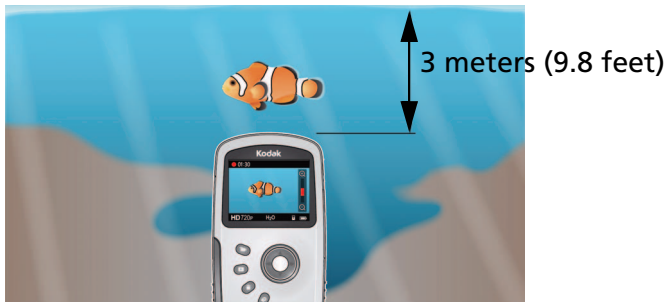

### After using the camera in water

- Wipe off water or debris. If the camera was used in chemically treated water or saltwater, rinse it in fresh water, then use a soft towel to dry it.
- If water has entered the camera, remove the battery/card. Allow camera to air-dry for at least 24 hours before using.

 
## Using the optional remote control

Use the optional remote control just as you would use the on-camera buttons—to start/stop recording, review videos and pictures, and more. Go to [www.kodak.com/go/playsportaccessories](http://www.kodak.com/go/playsportaccessories).

### Remove the tab to activate the battery





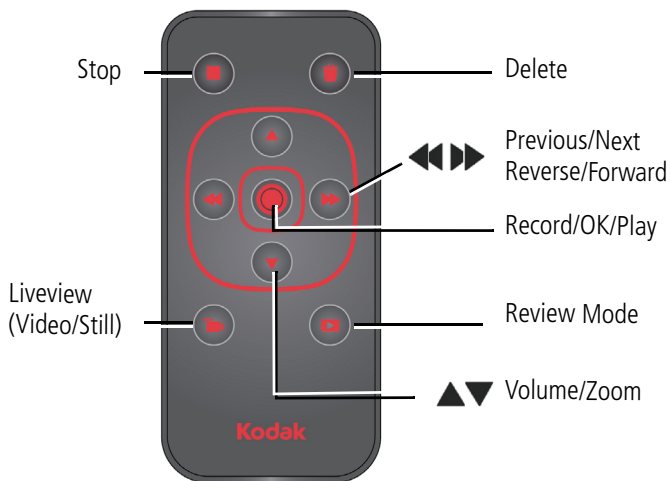




### Using the remote control



# 3

## Getting help

### Troubleshooting

Icon	Solution
	<ul style="list-style-type: none"><li>■ Low battery. Charge the battery.</li></ul>
 	<ul style="list-style-type: none"><li>■ Card or internal memory is nearly full. Transfer videos/pictures to your computer.</li><li>■ Corrupt or unusable card. Transfer videos/pictures to your computer, then format (erase) the card in the camera or card reader.</li></ul>
	<ul style="list-style-type: none"><li>■ Internal memory is full. Transfer videos/pictures to your computer, or use an SD/SDHC card to take more videos/pictures.</li></ul>
	<ul style="list-style-type: none"><li>■ Card is full. Transfer videos/pictures to your computer or use another card.</li></ul>
	<ul style="list-style-type: none"><li>■ Unrecognized file. Transfer videos/pictures to your computer.</li></ul>
	<ul style="list-style-type: none"><li>■ An error has occurred. Transfer videos/pictures to your computer, then format (erase) the card.</li></ul>

Problem	Solution
Camera will not turn on.	<ul style="list-style-type: none"> <li>■ Ensure that the battery is correctly inserted and charged.</li> <li>■ Ensure the camera is clean and dry. (If it's wet inside, let it dry for 24 hours.)</li> </ul>
LCD is not clear.	<ul style="list-style-type: none"> <li>■ Choose an LCD Glare Shield (<a href="#">page 11</a>).</li> </ul>
LCD is B&W.	<ul style="list-style-type: none"> <li>■ Choose a different LCD Glare Shield (<a href="#">page 11</a>).</li> </ul>
Underwater videos are not clear.	<ul style="list-style-type: none"> <li>■ Underwater focus range is 1.33 m (4.4 ft)–infinity</li> </ul>
Videos are choppy or jumpy when played on a computer.	<ul style="list-style-type: none"> <li>■ Use ARCSOFT MEDIAIMPRESSION for KODAK Software for video playback (<a href="#">see page 8</a>).</li> <li>■ Ensure that the computer system requirements are met. Go to <a href="http://www.arcsoft.com/support">www.arcsoft.com/support</a>.</li> </ul>
Videos are blurry.	<ul style="list-style-type: none"> <li>■ Ensure that the lens is clean.</li> <li>■ Ensure that the subject is at least 1 m (3.3 ft) from the lens.</li> <li>■ Turn on Electronic Image Stabilization (<a href="#">see page 11</a>).</li> <li>■ When using a tripod, turn off Electronic Image Stabilization.</li> </ul>
Videos do not play on a TV.	<ul style="list-style-type: none"> <li>■ Ensure that an HDMI or AV Cable is properly connected directly to the TV input (<a href="#">see page 10</a>).</li> <li>■ Ensure that the TV menu settings are correct for an HDMI or AV connection.</li> <li>■ Ensure that the Video Out is set correctly (<a href="#">see page 11</a>).</li> </ul>
Videos are in low resolution and/or are not saved.	<ul style="list-style-type: none"> <li>■ If no card is inserted and the camera is powered by the AC adapter, then videos are taken in low resolution and are not saved. (The camera is in Demo mode.) Insert a card or unplug the AC adapter.</li> </ul>
Camera will not work with optional remote control.	<ul style="list-style-type: none"> <li>■ Ensure that the battery is correctly inserted in the remote control and camera.</li> <li>■ Ensure that the camera infrared receiver (above the lens) and the remote control have an unobstructed path.</li> <li>■ Try a different angle, or move closer.</li> </ul>

Problem	Solution
Solve problems with ARCSOFT Mediaimpression for KODAK Software.	■ Go to <a href="http://www.arcsoft.com/support">www.arcsoft.com/support</a> . (For other applications, go to their support sites.)

NOTE: If problems persist, go to [www.kodak.com/go/support](http://www.kodak.com/go/support) and click Step-by-Step Solutions & Repair.

## Getting help on the Web

### Camera

Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	<a href="http://www.kodak.com/go/playsportsupport">www.kodak.com/go/playsportsupport</a>
See step-by-step solutions and repair information	<a href="http://www.kodak.com/go/itg">www.kodak.com/go/itg</a>
Purchase camera accessories (lenses, cards, etc.)	<a href="http://www.kodak.com/go/playsportaccessories">www.kodak.com/go/playsportaccessories</a>
Download the latest camera firmware and software	<a href="http://www.kodak.com/go/playsportdownloads">www.kodak.com/go/playsportdownloads</a>
See online demonstrations of your camera	<a href="http://www.kodak.com/go/howto">www.kodak.com/go/howto</a>
Register your camera	<a href="http://www.kodak.com/go/register">www.kodak.com/go/register</a>
Chat, email, write, or phone Kodak (Chat not available in all languages.)	<a href="http://www.kodak.com/go/contact">www.kodak.com/go/contact</a>

### Software

Get information on ARCSOFT Software	<a href="http://www.arcsoft.com/support">www.arcsoft.com/support</a>
Get help with the WINDOWS OS and working with digital pictures	<a href="http://www.kodak.com/go/pcbasics">www.kodak.com/go/pcbasics</a>

# 4

## Appendix


### Specifications

**Image Sensor**—1/2.5-type, 5 MP, CMOS

**Lens**—5.5 mm, f/2.8; 35 mm equivalent: 48 mm (1080p), 36 mm (720p/60 fps, 720p, WVGA), 36 mm (Still)

**Zoom**—4X digital

**LCD**—5 cm (2 in.); 154K pixels

**Image Storage**—128 MB internal memory (approximately 20.3 MB available for image storage. 1 MB equals one million bytes); optional SD/SDHC Card  (The SD logo is a trademark of the SD Card Association.) Maximum supported size: 32 GB SDHC.

**Focusing System**—Fixed

**Focus Range**—Normal: 1 m (3.3 ft)—infinity; Underwater: 1.33 m (4.4 ft)—infinity

**White Balance**—Auto

**Exposure**—Auto

**File Format**—Still: JPEG with Kodak EXIF; Video: H.264 (MOV);  
Audio: MPEG-4 AAC LC

- HD 1080 (16:9) 30 fps: 1920 x 1080 @ 30 fps
- HD 720 (16:9) 60 fps: 1280 x 720 @ 60 fps
- HD 720 (16:9) 30 fps: 1280 x 720 @ 30 fps
- WVGA (16:9) 30 fps: 848 x 480 @ 30 fps
- Still (16:9): 5 MP picture

**Shutter Speed**—Auto

**Image stabilization**—Electronic, in all video modes

**Microphone**—Mono

**ISO**—Automatically set (50–800)

**Speaker**—Yes

**I/O Interface**—USB 2.0 (high speed); component output; HDMI

**Tripod Mount**—1/4-in. standard

**Power**—KODAK 5V AC adapter, or KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7004

**Battery life**—Approximately 90 minutes in video recording mode, 720p @ 30 fps

**Waterproof capability**—Conforms to IEC60529 IPX8, up to 3 meters (9.8 ft)

**Dust resistance**—Conforms to IEC60529 IP6X

**Size**—112.5 x 58 x 19.5 mm (4.4 x 2.3 x 0.8 in.)

**Weight**—145 g (5.1 oz) with battery and card

**Operating temperature**—0–40° C (32–104° F); do not expose camera to higher temperatures.

## Safety



### CAUTION:

**Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.**

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, go to [www.kodak.com/go/playsportaccessories](http://www.kodak.com/go/playsportaccessories).



- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing batteries, allow them to cool; they may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the batteries when the product is stored. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Go to [www.kodak.com/go/reach](http://www.kodak.com/go/reach) for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH).
- Dispose of batteries according to local and national regulations. Go to [www.kodak.com/go/kes](http://www.kodak.com/go/kes).
- For more information, go to [www.kodak.com/go/batteries](http://www.kodak.com/go/batteries).

## Care and maintenance

- Before inserting or removing the card/battery, make sure your hands, the camera, and the card/battery are completely dry.
- In water, do not use below a depth of 3 meters (9.8 ft).
- Do not open/close camera doors in water.
- The camera will not float. Use the strap at all times.
- If water has entered the camera, remove the battery/card. Allow all components to air-dry for at least 24 hours before using the camera.
- If the camera was used in chemically treated water or saltwater, rinse it in fresh water, then use a soft towel to dry it.
- Wipe off dirt or sand from the door seals—debris could compromise the seal and cause a leak in water.
- Do not subject the camera to temperatures lower than 0 (32° F) or higher than 40° C (104° F) for an extended time—the integrity of the seals may be compromised. Wait until camera reaches operating temperatures before using.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of KODAK Products for more information.
- For camera disposal or recycling information, contact your local authorities. In the US, go to the Electronics Industry Alliance Web site at [www.eiae.org](http://www.eiae.org) or go to Kodak at [www.kodak.com/go/support](http://www.kodak.com/go/support).

## Limited warranty

Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty

period specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair.

### **Limited warranty coverage**

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

### **Limitations**

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be the length of the express warranty period specified on your KODAK Product packaging. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this

product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

## **Your rights**

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

## **Outside the United States and Canada**

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

# **Regulatory compliance**

## **FCC compliance and advisory**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the

receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. The KODAK Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CE

Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

## Waste Electrical and Electronic Equipment labeling/battery disposal



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or go to [www.kodak.com/go/recycle](http://www.kodak.com/go/recycle). Product weight: 145 g (5.1 oz) with battery and card.



## Korean Li-Ion Regulatory

### 취급상의 주의사항

- < 경고 > 발열, 화재, 폭발 등의 위험을 수반할 수 있으니 다음 사항을
- a) 육안으로 식별이 가능할 정도의 부풀음이 발생한 전지는 위험할 수 있으므로 제조자 또는 판매자로 즉시 문의할 것
  - b) 지정된 정품 충전기만을 사용할 것
  - c) 화기에 가까이 하지 말 것 (전자레인지에 넣지 말 것)
  - d) 여음철 자동차 내부에 방치하지 말 것
  - e) 찜질방 등 고온다습한 곳에서 보관, 사용하지 말 것
  - f) 이불, 전기장판, 카펫 위에 올려 놓고 장시간 사용하지 말 것
  - g) 전원을 켜 상태로 밀폐된 공간에 장시간 보관하지 말 것
  - h) 전지 단자에 목걸이, 동전, 열쇠, 시계 등 금속 제품이 닿지 않도록 주의할 것
  - i) 휴대 기기, 제조업체가 보증한 리튬2차전지 사용할 것
  - j) 분해, 압착, 관통 등의 행위를 하지 말 것
  - k) 높은 곳에서 떨어뜨리는 등 비정상적 충격을 주지 말 것.
  - l) 60°C 이상의 고온에 노출하지 말 것
  - m) 습기에 접촉되지 않도록 할 것

### 기타정보

- 폐기시험 : 각 지방자치단체의 법규에 의거하여 폐기할 것
- 충전방법에 대한 권고사항
  - 1 본 충전지와 함께 사용할 디지털카메라 사용자 설명서의 충전설명 참조하세요.
  - 2 코닥 정품 충전기 및 카메라에서만 충전하세요. (타사 충전셋 사용 금지)

제조년월 : Y = Year(제조년도의 마지막 숫자), WW = Week(제조년도의 주)

제조년월 표시 예 : 901 = 9 (2009년), 01 (첫째주)

## Korean Class B ITE

B급 기기  
(가정용 방송통신기기)

이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

## VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

## Russian GOST-R



Eastman Kodak  
Company

Фотокамера изготовлена в Китае; остальные элементы - в соответствии с маркировкой.

АЮ-40

## China RoHS

### 环保使用期限 (EPUP)

在中国大陆，该值表示产品中存在的任何危险物质不得释放，以免危及人身健康、财产或环境的时间期限（以年计）。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码摄像机电路板组件	×	○	○	○	○	○
锂电池	×	○	○	○	○	○
USB 交流变压器	×	○	○	○	○	○
电池充电器	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。  
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



HDMI 电缆 (HDMI Cable)



音频/视频电缆 (Audio/Video Cable)



USB 数据线 (USB Cable)

## Canadian DOC statement

**DOC Class B Compliance**—This Class B digital apparatus complies with Canadian ICES-003.

**Observation des normes-Classe B**—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Australian C-Tick



## MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.



---

# Index

## A

about the camera, 11  
accessing settings, 11  
accessories, purchase, 16

## B

battery loading, charging, 1  
brightness, LCD, 11

## C

camera info, 11  
card, loading, 3  
care and maintenance, 20  
cautions, 20  
charging battery, 1  
clock, setting, 5  
connecting  
  strap, 4  
  to a computer, 8  
  to a TV, 10

## D

date setting, 5  
delete pictures, videos, 9  
disposal, recycling, 20

## E

editing videos, 8  
electronic image stabilization, 11  
erase card, 11  
erase pictures, videos, 9

## F

face detection, 11  
FF video, 7  
filters, LCD, 6  
format card, 11

## G

glare shield. LCD, 6

## H

help, Web links, troubleshooting, 14

## I

icons, iii  
image stabilization, 11  
info, 11

## K

Kodak Web sites, 14

## L

LCD brightness, 11  
LCD glare shield, 6  
lens, i  
lens, cleaning, 20  
loading battery, 1

## M

maintenance, camera, 20  
memory card, loading, 3  
menus, 11  
microphone, i

microphone gain, 11  
modes, recording, 6

## O

on/off, 5

## P

playing a video, 7  
playing on a TV, 10

## R

recording, 6  
recording light, i  
recording modes, 6  
recycling, disposal, 20  
remote control, 13  
repair, 16  
rewind video, 7

## S

SD/SDHC card loading, 3  
setting date and time, 5  
setting up the camera, 1  
settings menu, 11  
sharing online, 8  
slow motion playback, 7  
sounds, 11  
speaker, ii  
specifications, 17  
start recording, 6  
status icons, iii  
strap, connecting, 4

## T

taking a video, picture, 6

taking videos, pictures, 6  
telephoto, 6  
time and date, setting, 5  
tips, care, & maintenance, 20  
transferring videos, 8  
troubleshooting, 14  
turning on camera, 5  
TV playback, 10  
TV video out, 11

## U

underwater cautions, 20  
underwater mode, 12  
URLs, Kodak Web sites, 14

## V

video  
delete, 9  
FF, rewind, slow motion, 7  
modes, 6  
out, 11  
playback, 7  
volume, 7  
volume, 11

## W

warranty, 20  
water mode, 12

## Z

zoom, 6