


Camera Operations Guide

Read this first

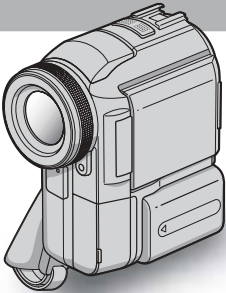

Digital Video Camera Recorder

HANDYCAM

DCR-PC330

 



Read this first

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

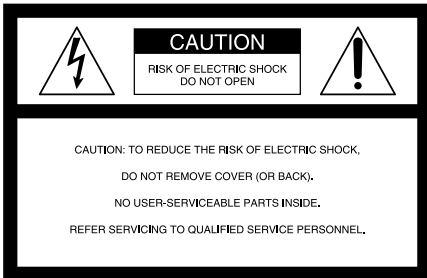

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this Handycam is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

Notice

If static electricity or electromagnetic interference causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the USB cable again.

For customers in the U.S.A. and CANADA

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

RECYCLING LITHIUM-ION BATTERIES



Lithium-Ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrc.org/>

Caution: Do not handle damaged or leaking Lithium-Ion batteries.

“Memory Stick”

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

For customers in the U.S.A.

If you have any questions about this product, you may call:

Sony Customer Information Center 1-800-222-SONY (7669)

The number below is for FCC related matters only.
Regulatory Information

Declaration of Conformity

Trade Name: SONY

Model No.: DCR-PC330

Responsible Party: Sony Electronics Inc.

Address: 680 Kinderkamack Road, Oradell,
NJ 07649 U.S.A.

Telephone No.: 201-930-6972

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DCR-PC330

Serial No. _____

Model No.AC- _____

Serial No. _____

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

 
 
harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult a Sony dealer or an experienced radio/TV technician for help.

The interface cable supplied must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Notes on use

Note on Cassette Memory

 Your camcorder is based on the DV format. You can use only mini DV cassettes in your camcorder. Use of mini DV cassettes with Cassette Memory is recommended as you can use Title search (p. 54), Date search (p. 55), [] TITLE] (p. 74), [] TAPE TITLE] (p. 76).

Cassettes with Cassette Memory are marked with .

Notes on recording

- Before starting to record, test the recording function to make sure the picture and sound are recorded without any problems.
- Compensation for the contents of recordings cannot be provided, even if recording or playback is not possible due to a malfunction of the camcorder, storage media, etc.
- TV color systems differ depending on the country/regions. To view your recordings on a TV, you need an NTSC system-based TV.
- Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the copyright laws.

Notes on the LCD panel, viewfinder, and lens

- The LCD screen and the viewfinder are manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue, or green in color) that appear constantly on the LCD screen and the

→ continued

viewfinder.

These points are normal results of the manufacturing process and do not affect the recording in any way.

- Exposing the LCD screen, the viewfinder, or the lens to direct sunlight for long periods of time may cause malfunctions. Be careful when placing the camera near a window or outdoors.
- Do not aim at the sun. Doing so might cause your camcorder to malfunction. Take pictures of the sun only in low light conditions, such as at dusk.

Note on connecting other device


Before connecting your camcorder to other device such as a VCR or a computer with a USB or i.LINK cable, be sure to insert the connector plug in the proper direction. If you insert the connector plug forcibly in the wrong direction, the terminal may be damaged, or this may cause a malfunction of your camcorder.

Note on using this manual


The images of the LCD screen and the viewfinder used on this manual are captured using a digital still camera, and thus may appear different from what you see.

Notes on using the camcorder


- Hold your camcorder correctly.

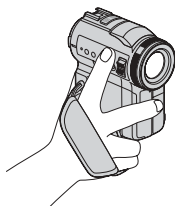

- To ensure a good grip, lower the finger rest and fasten the grip belt as shown in the following illustration.

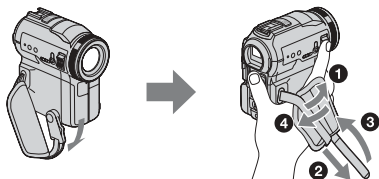


- When you are using the touch panel, place your hand on the back side of the LCD panel to support it. Then, touch the buttons displayed on the screen.

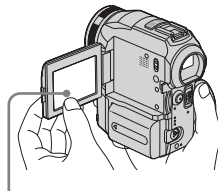


Touch the button on the LCD screen.

- You can change the language to be used for screen display on your camcorder (p. 22).
- Do not hold the camcorder by the following parts.

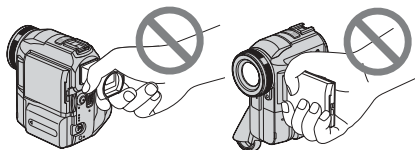

Viewfinder

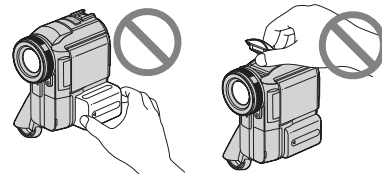

LCD panel



Battery pack

Flash

Table of Contents

 : Features available for tape only.
 : Features available for “Memory Stick” only.

Read this first	2
-----------------------	---



Quick Start Guide

Recording movies on a tape	8
Recording still images on a “Memory Stick”	10






Getting started

Step 1: Checking supplied items	12
Step 2: Charging the battery pack.....	13
Using an outside power source	16
Step 3: Turning the power on.....	16
Step 4: Adjusting the LCD panel and viewfinder.....	17
Adjusting the LCD panel	17
Adjusting the viewfinder	17
Step 5: Setting the date and time.....	18
Step 6: Inserting the recording media	20
Inserting a cassette tape	20
Inserting a “Memory Stick”	21
Step 7: Setting the screen language	22




Recording

Recording movies	23
Recording for a longer time	25
Using zoom	25
Recording in mirror mode	26
Using the self-timer	26
Recording movies fit for breaking into still images 	
– Progressive recording mode	27
Recording still images  – Memory photo recording.....	28
Selecting image quality or size	29
Using the flash	30
Using the self-timer	31
Recording a still image on a “Memory Stick” while recording movies on a tape	32
Adjusting the exposure.....	32
Adjusting the exposure for backlit subjects	32
Fixing the exposure for the selected subject – Flexible spot meter	33
Adjusting the exposure manually	33

→ continued







Recording in dark places – NightShot, etc.....	34
Adjusting the focus.....	35
Adjusting the focus for an off-center subject – SPOT FOCUS	35
Adjusting the focus manually	36
Using supplementary light to focus on a still image  – HOLOGRAM AF	37
Adjusting the frame and focus when recording a still image in darkness  – NightFraming	38
Recording a picture using various effects	38
Fading in and out of a scene  – FADER	38
Using special effects  – Digital effect	40
Overlaying still images on movies on a tape – MEMORY MIX	41
Searching for the starting point 	43
Searching for the last scene of the most recent recording – END SEARCH	43
Searching manually – EDIT SEARCH	44
Reviewing the most recently recorded scenes – Rec review	44

Playback




Viewing movies recorded on a tape 	45
Playing back in various modes	46
Viewing recordings with added effects – Digital effect	47
Viewing recordings on a “Memory Stick” 	48
Playing back in various modes from a “Memory Stick”	49
Various playback functions	50
Magnifying pictures – Tape playback zoom/Memory playback zoom	50
Displaying the screen indicators	51
Displaying the date/time and camera settings data – Data code	51
Playing the picture on a TV	53
Locating a scene on a tape for playback 	54
Searching quickly for a desired scene – Zero set memory	54
Searching for a scene using Cassette Memory – Title search	54
Searching for a scene by date of recording – Date search	55



Advanced operations

Using the Menu

Selecting menu items	56
Using the  (CAMERA SET) menu	
– PROGRAM AE/WHITE BAL./16:9 WIDE, etc.	58
Using the  (MEMORY SET) menu	
– BURST/QUALITY/IMAGE SIZE/ ALL ERASE/NEW FOLDER, etc. .	64
Using the  (PICT. APPLI.) menu	
– PICT. EFFECT/SLIDE SHOW/ FRAME REC/SMTH INT. REC, etc.	68
Using the  (EDIT/PLAY) menu	
– TITLE/TAPE TITLE/SEARCH, etc.	73
Using the  (STANDARD SET) menu	
– REC MODE/MULTI-SOUND/ AUDIO MIX/USB-CAMERA, etc. ..	77
Using the  (TIME/LANGU.) menu	
– CLOCK SET/WORLD TIME, etc.	82
Customizing Personal Menu	83

Dubbing/Editing

Connecting to a VCR or TV	86
Dubbing to another tape 	87
Recording pictures from a VCR or TV	87
Dubbing pictures from a tape to a “Memory Stick”	89
Dubbing still images from a “Memory Stick” to a tape	90
Dubbing selected scenes from a tape	
– Digital program editing	91
Dubbing sound to a recorded tape 	97
Deleting recorded pictures 	99

Changing the image size 	
– Resize	100
Marking recorded images with specific information  – Image protection/ Print mark	101

Troubleshooting

Troubleshooting	103
Warning indicators and messages ...	111

Additional Information

Using your camcorder abroad	115
Usable cassette tapes	116
About the “Memory Stick”	117
About the “InfoLITHIUM” battery pack	119
About i.LINK	121
Maintenance and precautions	122
Specification	125

Quick Reference

Identifying parts and controls	127
Index	134

Refer also to other operating instructions
supplied with your camcorder:

- Editing images with your computer
→ Computer Applications Guide




Quick Start Guide

Recording movies on a tape


1 Attach the charged battery pack to the camcorder.

To charge the battery, see page 13.

- 1 Slide the battery release lever and remove the battery terminal cover.
- 2 Slide the battery pack in the direction of the arrow until it clicks.

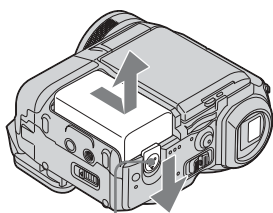


Battery release lever

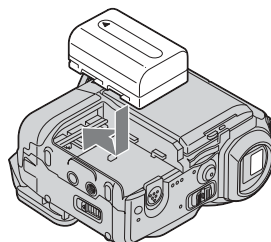


2 Insert a cassette into the camcorder.

- 1 Slide the OPEN/▲EJECT▼ lever in the direction of the arrow to open the lid. The cassette compartment comes out automatically.
- 2 Insert the cassette with its window-side facing up, then push the center of the back of the cassette.
- 3 Press **PUSH**. Close the cassette lid after the cassette compartment slides back in by itself.


OPEN/▲EJECT▼ lever

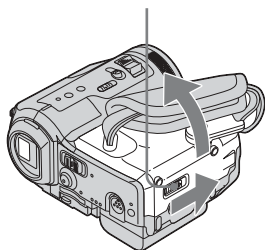

Window-side

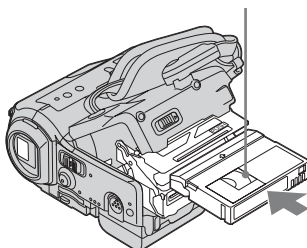


PUSH

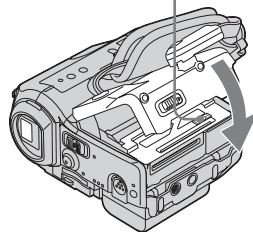

3 Start recording while checking the subject on the LCD screen.

The date and time is not set up in the default setting. To set the date and time, see page 18.


- 1 Remove the lens cap.
- 2 Press OPEN and open the LCD panel.
- 3 While pressing the green button, slide the POWER switch down to light up the CAMERA-TAPE lamp. The power turns on.
- 4 Press START/STOP. Recording starts. To change to standby mode, press START/STOP again.

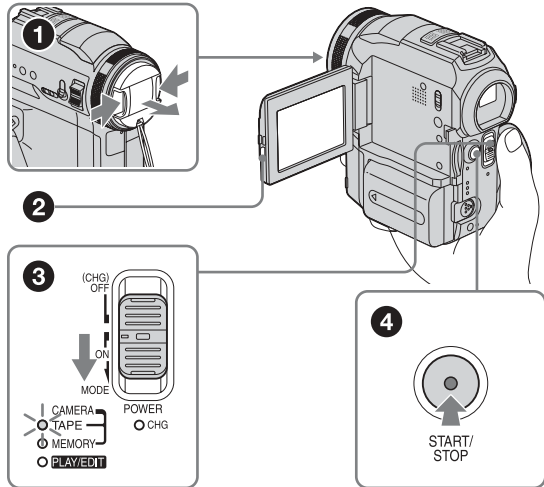


4 View the recorded picture on the LCD screen.

- 1 Slide the POWER switch repeatedly until the PLAY/EDIT lamp lights up.
- 2 Touch (rewind).
- 3 Touch (play) to start the playback. To stop, press .

To turn off the power, slide the POWER switch up to (CHG) OFF.

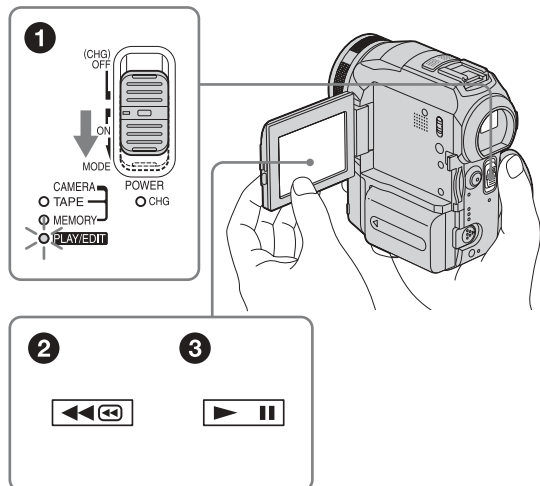

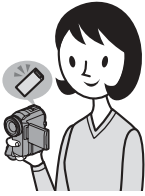


Recording still images on a “Memory Stick”


1 Attach the charged battery pack to the camcorder.

To charge the battery, see page 13.

- 1 Slide the battery release lever and remove the battery terminal cover.
- 2 Slide the battery pack in the direction of the arrow until it clicks.

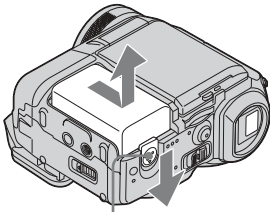


Battery release lever

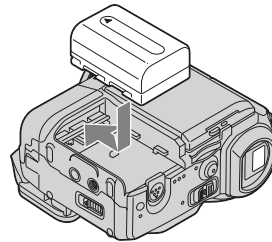

2 Insert a “Memory Stick” into the camcorder.


Insert it so that the ◀ mark is at the bottom left corner. Push in until it clicks.

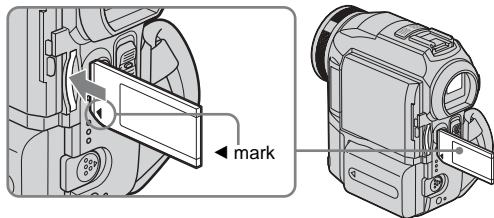

3 Start recording while checking the subject on the LCD screen.

The date and time is not set up in the default setting. To set the date and time, see page 18.


- 1 Remove the lens cap.
- 2 Press OPEN and open the LCD panel.
- 3 While pressing the green button, slide the POWER switch repeatedly until the CAMERA-MEMORY lamp lights up.
The power turns on.
- 4 Press PHOTO lightly.
A short beep sound is heard when the focus is adjusted.
- 5 Press PHOTO fully.
A shutter sound is heard and the still image is recorded.

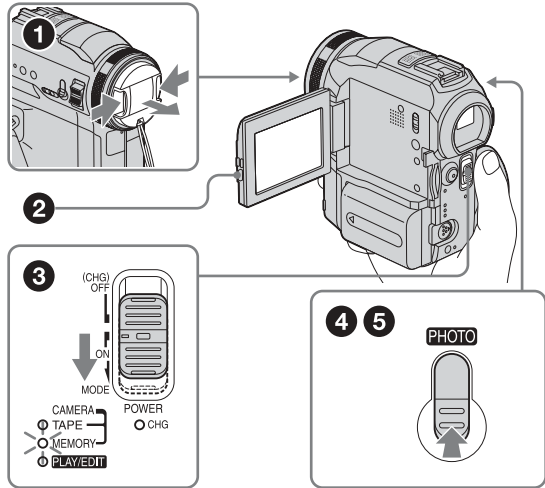

4 View the recorded picture on the LCD screen.

- 1 Slide the POWER switch repeatedly until the PLAY/EDIT lamp lights up.
- 2 Touch PB.
- 3 Touch (next) or (previous) to view images in sequence.

To turn off the power, slide the POWER switch up to (CHG) OFF.

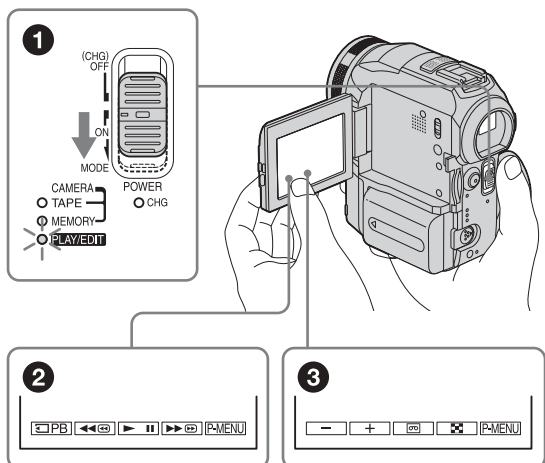


Step 1: Checking supplied items


Make sure you have following items supplied with your camcorder.

The number in parentheses indicates the number of that item supplied.

 
“Memory Stick” 16MB (1)



AC Adaptor (1)

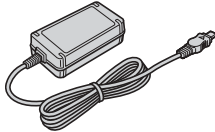


Power cord (1)

 


Lens cap (Large, 1)

 Attached to the camcorder.



Lens hood (1) and Lens cap (Small, 1)

 Use the lens hood to record under strong light, such as under the sun. When you use the lens hood, use the small lens cap. See page 127 on how to replace the lens cap. Note when you use a filter (optional), the shadow of the lens hood may appear on the screen. Also, if you force the lens hood on, you may not be able to remove it again.




Wireless Remote Commander (1)

A button-type lithium battery is already installed.



 A/V connecting cable (1)



USB cable (1)



Rechargeable battery pack NP-FM30 (1)

Battery terminal cover (1)

CD-ROM “SPVD-010 USB Driver” (1)

Cleaning cloth (1)

Camera Operations Guide (This manual) (1)


Computer Applications Guide (1)

Step 2: Charging the battery pack


You can charge the battery by attaching the “InfoLITHIUM” battery pack (M series) to your camcorder.

⚡ Notes


- You cannot use batteries other than the “InfoLITHIUM” battery pack (M series) (p. 119).
- Do not short-circuit the DC plug of the AC Adaptor with any metallic objects. This may cause a malfunction.
- Use a nearby wall outlet when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet immediately if any malfunction occurs.

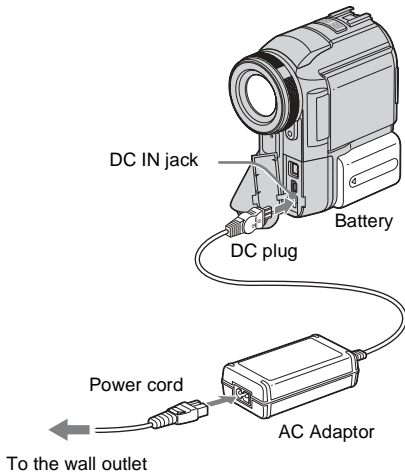


- 1 Slide the battery release lever and remove the battery terminal cover.

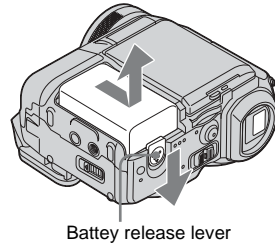

- 2 Attach the battery pack by sliding it in the direction of the arrow until it clicks.

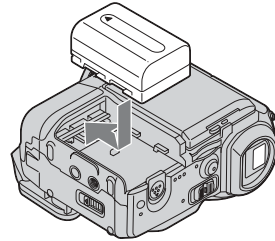

- 3 With the ◀ mark on the DC plug facing the jack cover, connect the AC Adaptor to the DC IN jack on your camcorder.

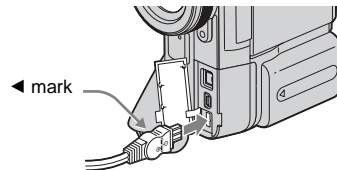


- 4 Connect the power cord to the AC Adaptor.
- 5 Connect the power cord to the wall outlet.


→ continued

6 Slide the POWER switch up to (CHG) OFF.

The CHG (charge) lamp lights up and charging starts.

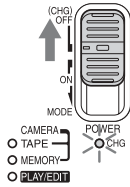


To check the remaining battery – Battery Info

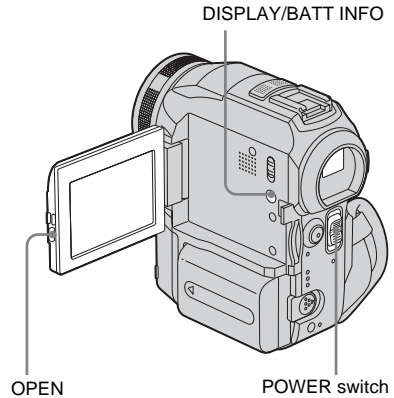

After charging the battery

The CHG (charge) lamp turns off when the battery is fully charged. Disconnect the AC Adaptor from the DC IN jack.

To remove the battery pack

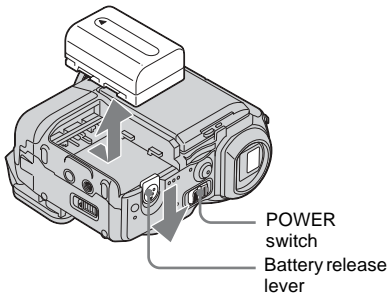

- 1 Set the POWER switch to (CHG) OFF.
- 2 Slide the battery release lever and slide the battery pack out.

⚡ After removing the battery pack


- Always attach the terminal cover to protect the battery terminal. If you do not use the battery pack for a long time, use up the battery pack completely before storing it. See page 120 about storage of the battery pack.

You can check the battery's current charge level and its current remaining recording time both during charging or when the power is turned off.

- 1 Set the POWER switch to OFF (CHG).
- 2 Press OPEN and open the LCD panel.
- 3 Press DISPLAY/BATT INFO.

The battery information appears for about 7 seconds.

Keep the button pressed to view it for about 20 seconds.

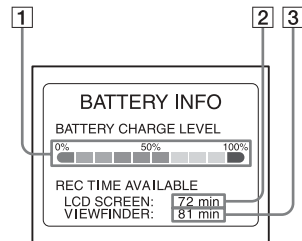

- 1 **Battery charge level:** Displays approximate remaining amount of power left in the battery pack.
- 2 **Possible recording time using the LCD panel.**
- 3 **Possible recording time using the viewfinder.**

Charging time

Approximate number of minutes required when you fully charge a fully discharged battery pack at 25°C (77°F). (10 – 30°C (50 – 86°F) recommended.)

Battery pack	
NP-FM30 (supplied)	145
NP-FM50	150
NP-FM70	240
NP-QM71/QM71D	260
NP-FM91/QM91/ QM91D	360

Recording time when recording with the LCD screen on

Approximate number of minutes available when you use a fully charged battery pack at 25°C (77°F).

With the LCD BACKLIGHT switch set to ON

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	80	45
NP-FM50	130	75
NP-FM70	270	155
NP-QM71/ QM71D	315	180
NP-FM91/ QM91/QM91D	475	270

With the LCD BACKLIGHT switch set to OFF

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	90	50
NP-FM50	150	85
NP-FM70	310	175
NP-QM71/ QM71D	365	210
NP-FM91/ QM91/QM91D	550	315

Recording time when recording with the viewfinder

Approximate number of minutes available when you use a fully charged battery pack at 25°C (77°F).

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	90	50
NP-FM50	150	85
NP-FM70	310	175
NP-QM71/ QM71D	365	210
NP-FM91/ QM91/QM91D	550	315

* Approximate number of minutes when recording while you repeatedly record, start/stop, slide the POWER switch to change the power mode, and zoom. The actual battery life may be shorter.

Playing time

Approximate number of minutes available when you use a fully charged battery pack at 25°C (77°F).

Battery pack	LCD panel opened*	LCD panel closed
NP-FM30 (supplied)	120	150
NP-FM50	195	240
NP-FM70	400	495
NP-QM71/ QM71D	465	580
NP-FM91/ QM91/QM91D	695	865

* With the LCD BACKLIGHT switch set to ON.

Notes

- The power will not be supplied from the battery pack when the AC Adaptor is connected to the DC IN jack of your camcorder, even if its power cord is disconnected from the wall outlet.
- The recording and playback time will be shorter when you use your camcorder in low temperature.
- The CHG (charge) lamp flashes during charging, or the battery information will not be correctly displayed in following conditions.

→ continued

- The battery pack is not attached correctly.
- The battery pack is damaged.
- The battery pack is fully discharged. (For Battery information only.)

Using an outside power source

You can use the AC Adaptor as the power source when you do not want the battery to run out. While you are using the AC Adaptor, the battery pack will not lose its charge even when it is attached to your camcorder.

PRECAUTION

Even if your camcorder is turned off, AC power (house current) is still supplied to it while connected to the wall outlet via the AC Adaptor.

Connect your camcorder as shown in “Charging the battery pack” (p. 13).

Step 3: Turning the power on


You need to slide the POWER switch repeatedly to select the desired power mode to record or play

When using this camcorder for the first time, the [CLOCK SET] screen appears (p. 18).

While pressing the green button, slide the POWER switch down.

The power turns on.


To enter the recording or playing mode, slide the switch repeatedly until the respective lamp for the desired power mode lights up.

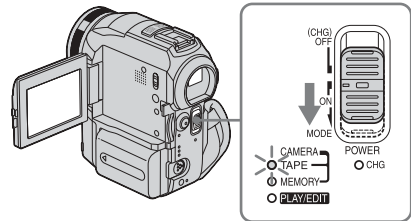

- CAMERA-TAPE mode: To record on a tape.
- CAMERA-MEMORY mode: To record on a “Memory Stick.”
- PLAY/EDIT mode: To play or edit pictures on a tape or “Memory Stick.”

To turn off the power

Slide the POWER switch up to (CHG) OFF.

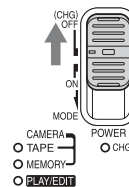


Step 4: Adjusting the LCD panel and viewfinder

Adjusting the LCD panel

You can adjust the angle and brightness of the LCD panel to meet various recording situations.

Even when there are obstructions between you and the subject, you can check the subject on the LCD screen during recording by adjusting the angle of the LCD panel.

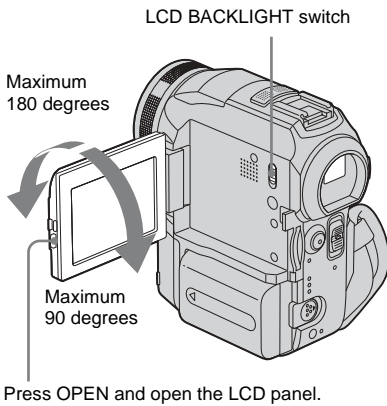

Open the LCD panel 90 degrees to the camcorder, then rotate it to the desired position.

To adjust the brightness of the LCD screen

1 Touch [P-MENU].

2 Touch [LCD BRIGHT].

If the item is not displayed on the screen, touch [↗]/[↘]. If you cannot find it, touch

[MENU], [STANDARD SET] menu, then touch [LCD/VF SET] (p. 78).


3 Adjust the item with [−]/[+], then touch [OK].

Tips

- If you rotate the LCD panel 180 degrees to the lens side, you can close the LCD panel with the LCD screen facing out.
- If you are using the battery pack for power source, you can adjust the brightness by selecting [LCD BL LEVEL] from the [LCD/VF SET] on the [STANDARD SET] menu (p. 78).
- When you use your camcorder in bright conditions using the battery pack, set the LCD BACKLIGHT switch to OFF. This position saves battery power.

Adjusting the viewfinder

You can view images using the viewfinder when you close the LCD panel. Use the viewfinder when the battery is running out, or when the screen is hard to see.

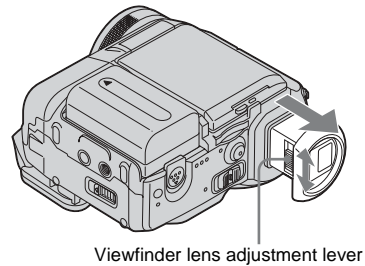




 



1 Extend the viewfinder.

2 Adjust the viewfinder lens adjustment lever until the picture is clear.


To use the viewfinder during operation

When you are recording on a tape or a "Memory Stick," you can adjust the exposure (p. 32) and fader (p. 38) while checking the image on the viewfinder. Have the LCD panel rotated 180 degrees and closed with the screen facing out.

→ continued

- 1 Set the power mode to CAMERA-TAPE or CAMERA-MEMORY (p. 16).
- 2 Extend the viewfinder, and close the LCD panel with the screen facing out.  appears on the screen.
- 3 Touch .
- 4 Touch [YES].
The LCD screen is turned off.
- 5 Touch the LCD screen while checking the display in the viewfinder. [EXPOSURE], etc. are displayed.
- 6 Touch the button you want to set.
 - [EXPOSURE]: Adjust with  /  and touch .
 - [FADER]: Touch it repeatedly to select a desired effect (only in the CAMERA-TAPE mode).
 - : The LCD screen lights up.
To hide the buttons on the LCD screen, touch .

 **Tip**


- To adjust the brightness of the viewfinder backlight, select  (STANDARD SET) menu, [LCD/VF SET], then [VF B.LIGHT] (when you are using the battery pack, p. 78).

Step 5: Setting the date and time

Set the date and time when using this camcorder for the first time. If you do not set the date and time, the [CLOCK SET] screen appears every time you turn on your camcorder.

 **Note**


- If you do not use your camcorder for about 3 months, the built-in rechargeable button-type battery gets discharged and the date and time settings may be cleared from the memory. In that case, charge the rechargeable button-type battery (p. 124) and then set the date and time again.

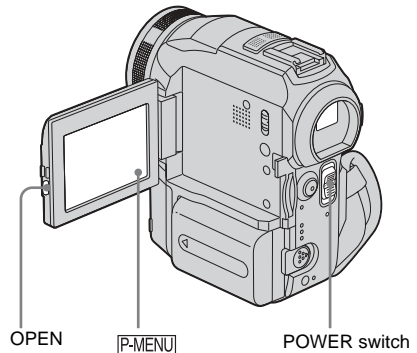


1 Turn on your camcorder (p. 16).

- 2 Press OPEN and open the LCD panel.
Proceed to step 7 when you set the clock for the first time.


3 Touch .

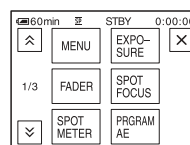


4 Touch [MENU].

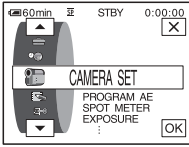


5 Select (TIME/LANGU.) with , then touch .

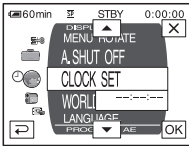

6 Select [CLOCK SET] with , then touch .

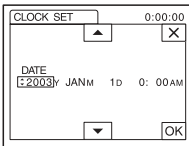

7 Set [Y] (year) with , then touch .

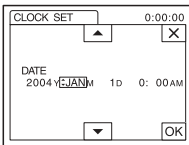

You can set any year up to the year 2079.

8 Set [M] (month), [D] (day), hour and minute in the same way as was done in step 7, then touch .

For midnight, set it to 12:00AM.

For midday, set it to 12:00PM.

Step 6: Inserting the recording media


Inserting a cassette tape

You can use mini DV ^{Mini}DV cassettes only. For details on these cassettes (such as write-protection), see page 116.

Note


- Do not force the cassette into the compartment. This may cause a malfunction of your camcorder.

- 1 Slide the **OPEN/▲EJECT ▼** lever in the direction of the arrow and open the lid.

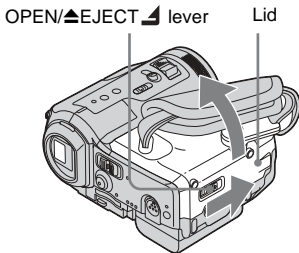


The cassette compartment automatically comes out and opens up.

- 2 Insert a cassette with its window-side facing up.

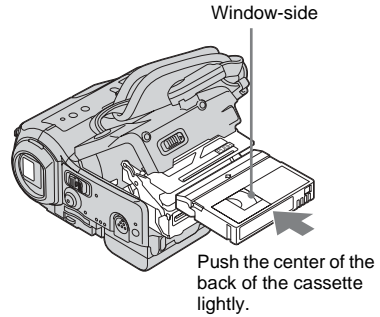

- 3 Press **PUSH**. The cassette compartment automatically slides back in.

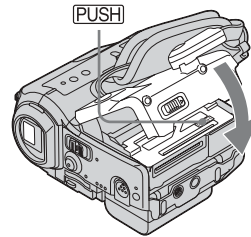

- 4 Close the lid.

To eject the cassette


- 1 Slide the **OPEN/▲EJECT ▼** lever in the direction of the arrow and open the lid. The cassette compartment automatically comes out.
- 2 Take out the cassette, then press **PUSH**. The cassette compartment automatically slides back in.
- 3 Close the lid.

Inserting a “Memory Stick”

For details on the “Memory Stick” (such as write-protection), see page 117.

⚡ Note


- When using the half-sized “Memory Stick,” the “Memory Stick Duo,” make sure you attach the Memory Stick Duo adaptor. Your camcorder may malfunction when it is inserted without an adaptor (p. 118).

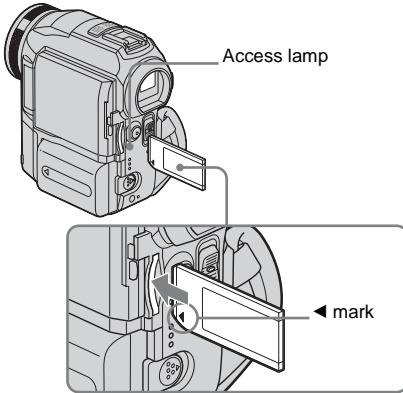

Insert the “Memory Stick” with the ◀ mark at the bottom left corner until it clicks.

To eject a “Memory Stick”

Lightly push the “Memory Stick” in once.

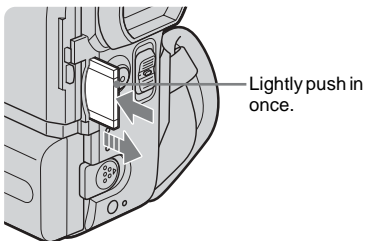


⚡ Notes

- If you force the “Memory Stick” into the “Memory Stick” slot in the wrong direction, the “Memory Stick” slot may be damaged.
- Do not insert anything other than a “Memory Stick” into the “Memory Stick” slot. Doing so may cause a malfunction of your camcorder.
- When the access lamp is lit or flashing, your camcorder is reading/writing data from/to the “Memory Stick.” Do not shake or knock your camcorder, turn the power off, eject the “Memory Stick,” or remove the battery pack. Otherwise, image data may be damaged.

Step 7: Setting the screen language

You can select the language to be used on the LCD screen.

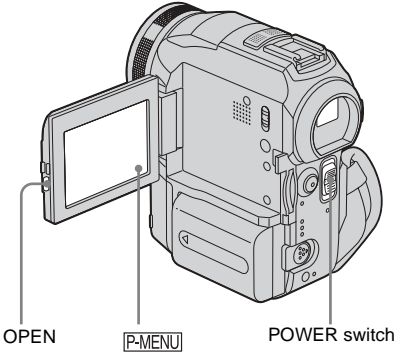

5 Select the desired language with / , then touch .


Tip

- Your camcorder offers [ENG [SIMP]] (simplified English) for when you cannot find your native tongue among the options.

1 Turn on your camcorder.


2 Press OPEN to open the LCD panel.

3 Touch .

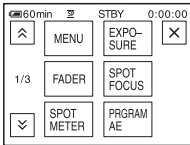

4 Touch .

If the item is not displayed on the screen, touch / . If you cannot find it, touch , and select it from the (TIME/LANGU.) menu (p. 82).

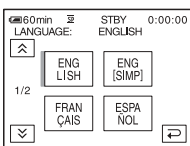


Recording movies


You can record movies on a tape or a “Memory Stick.”

Before recording, follow steps 1 to 7 in “Getting started” (p. 12 - p. 22).

When you are recording on a tape, movies will be recorded along with stereo sound. When you are recording on a “Memory Stick,” the movie will be recorded with monaural sound.

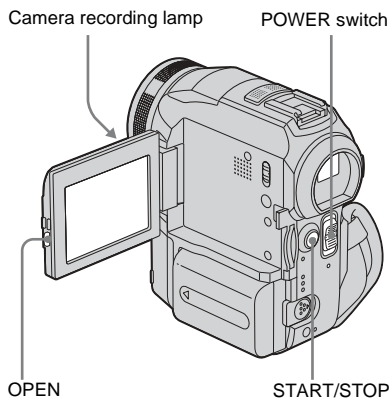

- 1 **Remove the lens cap. Pull the lens cap string down and attach it to the grip belt.**

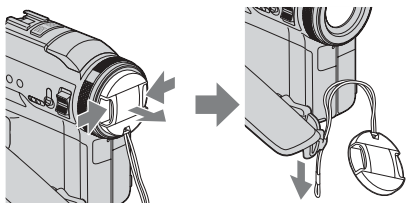


- 2 **Press OPEN and open the LCD panel.**

- 3 **Select the recording mode.**

To record on a tape


Slide the POWER switch until the CAMERA-TAPE lamp lights up, and your camcorder is set to the standby mode.

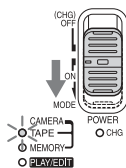

Slide the POWER switch while pressing the green button.

To record on a “Memory Stick” – MPEG MOVIE EX

Slide the POWER switch repeatedly until the CAMERA-MEMORY lamp lights up, and the currently selected recording folder appears on the screen.

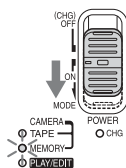

Slide the POWER switch while pressing the green button.

- 4 **Press START/STOP.**

Recording starts. [REC] appears on the LCD screen and the Camera recording lamp lights up. Press START/STOP again to stop recording.

To check the most recently recorded MPEG movie – Review

Touch . Playback starts automatically. Touch again to return to standby.

To delete the movie, touch after playback is finished, then [YES].


To cancel deleting, touch [NO].

To turn the power off

Slide the POWER switch up to (CHG) OFF.

Indicators displayed during recording on a tape

The indicators will not be recorded on the tape. Date/time and the camera settings data (p. 51) will not be displayed during recording.

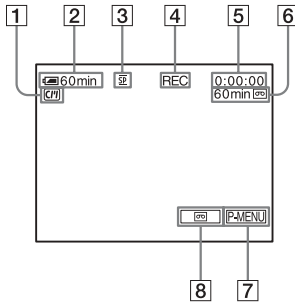


- 1 Indicators for Cassette Memory cassettes**
- 2 Remaining battery**

The indicated time may not be correct depending on the environment of use. When you opened or closed the LCD panel, it takes about one minute to display the correct remaining battery time.
- 3 Recording mode (SP or LP)**
- 4 Recording status ([STBY] (standby) or [REC] (recording))**
- 5 Time code (hour: minute: second: frame) or tape counter (hour: minute: second)**
- 6 Recording capacity of the tape**

Displayed after you run the tape for a while.
- 7 Personal Menu button (p. 56)**
- 8 END SEARCH/EDIT SEARCH/Rec review display switch button (p. 43)**

Indicators displayed during recording on a "Memory Stick"

The indicators will not be recorded on the "Memory Stick." Date/time (p. 51) will not be displayed during recording.

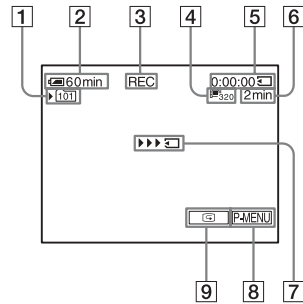

- 1 Recording folder**
- 2 Remaining battery**



The indicated time may not be correct depending on the environment of use. When you opened or closed the LCD panel, it takes about one minute to display the correct remaining battery time.
- 3 Recording status ([STBY] (standby) or [REC] (recording))**
- 4 Movie size**
- 5 Recorded time (hour: minute: second)**
- 6 Recording capacity of the "Memory Stick"**
- 7 "Memory Stick" recording start indicator (appears for about 5 seconds)**
- 8 Personal Menu button (p. 56)**
- 9 Review button (p. 23)**

⚡ Notes

- Before changing the battery pack, slide the POWER switch up to (CHG) OFF.
- In the default setting, when you do not operate the camcorder for more than about 5 minutes, the power will automatically turn off to prevent battery loss ([A.SHUT OFF], p. 81). To restart recording, slide the POWER switch down to select CAMERA-TAPE or CAMERA-MEMORY, and then press START/STOP.
- When you are recording on a "Memory Stick" using an external flash (optional), turn off the power of the external flash to prevent charging noise from getting recorded.


Tips

- To ensure smooth transition on a tape from the last recorded scene to the next, note the following.
 - Do not remove the cassette. (The picture will be recorded continuously without a break even when you turn the power off).
 - Do not record pictures in SP mode and LP mode on the same tape.
 - Avoid stopping then recording a movie in the LP mode.
- See "To record for a longer time on a "Memory Stick"" (p. 25) for the approximate length of time it is possible to record on a "Memory Stick" of different capacities.
- The recording time, date, and the camera settings data (for tape only) are recorded automatically on the recording media without being displayed on the screen. You can view this information during playback by pressing [DATA CODE] on the screen (p. 51).

	320 × 240	160 × 112
		
16MB (supplied)	00:02:40	00:10:40
32MB	00:05:20	00:21:20
64MB	00:10:40	00:42:40
128MB	00:21:20	01:25:20
256MB (MSX-256)	00:42:40	02:50:40
512MB (MSX-512)	01:25:20	05:41:20
1GB (MSX-1G)	02:50:40	11:22:40

Recording for a longer time

To record for a longer time on a tape

In the  (STANDARD SET) menu, select [REC MODE], then [LP] (p. 77). In the LP mode, you can record 1.5 times longer than you can when recording in the SP mode. A tape recorded in the LP mode should be played back only on this camcorder.

To record for a longer time on a "Memory Stick"






In the  (MEMORY SET) menu, select [MOVIE SET], [ IMAGE SIZE], then [160 × 112] (p. 65). The number of pictures you can record on a "Memory Stick" varies depending on the image size and the recording environment. Refer to the following list for approximate length of time you can record movies on a "Memory Stick" formatted on your camcorder.

Image size and time (hour: minute: second)

	320 × 240	160 × 112
		
8MB	00:01:20	00:05:20

Using zoom

When the CAMERA-TAPE mode is selected, you can choose zoom to magnification levels greater than 10 times, and from that point activate the digital zoom ([DIGITAL ZOOM], p. 62). Occasional use of the zoom is effective, but use it sparingly for best results.

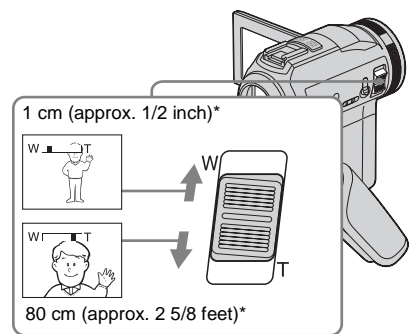

* The minimum distance required between your camcorder and the subject to get a sharp focus in that position of the lever.

→ continued

Move the power zoom lever slightly for a slower zoom. Move it further for a faster zoom.

To record wider range of view

Move the power zoom lever towards W. The subject appears farther away (Wide angle).


To record closer view

Move the power zoom lever towards T. The subject appears closer (Telephoto).

Recording in mirror mode

You can turn the LCD panel towards the subject so that you and your subject can share the image being recorded. You can also utilize this function when recording yourself, to keep the attention of small children attracted to the camcorder while you record them.

Extend the viewfinder.

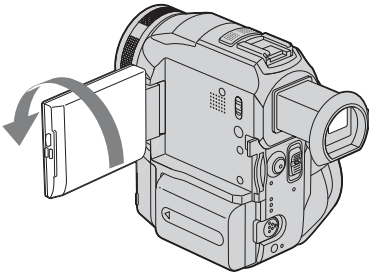


Open the LCD panel 90 degrees to the camcorder, then rotate it 180 degrees towards the subject.

A mirror-image of the subject appears on the LCD screen, but the picture will be normal when recorded.

Using the self-timer


With the self-timer, you can start recording after a delay of about 10 seconds.

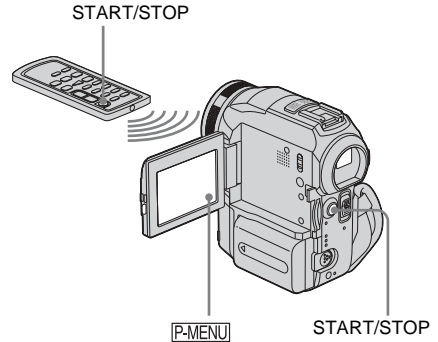

1 Touch **P-MENU**.


2 Touch **[SELF-TIMER]**.

If the item is not displayed on the screen, touch / . If you cannot find it, touch **[MENU]**, and select it from the (CAMERA SET) menu.

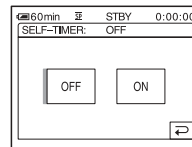

3 Touch **[ON]**, then **[OK]**.

appears.

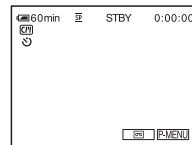

4 Press **START/STOP**.

You will hear a beep sound counting down for about 10 seconds (The count down indication begins from 8).

The recording starts.

To stop recording, press START/STOP.

To cancel the count down

Touch [RESET] or press START/STOP.


To cancel the self-timer

Follow steps 1 and 2, then select [OFF] in step 3.

Recording movies fit for breaking into still images – Progressive recording mode




This feature is useful for movies you intend to import to your computer to produce still images.

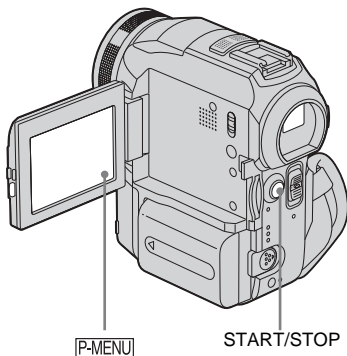
You can record pictures with less blurring than recording in the normal mode, producing pictures suitable for analyzing high-speed action such as sports. To enjoy as a movie, it is better to record the picture in the normal mode, since the image is recorded only every 1/30 of a second in the progressive recording mode.




1 Touch .

2 Touch [PROGRE REC].

If the item is not displayed on the screen, touch  / . If you cannot find it, touch [MENU], and select [PROGRES. REC] from the  (CAMERA SET) menu.

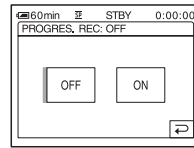

3 Touch [ON], then . 30p appears.

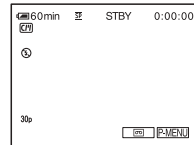

4 Press START/STOP.

Press it again to stop recording.

To cancel the progressive recording mode

Follow steps 1 and 2, then select [OFF] in step 3.

Note on the progressive recording mode

In a normal TV broadcast, the screen is divided into 2 finer fields and these are displayed in turn, every 1/60 of a second. Thus, the actual picture displayed in an instant covers only half of the apparent picture area. In progressive recording, the picture is fully displayed with all the pixels. A picture recorded in this mode appears clearer, but a moving subject may appear awkward.


Notes

- When recording in the progressive recording mode under fluorescent light or a light bulb, the screen may flicker. This is not a malfunction.
- You cannot use the Progressive recording mode with:
 - [16:9 WIDE] mode


Recording still images

– Memory photo recording

You can record still images on a “Memory Stick.” Before recording, follow steps 1 to 7 in “Getting started” (p. 12 - p. 22).

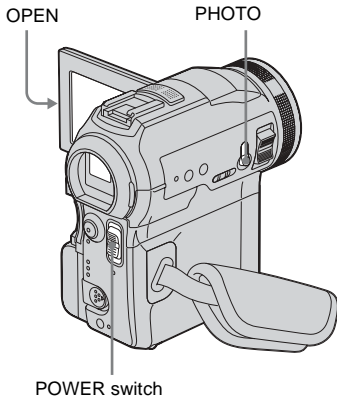


- 1 Remove the lens cap. Pull the lens cap string down and attach it to the grip belt.**

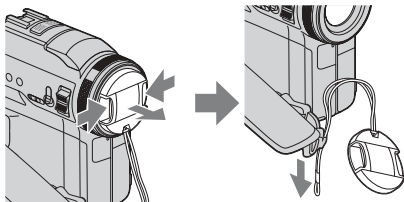

- 2 Press OPEN and open the LCD panel.**

- 3 Slide the POWER switch repeatedly until the CAMERA-MEMORY lamp lights up.**

The selected recording folder is displayed.

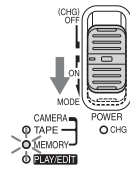


Slide the POWER switch while pressing the green button.

- 4 Press and hold PHOTO lightly.**

You will hear a light beeping sound when the focus and brightness settings are adjusted. Recording does not start at this point.


The indicator stops flashing.

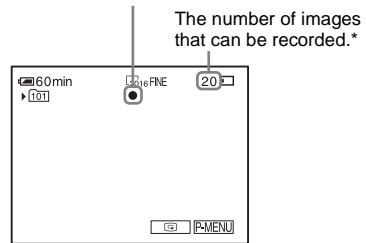


The number of images that can be recorded.*


*The number of images that can be recorded varies depending on the image size setting and the recording environment.


- 5 Press PHOTO fully.**

A shutter sound is heard. When bars of  disappears, the image is recorded on the “Memory Stick.”

To check the most recently recorded image – Review

Touch .

Touch  again to return to standby.



To delete the image, touch , then [YES].

To cancel deleting, touch [NO].


To turn the power off

 
 
Slide the POWER switch up to (CHG) OFF.

To record still images continuously – Burst

Select the  (MEMORY SET) menu, [STILL SET], then [ BURST] (p. 64). You can record 3 to 32 images continuously in a time interval of about 0.5 to 0.07 seconds.

Indicators displayed during recording

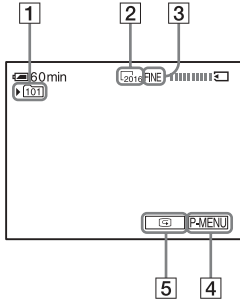




- 1 **Recording folder**
- 2 **Image size**
 (2016 × 1512) or  (640 × 480)
- 3 **Quality**
FINE ([FINE]) or STD ([STANDARD])
- 4 **Personal Menu button (p. 56)**
- 5 **Review button (p. 28)**

Tips

- When you press PHOTO on your Remote Commander, the image displayed on the screen at that timing is recorded.
- The recording time, date, and the camera settings data are recorded automatically on the recording media without being displayed on the screen. You can view this information during playback by pressing [DATA CODE] on the screen (p. 51).
- The recording angle is wider than that of the CAMERA-TAPE mode.

Selecting image quality or size

Select the  (MEMORY SET) menu, [STILL SET], then [ QUALITY] or [ IMAGE SIZE] (p. 64).



The number of pictures you can record on a “Memory Stick” varies depending on the

quality/size of the image and the recording environment.

Refer to the following list for the approximate number of pictures that can be recorded on a “Memory Stick” formatted on your camcorder.



When the Image quality is [FINE] (number of images)

The image size of 2016 × 1512 is 1540KB, that of 640 × 480 is 150KB.

  	2016 × 1512 	640 × 480 
8MB	5	50
16MB (supplied)	10	96
32MB	20	190
64MB	40	390
128MB	82	780
256MB (MSX-256)	145	1400
512MB (MSX-512)	300	2850
1GB (MSX-1G)	610	5900

When the Image quality is [STANDARD] (number of images)

The image size of 2016 × 1512 is 640KB, that of 640 × 480 is 60KB.

 	2016 × 1512 	640 × 480 
8MB	12	120
16MB (supplied)	24	240
32MB	48	485
64MB	98	980
128MB	195	1970
256MB (MSX-256)	355	3550
512MB (MSX-512)	720	7200
1GB (MSX-1G)	1450	14500


→ continued


Using the flash


The recommended distance to the subject when using the built-in flash is 0.3 to 2.5 m (1 to 8 feet).

Your camcorder is set to auto flashing by default, so according to the lighting conditions, the flash may be automatically activated when you press PHOTO.

Follow the steps below when you always want to use the flash, or when you do not want to use the flash at all.

The available settings vary according to what you selected in [REDEYE REDUC] of [FLASH SET] in the  (CAMERA SET) menu (p. 61).

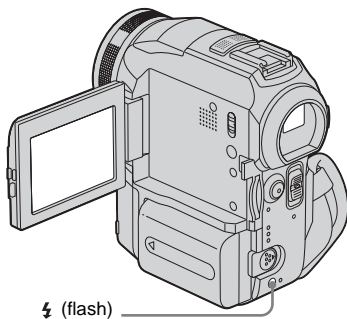


Press  (flash) repeatedly to select a setting.

The settings are displayed cyclically in the following order.


When the red eye reduction feature is turned off

No indicator displayed: Automatically flashes when there is not enough surrounding light.




 (Forced flash): Always uses the flash regardless of the surrounding brightness.





 (No flash): Always records without using the flash.


When the red eye reduction feature is turned on

 (Auto red-eye reduction): Pre-flashes to reduce red-eye before the flash automatically flashes when there is not enough surrounding light.

 


  (Forced red-eye reduction): Always uses the flash and the red-eye reducing pre-flash regardless of the surrounding brightness.




 (No flash): Always records without using the flash.

Notes


- Remove the dust from the surface of the flash lamp before using it. You may not get a sufficient amount of flash if the dust discolors or sticks to the lamp due to the heat from flashing.
- The red-eye reduction may not produce the desired effect due to individual differences and other conditions.
- The flash charge indicator flickers while charging, and remains lit when the battery charge is complete. (In the CAMERA-TAPE mode, it takes a while to fully charge the flash lamp since it charges its battery with the flash lamp open.)
- The flash will not work during the following operations:
 - Super NightShot function
 - Color Slow Shutter function
 - Digital effect
 - Progressive recording mode
 - Burst
 - During tape recording
 - [16:9 WIDE] mode
- Even if auto flashing or  (Auto red-eye reduction) is selected, the flash will not work during the following operations:
 - NightShot function
 - [SPOTLIGHT], [SUNSET&MOON], and [LANDSCAPE] of [PROGRAM AE]
 - Manual exposure
 - Flexible spot meter
- If you use the flash in bright places such as when shooting a backlit subject, the flash may not be effective.
- Attaching the lens hood (supplied) or a conversion lens (optional) may cause its shadow to appear.
- You cannot use an external flash (optional) and the built-in flash at the same time.

💡 Tips

- The amount of light used by the flash is adjusted automatically. To adjust it manually, select [FLASH LEVEL] from the  (CAMERA SET) menu (p. 58).
- When the focus is hard to adjust, use the HOLOGRAM AF function (p. 37), or refer to “Adjusting the focus manually” (p. 36) for the proper focal distance information.




Using the self-timer

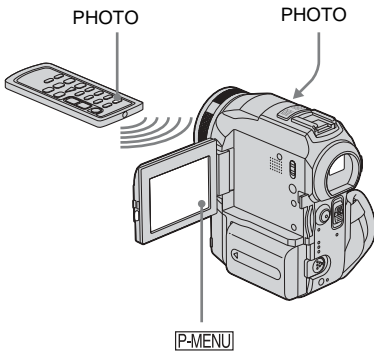
With the self-timer, you can record a still image after a delay of about 10 seconds.



1 Touch **[P-MENU]**.


2 Touch **[SELF-TIMER]**.

If the item is not displayed on the screen, touch  / . If you cannot find it, touch [MENU] and select it from the  (CAMERA SET) menu.

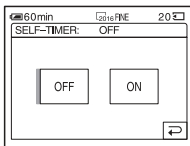


3 Touch **[ON]**, then **[OK]**.

 appears.

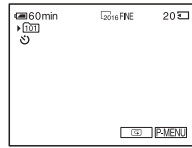

4 Press **PHOTO**.

You will hear a beep sound counting down for about 10 seconds (The count down indication begins from 8). The image is recorded. When bars of  disappears, the image is recorded on the “Memory Stick.”

To cancel the count down


Touch [RESET].

To cancel the self-timer


Follow steps 1 and 2, then select [OFF] in step 3.

Recording a still image on a "Memory Stick" while recording movies on a tape

The image size is set to [640 × 480]. If you want to record a still image in a different size, use the Memory photo recording function (p. 28).

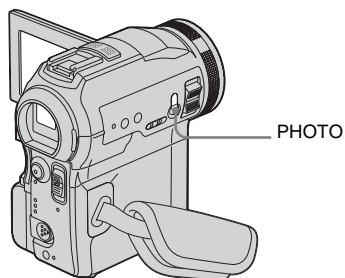

Press **PHOTO** fully during tape recording.

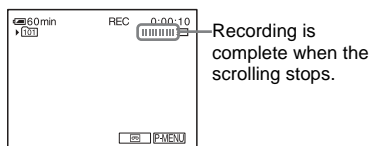

To record still images in standby mode

Press and hold **PHOTO** lightly. Check the image and press it fully.

⚡ Notes


- You cannot record a still image on a "Memory Stick" during the following operations:
 - [16:9 WIDE] mode
 - Progressive recording mode
 - Memory overlap
 - MEMORY MIX function
 - [SMTH INT.REC] (Smooth interval tape recording)
- Titles are not recorded on a "Memory Stick."

Adjusting the exposure

The exposure is adjusted automatically in the default setting.

Adjusting the exposure for backlit subjects

When your subject has its back to the sun or other light, you can adjust the exposure to prevent the subject from becoming shadowed.

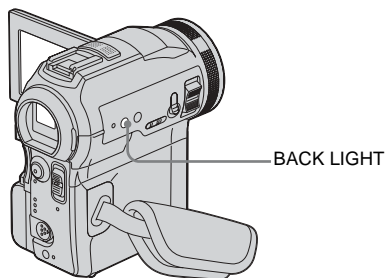

Press **BACK LIGHT** during recording or in the standby mode.

 appears.

To cancel the back light function, press **BACK LIGHT** again.

⚡ Note


- The back light function is canceled when you set [EXPOSURE] to [MANUAL] (p. 33) or select [SPOT METER] (p. 33).


Fixing the exposure for the selected subject – Flexible spot meter

You can adjust and fix the exposure to the subject, so that it is recorded in suitable brightness even when there is strong contrast between the subject and the background (such as subjects in the limelight on stage).


1 Touch **[P-MENU]** during recording or in the standby mode.

2 Touch **[SPOT METER]**.

If the item is not displayed on the screen, touch \uparrow/\downarrow . If you cannot find it, touch **[MENU]**, and select it from the  (CAMERA SET) menu.

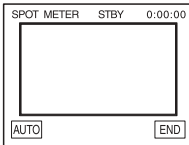

3 Touch the point you want to adjust and fix the exposure on the screen.

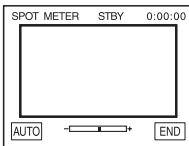

The **[SPOT METER]** indicator flashes while the camera is adjusting the exposure for the selected point.

4 Touch **[END]**.

To return the setting to automatic exposure

Follow steps 1 and 2, then select **[AUTO]** in step 3. Or set **[EXPOSURE]** to **[AUTO]** (p. 33).

Note

- You cannot use the Flexible spot meter together with:
 - Color Slow Shutter function
 - NightShot function
 - NightFraming function
- If you set **[PROGRAM AE]**, **[SPOT METER]** is automatically set to **[AUTO]**.

Tip


- If you set **[SPOT METER]**, **[EXPOSURE]** is automatically set to **[MANUAL]**.


Adjusting the exposure manually

You can fix the brightness of a picture at the best exposure. When recording indoors on a clear day, for instance, you can avoid backlight shadows on people next to the window by manually fixing the exposure to that of the wall side of the room.


1 Touch **[P-MENU]** during recording or in the standby mode.

2 Touch **[EXPOSURE]**.

If the item is not displayed on the screen, touch \uparrow/\downarrow . If you cannot find it, touch **[MENU]**, and select it from the  (CAMERA SET) menu.

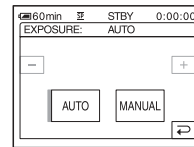


3 Touch **[MANUAL]**.

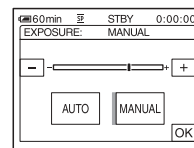

→ continued

-
- 4 Adjust the exposure by touching (dim)/ (bright), then touch .

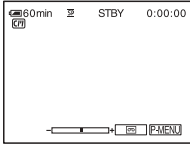


To return the setting to automatic exposure

Follow steps 1 and 2, then select [AUTO] in step 3.

Recording in dark places – NightShot, etc.

You can record subjects in dark places (such as when capturing the face of your baby sleeping) with the NightShot, Super NightShot or Color Slow Shutter function. The Color Slow Shutter function enables you to record in color.

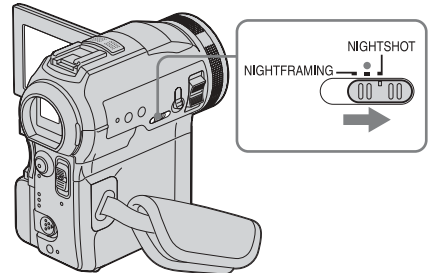

Set the NIGHTSHOT/NIGHTFRAMING switch to NIGHTSHOT.

and [“NIGHTSHOT”] appear.

To cancel NightShot, set the NIGHTSHOT/NIGHTFRAMING switch to (green).

To record clearer pictures on the tape – Super NightShot

The picture will be recorded at a maximum of 16 times the sensitivity of NightShot recording.

- 1 Slide the POWER switch to select the CAMERA-TAPE mode.
- 2 Set the NIGHTSHOT/NIGHTFRAMING switch to NIGHTSHOT.
 and [“NIGHTSHOT”] appear.
- 3 Touch .
- 4 Touch [SUPER NS].


If the item is not displayed on the screen, touch / . If you cannot find it, touch [MENU], and select it from the (CAMERA SET) menu.

5 Touch [ON], then [OK].


S^{NS} appears.

To cancel Super NightShot, follow steps 3 and 4, then select [OFF] in step 5. Or, set the NIGHTSHOT/NIGHTFRAMING switch to ● (green).

To record a clearer picture in color on the tape – Color Slow Shutter**1 Slide the POWER switch to select the CAMERA-TAPE mode.****2 Make sure the NIGHTSHOT/NIGHTFRAMING switch is set to ● (green).****3 Touch [P-MENU].****4 Touch [COLOR SLOW S].**

If the item is not displayed on the screen, touch [▲]/[▼]. If you cannot find it, touch [MENU], and select it from the  (CAMERA SET) menu.

5 Touch [ON], then [OK].

 appears.

To cancel Color Slow Shutter, follow steps 3 and 4, then select [OFF] in step 5.

⚡ Notes

- Do not use the NightShot/Super NightShot function in bright places. This may cause a malfunction.
- The Color Slow Shutter function may not operate correctly in total darkness. When you are recording in a place with no light at all, use the NightShot or Super NightShot functions.
- You cannot use the Super NightShot/Color Slow Shutter function together with:
 - FADER function
 - Digital effect
- You cannot use the Color Slow Shutter function together with:
 - [PROGRAM AE]
 - Manual exposure
 - Flexible spot meter
- When using the Super NightShot or Color Slow Shutter function, the shutter speed of your camcorder changes depending on the brightness. The motion of the picture may slow down at this time.
- Adjust the focus manually when it is hard to focus automatically.
- Do not cover the infrared port with your fingers or other objects. Remove the conversion lens (optional) if it is attached.


Adjusting the focus



The focus is adjusted automatically in the default setting.

Adjusting the focus for an off-center subject – SPOT FOCUS

You can select and adjust the focal point to aim it at a subject not located in the center of the screen.

1 Touch [P-MENU] during recording or in the standby mode.**2 Touch [SPOT FOCUS].**

If the item is not displayed on the screen, touch [▲]/[▼]. If you cannot find it, touch [MENU], and select it from the  (CAMERA SET) menu.

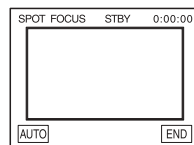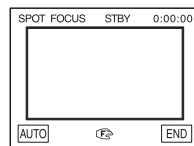**3 Touch the subject for which you want to adjust the focus on the screen.**

[SPOT FOCUS] flashes while the camera is adjusting the focus.

 appears.

4 Touch [END].

→ continued

To adjust the focus automatically

Follow steps 1 and 2, then touch [AUTO] in step 3. Or press FOCUS after step 4.

Notes

 
- You cannot use the SPOT FOCUS function together with:
 - NightFraming function
 - [PROGRAM AE]
- Focusing distance information will not be displayed.

Adjusting the focus manually


You can adjust the focus manually according to the recording conditions.

Use this function in the following cases.

- To record a subject behind a window covered with raindrops.
- To record horizontal stripes.
- To record a subject with little contrast between the subject and its background.
- When you want to focus on a subject in the background.



- To record a stationary subject using a tripod.

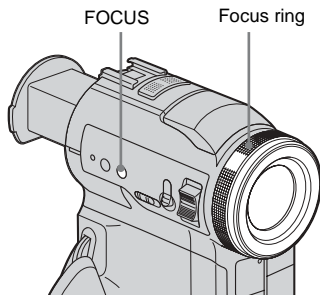

1 Press FOCUS during recording or in the standby mode.

appears.

2 Rotate the focus ring and adjust the focus.

changes to when the focus cannot be adjusted any further. changes to when the focus cannot be adjusted any closer.

Tips for focusing manually

- It is easier to focus on the subject when you use the zoom function. Move the power zoom lever towards T (telephoto) to adjust the focus, and then, towards W (wide angle) to adjust the zoom for recording.
- When you want to record a close-up image of a subject, move the power zoom lever towards W (wide angle) to fully magnify the image, then adjust the focus.

To use the expanded focus

It will be easier to confirm the focus setting by enlarging the image during manual focusing. When the CAMERA-MEMORY lamp is on, set [EXP. FOCUS] in the (CAMERA SET) menu to [ON] (p. 60).

When you rotate the focus ring, appears and the image will be displayed at twice its original size.

To adjust the focus automatically


Press FOCUS again.

Tip

- The focal distance information (for when it is dark and hard to adjust focus) appears for 3 seconds in the following cases. (It will not be displayed correctly if you are using a conversion lens (optional).)
 - When the focus mode is switched from automatic to manual.
 - When you rotate the focus ring.

Using supplementary light to focus on a still image - HOLOGRAM AF

HOLOGRAM AF emitter

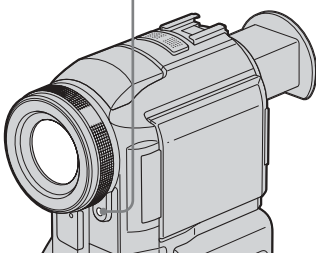

When you are recording in a dark place, you can use the HOLOGRAM AF light to focus on subjects until the focus is fixed. The maximum focal distance for the HOLOGRAM AF light is about 2.5 m (8 feet). [HOLOGRAM AF] is set to [AUTO] by default (p. 61).


About HOLOGRAM AF

“HOLOGRAM AF,” an application of laser holograms, is a new auto-focus optical system that enables still image shooting in dark places. Having gentler radiation than conventional high-brightness LEDs or lamps, the system satisfies the Laser Class 1 (*) specification and thus maintains higher safety for human eyes. No safety problems will be caused by looking directly into the HOLOGRAM AF emitter at a close range. However, it is not recommended to do so, because you may experience side effects, such as several minutes of residual images or dazzling, that you would encounter after looking into a flashlight.

* HOLOGRAM AF satisfies the Class 1 (time base 30000 seconds) specifications, recommended by all of the JIS (Japan), IEC (EU), and FDA (US) industry standards.


Complying with these standards certifies the laser product to be safe, under conditions where a human looks at the laser light either directly or through a lens for 30000 seconds.

Notes

- The focus may not be correctly adjusted if you are using a conversion lens (optional) as it may block the HOLOGRAM AF light.
- You cannot use HOLOGRAM AF together with:
 - CAMERA-TAPE mode
 - Flash set to  (No flash)
 - [SUNSET&MOON] or [LANDSCAPE] of [PROGRAM AE]
 - Manual focus
 - SPOT FOCUS function
 - Burst
 - NightShot function
- The focal distance information is not displayed on the screen.


Adjusting the frame and focus when recording a still image in darkness – NightFraming

You can observe the subject in total darkness. When recording, the HOLOGRAM AF light is emitted to focus on a subject until the focus is fixed.

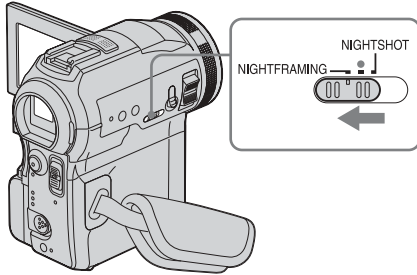


1 Slide the **POWER** switch repeatedly to select the **CAMERA-MEMORY** mode.

2 Set the **NIGHTSHOT/NIGHTFRAMING** switch to **NIGHTFRAMING**.

 and [NIGHTFRAMING] appear. To cancel NightFraming, set the NIGHTSHOT/NIGHTFRAMING switch to ● (green).


Note

- The focus may not be correctly adjusted if you are using a conversion lens (optional) as it may block the HOLOGRAM AF light.
- The focus will be adjusted automatically even if manual focusing is selected.
- Supplementary light will be emitted even if [HOLOGRAM AF] is set to [OFF].
- Flash will be activated even if  (No flash) is selected.

Tip

- Even though the subject may not appear on the LCD panel in natural colors when you are shooting, it will be recorded in natural colors.

Recording a picture using various effects

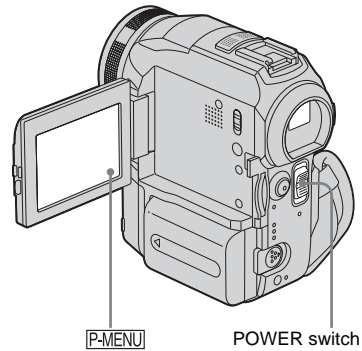

Fading in and out of a scene – FADER

You can add the following effects to currently recording pictures.



[NORMAL FADER]



[MOSAIC FADER]



[MONOTONE]

When fading in, the picture gradually changes from black-and-white to color.

When fading out, the picture gradually changes from color to black-and-white.


[OVERLAP] (fade in only)**[WIPE] (fade in only)****[DOT FADER] (fade in only)**

1 Slide the **POWER** switch to select the **CAMERA-TAPE** mode.


2 Touch **[P-MENU]** in the standby mode (to fade in) or during recording (to fade out).

3 Touch **[FADER]**.

If the item is not displayed on the screen, touch \uparrow/\downarrow . If you cannot find it, touch **[MENU]**, and select it from the PICT. APPL. menu.

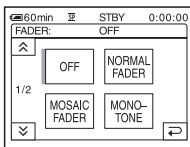

4 Touch the desired effect, then touch **[OK]**.

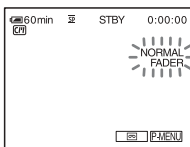

5 Press **START/STOP**.

The fader indicator stops flashing and disappears when the fade is complete.

To cancel the operation

In step 3, touch **[OFF]**.

Note

- You cannot use the **FADER** function together with:
 - Super NightShot function
 - Color Slow Shutter function
 - Digital effect
 - [SMTH INT. REC] (Smooth interval tape recording)
 - [FRAME REC] (Frame recording)

Tip

- You can also select the fade-in effect while recording. When you stop the recording, the screen turns blue to store its last image, from which you can fade into the continuing recording.

Fading in from still image on the “Memory Stick” – Memory overlap

You can fade in from the still image on the “Memory Stick” to the movie currently being recorded on the tape.

Still image



Movie



1 Check that you have a “Memory Stick” with the still image to be superimposed and a tape in your camcorder.

2 Slide the **POWER** switch to select the **CAMERA-TAPE** mode.

3 Touch **[P-MENU]**.

4 Touch **[MENU]**.

5 Select PICT. APPL. , then **[OVERLAP]** by touching \uparrow/\downarrow and **[OK]**.

The recorded image appears on the thumbnail screen.

6 Touch $-$ (previous)/ $+$ (next) to select the still image to be superimposed.

7 Touch **[ON]**, then **[OK]**.

8 Touch \times .

→ continued

- 9 Press START/STOP to start recording.**
[M. OVRLAP] stops flashing, and disappears when fading is finished.

Using special effects – Digital effect

You can add digital effects to the recordings.

[STILL]

You can record a movie while superimposing it on a previously recorded still image.



[FLASH] (flash motion)

You can record a movie with a serial-still-image effect (strobe effect).

[LUMI. KEY] (luminance key)

You can replace a brighter area in a previously recorded still image, such as the background of a person or a title written on white paper, with a movie.



[TRAIL]

You can record a picture so that an incidental image like a trail is left.

[SLOW SHUTTR] (slow shutter)

You can slow down the shutter speed. This mode is suitable for shooting a subject more clearly in a dark place.




[OLD MOVIE]


You can add an old movie-type atmosphere to pictures. Your camcorder automatically records pictures in the letterbox mode for all screen size, sepia in color, and at a slower shutter speed.

 

- 1 Slide the POWER switch to select the CAMERA-TAPE mode.**

- 2 Touch [P-MENU].**


- 3 Touch [D. EFFECT].**

If the item is not displayed on the screen, touch /. If you cannot find it, touch [MENU], and select it from the  (PICT. APPLI.) menu.

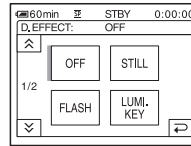

- 4 Touch the desired effect, then adjust the effect by touching  (decrease) /  (increase) and touch [OK].**

Adjustment screen example:

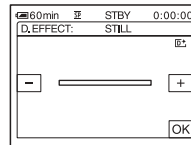

When you touch [STILL] or [LUMI. KEY], the image displayed on the screen at that time is saved as a still image.

Effect	Items to adjust
[STILL]	The degree of transparency of the still image you want to superimpose on a movie.
[FLASH]	The interval of frame-by-frame playback.
[LUMI. KEY]	The color scheme of the area in the still image which is to be swapped with a movie.
[TRAIL]	The fade time of the incidental image.

Effect	Items to adjust
[SLOW SHUTTR]*	Shutter speed (1 is 1/30, 2 is 1/15, 3 is 1/8, 4 is 1/4).
[OLD MOVIE]	No adjustment necessary.

* It is hard to adjust the focus automatically when you choose this effect. Adjust the focus manually using a tripod to steady the camcorder.

5 Touch [OK].
[D+] appears.

To cancel Digital effect

Follow steps 2 and 3, then select [OFF] in step 4.

Notes

- You cannot use Digital effect together with:
 - Super NightShot function
 - Color Slow Shutter function
 - FADER function
 - Memory overlap
 - MEMORY MIX function
- You cannot use [SLOW SHUTTR]/[OLD MOVIE] together with [PROGRAM AE] (except [AUTO]).
- You cannot use [OLD MOVIE] together with:
 - [16:9 WIDE] mode
 - Picture effect ([PICT. EFFECT])

Tip


- You can create a picture with color and brightness reversed or a picture that looks like a pastel drawing while recording on a tape. For details, refer to Picture effect ([PICT. EFFECT], p. 68).

Overlaying still images on movies on a tape – MEMORY MIX

You can superimpose a still image you have recorded on a “Memory Stick” over the movie you are currently recording on a tape. You can then record the superimposed pictures on a tape or a “Memory Stick.” (You cannot superimpose a still image on a tape which you have already finished recording.)


[M←CAM LUMI.] (Memory Luminance key)

You can swap the brighter (white) area of a still image into a movie. To use this function, have a still image of an illustration or title handwritten on white paper recorded on a “Memory Stick” beforehand.

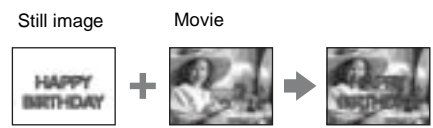

[CAM←M CHROMA] (Camera Chroma key)

You can superimpose a movie on top of a still image, such as an image which can be used as background. Shoot the movie with the subject against a blue background. Only the blue area of the movie will be swapped with the still image.

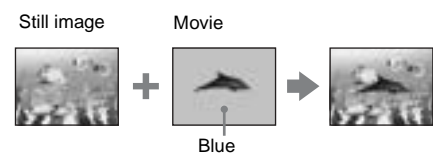

→ continued

[M←CAM CHROMA] (Memory Chroma key)

You can have the movie swap into the blue area of a still image such as an illustration or into a frame with a blue area enclosed by the frame.



- 1 Check that you have a “Memory Stick” with the still image to be superimposed and a tape (only if you are recording on tape) in your camcorder.

- 2 Slide the POWER switch repeatedly to select the CAMERA-TAPE mode (when you are recording on a tape) or the CAMERA-MEMORY mode (when you are recording on a “Memory Stick”).


- 3 Touch [P-MENU].

- 4 Touch [MEMORY MIX].

If the item is not displayed on the screen, touch [↗]/[↘]. If you cannot find it, touch [MENU], and select it from the [PICT. APPL.] menu.

The still image stored in the “Memory Stick” will be displayed on the thumbnail screen.


Thumbnail screen

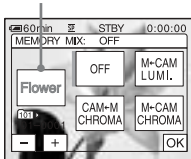

- 5 Touch [−]/[+] to select the still image to overlap.

- 6 Touch the desired effect.

The still image is superimposed on the movie which is currently displayed on the LCD screen.

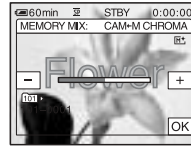

- 7 Touch [−] (decrease)/[+] (increase) to adjust the following.

For [M←CAM LUMI.]

The color scheme of the bright area in the still image which is to be swapped into a movie. When you want to record only the still image stored on the “Memory Stick” to a tape, touch [+] on the screen in [M←CAM LUMI.] until the bar indicator is extended fully to the right side.

For [CAM←M CHROMA]

The color scheme of the blue area in the movie.

For [M←CAM CHROMA]

The color scheme of the blue area in the still image which is to be swapped into a movie.

- 8 Touch [OK] twice.
[M+] appears.

- 9 Start recording.

When you are recording on a tape

Press START/STOP.

When you are recording on a “Memory Stick”

Press PHOTO fully.

To cancel MEMORY MIX

Follow steps 1 to 4, then touch [OFF] in step 5.

Notes


- When the overlapping still image has a large amount of white, the image in the thumbnail screen may not be clear.

- When you use the MEMORY MIX function in the mirror mode (p. 26), the picture on the LCD screen appears normally, without being mirror-reversed.
- You may not be able to play back pictures modified on your computer or recorded with other camcorders on your camcorder.

Tip

The supplied SPVD-010 USB Driver CD-ROM contains sample images for use in MEMORY MIX operations. Refer to the supplied “Computer Applications Guide” for details.

Searching for the starting point

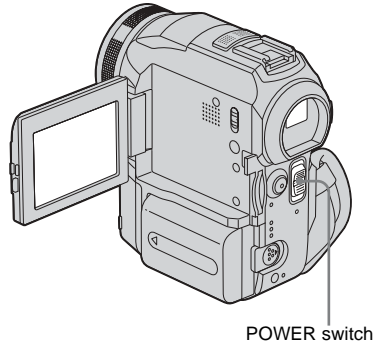


Searching for the last scene of the most recent recording – END SEARCH

This function is handy when you have played back the tape, for example, but want to start recording right after the most recently recorded scene. When you use a cassette without Cassette Memory, the END SEARCH function will not work once you eject the cassette after you have recorded on the tape. If you use a cassette with Cassette Memory, it will function even when you have ejected the cassette.


1 Slide the **POWER** switch repeatedly to select the **CAMERA-TAPE** mode.

2 Touch .

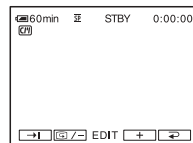

→ *continued*

3 Touch .

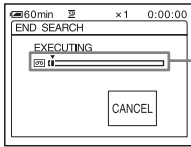

Appears only with a cassette with Cassette Memory

The last scene of the most recent recording is played back for about 5 seconds, and the camcorder enters the standby mode at the point where the last recording has finished.

To cancel the operation

Touch [CANCEL].

Note

- The END SEARCH function will not work correctly when there is a blank section between recorded sections on the tape.

Tips


- When PLAY/EDIT mode is selected, you can do this operation by touching [P.MENU] and selecting [END SEARCH].
- You can do this operation also by selecting [END SEARCH] in the menu.

Searching manually – EDIT SEARCH

You can search for the start point while viewing the pictures on the screen. The sound is not played back during the search.

1 Slide the POWER switch to select the CAMERA-TAPE mode.

2 Touch .

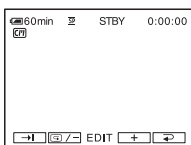


3 Keep touching (to go backward)/ (to go forward) and release it at the point where you want the recording to start.

Reviewing the most recently recorded scenes – Rec review

You can view a few seconds of the scene recorded just before you stopped the tape.

1 Slide the POWER switch repeatedly to select the CAMERA-TAPE mode.

2 Touch .

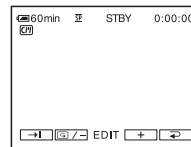


3 Touch once.


The last few seconds of the most recently recorded scene are played back. Then, your camcorder is set to the standby mode.

Viewing movies recorded on a tape

Make sure you have a recorded cassette inserted into your camcorder. Some of the operations are possible using the Remote Commander or using the touch panel. When you want to play back recordings on your TV, see page 53.

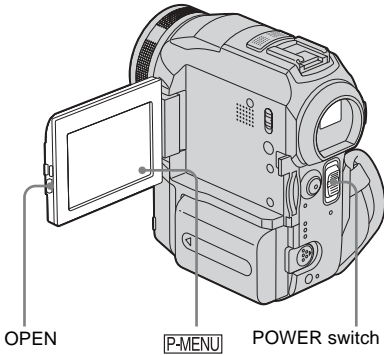


- 1 Press OPEN and open the LCD panel.
- 2 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

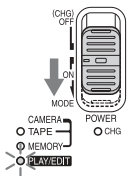



 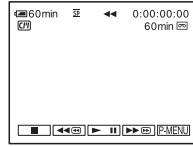



 

Slide the POWER switch while pressing the green button.

- 3 Touch  (rewind) to go to the point you want to view.



- 4 Touch  (play) to start playback.

 
To adjust the volume

- 1 Touch .
- 2 Touch  [VOLUME].
If the item is not displayed on the screen, touch . If you cannot find it, touch  [MENU], and select it from the  (STANDARD SET) menu.
- 3 Adjust the volume by touching  (decrease) /  (increase), then touch .



To stop playback

Touch  (stop).

To pause

Touch  (pause) during playback. Touch it again to restart the playback. Playback stops automatically when the pause mode continues for more than 5 minutes.

 
To fast forward or rewind

Touch  (fast forward) or  (rewind) in stop mode.

To review movies on the viewfinder

Close the LCD panel. Then, extend the viewfinder.

Indicators displayed during tape playback

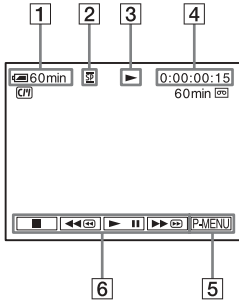

- 1 Remaining battery
- 2 Recording mode (SP or LP)
- 3 Tape transport indicator
- 4 Time code (hour: minute: second: frame) or tape counter (hour: minute: second)
- 5 Personal Menu button (p. 56)
- 6 Video operation buttons

Playing back in various modes

To fast forward or rewind during playback – Picture search

Keep on touching (fast forward) or (rewind) during playback.

To resume normal playback, release the button.

To view the picture while fast forwarding or rewinding – Skip scan

Touch (fast forward) or (rewind) while fast forwarding or rewinding the tape.

To resume fast forwarding or rewinding, release the button.

To play back in various modes

You will not hear the recorded sound. Also, you may see mosaic-like images of the previously played picture remaining on the screen.

- 1 During playback or playback pause, touch .

- 2 Touch .

If the item is not displayed on the screen, touch /. If you cannot find it, touch [MENU], and select it from the (EDIT/PLAY) menu.

- 3 Select a playback mode.

To return to the normal playback mode, touch (pause) twice (once from frame playback).

To	Touch
change the playback direction*	(frame) during playback.
play back slowly**	(slow) during playback. To reverse direction 1 Touch (frame). 2 (slow).
play back 2 times faster (double speed)	(double speed) during playback. To reverse direction 1 Touch (frame). 2 (double speed).
play back frame by frame	(frame) during playback pause. To reverse direction, touch (frame) again during frame playback.


*Horizontal lines may appear at the top, bottom, or in the center of the screen. This is not a malfunction.

**Pictures output from the DV Interface cannot be played back smoothly in slow mode.


- 4 Touch , then .

Viewing recordings with added effects – Digital effect

You can apply [STILL], [FLASH], [LUMI. KEY], and [TRAIL] effects when viewing recorded pictures. For details on each effect, see page 40.

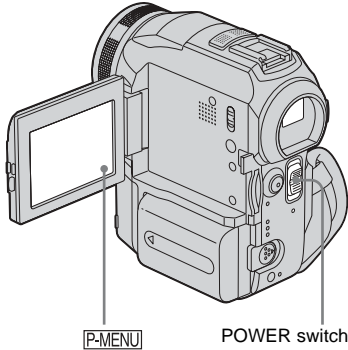

Note

- You cannot add effects to externally input pictures. Also, you cannot output pictures edited with digital effects via the  DV Interface.




Tip

 
 
- You cannot record the pictures edited using special effects on the tape in your camcorder, but you can copy them to a “Memory Stick” (p. 89) or another tape (p. 87).


1 Slide the **POWER** switch repeatedly to select the **PLAY/EDIT** mode.

2 Touch **P-MENU** while the picture you want to add the effect to is displayed.

3 Touch **[MENU]**.

4 Select  (**PICT. APPLI.**), then **[D. EFFECT]** by touching / and touch **[OK]**.

5 Select an effect, then adjust the effect by touching  (decrease)/ (increase).

6 Touch **[OK]** twice, then **[X]**.
 appears.


To cancel Digital effect

Follow steps 2 to 4, then select [OFF] in step 5.


Viewing recordings on a "Memory Stick"



You can view pictures one at a time on the screen. When you have a lot of pictures, you can list them to search through them easily. Make sure you have a recorded "Memory Stick" inserted into your camcorder. When you want to play back a recorded picture on your TV, see page 53.

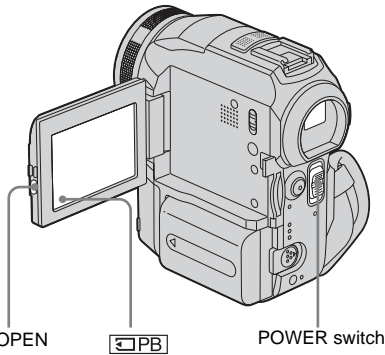


- 1 Press **OPEN** and open the LCD panel.
- 2 Slide the **POWER** switch repeatedly to select the **PLAY/EDIT** mode.

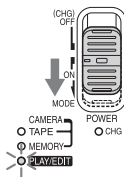

Slide the **POWER** switch while pressing the green button.


- 3 Touch **[PB]**.

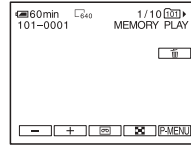

The most recently recorded picture appears on the screen.

- 4 Touch **[←]** (previous) / **[→]** (next) to select a picture.

When you view a movie, touch **[MPEG▶▶]** when the selected movie appears on the screen.

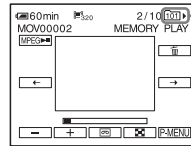

Selected playback folder

To adjust the volume of movies

- 1 Touch **[P-MENU]**.
- 2 Touch **[VOLUME]**.
If the item is not displayed on the screen, touch **[↑]** / **[↓]**. If you cannot find it, touch **[MENU]**, and select it from the **[STANDARD SET]** menu.
- 3 Adjust the volume by touching **[−]** (decrease) / **[+]** (increase), then touch **[OK]**.


To stop or pause movies

Touch **[MPEG▶▶]**. Touch it again to restart the playback.

To delete pictures

See "Deleting recorded pictures" (p. 99).

Indicators displayed during “Memory Stick” playback

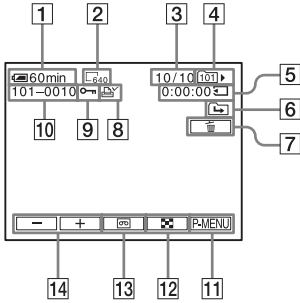

- 1 **Remaining battery**
- 2 **Still image size**
- 3 **Picture number/Total number of recorded pictures in the current playback folder**
- 4 **Folder name**
- 5 **Playing time (movies only)**
- 6 **Previous/next folder indicator**
The following indicators appear when the first or last picture of the current folder is displayed and when there are multiple folders on the same “Memory Stick.”
 - ← : Touch **[-]** to move to the previous folder.
 - : Touch **[+]** to move to the next folder.
 - ↔ : Touch **[-]/[+]** to move to either the previous or the next folder.
- 7 **Image delete button**
- 8 **Print mark (still images only) (p. 102)**
- 9 **Image protection mark (p. 101)**
- 10 **Data file name**
- 11 **Personal Menu button**
- 12 **Index screen display button**
- 13 **Tape playback select button**
- 14 **Picture select button**

Note

- Folders that you have created on a computer, renamed folders, and modified pictures may not appear on the screen.

Tip

- Once you record a picture in a folder, the same folder will be set as the default folder for playback. You can select a playback folder in the menu (p. 67).


Playing back in various modes from a “Memory Stick”

Using the screen in step 4 in “Viewing recordings on a “Memory Stick”” (p. 48), the following operations are available.

To search for a scene in a movie

You can divide a movie into a maximum of 60 scenes in order to start playback from a particular scene. The number of scenes you can divide the movie into depends on the length of the movie.


- 1 Touch **←** (previous)/**→** (next) to select a scene from which to start the playback.

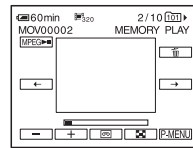

- 2 Touch **[MPEG]**.

To display 6 pictures at a time, including movies – Index Screen

Touch **[INDEX]**.

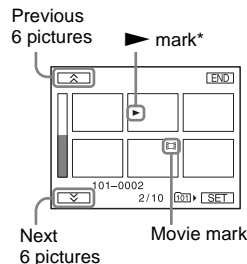






- * The picture displayed before switching to the index screen.

→ continued


To return to the single display mode, touch the picture that you want to display.

To view pictures in other folders in the index screen

- 1 Touch .
- 2 Touch .
- 3 Touch [PB FOLDER].
- 4 Select a folder with /, then touch .


Various playback functions

You can magnify a small subject in a recording and display it on the screen. You can also display the recorded date and the name of the folder in which the picture is recorded.

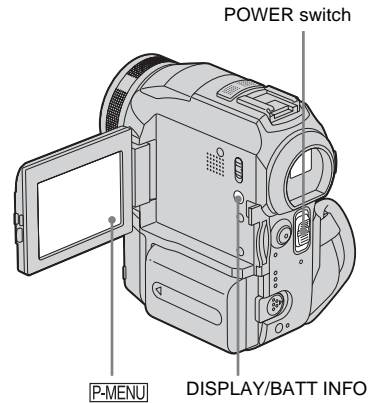


Magnifying pictures – Tape playback zoom/Memory playback zoom

You can magnify movies recorded on a tape or still images stored on a “Memory Stick.”


- 1 Slide the **POWER** switch repeatedly to select the **PLAY/EDIT** mode.
- 2 Touch .
- 3 Touch [MENU].

4 Select  (PICT. APPL.), then [PB ZOOM] by touching / and touch .

Tape playback zoom screen

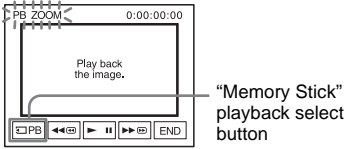

Memory playback button

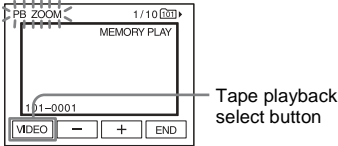

- If you press DISPLAY/BATT INFO during the playback zoom operation, the frame will disappear.


Displaying the screen indicators

You can choose to display the time code, tape counter, and other information on the screen.

Press DISPLAY/BATT INFO.

The indicator switches on or off as you press the button.

Tip

- You can display the screen indicators during playback on a TV. Select the  (STANDARD SET) menu, [DISPLAY], then [V-OUT/PANEL] (p. 81).

5 Play back the still picture or movie, and touch the screen at the point you want to magnify within the displayed frame.

The picture is magnified approximately twice the original size and centered at the point you touched on the screen. When you touch another place, the point you touched becomes the center.


6 Adjust the zoom ratio using the power zoom lever.

You can select the zoom ratio from approximately 1.1 to 5 times the original size. Touch W to decrease, or T to increase the ratio.

Displaying the date/time and camera settings data – Data code

During playback, you can view the date/time data and the camera settings data ([CAMERA DATA]) that are automatically recorded while recording pictures on a tape or a “Memory Stick.”


1 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

2 Touch  during playback or playback pause.

To cancel the operation

Touch [END].

Note


- You cannot magnify externally input pictures. Also, you cannot output the magnified pictures via the  DV Interface.


Tips

- You can save the enlarged picture as a still image on a “Memory Stick,” by pressing PHOTO. The image will be recorded at an image size of 640 × 480.


→ continued

3 Touch [DATA CODE].

If the item is not displayed on the screen, touch \uparrow/\downarrow . If you cannot find it, touch [MENU], and select it from the  (STANDARD SET) menu.

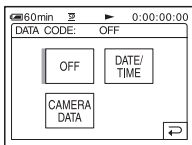

4 Select [CAMERA DATA] or [DATE/TIME] then touch [OK].

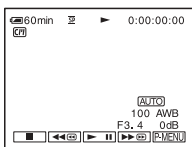


To hide the date/time/the camera settings data

Follow steps 2 and 3, and select [OFF] in step 4.

Camera settings data display

In the date/time data display, the date and time is displayed in the same area.

If you record the picture without setting the clock, [--- -- ----] and [--:--:--] will appear.

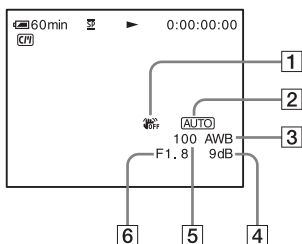

- 1 SteadyShot off*
- 2 Exposure*
- 3 White balance*
- 4 Gain*

5 Shutter speed


6 Aperture value

* Appears only during tape playback

Note


- Camera setting data do not appear when movies on a “Memory Stick” are played back.

Tips

- Exposure adjustment value (0EV) appears when a “Memory Stick” is played back.
-  appears for the picture recorded using flash.

Playing the picture on a TV

Connect your camcorder to a TV using the supplied A/V connecting cable as shown in the following illustration. Connect the supplied AC Adaptor to the wall socket for the power supply (p. 13). Refer also to the instruction manuals supplied with the devices to be connected. To copy to another tape, see page 87.

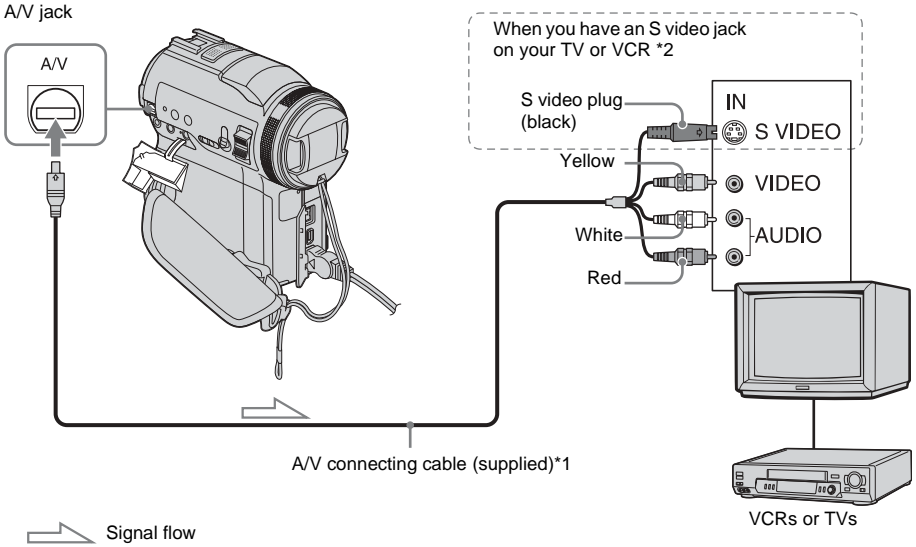

Playback

- *1 The supplied A/V connecting cable has a video plug and an S video plug for the video connection.
- *2 This connection produces higher quality DV format pictures. When there is an S video jack on the device to be connected, connect the S video plug to that jack instead of using the yellow video plug. The audio will not be output when you connect with the S video plug alone.

When your TV is connected to a VCR

Connect your camcorder to the LINE IN input on the VCR using the A/V connecting cable. Set the input selector on the VCR to LINE.


When your TV is monaural (When your TV has only one audio input jack)

Connect the yellow plug of the A/V connecting cable to the video input jack and connect the white or the red plug to the audio input jack of your TV or VCR.

When you want to play the sound in monaural mode, use a connecting cable (optional) for that purpose.


Locating a scene on a tape for playback

Searching quickly for a desired scene – Zero set memory

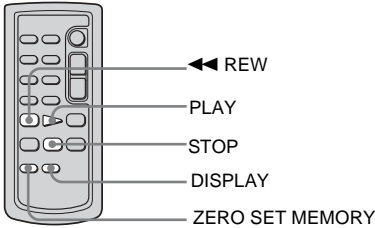


- 1 **During playback, press ZERO SET MEMORY on the Remote Commander at the point you want to locate later on.**

The tape counter is reset to “0:00:00” and **→0←** appears on the screen.

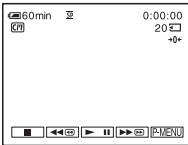

If the tape counter is not displayed, press DISPLAY on the Remote Commander.

- 2 Press  (stop) when you want to stop playback.

- 3 Press **◀◀ REW.**

The tape stops automatically when the tape counter reaches “0:00:00.”

- 4 Press **PLAY.**

The playback starts from the point designated “0:00:00” on the tape counter.

To cancel the operation


Press ZERO SET MEMORY on the Remote Commander again.

Notes

- There may be a discrepancy of several seconds between the time code and the tape counter.
- Zero set memory will not function correctly if there is a blank section between recorded sections on the tape.

Searching for a scene using Cassette Memory – Title search

You can locate a scene where you have added a title (p. 74).

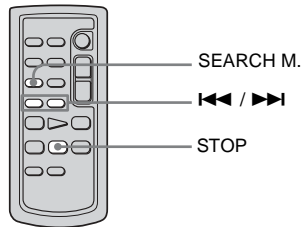


- 1 **Slide the POWER switch repeatedly to select the PLAY/EDIT mode.**

- 2 **Press SEARCH M. on the Remote Commander repeatedly to select [TITLE SEARCH].**

- 3 Press **◀◀** (previous)/**▶▶** (next) on the Remote Commander to select a title that you want to play.

Playback starts automatically from the selected title.

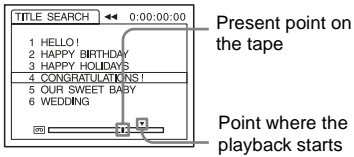

To cancel the operation


Press STOP on the Remote Commander.

Notes

- You cannot use Title search when [SEARCH] is set to [OFF] on the [EDIT/PLAY] menu (it is set to [ON] by default) (p. 74).
- The Title search will not function correctly when there is a blank section between recorded sections on the tape.

Searching for a scene by date of recording – Date search

When you are using a cassette with Cassette Memory, you can locate a scene by the recording date ([SEARCH] is set to [ON] by default). When you are using a cassette that does not have Cassette Memory, you can locate the point where the recording date changes.

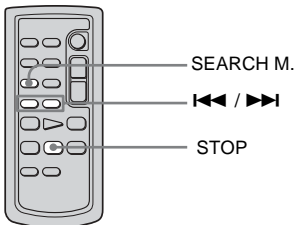


- 1 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

- 2 Press **SEARCH M.** on the Remote Commander repeatedly to select [DATE SEARCH].

- 3 Press **◀◀** (previous)/**▶▶** (next) on the Remote Commander to select a recording date.

When your cassette has Cassette Memory

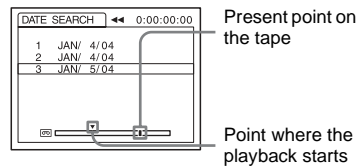

Playback starts automatically from the beginning of the selected date.

When your cassette does not have Cassette Memory

Playback starts automatically from the point where the date changes.

Each time you press the button, the previous or the next date will be searched for and displayed.

To cancel the operation

Press STOP on the Remote Commander.

Notes


- If one day's recording is less than 2 minutes, your camcorder may not accurately find the point where the recording date changes.
- The Date search will not function correctly when there is a blank section between recorded sections on the tape.
- You can record date/time data for up to 6 days. When you have recorded for more than 7 days on a tape, locate the date without using the Cassette Memory. To turn off the Cassette Memory, select the [EDIT/PLAY] menu, [SEARCH], and then [OFF] (p. 74).

►Advanced operations

Using the Menu

Selecting menu items

You can change various settings or make detailed adjustments using the menu items displayed on the screen.

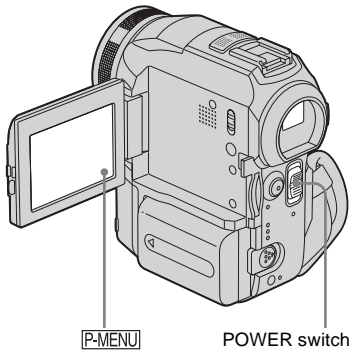


1 Turn on the power (p. 16).


2 Touch [P-MENU].

The Personal Menu appears. Items that are used often are displayed as short-cuts. The available menu items vary depending on the power mode of your camcorder.

Example: PLAY/EDIT mode's Personal Menu

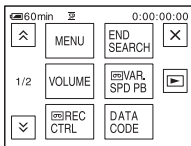


3 Touch [MENU] to display the menu index screen.

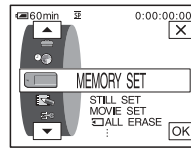

4 Select the icon of the desired menu with ▲/▼, then touch [OK].


- CAMERA SET (p. 58)
- MEMORY SET (p. 64)
- PICT. APPLI. (p. 68)
- EDIT/PLAY (p. 73)
- STANDARD SET (p. 77)
- TIME/LANGU. (p. 82)

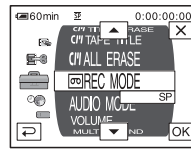




5 Select the desired item with ▲/▼, then touch [OK].


You can also touch the item directly to select it.

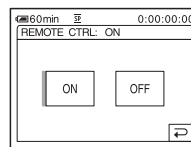You can scroll and see all items. The available menu items vary depending on the power mode of your camcorder. Unavailable items will not be displayed.




6 Select the desired setting.

 changes to . If you decide not to change the setting, touch  to return to the previous screen.

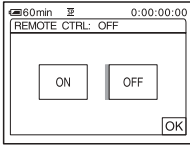



7 Touch , then to hide the menu screen.



You can also touch  (return) to go back a screen each time you touch the button.

To use the short-cuts of the Personal Menu

You can customize the short-cuts (p. 83).

- 1 Touch .
- 2 Touch the desired item.
- 3 Select the desired setting, then touch .

Tips


- When the PLAY/EDIT mode is selected, touch  on the screen displayed after step 1 to display the video operation screen. Touch  to return to the previous screen.
- It is convenient if the items you often use appear as short-cuts on the Personal Menu. To customize the Personal Menu, see page 83.

Using the (CAMERA SET) menu

– PROGRAM AE/WHITE BAL./16:9 WIDE, etc.

You can select items listed below on the CAMERA SET menu. To select items, see “Selecting menu items” (p. 56).

The default settings are marked with ▷. The indicators in parentheses appear when the setting is selected. The settings you can adjust vary depending on the power mode of your camcorder. Only the items that can be operated in the selected mode are displayed.

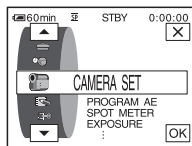

PROGRAM AE

You can record pictures easily in a situation that requires various techniques by selecting the following settings.

▷ AUTO	Select this when not using PROGRAM AE.	
SPOTLIGHT* (spotlight) ()	Select to prevent people's faces from appearing excessively white when subjects are lit by strong light, such as in a theater or at a wedding.	
PORTRAIT (soft portrait) ()	Select to bring out the subject such as people or flowers while creating a soft background.	
SPORTS* (sports lesson) ()	Select to minimize shake when shooting fast-moving subjects such as in tennis or golf.	
BEACH&SKI* (beach & ski) ()	Select to prevent people's faces from appearing dark in strong light or reflected light, such as at a beach in midsummer or on a ski slope.	
SUNSET&MOON** (sunset & moon) ()	Select to maintain the atmosphere of situations such as sunsets, general night views, fireworks, and neon signs.	
LANDSCAPE** (landscape) ()	Select when shooting distant subjects such as mountains. This setting also prevents your camcorder from focusing on glass or metal mesh in windows that comes in between the camcorder and the subject.	

- * Your camcorder is adjusted to focus only on subjects in the middle to far distance.
- **Your camcorder is adjusted to focus only on distant subjects.

SPOT METER

See page 33 for details.

EXPOSURE

See page 33 for details.

WHITE BAL.

You can adjust the color balance to the brightness of the recording environment.

▷ AUTO	Select when you want to record with the white balance adjusted automatically.
HOLD (HOLD)	Select when recording a single-colored subject or background.
OUTDOOR (☀)	<ul style="list-style-type: none"> • Select when recording a sunset/sunrise, general night views, neon signs, or fireworks. • Select when under daylight fluorescent lamps.
INDOOR (💡)	<ul style="list-style-type: none"> • Select when recording at a party or in studios where lighting conditions change quickly. • Select when under video lamps such as those in a studio, under sodium lamps, mercury lamps or warm white fluorescent lamps.

🔊 Note

- The setting returns to [AUTO] when you disconnect the power source from your camcorder for more than 5 minutes.

💡 Tips

- For better color balance adjustment when [WHITE BAL.] is set to [AUTO], aim your camcorder at a nearby white object for about 10 seconds after setting the POWER switch to CAMERA-TAPE when:
 - You remove the battery pack for replacement.
 - You bring your camcorder outdoors from inside the house while using fixed exposure, or bring your camcorder in from outside.
- Set [WHITE BAL.] to [AUTO] and reset it to [HOLD] after few seconds when:
 - You changed the [PROGRAM AE] settings when [WHITE BAL.] is set to [HOLD].
 - You brought your camcorder outdoors from inside the house, or vice versa.
- Set [WHITE BAL.] to [AUTO] or [HOLD] under white or cool white fluorescent lamps.

→ continued

SHARPNESS

You can adjust the sharpness of the image outline with /. appears when the sharpness is anything other than the default setting.



AUTO SHUTTER

▷ON	Select to automatically activate the electronic shutter to adjust the shutter speed when recording in bright conditions.
OFF	Select when recording without using the electronic shutter.

SPOT FOCUS

See page 35 for details.

EXP. FOCUS

When you are recording pictures on a “Memory Stick” while focusing manually, you can see if the focus is correctly adjusted by magnifying the center of the picture to twice its original size (p. 36).

▷OFF	Select to deactivate expanded focus.
ON	Select to activate expanded focus.

FLASH SET

Note that these settings will not function with external flashes that do not support the following settings.

FLASH LEVEL

You can select an appropriate flash setting for recording with an external flash (optional).

HIGH (⚡+)	Select to make the flash level higher than the standard setting.
▷NORMAL (⚡)	Standard setting.
LOW (⚡-)	Select to make the flash level lower than the standard setting.

Note

- The setting returns to [NORMAL] when you disconnect the power source from your camcorder for more than 5 minutes.

REDEYE REDUC

▷OFF	Select to disable the red-eye reduction.
ON (👁)	Select to activate the flash before recording to prevent red-eye (p. 30).

SUPER NS

See page 34 for details.

NS LIGHT

When using the NightShot function to record, you can record clearer pictures by using the NightShot Light to emit infrared rays (invisible). The maximum shooting distance using the NightShot Light is about 3 meters (10 feet).

▷ON	Select to use the NightShot Light.
OFF	Select to disable the NightShot Light.

🔧 Note

- Attaching a conversion lens (optional) may obstruct the infrared rays.

HOLOGRAM AF

When you are recording a still image in a dark place, you can use supplementary light for focusing on the subject. While **HOLOGRAM AF** is displayed on the screen, press PHOTO. The supplementary light is emitted during the focus adjustment (p. 37).

▷AUTO	Select to use HOLOGRAM AF when it is hard to focus on a subject in dark places.
OFF	Select to disable supplementary light.

COLOR SLOW S

See page 35 for details.


SELF-TIMER

See page 26, 31 for details.

→ *continued*

DIGITAL ZOOM

You can select the maximum zoom level in case you want to zoom to a level greater than 10 times while recording on a tape. Note that the image quality decreases when you are using the digital zoom. This function is useful when recording enlarged pictures of a distant subject, such as a bird.

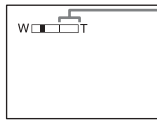

The right side of the bar shows the digital zooming zone.
The zooming zone appears when you select the zooming level.

▷OFF	Select to deactivate the digital zoom. Up to 10 times zoom is performed optically.
20 ×	Select to activate the digital zoom. 10 times through 20 times zoom is performed digitally.
120 ×	Select to activate the digital zoom. 10 times through 120 times zoom is performed digitally.

16:9 WIDE

You can record a 16:9 wide picture on the tape to watch on a 16:9 wide-screen TV ([16:9WIDE] mode).

With this function [ON], your camcorder offers even wider angles when you move the power zoom lever to the “W” side than recording in [OFF].

When you connect your camcorder to the S video input jack of a TV compatible with the ID-1/ID-2 system and play the tape, the TV switches to full mode automatically.

Refer also to the manuals supplied with your TV.

When viewed on the LCD screen/viewfinder



When viewed on a 16:9 wide screen TV*



When viewed on a standard TV**



* Picture appears in full screen when the wide-screen TV switches to full mode.

** Played in 4:3 mode. When you play a picture in the wide mode, it appears as you have seen on the LCD screen or in the viewfinder.

▷OFF	Standard setting (to record pictures to play back on a 4:3 TV). The recorded picture will not be wide.
ON (16:9)	Select to record a picture to be played back on a 16:9 wide TV. The recorded picture will be played in full mode when you connect to your TV using an S (S1) video input jack compatible with ID-1/ID-2 systems.

Tips

- The ID-1 system sends aspect ratio information (16:9, 4:3, or letter box) by inserting signals between video signals.
- The ID-2 system sends a copyright protection signal with the ID-1 signals inserted between video signals in an analog connection.
- S1 video sends information with the standard S video signal to select wide mode automatically.

STEADYSHOT

You can select this function to compensate for camera-shake.

▷ON	Standard setting (enable the SteadyShot function).
OFF (OFF)	Select to deactivate the SteadyShot function. Select to shoot a stationary subject with a tripod, or when using a conversion lens (optional). Natural pictures are produced.

PROGRES. REC


See page 27 for details.

Using the (MEMORY SET) menu

– BURST/QUALITY/IMAGE SIZE/ALL ERASE/NEW FOLDER, etc.

You can select items listed below on the [MEMORY SET] menu. To select items, see “Selecting menu items” (p. 56).


The default settings are marked with ▷. The indicators in parentheses appear when the setting is selected. The settings you can adjust vary depending on the power mode of your camcorder. Only the items that can be operated in the selected mode are displayed.

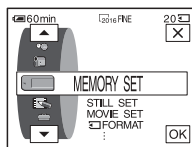




STILL SET

■ BURST

You can record several still images one after another. The number of images you can record changes with the image size and space available on the “Memory Stick” you are using.

- 1 Select [NORMAL], [HIGH SPEED], or [EXP. BRKTG], and then touch .

▷ OFF	Select when not recording continuously.
NORMAL ()	Select to record from 3 (2016 × 1512 image size) to 21 (640 × 480 image size) images continuously at approximately 0.5-second intervals.
HIGH SPEED ()	Select to record up to 32 images (640 × 480 image size) continuously at approximately 0.07-second intervals.
EXP. BRKTG ()	Select to record 3 images consecutively with different exposures at approximately 0.5-second intervals. You can compare the 3 images and select an image recorded in the best exposure.

- 2 Touch .
- 3 Press PHOTO fully.

In the [NORMAL] or [HIGH SPEED] setting, the maximum number of images are recorded as long as you are pressing PHOTO fully.


 
⚙ Notes

- The flash will not function while you are recording images continuously.
- The maximum number of images will be recorded in the self-timer mode or when you are operating with the Remote Commander.
- The images may flicker or discolor when you select [HIGH SPEED].
- [EXP. BRKTG] will not function when you have space for fewer than 3 images remaining on the “Memory Stick.”
- When it is hard to see the difference between the images recorded in [EXP. BRKTG] mode on the LCD screen, connect your camcorder to your TV or a computer.

■ QUALITY



▷FINE (FINE)	Select to record still images with the fine image quality (compressed to about 1/4).
STANDARD (STD)	Select to record still images with the standard image quality (compressed to about 1/10).

■ IMAGE SIZE

▷2016 × 1512 ()	Select to record still images for playing on a large screen. This setting can be selected only in the CAMERA-MEMORY mode.
640 × 480 ()	Select to record many still images or for playing on a small screen.

MOVIE SET

IMAGE SIZE

▷320 × 240 ()	Select to record movies for playing on a large screen, or to record clearer pictures.
160 × 112 ()	Select to record for longer time.

REMAINING

▷AUTO	Select to display the remaining capacity of the “Memory Stick” in the following cases: <ul style="list-style-type: none">• After inserting a “Memory Stick” with the POWER switch in the CAMERA-MEMORY mode (for about 5 seconds).• When the remaining capacity of the “Memory Stick” is less than 2 minutes after the CAMERA-MEMORY mode is selected.• At the starting or ending point of the movie (for approximately 5 seconds).
ON	Select to always display the remaining capacity of the “Memory Stick.”

ALL ERASE

You can delete all the pictures on a “Memory Stick” that are not write-protected. To delete pictures one by one, see page 99.

1 Select [ALL FILES] or [CURRNT FOLDER].

ALL FILES	Select to delete all the images on the “Memory Stick.”
CURRNT FOLDER	Select to delete all the images in the selected playback folder.


2 Touch [YES] twice.

To cancel deletion of all pictures, select [NO].

3 Touch .

→continued

Notes

- The folder will not be deleted even when you delete all the pictures in the folder.
- Do not move the POWER switch or press any buttons while [ Erasing all data...] is displayed on the screen.

FORMAT

The supplied or newly purchased “Memory Stick” has been formatted at the factory, and does not require formatting.


For details on the “Memory Stick,” see page 117.

1 Touch [YES] twice.

To cancel formatting, select [NO].

2 Touch [].

Notes

- Do not do any of the following while [ Formatting ...] is displayed:
 - Move the POWER switch to select other power modes.
 - Operate any buttons.
 - Eject the “Memory Stick.”
- Formatting erases everything on the “Memory Stick” including protected image data and newly created folders.

FILE NO.

▷SERIES	Select to assign file numbers in sequence even if the “Memory Stick” is replaced with another one. The file number is reset when a new folder is created or the recording folder is replaced with another.
RESET	Select to reset the file number to 0001 each time the “Memory Stick” is changed.

NEW FOLDER

You can create a new folder (102MSDCF to 999MSDCF) on a “Memory Stick.” When a folder is full (a maximum of 9999 images are stored) a new folder is automatically created.

1 Touch [YES].

A newly created folder will be numbered in sequence after the last folder number.

To cancel creation, select [NO].

2 Touch [].

Notes

- You cannot delete the created folders using your camcorder. You will have to format the “Memory Stick” (p. 66), or delete them using your computer.
- The number of pictures that can be recorded on a “Memory Stick” decreases as the number of folders increases on the “Memory Stick.”

REC FOLDER

As the default setting, pictures are saved in the 101MSDCF folder. You can select a folder to save your pictures. Create new folders from the [NEW FOLDER] menu, then select the folder to be used for recording with ▲/▼ and touch [OK]. When you have a lot of pictures, you can search for the desired picture easily when you sort them in folders.

PB FOLDER


Select the playback folder with ▲/▼, then touch [OK].

Using the (PICT. APPLI.) menu – PICT.

EFFECT/SLIDE SHOW/FRAME REC/SMTH INT. REC, etc.

You can select items listed below on the PICT. APPLI. menu. To select items, see “Selecting menu items” (p. 56).

The default settings are marked with ▷. The indicators in parentheses appear when the setting is selected. The settings you can adjust vary depending on the power mode of your camcorder. Only the items that can be operated in the selected mode are displayed.

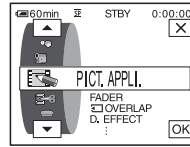

FADER

See page 38 for details.


OVERLAP



See page 39 for details.



D. EFFECT

See page 40 and 47 for details.

PICT. EFFECT

You can add special effects (such as films) to a picture before or after recording on a tape.  appears when the effect is selected.

▷OFF	Select when not using the Picture effect setting.	
NEG.ART	Select to record/play the picture with the color and brightness of the picture reversed.	
SEPIA	Select to record/play the picture appearing in sepia.	
B&W	Select to record/play the picture appearing in monochrome (black-and-white).	
SOLARIZE	Select to record/play the picture looking like an illustration with strong contrast.	

PASTEL	Select to record the picture looking like a pale pastel drawing. (This effect is not available during playback.)	
MOSAIC	Select to record picture appearing mosaic-patterned. (This effect is not available during playback.)	

Note

- You cannot add effects to externally input pictures. Also, you cannot output pictures edited with Picture effects via the DV Interface.

Tip

- You can copy pictures edited using picture effects to a “Memory Stick” (p. 89) or to another tape (p. 87).

MEMORY MIX

See page 41 for details.

PB ZOOM

See page 50 for details.

SLIDE SHOW

You can play back the images stored in a “Memory Stick” (or a selected playback folder) in sequence (slide show).

- 1 Touch [SET].
- 2 Touch [PB FOLDER].
- 3 Select [ALL FILES] or [CURRNT FOLDER], then touch [OK].

ALL FILES (Ⓐ)	Select to execute a slide show by playing back all the images on the “Memory Stick.”
---------------	--

CURRNT FOLDER (T)	Select to execute a slide show by playing back all the images in the current playback folder.
-------------------	---

- 4 Touch [REPEAT].
- 5 Touch [ON] or [OFF], then [OK].

▷ON (↻)	Select to repeat the slide show.
---------	----------------------------------

OFF	Select to execute the slide show only once.
-----	---

 

 

- 6 Touch [END].
- 7 Touch [START].

Your camcorder plays back the images recorded on the “Memory Stick” in sequence.

→ continued

To cancel the slide show, touch [END]. To pause, touch [PAUSE].

Tips

- You can select the first picture for the slide show by touching  /  before touching [START].
- If movies are played in the slide show, you can adjust the volume by touching  (decrease) /  (increase).


RESIZE


See page 100 for details.

FRAME REC

You can record pictures with a stop-motion animated effect by alternately frame recording and then moving the subject a little. Operate your camcorder using the Remote Commander to prevent camera shake.

▷OFF Select to record in the standard recording mode.

ON  Select to record pictures using the FRAME REC function.

1 Select [ON], then touch .

2 Touch .

3 Press START/STOP.

A picture (approximately 6 frames) is recorded, and your camcorder enters the standby mode.

 
4 Move the subject and repeat step 3.

Notes

- When you use frame recording continuously, the remaining tape time will not be indicated correctly.
- The last scene will be longer than other scenes.

SMTH INT. REC


This function is useful to observe the movement of clouds or the changes of daylight. Your camcorder will shoot 1 frame of the picture at a selected interval and keep them in memory until it has stored several frames. Then those frames are recorded on the tape at one time. These pictures appear smooth when played back. Connect your camcorder to the wall outlet using the supplied AC Adaptor during the operation.



a: Shooting time


b: Interval

1 Touch .

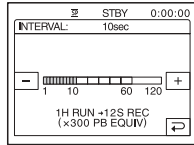

- 2 Select the desired interval by touching **[−]/[+]**, then touch **[OK]**.
You can select from 1 to 120 seconds for the interval.
- 3 Touch **[REC START]**.

Recording starts and ● changes to red. When your camcorder has shot 6 frames, it records them on the tape, after performing the END SEARCH function depending on the interval length. (During the END SEARCH function, pictures may disappear once or previously recorded pictures may appear.)

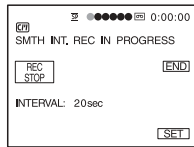

To interrupt smooth interval recording, touch **[REC STOP]**. To resume touch **[REC START]**.

To cancel smooth interval recording, touch **[REC STOP]**, then **[END]**.

Do not turn off the power or disconnect the power source while a message is displayed on the screen.

⚡ Notes

- The camcorder will shoot several frames for the first and last shots of the Smooth interval recording.
- You cannot use the Smooth interval recording with:
 - MEMORY MIX function
 - Memory overlap
- Smooth interval recording is released when approximately 12 hours have elapsed after shooting has begun.
- Sounds are not recorded.
- The last few frames may not be recorded if the battery or tape has run out.
- There may be discrepancies in the interval.

 
💡 Tips

- If you adjust the focus manually, you may be able to record clear pictures even if the light changes (p. 36).
- You can silence the beeps during recording (p. 80).

→ *continued*

INT. REC-STL

This function is useful to observe the movement of clouds or the change of daylight. Your camcorder will shoot a still image at a selected interval and record it on a “Memory Stick.”



a: Shooting time

b: Interval

- 1 Touch **[SET]**.
- 2 Select a desired interval time (1, 5, or 10 minutes), then touch **[OK]**.
- 3 Touch **[ON]**, then touch **[OK]**.

▷OFF To deactivate interval recording.

ON (📷📷) To record still images on a “Memory Stick” in the selected interval.

- 4 Touch **[X]**.
📷📷 flashes.
- 5 Press **PHOTO** fully.
📷📷 stops flashing and the Interval photo recording starts.
To cancel interval photo recording, select **[OFF]** in step 3.

DEMO MODE

When you remove a cassette or “Memory Stick” from your camcorder, and select the CAMERA-TAPE mode, you can view the demonstration in about 10 minutes.

▷ON Select to see an overview of the functions available such as when you are using this camcorder for the first time.

OFF Select when you do not intend to use the DEMO MODE.



🔔 Note

- You can view the demonstration only when the NIGHTSHOT/NIGHTFRAMING switch is set to ● (green).

💡 Tips

- The demonstration will be suspended in situations such as those described below.
 - When you touch the screen during the demonstration. (The demonstration starts again in about 10 minutes.)
 - When a cassette or “Memory Stick” is inserted.
 - When a mode other than CAMERA-TAPE is selected.
- If [A.SHUT OFF] is set to [5 min] when the camcorder is used on the battery pack, the power will be turned off after approximately 5 minutes (p. 81).


Using the (EDIT/PLAY) menu - TITLE/

 TAPE TITLE/ SEARCH, etc.

You can select items listed below on the EDIT/PLAY menu. To select items, see “Selecting menu items” (p. 56).

The default settings are marked with ▷. The settings you can adjust vary depending on the

power mode of your camcorder. Only the items that can be operated in the selected mode are displayed.

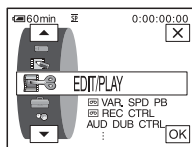

VAR. SPD PB

See page 46 for details.

REC CTRL

See page 87 and 90 for details.

AUD DUB CTRL

See page 98 for details.

PROG. EDIT

OTHER DEVICE Select to make programs and dubbing the selected scenes to a tape on a VCR (p. 91).

MEMORY STICK Select to make programs and dubbing the selected scenes to a “Memory Stick” (p. 95).

REC CTRL

See page 87 and 89 for details.

BURN DVD

When your camcorder is connected to a Sony VAIO series personal computer, you can easily burn the picture recorded on the tape on a DVD using this command. See the supplied “Computer Applications Guide” for details.

→ *continued*

END SEARCH

EXEC	Select to activate the END SEARCH function. The most recently recorded picture is played back for about 5 seconds and then stops automatically.
CANCEL	Select to stop the END SEARCH function.


[M] SEARCH


▷ON	Select when you want to search for a scene, title, etc. using the Cassette Memory (p. 54, 55).
OFF	Select to search without using Cassette Memory.

[M] TITLE

Any titles you have superimposed using this camcorder can only be viewed on a ^{Mini} DV video cassette device with the index titler function. If you superimpose a title, you will be able to search for it using Title search. You can superimpose up to about 20 titles (about 5 letters per title) on a cassette with Cassette Memory. Note, however, that only 11 titles can be recorded when other data (6 date/time data/1 cassette label) is recorded.





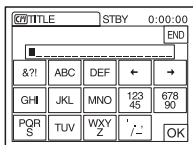

1 Select a desired title from the displayed titles (2 original titles that you have created before and the preset titles that have been stored in your camcorder). You can create original titles (up to 2 types of title of within 20 characters each) in the following procedure.

- 1** Select [CUSTOM 1 ” ”] or [CUSTOM 2 ” ”], then touch .
- 2** Select a desired character. Touch the button repeatedly to select the desired character on the button.



To erase a character: Touch .

To insert a space: Touch .

- 3** Touch  to move  to select the next character, and enter the character in the same manner.
 - 4** When you have finished entering characters, touch .
- 2** Touch .
- 3** Touch  (color),  (position), [SIZE] as necessary to select a desired color, position or size.

Color

white → yellow → violet → red → cyan → green → blue

Position

You can select from 8 to 9 choices.

Size

small ↔ large

(You can only select the small size when you are entering more than 13 characters.)

4 Touch .

5 Touch .


During playback, playback pause, or recording

[TITLE SAVE] is displayed on the screen for about 5 seconds and the title is set.

During recording standby

[TITLE] appears. When you press START/STOP to start recording, [TITLE SAVE] is displayed on the screen for about 5 seconds, and the title is set.

⚡ Notes

- The point you superimposed the title may be detected as an index signal when searching a recording with other video device.
- When you are using your camcorder on the battery pack and do not operate it for 5 minutes, the power automatically goes off as the default setting. If you may take 5 minutes or longer to enter characters, set [A.SHUT OFF] on the  (STANDARD SET) menu to [NEVER] (p. 81). The power will not be turned off. Even though the power goes off, the characters you have entered remain stored in memory. Turn the power back on, then start again from step 1 to continue superimposing the title.

💡 Tip

- To change a created title, select the title in step 1, then touch . Then, reselect the characters again.

 TITL ERASE

- 1 Select the title that you want to delete using** /, **then touch** .
- 2 Confirm the title is the one you want to erase, then touch** .
To cancel the operation, touch .
- 3 Touch** .

 TITL DISP

You can view the title when you playback the picture.


▷ON	Select to display the title when a scene superimposed with a title appears.
OFF	Select when you do not want to display the title.


→ *continued*

TAPE TITLE





You can label a cassette with Cassette Memory (up to 10 letters). The label will be displayed for approximately 5 seconds when you select the CAMERA-TAPE mode and insert a cassette, or when you select the PLAY/EDIT mode. Up to 4 titles will be displayed at the same time if the cassette has titles superimposed.

 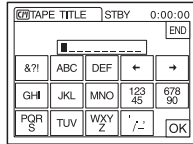- 1 **Select the desired character. Touch the button repeatedly to select the desired character on the button.**


 


To erase a character: Touch .

To insert a space: Touch .


- 2 Touch  to move  to select the next character, and enter the character in the same manner.
- 3 **When you have finished entering characters, touch .**
- 4 Touch .

Tips

- To erase the label you have created, touch  repeatedly to erase the characters, then touch .
- To change the label you have created, insert the cassette into your camcorder and go through the procedure from step 1.

ALL ERASE

You can delete all data such as date, title, and cassette label saved in the Cassette Memory at one time.


- 1 **Touch [YES] twice.**
To cancel deletion of all data, select [NO].
- 2 **Touch .**

Using the (STANDARD SET)

menu –  REC MODE/MULTI-SOUND/AUDIO MIX/USB-CAMERA, etc.

You can select the items listed below on the STANDARD SET menu. To select these items, see “Selecting menu items” (p. 56).

The default settings are marked with ▷. The indicators in parentheses appear when the setting is selected. The settings you can adjust vary depending on the power mode of your camcorder. Only the items that can be operated in the selected mode are displayed.

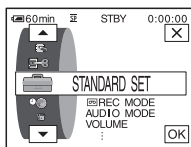

REC MODE

▷SP (<u>SP</u>)	Select to record in the SP (Standard Play) mode on a cassette.
LP (<u>LP</u>)	Select to increase the recording time to 1.5 times the SP mode (Long Play). The use of Sony Excellence/Master mini DV cassette is recommended to get the most out of your camcorder.

Notes

- You cannot add sound on the tape recorded in the LP mode.
- If you record in the LP mode, a mosaic-like noise may appear or sound may be interrupted when you play back the tape on other camcorders or VCRs.
- When you mix recordings in the SP mode and in the LP mode on one tape, the playback picture may be distorted or the time code may not be written properly between the scenes.

AUDIO MODE

▷12BIT	Select to record in the 12-bit mode (2 stereo sounds).
16BIT (<u>16b</u>)	Select to record in the 16-bit mode (1 stereo sound with high quality).

VOLUME

See page 45, 48 for details.

MULTI-SOUND

You can select how to play back audio recorded on a tape in stereo mode.

▷STEREO	Select to play back a stereo tape or dual sound track tape with main and sub sound.
1	Select to play back a stereo tape with the left channel sound or a dual sound track tape with main sound.
2	Select to play back a stereo tape with the right channel sound or a dual sound track tape with sub sound.

→ continued

Notes

- You can playback a dual sound track cassette on this camcorder. However, you cannot record a dual sound track on this camcorder.
- The setting returns to [STEREO] when you disconnect the power source from your camcorder for more than 5 minutes.

AUDIO MIX

You can adjust the audio balance between the originally recorded sound (ST1) and sound added afterwards (ST2) on the tape (p. 99).

Notes

- You cannot adjust sound recorded in 16 bit audio mode.
- Only the originally recorded sound will be heard when you disconnect the power source from your camcorder for more than 5 minutes.

LCD/VF SET

The recorded picture will not be affected by this setting.

LCD BRIGHT

See page 17 for details.

LCD BL LEVEL



You can adjust the brightness of the LCD screen's backlight.

▷NORMAL	Standard brightness.
BRIGHT	Select to brighten the LCD screen.

Notes

- When you connect your camcorder to outside power sources, [BRIGHT] is automatically selected for the setting.
- When you select [BRIGHT], battery life is reduced by about 10 percent during recording.

  LCD COLOR

Touch  /  to adjust the color on the LCD screen.



VF B.LIGHT

You can adjust the brightness of the viewfinder.

▷NORMAL	Standard brightness.
BRIGHT	To brighten the viewfinder screen.

Notes

- When you connect your camcorder to outside power sources, [BRIGHT] is automatically selected for the setting.
- When you select [BRIGHT], battery life is reduced by about 10 percent during recording.

A/V → DV OUT

You can connect a digital device and an analog device to your camcorder and convert the signal transmitted from the connected devices to the appropriate signal on your camcorder.

▷OFF	Select when not using the Digital convert function.
ON (A/V/DV)	To output analog images and sound in digital format using your camcorder. The analog signal input to the A/V jack of your camcorder will be converted and output from the DV Interface of your camcorder. For details, refer to the “Computer Applications Guide.”

VIDEO INPUT

When you connect your camcorder to another device using the supplied A/V connecting cable, set the type of plug you are going to use for the connection.

▷VIDEO	Select to input a video signal.
S VIDEO	Select to input an S video signal.

USB-CAMERA

You can connect a USB cable (supplied) to your camcorder, and view the picture displayed on the screen of your camcorder on your computer (USB Streaming). For details, refer to the “Computer Applications Guide.”

▷OFF	Select to deactivate the USB Streaming function.
USB STREAM	Select to activate the USB Streaming function.

USB-PLY/EDT


You can connect a USB cable (supplied) to your camcorder, and view the picture on the tape or “Memory Stick” in your camcorder on your computer. For details, refer to the “Computer Applications Guide.”

▷STD-USB	Select to view the picture on the “Memory Stick”.
USB STREAM	Select to view the picture on the tape.

DATA CODE

▷OFF	Select not to display date, time and the camera settings data during playback.
DATE/TIME	Select to display the date and time during playback (p. 51).
CAMERA DATA	Select to display the camera settings data during playback (p. 51).

REMAINING

▷AUTO	Select to display the remaining tape indicator for about 8 seconds: <ul style="list-style-type: none">• After you select the CAMERA-TAPE mode with the cassette inserted, and your camcorder calculates the remaining amount of tape.• When you touch  (play/pause).
ON	Select to always display the remaining tape indicator.

REMOTE CTRL

▷ON	Select when using the Remote Commander supplied with your camcorder.
OFF	Select to deactivate the Remote Commander to prevent your camcorder from responding to a command sent by another VCR remote control unit.

Note

- The setting returns to [ON] when you have the power source disconnected from your camcorder for more than 5 minutes.

REC LED

▷ON	Select to turn on the camera recording lamp on the front of your camcorder during recording.
OFF	Select this setting in the following recording situations. The camera recording lamp will not light up during recording. <ul style="list-style-type: none">• When you do not want the subject to be nervous about being recorded.• When you are recording close to the subject.• When the subject reflects the recording lamp.

BEEP

▷MELODY	Select to sound a melody when you start/stop recording or when an unusual condition occurs on your camcorder.
NORMAL	Select to sound a beep instead of the melody.

OFF	Select to cancel the melody, the beep sound, and the shutter sound.
-----	---

DISPLAY



▷LCD PANEL	Select to show the displays such as the time code on the LCD screen and in the viewfinder.
------------	--


V-OUT/PANEL	Select to show the displays such as the time code on the TV screen, LCD screen, and in the viewfinder.
-------------	--


Note

- You cannot input a signal to your camcorder if you press DISPLAY/BATT INFO while [V-OUT/PANEL] is selected.

MENU ROTATE

You can select the scrolling direction (up or down) of the menu items on the LCD screen when you touch  or .

▷NORMAL	Select to scroll the menu items downwards by touching  .
---------	---

OPPOSITE	Select to scroll the menu items upwards by touching  .
----------	---

A.SHUT OFF

▷5 min	Select to activate the Auto shut off. When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off to prevent the battery from becoming consumed.
--------	---

NEVER	Select to deactivate the Auto shut off.
-------	---


Note

- When you connect your camcorder to the wall socket, [A.SHUT OFF] is automatically set to [NEVER].

Using the (TIME/ LANGU.) menu – CLOCK SET/ WORLD TIME, etc.

You can select items listed below on the TIME/
LANGU. menu. To select items, see “Selecting
menu items” (p. 56).

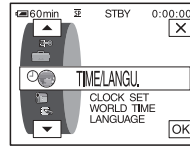

The settings you can adjust vary depending
on the power mode of your camcorder. Only
the items that can be operated in the selected
mode are displayed.



CLOCK SET

You can set the date and time (p. 18).

WORLD TIME

You can adjust the time difference when using your camcorder abroad. Set the
time difference by touching  / , the clock will be adjusted in accordance
with the time difference. If you set the time difference to 0, the clock returns to
the originally set time.

LANGUAGE

You can select or change the language used for the on-screen display (p. 22). You
can select from English, Simplified English, Canadian-French, Latin American
Spanish, Brazilian-Portuguese, Traditional-Chinese, or Korean.

Customizing Personal Menu

You can add frequently used menu items to Personal Menu, or sort them in the order you like (customizing). You can customize the Personal Menu for each power mode of your camcorder.


Adding a menu – Add

You can add frequently used menu items to Personal Menu for easier and faster access.

Note


- You can add up to 28 menu items each for the CAMERA-TAPE, CAMERA-MEMORY, and PLAY/EDIT modes. If you want to add more, you must delete a less important menu item before adding a new menu item (p. 84).

1 Touch [P-MENU].

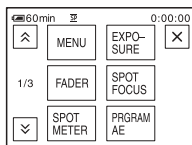


2 Touch [P-MENU SET UP].

If the desired menu is not displayed on the screen, touch \uparrow / \downarrow until the menu is displayed.

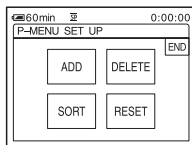


3 Touch [ADD].

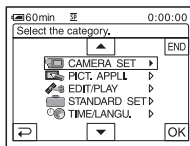


4 Touch \uparrow / \downarrow to select a menu category, then touch [OK].

The available items vary depending on the power mode of the camcorder. Only the available items are displayed.

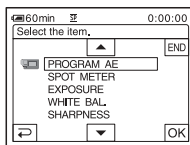

5 Touch \uparrow / \downarrow to select a menu item, then touch [OK].

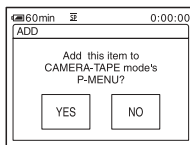

6 Touch [YES].


The menu is added to the end of the list.

7 Touch [X].

→ continued


Deleting menu – Delete

1 Touch [P-MENU].

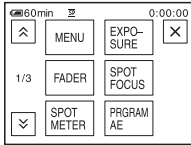


2 Touch [P-MENU SET UP].


If the desired menu is not displayed on the screen, touch / until the menu is displayed.

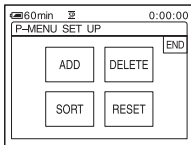

3 Touch [DELETE].

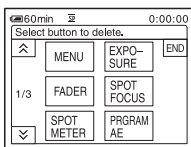

4 Touch the menu that you want to delete.

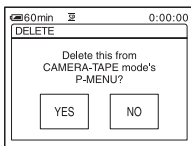

5 Touch [YES].

The selected menu is deleted from Personal Menu.

6 Touch .


ⓘ Note

- You cannot delete [MENU] and [P-MENU SET UP].

Arranging the order of menus displayed on Personal Menu – Sort


You can sort the menus added to Personal Menu in the desired order.

1 Touch [P-MENU].

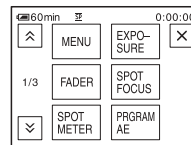


2 Touch [P-MENU SET UP].


If the menu is not displayed on the screen, touch / until the desired menu is displayed.

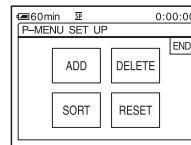


3 Touch [SORT].

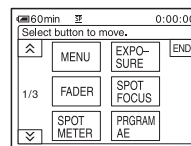

- 4 Touch the menu item you want to move.

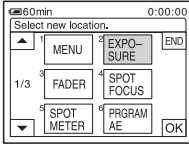

- 5 Touch \uparrow / \downarrow to move the menu item to the desired place.

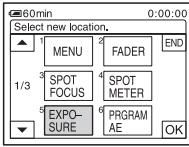

- 6 Touch \square .

To sort more items, repeat steps 4 to 6.

- 7 Touch [END].

- 8 Touch \square .


Note

- You cannot move [P-MENU SET UP].

Initialising the settings – Reset


You can initialize Personal Menu to the default settings after adding or deleting menus.

- 1 Touch [P-MENU].

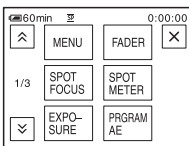


- 2 Touch [P-MENU SET UP].


If the desired menu is not displayed on the screen, touch \uparrow / \downarrow until the menu is displayed.

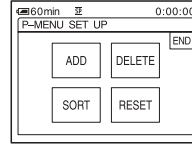

- 3 Touch [RESET].

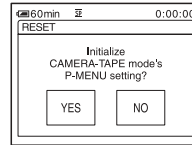

- 4 Touch [YES].

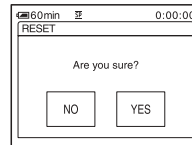

- 5 Touch [YES].


The Personal Menu settings return to the default settings.

To cancel initialization, touch [NO].

- 6 Touch \square .

Connecting to a VCR or TV

You can record the picture from a VCR or TV to a tape or a “Memory Stick” inserted into your camcorder (p. 87). You can also create a copy of the picture recorded on your camcorder on other recording device (p. 87). Connect your camcorder to a TV or VCR as shown in the following illustration.

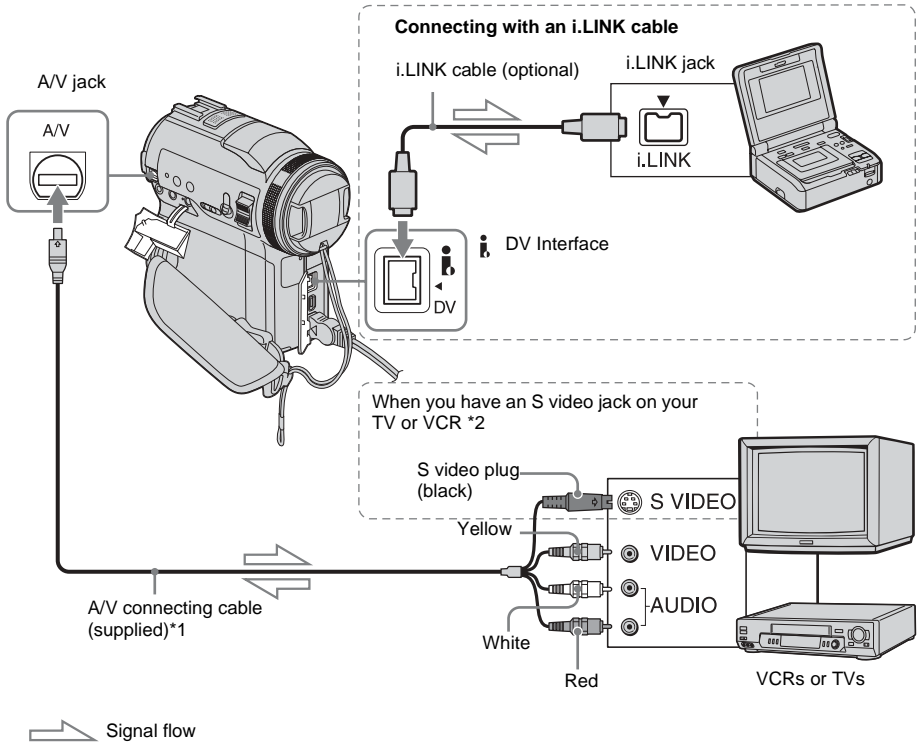

- *1 The supplied A/V connecting cable has a video plug and an S video plug for the video connection.
- *2 This connection produces higher quality DV format pictures. When there is an S video jack on the device to be connected, connect the S video plug to that jack instead of using the yellow video plug. The audio will not be output when you connect with the S video plug alone.

⚡ Notes on A/V jacks

- Use the A/V connecting cable to connect your camcorder to other devices. Before connecting, make sure the [DISPLAY] setting in the [STANDARD SET] menu is set to [LCD PANEL] (the default setting) (p. 81).
- When you are connecting your camcorder to monaural device, connect the yellow plug of the A/

V connecting cable to the video jack, and the red or the white plug to the audio jack on the VCR or the TV.

To use an i.LINK cable for connection

Use an i.LINK cable (optional) to connect your camcorder to other device via the DV Interface. The video and sound signals are transmitted digitally, producing high quality pictures. Note that you cannot record the picture and sound separately. For details, see page 121.

Dubbing to another tape

You can copy and edit the picture played back on your camcorder to other recording devices (such as VCRs).

1 Connect your VCR to your camcorder as a recording device (p. 86).

2 Prepare your VCR for recording.

- Insert a cassette for recording.
- If your VCR has an input selector, set it to the input mode.

3 Prepare your camcorder for playback.



- Insert the recorded cassette.
- Slide the POWER switch to select the PLAY/EDIT mode.

4 Start the playback on your camcorder, and record it on the VCR.

Refer to the operating instructions supplied with your VCR for details.


5 When the dubbing is finished, stop your camcorder and the VCR.

Notes

- When your camcorder is connected to the VCR via the  DV Interface, you cannot record the title, indicators, information for the Cassette Memory, and words entered on the index screen of the “Memory Stick.”
- When dubbing using the A/V connecting cable, press DISPLAY/BATT INFO to hide indicators such as time code (p. 51). Otherwise, they will be recorded on the tape.
- To record the date/time and camera settings data, have them displayed on screen (p. 51).
- Pictures edited with Picture effect ([PICT. EFFECT] p. 68), Digital effect (p. 40, 47), or Playback zoom (p. 50) cannot be output via the  DV Interface.
- When connected using the i.LINK cable, the recorded picture becomes rough when a picture is paused on your camcorder while recording to a VCR.

Recording pictures from a VCR or TV

You can record and edit pictures or TV programs from a VCR or TV on a tape or a “Memory Stick” inserted in your camcorder. You can also record a scene as a still image on a “Memory Stick.”

Insert a cassette or a “Memory Stick” for recording in your camcorder. If you have connected the A/V connecting cable, select the input signal in [VIDEO INPUT] in the  (STANDARD SET) menu (p. 77).

Recording movies



 
 

1 Connect your TV or VCR to your camcorder (p. 86).

2 If you are recording from a VCR, insert a cassette.


 

3 Slide the POWER switch to select the PLAY/EDIT mode.

4 Operate your camcorder to record movies.

When recording on a tape

- 1 Touch .
- 2 Touch  REC CTRL].
If the item is not displayed on the screen, touch / . If you cannot find it, touch [MENU], and select it from the  (EDIT/PLAY) menu (p. 73).
- 3 Touch [REC PAUSE].

When recording on a “Memory Stick”

- 1 Touch .
- 2 Touch [MENU].
- 3 Select the  (EDIT/PLAY) menu, then  REC CTRL].

→ continued


5 Start playing the cassette on your VCR, or select a TV program.

The picture played on the connected device appears on the LCD screen of your camcorder.

6 Touch [REC START] at the point you want to start recording.

7 Stop recording.

When recording on a tape

Touch  (stop) or [REC PAUSE].

When recording on a “Memory Stick”

Touch [REC STOP].

8 Touch  then .

 Tips

- The DV IN indicator appears when you connect your camcorder and other devices via an i.LINK cable. (This indicator may also appear on your TV.)
- When recording movies on a “Memory Stick,” you can skip step 4 and press START/STOP in step 6.

Recording still images

1 Perform steps 1 to 3 in “Recording movies” (p. 87).

2 Play the video, or receive the TV program you want to record.

The pictures on the VCR or TV appear on the screen of your camcorder.

3 Press PHOTO lightly at the scene you want to record. Check the image and press it fully.

The image is not recorded unless you press PHOTO fully. Release it if you do not want

to record the scene, and select other scene as described above.

Dubbing pictures from a tape to a “Memory Stick”

You can record movies (with sound recorded in monaural) or still images (fixed to image size [640 × 480]) on a “Memory Stick.” Make sure you have a recorded tape and a “Memory Stick” inserted into your camcorder.

8 Touch , then .

Notes

- The Data code and titles recorded on the tape cannot be recorded on the “Memory Stick.” The time and date the picture is recorded on the “Memory Stick” will be recorded.
- The sound is recorded in 32kHz monaural.


Tips


- You can also record a movie by pressing START/STOP during tape playback.
- For the recording time of movies, see page 25.

1 Slide the **POWER** switch to select the **PLAY/EDIT** mode.



2 Search and record the scene you want to record.


When recording a still image

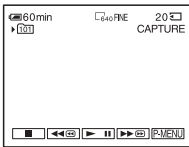
- 1 Touch  (play) to playback the tape.
- 2 Press **PHOTO** lightly at the scene you want to record. Check the image and press it fully.



When recording a movie

- 1 Touch **[P-MENU]**.
- 2 Touch **[MENU]**.
- 3 Select the  (EDIT/PLAY) menu, then **[REC CTRL]**.
- 4 Touch  (play) to playback the tape.

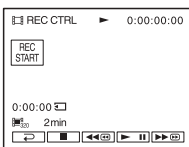




- 5 Touch **[REC START]** at the point you want to start recording.
- 6 Touch **[REC STOP]** at the point you want to stop recording.
- 7 Touch  (stop) to stop tape playback.


 
Dubbing still images from a “Memory Stick” to a tape

You can record still images on a tape. Make sure you have the “Memory Stick” with the images and a tape inserted into your camcorder.

1 Slide the POWER switch to select the PLAY/EDIT mode.




2 Search for the point where you want to start dubbing by touching  (rewind) or  (fast forward), then touch  (stop).

3 Touch .

4 Touch / to select the image you want to dub.

5 Touch .


6 Touch  REC CTRL].

 

If the item is not displayed on the screen, touch /. If you cannot find it, touch [MENU], and select it from the  (EDIT/PLAY) menu.

7 Touch [REC PAUSE].

8 Touch [REC START].

The selected image is dubbed to the tape.

9 Touch  (stop) or [REC PAUSE] when you want to stop recording.

To dub other still images, select images by touching /, then repeat steps 7 to 9.

10 Touch , then .


Notes

- You cannot dub the index screen.
- You may not be able to dub images modified on your computer or recorded with other camcorders on your camcorder.
- You cannot dub MPEG movies on the tape.

Dubbing selected scenes from a tape

- Digital program editing

You can select up to 20 scenes (programs) and record them in the desired order to other recording device such as VCRs or to a “Memory Stick” inserted in your camcorder. When you are recording on a “Memory Stick,” skip steps 1 and 2 and start from “Recording the selected scenes as programs” (p. 95).

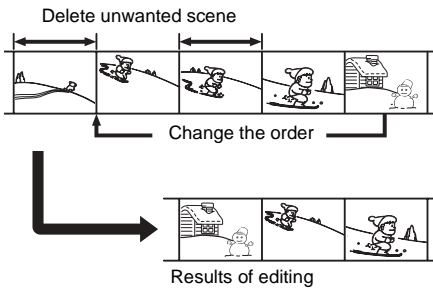

Step 1 : Preparing your camcorder and VCR for operation

Follow the steps below when you are performing a digital program edit for the first time to a tape in a VCR. You can skip this setting if you have set up the VCR by the following procedure before.

Notes

- You cannot perform the Digital program editing on a VCR that does not support [IR SETUP] codes.
- The operating signal for the Digital program editing cannot be transferred via the LANC jack.

1 **Connect your VCR to the camcorder as a recording device (p. 86).**

You can use either the A/V connecting cable or the i.LINK cable to make the connection. The dubbing procedure is easier with the i.LINK connection.

2 **Prepare your VCR.**


- Insert a cassette for recording.
- Set the input selector to input mode if your VCR has one.

3 **Prepare your camcorder (playing device).**


- Insert a cassette for editing.
- Slide the POWER switch to select the PLAY/EDIT mode.

4 **Touch [P-MENU].**


5 **Touch [MENU].**

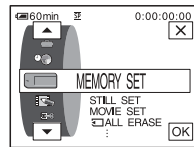

6 **Touch to select (EDIT/PLAY), then touch [OK].**

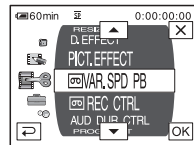


7 **Touch to select [PROG. EDIT], then touch [OK].**

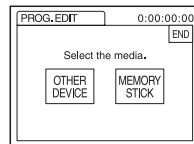


→ continued


8 Touch [OTHER DEVICE].

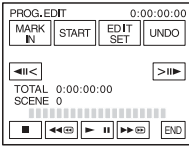

9 Touch [EDIT SET].

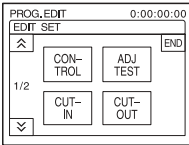

10 Touch [CONTROL].

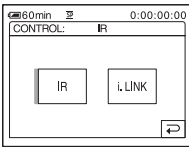

11 Select [i.LINK] or [IR].

When connecting with an i.LINK cable


Touch [i.LINK], then **[OK]**. Go on to “Step 2 : Adjusting the synchronization of the VCR” (p. 94).

When connecting with an A/V connecting cable

Touch [IR], then **[OK]**. Follow the procedure described in “To set the [IR SETUP] code” (p. 92).

To set the [IR SETUP] code

When you connect with an A/V connecting cable, you need to check the [IR SETUP] code signal to see if your VCR can be operated by your camcorder (infrared ray emitter).

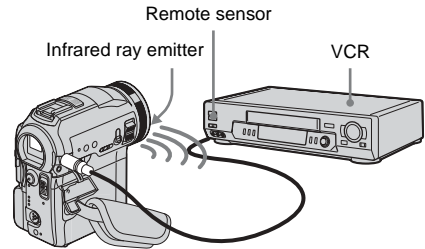

- 1 Touch **[☑]**, then **[IR SETUP]**.
- 2 Select the **[IR SETUP]** code of your VCR with **[−]/[+]**, then touch **[OK]**.
For the [IR SETUP] code of your VCR, refer to “[IR SETUP] code list” (p. 93).
When there is more than one code listed for the manufacturer of your VCR, try each code and find the most appropriate one.
- 3 Touch **[PAUSEMODE]**.
- 4 Cancel the recording pause on your VCR, then touch **[OK]**.
Refer to the operating instructions supplied with your VCR for details on operation.
- 5 Point the infrared ray emitter of your camcorder towards the remote sensor on your VCR, from about 30 cm (12 in.) away, with no obstructions.
- 6 Insert a cassette into your VCR, and set the VCR to recording pause.
- 7 Touch **[IR TEST]**.
- 8 Touch **[EXEC]**.
The recording starts on your VCR when the setting is correct. [Completed.] appears when the [IR SETUP] code test is finished. Go on to “Step 2 : Adjusting the synchronization of the VCR” (p. 94).
When recording fails to start, select another [IR SETUP] code and try again.

[IR SETUP] code list

The following [IR SETUP] codes are recorded on your camcorder by default. (It is set at "3" as the default setting.)

Manufacturing company	[IR SETUP] code
Sony	1, 2, 3, 4, 5, 6
Admiral (M. Wards)	89
Aiwa	47, 54, 80
Akai	49, 51
Audio Dynamic	21, 35
Bell&Howell (M. Wards)	36
Broksonic	21, 70, 82
Canon	77, 78
Citizen	47
Craig	47, 73
Curtis Mathis	8, 77, 80
Daewoo	26, 40, 77
DBX	21, 33, 35
Dimensia	8
Emerson	26, 48, 59, 70, 80, 81, 82
Fisher	36, 37, 44, 45
Funai	80
General Electric	8, 32*, 77, 94*, 101
Goldstar/LG	47
GO VIDEO	71
Hitachi	8, 42, 78
HQ	40
Instant Replay	77, 78
JC Penny	8, 21, 33, 35, 36, 42, 77
JVC	12, 13, 14, 21, 33, 35
Kenwood	21, 33, 35, 47
LXI (Sears)	36, 37, 42, 44, 45, 47, 49, 80
Magnavox	17, 77, 78, 83
Marantz	21, 33, 35
Marta	47
Memorex	37, 77
Minolta	8, 42
Mitsubishi/MGA	22, 23, 24, 28, 29

Manufacturing company	[IR SETUP] code
Multitech	23, 32, 80
NEC	21, 33, 35
Olympic	77, 78
Optimus	22
Orion	60
Panasonic	16, 17, 77, 78
Pentax	8, 42
Philco	26, 70, 77, 78
Philips	47, 77, 78, 83
Pioneer	78
Quasar	6, 16, 17, 77, 78
RCA/PROSCAN	7, 8, 16, 40, 41, 42, 77, 78, 78*, 83, 101
Realistic	22, 36, 37, 77, 80, 88
Sansui	21
Singer	73
Samsung	24, 24*, 32, 32*, 41, 94, 94*
Sanyo	26, 36, 37, 47
Scott	22, 23, 24, 28, 32, 37, 40, 41
Sharp	88, 89
Shintom	73
Signature 2000	80, 89
Sylvania	77, 78, 80, 83
Symphonic	80
Tashiro	47
Tatung	21, 33, 35
Teac	21, 33, 35, 80
Technics	77, 78
Toshiba	7, 40, 49
Wards	37, 47, 88, 89, 95
Yamaha	21, 33, 35, 36
Zenith	95

* TV/VCR component

→ continued

Step 2 : Adjusting the synchronization of the VCR

Follow the steps below when you are performing digital program edit for the first time to a tape in a VCR. You can skip this setting if you have set up your VCR before using the following procedure. You can adjust the synchronization of your camcorder and the VCR to avoid not recording the starting scene.


- 1 Remove the cassette from your camcorder. Prepare a pen and paper to take notes.

- 2 Set the VCR to recording pause mode. Skip this step if you have selected [i.LINK] in step 11 on p. 92.

Note


- Run the tape for about 10 seconds before pausing. The starting scenes may not get recorded when you start recording from the beginning of the tape.

- 3 Touch , then [ADJ TEST].

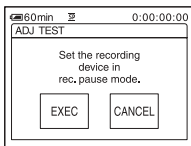

- 4 Touch [EXEC].

A picture (about 50 seconds long) with 5 [IN] and [OUT] indicators each for adjusting synchronization is recorded. [Completed.] appears when the recording is finished.

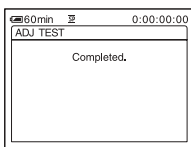




- 5 Rewind the tape on your VCR, then play back in slow mode.

5 opening numbers for each [IN] and closing numbers for each [OUT] appear.

- 6 Take a note of the opening number value of each [CUT-IN] and the closing number value of each [CUT-OUT], then calculate the average number value for each [CUT-IN] and [CUT-OUT].

  
- 7 Touch [CUT-IN].


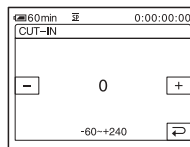


- 8 Touch  /  to select the average number value for [CUT-IN], then touch [OK].

The calculated start position for recording is set.

  - 9 Touch [CUT-OUT].

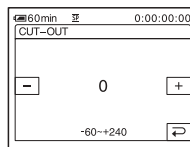

- 10 Touch  /  to select the average number value for [CUT-OUT], then touch [OK].

The calculated stop position for recording is set.

- 11 Touch [END] twice.

Recording the selected scenes as programs


When you are performing a digital program edit for the first time to a tape in a VCR, go through the procedures described in Steps 1 and 2 (p. 91 to p. 94) beforehand.

1 Prepare a cassette or a “Memory Stick.”


Insert a tape to be played back into the camcorder.
 When you are recording on a tape, insert a cassette for recording into your VCR. When you are recording on a “Memory Stick,” insert a “Memory Stick” into your camcorder.

2 Touch [P-MENU].


3 Touch [MENU].

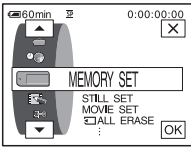

4 Touch / to select (EDIT/PLAY), then touch [OK].

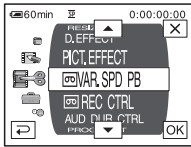


5 Touch / to select [PROG. EDIT], then touch [OK].

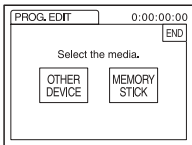

6 Touch the desired item.


When you are recording on a tape in the VCR

Touch [OTHER DEVICE].

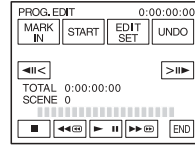

When you are recording on a “Memory Stick”

1 Touch [MEMORY STICK].

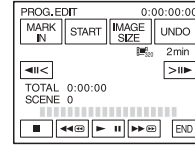

2 Touch [IMAGE SIZE] repeatedly to select the desired image size.


7 Search for the beginning of the first scene that you want to dub on your camcorder, then pause playback.

You can adjust the position with / (frame).

8 Touch [MARK IN].

The starting point of the first program is set, and the upper part of the program mark changes to light blue.

[IMAGE SIZE] appears when recording on a “Memory Stick.”

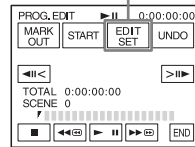


9 Search for the end of the first scene that you want to record on your camcorder, then pause playback.

You can adjust the position with / (frame).

→ continued

10 Touch [MARK OUT].

The ending point of the first program is set, and the lower part of the program mark changes to light blue.

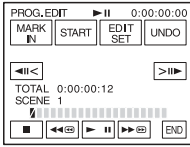


11 Repeat steps 7 to 10 and create programs.

12 Set your VCR to recording pause.


Skip this step if you are connected via an i.LINK cable or recording on a "Memory Stick."

13 Touch [START].

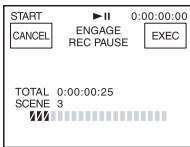

14 Touch [EXEC].

A search for the beginning of the first program starts, then the recording starts. [SEARCH] appears during the search and [EDITING] appears during editing.

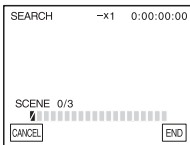

When a program is recorded, the program mark changes from orange to light blue. When all programs have been recorded, the program editing operation stops automatically.

To cancel recording, touch [CANCEL].

To end Digital program editing

Touch [END].

To save a program without using it to record

Touch [END] in step 13.

The program is stored in memory until the cassette is ejected.

To erase programs

- 1 Follow steps 1 to 6 in "Recording the selected scenes as programs" (p. 95), then touch [UNDO].
- 2 Touch [DEL 1MARK] to erase the last set program. Or, touch [ALL ERASE] to erase all the programs.
- 3 Touch [EXEC].
The programs are deleted.
To cancel this operation, touch [CANCEL].


⚙ Notes

- You cannot set starting point or ending point on a blank section of the tape. If there is a blank section, the total time may not appear correctly.
- When you cannot operate the device correctly using an i.LINK cable connection, select [IR] in step 11 on p. 92, and set the [IR SETUP] code.

Dubbing sound to a recorded tape

You can record additional audio to the original sound on the tape. You can add sound to a tape already recorded in the 12-bit mode without erasing the original sound.

Preparing for audio recording

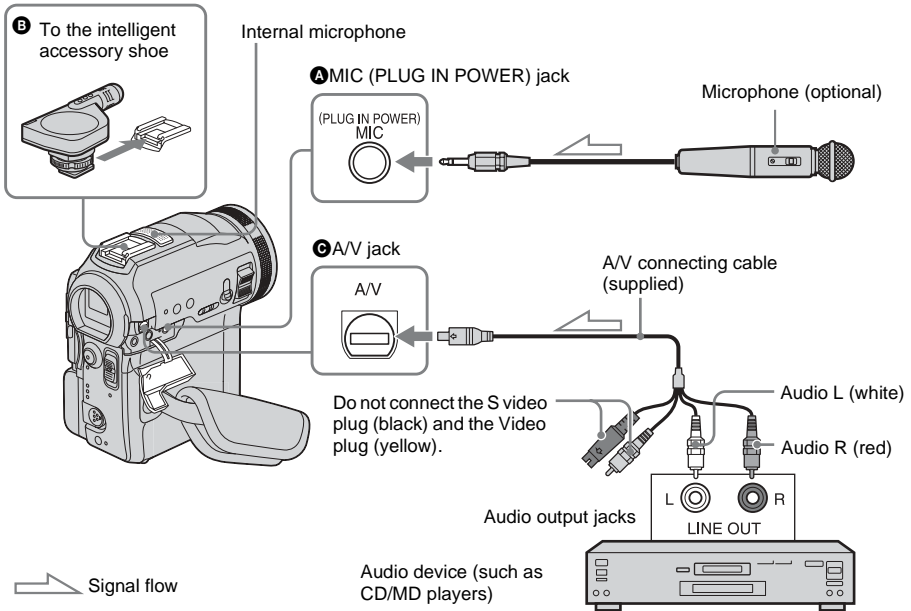

Record audio in one of the following ways.

- Using the internal microphone (no connection required).
- Connecting a microphone (optional) to the MIC jack. **(A)**
- Connecting a microphone (optional) to the intelligent accessory shoe. **(B)**
- Connecting audio device to your camcorder using an A/V connecting cable. **(C)**

The audio input to be recorded takes precedence over others in the order of MIC jack → intelligent accessory shoe → A/V jack → internal microphone.




Notes

 


- You cannot record additional audio:
 - When the tape is recorded in the 16-bit mode.
 - When the tape is recorded in the LP mode.
 - When your camcorder is connected via the i.LINK cable.
 - On blank sections of the tape.
 - When the write-protect tab of the cassette is set to SAVE.
- When you are using the A/V jack or the internal microphone to record additional sound, the picture will not be output from the A/V jack. Check the picture on the LCD screen or the viewfinder, and the sound on the headphones.
- When you use an external microphone (optional) to record additional audio, you can check the picture and the sound by connecting your camcorder to a TV using the A/V connecting cable. However, the sound


→ continued

you have recorded afterwards is not output from the speaker. Check the sound by using the headphones or a TV.


Recording sound


- 1 **Insert a recorded cassette into your camcorder.**
- 2 **Slide the POWER switch repeatedly to select the PLAY/EDIT mode.**
- 3 **Touch  (play/pause) to play the tape.**
- 4 **Touch  (play/pause) again at the point where you want to start recording the sound.**
The playback pauses.
- 5 **Touch .**



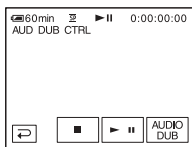


- 6 **Touch [AUD DUB CTRL].**
If the item is not displayed on the screen, touch /. If you cannot find it, touch [MENU], and select it from the  (EDIT/PLAY) menu.

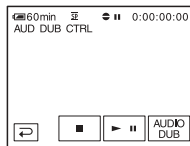

- 7 **Touch [AUDIO DUB].**

A green  mark appears on the LCD screen.



- 8 **Touch  (play/pause) and start playing back the audio you want to record at the same time.**
A green  mark remains on the LCD screen while recording sound.
The new sound is recorded in stereo 2 (ST2) during the playback of the tape.
- 9 **Touch  (stop) when you want to stop recording.**
To dub on other scenes, repeat steps 3 and 4 to select scenes, then touch [AUDIO DUB].
- 10 **Touch , then .**

To set the end point for audio dubbing


During playback, press ZERO SET MEMORY on the Remote Commander at the scene at which you want to stop audio dubbing. Then, perform steps 4 to 8. The recording stops automatically at the selected scene.

Note


- You can only record additional audio over a tape recorded on your camcorder. The sound may deteriorate when you dub audio on a tape recorded on other camcorders (including other DCR-PC330 camcorders).

Checking and adjusting the recorded sound

- 1 Play back the tape on which you have recorded audio in “Recording sound” (p. 98).
- 2 Touch [P-MENU].
- 3 Touch [MENU].
- 4 Touch / to select (STANDARD SET), then touch .

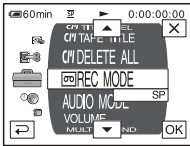

- 5 Touch / to select [AUDIO MIX], then touch .

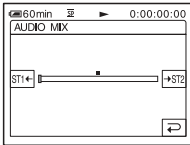

- 6 Touch / to adjust the balance between the original sound (ST1) and the sound recorded afterwards (ST2). Then, touch .

The original sound (ST1) is output in the default setting.


The adjusted audio balance returns to the default setting in about 5 minutes after the battery pack or other power sources have been disconnected.

Deleting recorded pictures

You can delete all or selected pictures stored on a “Memory Stick.”


- 1 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

- 2 Touch .

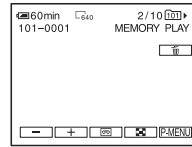

- 3 Touch / to select a picture you want to delete.

- 4 Touch .

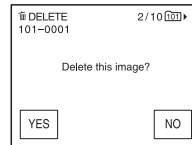

- 5 Touch [YES].









The selected picture is deleted.
To cancel deletion, touch [NO].

To delete all pictures at once

Select the (MEMORY SET) menu, then [ALL ERASE] (p. 65).

To delete pictures on the index screen

You can easily search for the picture to be deleted by displaying 6 pictures at once.

- 1 Slide the **POWER** switch to select the **PLAY/EDIT** mode.
- 2 Touch .
- 3 Touch .
- 4 Touch .
- 5 Touch [ **DELETE**].
- 6 Touch the picture you want to delete.
 appears on the image to be deleted.
To display the next or the previous 6 pictures, touch /.
- 7 Touch .
- 8 Touch [**YES**].
The selected pictures are deleted.
To cancel deletion, touch [**NO**].





Notes


- Pictures cannot be deleted when the write-protect tab of the “Memory Stick” is set to the write-protect position (p. 118), or when the selected picture is protected (p. 101).
- The pictures cannot be restored once they are deleted. Make sure you check the pictures before deleting them.



Changing the image size - Resize

You can change the size of a picture to 640 × 480 or 320 × 240. This function is useful when you want to make an image size smaller to attach it to an e-mail message.

The original picture remains in its original size even if you resize it.

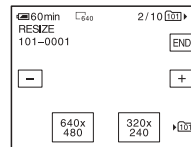
- 1 Slide the **POWER** switch to select the **PLAY/EDIT** mode.
- 2 Touch .
- 3 Touch [**RESIZE**].
If the item is not displayed on the screen, touch /. If you cannot find it, touch [**MENU**], and select it from the  (PICT. APPLI.) menu.



- 4 Touch / to select a picture you want to resize.

- 5 Touch [**640 × 480**] or [**320 × 240**].

The resized picture is recorded as a new file in the currently selected folder.

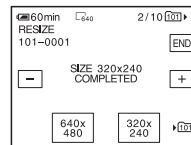

- 6 Touch [**END**].

Memory capacity for still images after resizing

Image size	Memory capacity
640 × 480	About 150 KB
320 × 240	About 16 KB

Notes

- You may not be able to resize images recorded on other devices.
- You cannot resize movies.



Marking recorded images with specific information - Image protection/Print mark


protection/Print mark

Make sure the write-protect tab on the “Memory Stick” is not set to the write-protect position.


Preventing accidental erasure – Image protection

You can select and mark images to prevent accidental erasure.

- 1 Slide the **POWER** switch to select the **PLAY/EDIT** mode.
- 2 Touch .
- 3 Touch .

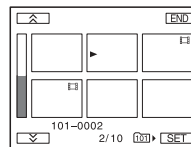


- 4 Touch .

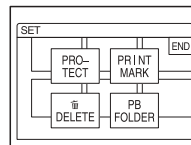



→ continued

5 Touch [PROTECT].

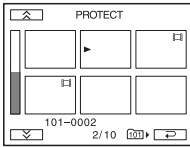

 6 Touch the image that you want to protect.

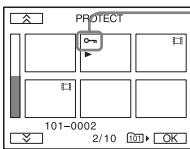


 appears on the selected image.

7 Touch [OK].

8 Touch [END].

To cancel image protection

 Follow steps 1 to 5, then touch the image to cancel image protection.

 disappears from the image.

Selecting still images for printing – Print mark


You can mark images that you want to print out while viewing them on your camcorder. (You cannot specify the number of printouts.)

The DPOF (Digital Print Order Format) standard is used to select images for printing on your camcorder.


1 Slide the POWER switch to select the PLAY/EDIT mode.

2 Touch .


3 Touch .

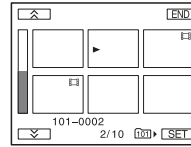


4 Touch [SET].

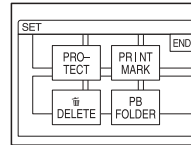


5 Touch [PRINT MARK].

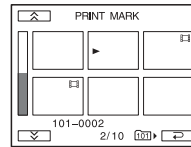

6 Touch the image that you want to print out later.

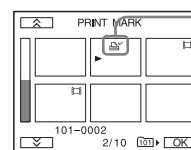


 appears on the selected image.

7 Touch [OK].

8 Touch [END].

To cancel the Print mark

Follow steps 1 to 5, then touch the image to cancel the Print mark.


 disappears from the image.

Troubleshooting

If you run into any problem using your camcorder, use the following table to troubleshoot the problem. If the problem


persists, remove the power source and contact your Sony dealer.
 If “C:□□:□□” is displayed on the LCD screen or the viewfinder, the self-diagnosis display function is activated. See page 111 for details.

Overall operations

Symptom	Cause and/or Corrective Actions
The power does not turn on.	<ul style="list-style-type: none"> The battery pack is discharged, running low, or not attached to the camcorder. <ul style="list-style-type: none"> → Attach a charged battery pack to the camcorder. (p. 13) → Use the AC Adaptor to connect to the wall outlet. (p. 16)
The camcorder does not operate even when the power is set to on.	<ul style="list-style-type: none"> → Disconnect the AC Adaptor from the wall outlet or remove the battery pack, then reconnect it after about one minute. If the functions still do not work, press the RESET button using a sharp-pointed object. (If you press the RESET button, all settings including the clock setting (except the Personal Menu items) are reset.)
A clattering noise is heard when the camcorder is handled with the POWER switch set to (CHG) OFF or in the PLAY/EDIT mode.	<ul style="list-style-type: none"> This is because some lens functions on your camcorder use a linear mechanism. This is not a malfunction.
The supplied Remote Commander does not function.	<ul style="list-style-type: none"> → Set [REMOTE CTRL] on the  (STANDARD SET) menu to [ON]. (p. 80) → Insert batteries into the battery holder with the + – polarities correctly matching the + – marks. If this still does not solve the problem, insert new batteries since the batteries are dead. (p. 131) → Remove any obstructions between the Remote Commander and the remote sensor.
The camcorder gets warm.	<ul style="list-style-type: none"> This is because the power has been turned on for a long time. This is not a malfunction.



→ continued

Batteries/Power sources

Symptom	Cause and/or Corrective Actions
The CHG (charge) lamp does not light while the battery pack is being charged.	<p>→ Attach the battery pack to the camcorder correctly. If the lamp still does not light up, then it indicates that no power is supplied from the wall outlet.</p> <ul style="list-style-type: none"> • The battery charge is completed. (p. 13)
The CHG (charge) lamp flashes while the battery pack is being charged.	<p>→ Attach the battery pack to the camcorder correctly. If the problem persists, disconnect the AC Adaptor from the wall outlet and contact your Sony dealer. The battery pack may be damaged. (p. 13)</p>
The battery pack is quickly discharged.	<ul style="list-style-type: none"> • The temperature of the environment is too low, or the battery pack has not been charged enough. This is not a malfunction. <p>→ Fully charge the battery again. If the problem persists, replace the battery pack with a new one. It may be damaged. (p. 13, 119)</p>
The remaining battery time indicator does not indicate the correct time.	<ul style="list-style-type: none"> • The temperature of the environment is too high or too low, or the battery pack has not been charged enough. This is not a malfunction. <p>→ Fully charge the battery again. If the problem persists, replace the battery pack with a new one. It may be damaged. (p. 13, 120)</p>
The power turns off frequently although the remaining battery indicator indicates that the battery pack has enough power to operate.	<ul style="list-style-type: none"> • A problem has occurred in the remaining battery time indicator, or the battery pack has not been charged enough. <p>→ Fully charge the battery again to correct the indication. (p. 13)</p>
The power abruptly turns off.	<ul style="list-style-type: none"> • [A.SHUT OFF] in the  (STANDARD SET) menu is set to [5 min]. (p. 81) <p>→ When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off. Slide the POWER switch down to turn the power on again. (p. 16) Or use the AC Adaptor.</p>
A problem occurs when the camcorder is connected to the AC Adaptor.	<p>→ Turn off the power, and disconnect the AC Adaptor from the wall outlet. Then, connect it again.</p>

Cassette tapes

Symptom	Cause and/or Corrective Actions
Cassette cannot be ejected from the compartment.	<p>→ Make sure the power source (battery pack or AC Adaptor) is connected correctly. (p. 13)</p> <p>→ Remove the battery pack from the camcorder, then attach it again. (p. 13)</p> <p>→ Attach a charged battery pack to the camcorder. (p. 13)</p>
Cassette is not ejected even when the cassette lid is open.	<p>→ Moisture condensation is starting in your camcorder. (p. 122)</p>

Symptom	Cause and/or Corrective Actions
The Cassette Memory indicator does not appear while using a cassette with Cassette Memory.	→Clean the gold-plated connector of the cassette. (p. 117)
The remaining tape indicator is not displayed.	→Set [ REMAINING] to [ON] on the  (STANDARD SET) menu to always display the remaining tape indicator. (p. 80)
A cassette label is not recorded.	→Use a cassette with Cassette Memory. (p. 116) →Erase unnecessary titles when the Cassette Memory is full. (p. 75) →Set the write-protect tab to REC. (p. 116)





LCD screen/viewfinder

Symptom	Cause and/or Corrective Actions
An unknown language appears on the screen.	→See page 22.
An unknown picture appears on the screen.	→The camcorder is in [DEMO MODE]. (The [DEMO MODE] is automatically displayed when you leave the camcorder for 10 minutes after selecting CAMERA-TAPE without inserting a cassette or “Memory Stick.”) Touch on the LCD screen or insert a cassette or “Memory Stick” to cancel [DEMO MODE]. You can also set [DEMO MODE] to [OFF] on the menu. (p. 72)
An unknown indicator appears on the screen.	→Refer to the indicator list. (p. 133)
The buttons do not appear on the touch panel.	→Touch the LCD panel lightly. →Press DISPLAY/BATT INFO (or DISPLAY on the Remote Commander). (p. 51)
The buttons on the touch panel do not work correctly or do not work at all.	→Adjust the screen ([CALIBRATION]). (p. 123)
The picture in the viewfinder is not clear.	→Extend the viewfinder. (p. 17) →Use the viewfinder lens adjustment lever to adjust the lens. (p. 17)
The picture in the viewfinder has disappeared.	→Close the LCD panel. The picture is not displayed in the viewfinder when the LCD panel is open. (p. 17)

→continued

Recording

 



 

If you are using a “Memory Stick” for recording, refer also to the “Memory Stick” section. (p. 108)

Symptom	Cause and/or Corrective Actions
The tape does not start when you press START/STOP.	<ul style="list-style-type: none"> →Slide the POWER switch to turn on the CAMERA-TAPE lamp. (p. 16) →The tape has reached the end. Rewind it, or insert a new cassette. →Set the write-protect tab to REC or insert a new cassette. (p. 116) →The tape is stuck to the drum due to moisture condensation. Remove the cassette and leave your camcorder for at least one hour, then re-insert the cassette. (p. 122)
The power abruptly turns off.	<ul style="list-style-type: none"> • [A.SHUT OFF] in the  (STANDARD SET) menu is set to [5 min]. (p. 81) <ul style="list-style-type: none"> →When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off. Slide the POWER switch down to turn the power on again. (p. 16) Or use the AC Adaptor. • The battery pack is discharged. (p. 13)
The SteadyShot does not function.	→Set [STEADYSHOT] to [ON] in the  (CAMERA SET) menu. (p. 63)
The auto focus does not function.	<ul style="list-style-type: none"> →Press FOCUS to enable auto focus. (p. 36) →The recording conditions are not suitable for auto focus. Adjust the focus manually. (p. 36)
A vertical band appears when recording candlelight or electric light in the dark.	• This occurs when the contrast between the subject and the background is too high. This is not a malfunction.
A vertical band appears when recording a bright subject.	• This phenomenon is called the smear effect. This is not a malfunction.
Tiny spots in white, red, blue, or green appear on the screen.	• The spots appear when you are recording in [SLOW SHUTTR], Super NightShot, or Color Slow Shutter. This is not a malfunction. (p. 34)
The color of the picture is not correctly displayed.	→Deactivate the NightShot function. (p. 34)
Picture appears too bright on the screen, and the subject does not appear on the screen.	<ul style="list-style-type: none"> →Deactivate the NightShot function in bright places. (p. 34) →Cancel the back light function. (p. 32)
The shutter sound is not heard.	→Set [BEEP] to [MELODY] or [NORMAL] on the  (STANDARD SET) menu. (p. 80)
Black bands appear when you record a TV screen or computer screen.	→Set [STEADYSHOT] to [OFF] on the  (CAMERA SET) menu. (p. 63)
The external flash (optional) does not work.	<ul style="list-style-type: none"> • The power of the flash is not turned on, or the flash is not attached correctly. • Two or more flashes are attached. Only one external flash can be attached.
Flickering or changes in color occurs.	→This occurs when recording pictures under a fluorescent lamp, sodium lamp, or mercury lamp in the soft portrait or sports lesson mode. Cancel [PROGRAM AE] in this case. (p. 58)

Symptom	Cause and/or Corrective Actions
END SEARCH does not work.	<ul style="list-style-type: none"> • The cassette was ejected after recording when using a cassette without Cassette Memory. (p. 116) • The cassette is new and has nothing recorded.
END SEARCH does not work correctly.	<ul style="list-style-type: none"> • There is a blank section in the beginning or middle of the tape. This is not a malfunction.

Playback

If you are playing back the pictures stored on a “Memory Stick,” refer also to the “Memory Stick” section. (p. 108)

Symptom	Cause and/or Corrective Actions
Cannot play back.	→If the tape has reached the end, rewind the tape. (p. 45)
Horizontal lines appear on the picture. The displayed pictures are not clear or do not appear.	→Clean the head using the cleaning cassette (optional). (p. 123)
Fine patterns flicker, diagonal lines look jagged.	→Adjust [SHARPNESS] to the  (soften) side in the  (CAMERA SET) menu before recording. (p. 60)
No sound or only a low sound is heard.	<ul style="list-style-type: none"> →Set [MULTI-SOUND] to [STEREO] in the  (STANDARD SET) menu. (p. 77) →Turn up the volume. (p. 45) →On the  (STANDARD SET) menu, adjust [AUDIO MIX] from the [ST2] (additional sound) side until the sound is heard appropriately. (p. 78) →When you are using an S VIDEO plug, make sure the red and white plugs of the A/V connecting cable are connected as well. (p. 53)
The sound breaks off.	→Clean the head using the cleaning cassette (optional). (p. 123)
Cannot perform the Date search with the recording date displayed on the screen.	<ul style="list-style-type: none"> →Use a cassette with Cassette Memory. (p. 116) →Set [] SEARCH] to [ON] in the  (EDIT/PLAY) menu. (p. 74) • There is a blank section in the beginning or middle of the tape. This is not a malfunction.
“...” is displayed on the screen.	<ul style="list-style-type: none"> • The tape you are playing was recorded without setting the date and time. • A blank section on the tape is being played. • The data code on a tape with a scratch or noise cannot be read.
END SEARCH does not work.	<ul style="list-style-type: none"> • The cassette was ejected after recording when using a cassette without Cassette Memory. (p. 116) • The cassette is new and has nothing recorded.
END SEARCH does not work correctly.	<ul style="list-style-type: none"> • There is a blank section in the beginning or middle of the tape. This is not a malfunction.
Noises appear and PAL is displayed on the screen.	<ul style="list-style-type: none"> • The tape was recorded in a TV color system other than that of your camcorder. This is not a malfunction. (p. 115)






 

 

→continued

“Memory Stick”

Symptom	Cause and/or Corrective Actions
Cannot operate functions using the “Memory Stick.”	<ul style="list-style-type: none"> →Set the POWER switch to the CAMERA-MEMORY or PLAY/EDIT mode. (p. 16) → Insert a “Memory Stick” into your camcorder. (p. 21) • The “Memory Stick” was formatted on a personal computer. <ul style="list-style-type: none"> →Format it on your camcorder (Note that all recorded data will be deleted). (p. 66)
Cannot record on the “Memory Stick.”	<ul style="list-style-type: none"> →Release the lock on the write-protect tab of the “Memory Stick.” (p. 118) →The capacity is full. Delete unnecessary pictures recorded on the “Memory Stick.” (p. 99) →Format the “Memory Stick” on your camcorder or insert another “Memory Stick.” (p. 66) • The “100MSDCF” folder is selected. You cannot record pictures to the “100MSDCF” folder. This folder is used for playback only.
The HOLOGRAM AF light is not emitted on the center of the subject.	<ul style="list-style-type: none"> • The focus is automatically adjusted if the HOLOGRAM AF light reaches the subject. This is not a malfunction. (p. 37)
The HOLOGRAM AF light is blurred and it is hard to adjust the focus.	<ul style="list-style-type: none"> →Wipe the HOLOGRAM AF emitter with a dry cloth.
The pictures are not played back in the actual size.	<ul style="list-style-type: none"> • Pictures recorded on other devices may not appear in the actual size. This is not a malfunction.
Image data cannot be played back.	<ul style="list-style-type: none"> • Image data cannot be played back when you modify files or folders, or edit the data on a computer. (The file name flashes in that case.) This is not a malfunction. (p. 119) • Pictures recorded on other devices may not appear in the actual size. This is not a malfunction.
Pictures cannot be deleted.	<ul style="list-style-type: none"> →Release the lock on the write-protect tab of the “Memory Stick.” (p. 118) →Cancel image protection on the picture. (p. 101) • The maximum number of pictures that you can delete at one time is 100. Delete them in groups of less than 100 pictures each.
Cannot format the “Memory Stick.”	<ul style="list-style-type: none"> →Release the lock on the write-protect tab of the “Memory Stick.” (p. 118)
Cannot delete all pictures at once.	<ul style="list-style-type: none"> →Release the lock on the write-protect tab of the “Memory Stick.” (p. 118)
Image protection cannot be applied.	<ul style="list-style-type: none"> →Release the lock on the write-protect tab of the “Memory Stick.” (p. 118) →Perform the operation again on the index screen. (p. 101)
Cannot mark pictures for print.	<ul style="list-style-type: none"> →Release the lock on the write-protect tab of the “Memory Stick.” (p. 118) →Perform the operation again on the index screen. (p. 102) • The maximum number of pictures you can mark for print is 1000. • Movies cannot be marked for print.
Cannot resize pictures.	<ul style="list-style-type: none"> • Pictures recorded on other devices may not be resized. This is not a malfunction. • Movies cannot be resized.
The data file name is not indicated correctly.	<ul style="list-style-type: none"> • Only the file name is displayed if the directory structure does not conform to the universal standard. • The file is damaged. • The file format is not supported on your camcorder. (p. 117)

Symptom	Cause and/or Corrective Actions
The data file icon flashes.	<ul style="list-style-type: none"> • The file is damaged. • The file format is not supported on your camcorder. (p. 117)

Dubbing/Editing

Symptom	Cause and/or Corrective Actions
Pictures from connected devices are not displayed on the LCD screen or the viewfinder.	<ul style="list-style-type: none"> →Set [DISPLAY] to [LCD PANEL] in the  (STANDARD SET) menu. (p. 81) →Set [VIDEO INPUT] to the appropriate signal the  (STANDARD SET) menu. (p. 79)
Cannot dub correctly using the A/V connecting cable.	<ul style="list-style-type: none"> →Set [VIDEO INPUT] to the appropriate signal the  (STANDARD SET) menu. (p. 79) →Set [DISPLAY] to [LCD PANEL] in the  (STANDARD SET) menu. (p. 81)
Pictures from connected devices are not displayed correctly.	<ul style="list-style-type: none"> • The input signal is not NTSC. (p. 87)
New sound added to a recorded tape is not heard.	<ul style="list-style-type: none"> →In the  (STANDARD SET) menu, adjust [AUDIO MIX] from the [ST1] (original sound) side until the sound is heard appropriately. (p. 78)
A title is not recorded/A cassette label is not recorded.	<ul style="list-style-type: none"> →Use a cassette with Cassette Memory. (p. 116) →Erase unnecessary titles when the Cassette Memory is full. (p. 75) →Set the write-protect tab to REC. (p. 116) • A title cannot be added to a blank section of the tape.
The title is not displayed.	<ul style="list-style-type: none"> →Set [] TITLE DISP] to [ON] in the  (EDIT/PLAY) menu. (p. 75)
The title cannot be deleted.	<ul style="list-style-type: none"> →Set the write-protect tab to REC. (p. 116)
The Title search does not work.	<ul style="list-style-type: none"> →Enter a title if there is no title on the tape. (p. 74) →Use a cassette with Cassette Memory. (p. 116) →Set [] SEARCH] to [ON] in the  (EDIT/PLAY) menu. (p. 74) • There is a blank section in the beginning or middle of the tape. This is not a malfunction.
Still pictures cannot be dubbed from a tape to a “Memory Stick.”	<ul style="list-style-type: none"> • You cannot record or a distorted picture may be recorded if the tape has been used repeatedly for recording.
Movies cannot be dubbed from a tape to a “Memory Stick.”	<ul style="list-style-type: none"> • You cannot record or a distorted picture may be recorded in the following: <ul style="list-style-type: none"> – The tape has a blank section. – The tape has been used repeatedly for recording. – Input signal has been interrupted or cut.

→continued

Symptom	Cause and/or Corrective Actions
Digital program editing on the tape does not function.	<ul style="list-style-type: none"> →Set the input selector on the VCR correctly, then check the connection between your camcorder and the VCR. (p. 86) →When your camcorder is connected to a DV device that is not a Sony product via an i.LINK cable, select [IR] in step 11 of “Step 1: Preparing your camcorder and VCR for operation” (p. 91). →Adjust the synchronization of the VCR. (p. 94) →Enter a correct [IR SETUP] code. (p. 93) →Select the mode used to cancel recording pause again. (p. 92) →Set your camcorder and the VCR more than 30 cm (12 in.) apart. (p. 92) • The program may not be set to a blank section on the tape.
The VCR is not responding properly during Digital program editing when it is connected via an i.LINK cable.	<ul style="list-style-type: none"> • While connecting via an i.LINK cable, select [IR] in step 11 of “Step 1: Preparing your camcorder and VCR for operation” (p. 91).
Digital program editing on the “Memory Stick” does not function correctly.	<ul style="list-style-type: none"> • The program may not be set to a blank section on the tape. • You cannot record or a distorted picture may be recorded if the tape has been used repeatedly for recording.









Warning indicators and messages

Self-diagnosis display/Warning indicators

If indicators appear on the screen or in the viewfinder, check the following. See the page in parentheses for details.

Indication	Cause and/or Corrective Actions
C:□□:□□/E:□□:□□ (Self-diagnosis display)	<p>Some symptoms can be fixed by yourself. If the problem persists even after you tried a couple of times, contact your Sony dealer or local authorized Sony service facility.</p> <p>C:04:□□ → A battery pack that is not an “InfoLITHIUM” battery pack is being used. Use an “InfoLITHIUM” battery pack. (p. 119)</p> <p>C:21:□□ → Moisture condensation has occurred. Remove the cassette and leave your camcorder for at least one hour, then re-insert the cassette. (p. 122)</p> <p>C:22:□□ → Clean the head using a cleaning cassette (optional). (p. 123)</p> <p>C:31□□ / C:32□□ → Symptoms that are not described above have occurred. Remove and insert the cassette, then operate your camcorder again. Do not perform this procedure if moisture starts to condense. (p. 122)</p> <p>→ Remove the power source. Reconnect it again and operate your camcorder again. → Change the tape.</p> <p>E:20:□□ / E:61:□□ / E:62:□□ / E:91:□□ → Contact your Sony dealer or local authorized Sony service facility. Inform them of the 5-digit code, which starts from “E.”</p>
101-0001 (Warning indicator pertaining to files)	<ul style="list-style-type: none"> • The file is damaged. • The file is unreadable. • You are trying to carry out the MEMORY MIX function on a movie (p. 41).
⚡ (Battery level warning)	<ul style="list-style-type: none"> • The battery pack is nearly used up. • Depending on the operating, environmental, or battery conditions, the ⚡ indicator may flash, even if there are approximately 5 to 10 minutes remaining.
☑ (Moisture condensation warning)*	→ Eject the cassette, set the POWER switch to (CHG) OFF, and leave it for about 1 hour with the cassette lid open (p. 122).
📼 (Warning indicator pertaining to Cassette Memory)*	<ul style="list-style-type: none"> • No cassette with Cassette Memory is inserted (p. 116).
📼 (Warning indicator pertaining to the “Memory Stick”)	<p>Slow flashing:</p> <ul style="list-style-type: none"> • No “Memory Stick” is inserted. <p>Fast flashing:</p> <ul style="list-style-type: none"> • The picture cannot be recorded on the “Memory Stick.”*

 → continued

  Indication	Cause and/or Corrective Actions
 (Warning indicator pertaining to “Memory Stick” formatting)*	<ul style="list-style-type: none"> • The “Memory Stick” data is damaged. • The “Memory Stick” is not formatted correctly (p. 66).
 (Warning indicator pertaining to incompatible “Memory Stick”)*	<ul style="list-style-type: none"> • An incompatible “Memory Stick” is inserted.
 (Warning indicator pertaining to the tape)	<p>Slow flashing:</p> <ul style="list-style-type: none"> • There is less than 5 minutes remaining on the tape. • No cassette is inserted.* • The write-protect tab on the cassette is set to lock (p. 116).* <p>Fast flashing:</p> <ul style="list-style-type: none"> • The tape has run out.*
 (Eject cassette warning)*	<p>Slow flashing:</p> <ul style="list-style-type: none"> • The write-protect tab on the cassette is set to lock (p. 116). <p>Fast flashing:</p> <ul style="list-style-type: none"> • Moisture condensation has occurred (p. 122). • The self-diagnosis display code is displayed (p. 111).
 (Warning indicator pertaining to image deletion)*	<ul style="list-style-type: none"> • The image is protected (p. 101).
  (Warning indicator pertaining to the write-protect of the “Memory Stick”)*	<ul style="list-style-type: none"> • The write-protect tab on the “Memory Stick” is set to lock (p. 118).
 (Warning indicator pertaining to the flash)	<p>Slow flashing:</p> <ul style="list-style-type: none"> • During charging <p>Fast flashing:</p> <ul style="list-style-type: none"> • The self-diagnosis display code is displayed (p. 111).* • There is something wrong with the built-in flash or the external flash (optional).


* You hear a melody or beep sound when the warning indicators appear on the screen.

Warning messages

If messages appear on the screen, check the following. See the page in parentheses for details.

Subjects	Indications	Corrective Actions/References
Battery	Use the “InfoLITHIUM” battery pack.	→See page 119.
	Battery level is low.	→Charge the battery (p. 13).
	Old battery. Use a new one.	→See page 119.
	▲ Re-attach the power source.	–
Moisture condensation	☒ ▲ Moisture condensation. Eject the cassette.	→See page 122.
	☒ Moisture condensation. Turn off for 1H.	→See page 122.
Cassette/Tape	☒ Insert a cassette.	→See page 20.
	▲ Reinsert the cassette.	→The cassette might be damaged, etc.
	☒ ▲ The tape is locked - check the tab.	→See page 116.
	☒ The tape has reached the end.	–
	Use a cassette with Cassette Memory.	→See page 116.
“Memory Stick”	☒ Insert a Memory Stick.	→See page 21.
	☒ Reinsert the Memory Stick.	• The “Memory Stick” might be damaged. Try with another “Memory Stick.”
	Do not eject the Memory Stick during writing.	–
	This is a read-only Memory Stick.	–
	☒ Incompatible type of Memory Stick.	→See page 117.
	☒ This Memory Stick is not formatted correctly.	→Check the format, then format the “Memory Stick” as necessary (p. 66).
	Cannot record. The Memory Stick is full.	→Delete unnecessary images (p. 99).
	☒ The Memory Stick is locked - check the tab.	→See page 117.
	Cannot playback. Reinsert the Memory Stick.	–
	Cannot record. Reinsert the Memory Stick.	–
	No file.	• No file is recorded or there is no readable file on the “Memory Stick.”
	Charging ... cannot record still images.	• You tried to record an image while charging the flash. Wait until the flash charge indicator remains lit (p. 30).

→continued

Subjects	Indications	Corrective Actions/ References
"Memory Stick"	USB streaming... This function is not available.	<ul style="list-style-type: none"> You tried to play back or record on a "Memory Stick" during USB Streaming.
	Memory Stick folders are full.	<ul style="list-style-type: none"> You cannot create folders exceeding 999MSDCF. → You cannot delete the created folders using your camcorder. You will have to format the "Memory Stick" (p. 66), or delete them using your computer.
	Cannot record still images on Memory Stick.	–
Others	Cannot record Memory Stick movie on a tape.	–
	Cannot record due to copyright protection.	–
	Cannot add audio. Disconnect the i.LINK cable.	→ See page 97.
	Not recorded in SP mode. Cannot add audio.	→ See page 97.
	Not recorded in 12-bit audio. Cannot add audio.	→ See page 97.
	Cannot add audio on the blank portion of a tape.	→ See page 97.
	Cassette Memory is full.	→ See page 76.
	Cannot record 44.1 kHz audio on a Memory Stick.	–
	Smooth interval rec error.	<ul style="list-style-type: none"> → See page 70. The video head may be dirty. → Use a cleaning cassette (optional).
	Already added to CAMERA-TAPE mode's P-MENU.	–
	Already added to CAMERA-MEMORY mode's P-MENU.	–
	Already added to PLAY/EDIT mode's P-MENU.	–
	⊗  Dirty video head. Use a cleaning cassette.	→ See page 123.
Flash	⚡ The strobe cannot charge. Not available.	→ See page 30.

Using your camcorder abroad

Power supply

You can use your camcorder in any country/regions using the AC Adaptor supplied with your camcorder within AC 100 V to 240 V, 50/60 Hz.

Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet [b].



Simple setting of clock by time difference

You can easily set the clock to the local time by setting a time difference when using your camcorder abroad. Select [WORLD TIME] in the (TIME/LANGU.) menu, then set the time difference (p. 82).

On TV color systems

Your camcorder is an NTSC system-based camcorder. If you want to view the playback picture on a TV, it must be an NTSC system-based TV (see following list) with the AUDIO/VIDEO input jack.

System	Used in
NTSC	Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Guyana, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.
PAL	Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, United Kingdom, etc.
PAL - M	Brazil
PAL - N	Argentina, Paraguay, Uruguay
SECAM	Bulgaria, France, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

Usable cassette tapes

You can use the mini DV format cassette only. Use a cassette with the ^{Mini}DV mark.

Mini DV Digital Video Cassette is a trademark.

Cassette Memory

There are 2 types of mini DV cassettes: those with Cassette Memory and those without Cassette Memory. Cassettes with Cassette Memory have the **CM** (Cassette Memory) mark. A cassette with Cassette Memory is recommended for use on your camcorder.

CM Cassette Memory is a trademark.

IC memory is mounted on this type of cassette. Your camcorder can read and write data such as dates of recording or titles from/to this memory. The functions using the Cassette Memory require successive signals recorded on the tape. If the tape has a blank section at the beginning or between recorded sections, titles may not be displayed properly or the search functions may not work properly.

To prevent a blank section from being made on the tape

Touch **[→I]** to go to the end of the recorded section before you begin the next recording in the following cases:

- You have ejected the cassette during recording.
- You have played back the tape.
- You have used EDIT SEARCH.

If there is a blank section or discontinuous signals on your tape, re-record from the beginning to the end of the tape as described above.

Note

- The Cassette Memory may not function correctly when you record using a digital video camera recorder that does not support Cassette Memory, on a tape already recorded on using a Cassette Memory-compatible digital video camera recorder.

Tip

- The memory capacity of the cassette marked with **CM 4K** is 4k bits. Your camcorder can accommodate cassettes having a memory capacity of up to 16k bits.

Copyright signal

When you play back

If the cassette you play back on your camcorder contains copyright signals, you cannot copy it to a tape in another video camera connected to your camcorder.

When you record

You cannot record software on your camcorder that contains copyright control signals for copyright protection of software.


[Cannot record due to copyright protection.] appears on the LCD screen, or on the TV screen if you try to record such software.

Your camcorder does not record copyright control signals on the tape when it records.

Notes on use

To prevent accidental erasure

Slide the write-protect tab on the cassette to set to SAVE.

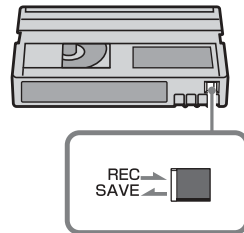


REC: The cassette can be recorded.

SAVE: The cassette cannot be recorded (write-protected).

When labeling the cassette

Be sure to place the label only on the locations as shown in the following illustration so as not to cause malfunction of your camcorder.

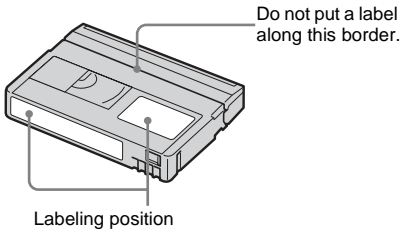

After using the cassette

Rewind the tape to the beginning to avoid distortion of the picture or the sound. The cassette should then be put in its case, and stored in an upright position.


When the Cassette Memory function does not work

Re-insert the cassette. Cassette Memory may not work when the gold-plated connector is dirty or dusty.

When cleaning the gold-plated connector

Generally, clean the gold-plated connector on a cassette with a cotton-wool swab after every 10 times it has been ejected.

If the gold-plated connector on the cassette is dirty or dusty, the remaining tape indicator may not be indicated correctly, and you may not be able to operate functions using Cassette Memory.

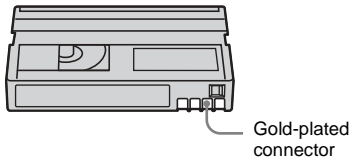

About the "Memory Stick"

The "Memory Stick" is a new light and small recording media which, despite its size, can store more data than a floppy disk. You can use following types of "Memory Stick" on your camcorder. However, appearance on the list does not guarantee the operation of all types of "Memory Stick" on your camcorder.

Types of "Memory Stick"	Recording/ Playback
"Memory Stick"	○
"Memory Stick Duo" ^{*1}	○
"MagicGate Memory Stick"	○ ^{*2}
"MagicGate Memory Stick Duo" ^{*1}	○ ^{*2}
"Memory Stick PRO"	○ ^{*2}
"Memory Stick PRO Duo" ^{*1}	○ ^{*2}

*1 Attach the Memory Stick Duo adaptor before inserting it into the camcorder.

*2 "MagicGate" is a copyright protection technology that records and transfers the contents in an encrypted format. Note that data that uses "MagicGate" technology cannot be recorded or played on your camcorder.


- Still image format: Your camcorder compresses and records image data in the JPEG (Joint Photographic Experts Group) format. The file extension is ".JPG."
- Movie format: Your camcorder compresses and records picture data in the MPEG (Moving Picture Experts Group) format. The file extension is ".MPG."
- File names of still images:
 - 101-0001: This file name appears on the screen of your camcorder.
 - DSC00001.JPG: This file name appears on the display of a computer.
- File names of movies:
 - MOV00001: This file name appears on the screen of your camcorder.
 - MOV00001.MPG: This file name appears on the display of a computer.

→ continued

- On a “Memory Stick” formatted on a computer: A “Memory Stick” formatted by the Windows OS or using Macintosh computers does not have guaranteed compatibility with your camcorder.
- Data read/write speed may vary depending on the combination of the “Memory Stick” and “Memory Stick” compliant product you use.

To prevent accidental erasure of images

Slide the write-protect tab on the “Memory Stick” to the write-protect position. The position and shape of the write-protect tab may be different depending on the model.

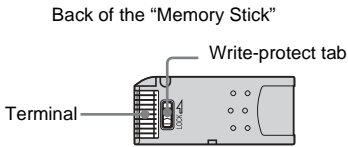


Notes on use

Image data may be damaged in the following cases. Compensation for damaged image data will not be made.

- If you eject the “Memory Stick,” turn the power off on your camcorder, or remove the battery pack for replacement while your camcorder is reading or writing image files on the “Memory Stick” (while the access lamp is lit or flashing).
- If you use the “Memory Stick” near magnets or magnetic fields.

It is recommended you take a back-up of important data on the hard disk of a computer.

 On handling



Keep the following notes in mind when handling a “Memory Stick.”

- When you carry or store a “Memory Stick,” put it in its case.
- Do not touch, or allow metallic objects to come into contact with the terminal.

- Do not bend, drop or apply strong force to the “Memory Stick.”
- Do not disassemble or modify the “Memory Stick.”
- Do not let the “Memory Stick” get wet.
- Do not insert any objects other than a compliant “Memory Stick” into the “Memory Stick” slot. It may cause a malfunction.

On location for use

Do not use or keep the “Memory Stick” in the following locations.

- Places subject to extremely high temperature, such as a car parked outside in the summer.
- Places under direct sunlight.
- Places with extremely high humidity or subject to corrosive gases.


Note on using the “Memory Stick Duo”

You can use a “Memory Stick Duo” in your camcorder after inserting it into the Memory Stick Duo adaptor.

You may damage the “Memory Stick Duo” or the “Memory Stick” slot on your camcorder in the following situations.

- When you insert a “Memory Stick Duo” that is not inserted into a Memory Stick Duo adaptor into the “Memory Stick” slot on your camcorder.
- When you insert the “Memory Stick Duo” in the wrong direction.

If you insert a “Memory Stick Duo” without a Memory Stick Duo adaptor by mistake, hold the camcorder so the “Memory Stick” slot is facing down, then hold the lid aside using a toothpick or similar object to let the “Memory Stick Duo” slide out.

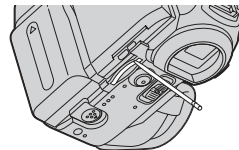


Notes on using the “Memory Stick PRO”


- The maximum memory capacity of a “Memory Stick” that can be used on your camcorder is 1 GB (512 MB for a “Memory Stick PRO Duo”).
- This unit does not support high speed data transfer.

Notes on image data compatibility

- Image data files recorded on a “Memory Stick” by your camcorder conform to the Design Rule for Camera File Systems universal standard established by the JEITA (Japan Electronics and Information Technology Industries Association).
- On your camcorder, you cannot play back still images recorded on other device (DCR-TRV890E/TRV900/TRV900E or DSC-D700/D770) that does not conform to the universal standard. (These models are not sold in some regions.)
- If you cannot use a “Memory Stick” that has been used with other device, format it with your camcorder (p. 66). Note that formatting erases all information on the “Memory Stick.”
- You may not be able to play back images with your camcorder:
 - When playing back image data modified on your computer.
 - When playing back image data recorded with other device.

-
- “Memory Stick,”  and “MagicGate Memory Stick” are trademarks of Sony Corporation.
 - “Memory Stick Duo” and “MEMORY STICK DUO” are trademarks of Sony Corporation.
 - “Memory Stick PRO” and “MEMORY STICK PRO” are trademarks of Sony Corporation.
 - “MagicGate” and “MAGICGATE” are trademarks of Sony Corporation.
 - All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, “™” and “®” are not mentioned in each case in this manual.

About the “InfoLITHIUM” battery pack

This unit is compatible with the “InfoLITHIUM” battery pack (M series). Your camcorder operates only with the “InfoLITHIUM” battery pack. “InfoLITHIUM” M series battery packs have the  mark.

What is the “InfoLITHIUM” battery pack?

The “InfoLITHIUM” battery pack is a lithium-ion battery pack that has functions for communicating information related to operating conditions between your camcorder and an optional AC Adaptor/charger.

The “InfoLITHIUM” battery pack calculates the power consumption according to the operating conditions of your camcorder, and displays the remaining battery time in minutes. With an AC Adaptor/charger (optional), the remaining battery time and charging time appear.

To charge the battery pack

- Be sure to charge the battery pack before you start using your camcorder.
- We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F) until the CHG (charge) lamp turns off. If you charge the battery pack outside of this temperature range, you may not be able to charge it efficiently.
- After charging is complete, either disconnect the cable from the DC IN jack on your camcorder or remove the battery pack.

To use the battery pack effectively

- Battery pack performance decreases when the surrounding temperature is 10°C (50°F) or below, and the length of time you can use the battery pack becomes shorter. In that case, do one of the following to use the battery pack for a longer time.


- Put the battery pack in a pocket to warm it up, and insert it in your camcorder right before you start taking shots.
- Use a large capacity battery pack: NP-FM50/FM70/QM71/QM71D/FM91/QM91/QM91D (optional).
- Frequent use of the LCD screen or a frequent playback, fast forward or rewind operation wears out the battery pack faster. We recommend using a large capacity battery pack: NP-FM50/FM70/QM71/QM71D/FM91/QM91/QM91D (optional).
- Be sure to set the POWER switch to (CHG) OFF when not recording or playing back on your camcorder. The battery pack is also consumed when your camcorder is in recording standby or playback pause.
- Have spare battery packs ready for two or three times the expected recording time, and make trial recordings before making the actual recording.
- Do not expose the battery pack to water. The battery pack is not water resistant.
- To completely use up the battery pack on your camcorder, leave your camcorder in tape recording standby until the power goes off without a cassette inserted.

About battery life

- The battery life is limited. Battery capacity drops little by little as you use it more and more, and as time passes. When the available battery time is shortened considerably, a probable cause is that the battery pack has reached the end of its life. Please buy a new battery pack.
- The battery life varies depending on how it is stored and the operating conditions and environment for each battery pack.

“InfoLITHIUM” is a trademark of Sony Corporation.

About remaining battery time indicator

- When the power goes off even though the remaining battery time indicator indicates that the battery pack has enough power to operate, charge the battery pack fully again. The indication on the remaining battery time will be indicated correctly. Note, however, that the battery indication will not be restored if it is used in high temperatures for a long time, or if left in a fully charged state, or when the battery pack is frequently used.
Use the remaining battery time indication as a guide to the approximate shooting time.
- The  mark that indicates low battery flashes even if there are still 5 to 10 minutes of battery time remaining, depending on the operating conditions or ambient temperature and environment.

About storage of the battery pack

- If the battery pack is not used for a long time, fully charge the battery pack and use it on your camcorder once a year to maintain the proper function.
To store the battery pack, remove it from your camcorder and put it in a dry, cool place.

About i.LINK

The DV Interface on this unit is an i.LINK-compliant DV Interface. This section describes the i.LINK standard and its features.

What is i.LINK?

i.LINK is a digital serial interface for transferring digital video, digital audio, and other data to other i.LINK-compatible device. You can also control other device using the i.LINK.

i.LINK-compatible device can be connected using an i.LINK cable. Possible applications are operations and data transactions with various digital AV devices.

When two or more i.LINK-compatible device are connected to this unit in a daisy chain, operations and data transactions are possible with not only the device that this unit is connected to but also with other devices via the directly connected device.

Note, however, that the method of operation sometimes varies according to the characteristics and specifications of the device to be connected. Also, operations and data transactions may not be possible on some connected device.

Note

- Normally, only one device can be connected to this unit with the i.LINK cable. When connecting this unit to i.LINK-compatible device having two or more DV Interfaces, refer to the operating instructions of the device to be connected.

Tips

- i.LINK is a more familiar term for the IEEE 1394 data transport bus proposed by Sony, and is a trademark approved by many corporations.
- IEEE 1394 is an international standard standardized by the Institute of Electrical and Electronics Engineers.

About i.LINK Baud rate

i.LINK's maximum baud rate varies according to the device. There are three types.

S100 (approx. 100Mbps*)

S200 (approx. 200Mbps)

S400 (approx. 400Mbps)

The baud rate is listed under "Specifications" in the operating instructions of each piece of

device. It is also indicated near the i.LINK interface on some device.

The maximum baud rate for device that does not have any indication (such as this unit) is "S100."

The baud rate may differ from the indicated value when the unit is connected to device with a different maximum baud rate.

* What is Mbps?

Mbps stands for "megabits per second," or the amount of data that can be sent or received in one second. For example, a baud rate of 100 Mbps means that 100 megabits of data can be sent in one second.

To use i.LINK functions on this unit

For details on how to dub when this unit is connected to other video device having a DV Interface, see page 86, 87.


This unit can also be connected to other i.LINK (DV Interface) compatible device made by Sony (e.g. a VAIO series personal computer) as well as to video device.

Before connecting this unit to your computer, make sure that application software supported by this unit is already installed on your computer.

Some i.LINK compatible video device such as Digital Televisions, DVD recorders/players, and MICROMV recorders/players are not compatible with DV device. Before connecting to other device, be sure to confirm whether the device is compatible with DV device or not. For details on precautions and compatible application software, refer also to the operating instructions for the device to be connected.

About the required i.LINK cable

Use the Sony i.LINK 4-pin-to-4-pin cable (during DV dubbing).

i.LINK and  are trademarks of Sony Corporation.

Maintenance and precautions

On camcorder use and care



- Do not use or store the camcorder in the following locations.
 - Anywhere extremely hot or cold. Never leave your camcorder exposed to temperatures above 60°C (140°F), such as under direct sunlight, near heaters or in a car parked in the sun. The camcorder may malfunction or become deformed.
 - Near strong magnetic fields or mechanical vibration. The camcorder may malfunction.
 - Near strong radio waves or radiation. The camcorder may not be able to record properly.
 - Near AM receivers and video equipment. Noise may occur.
 - Sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired.
 - Near windows or outdoors, where the LCD screen, the viewfinder, or the lens may be exposed to direct sunlight. This damages the inside of the viewfinder or the LCD screen.
- Anywhere very humid.
- Operate your camcorder on DC 7.2 V (battery pack) or DC 8.4 V (AC Adaptor).
- For DC or AC operation, use the accessories recommended in these operating instructions.
- Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. Sometimes this malfunction cannot be repaired.
- If any solid object or liquid get inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch setting to (CHG) OFF when you are not using your camcorder.

- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.

 
 
When not using your camcorder for a long time

Occasionally turn it on and let it run such as by playing back tapes for about 3 minutes.

Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder, on the surface of the tape, or on the lens. In this state, the tape may stick to the head drum and be damaged or your camcorder may not operate correctly. If there is moisture inside your camcorder, [▲ Moisture condensation. Eject the cassette] or [▲ Moisture condensation. Turn off for 1H.] appears. The indicator will not appear when the moisture condenses on the lens.

If moisture condensation has occurred

None of the functions except cassette ejection will work. Eject the cassette, turn off your camcorder, and leave it for about one hour with the cassette lid open. Your camcorder can be used again if  or  does not appear when the power is turned on again.

If moisture starts to condense, your camcorder sometimes cannot detect condensation. If this happens, the cassette is sometimes not ejected for 10 seconds after the cassette lid is opened. This is not a malfunction. Do not close the cassette lid until the cassette is ejected.

Note on moisture condensation

Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a humid place as shown below.

- When you bring your camcorder from a ski slope into a place warmed up by a heating device.
- When you bring your camcorder from an air-conditioned car or room into a hot place outside.
- When you use your camcorder after a squall or a shower.
- When you use your camcorder in a hot and humid place.

How to prevent moisture condensation

When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and seal it tightly. Remove the bag when the air temperature inside the plastic bag has reached the surrounding temperature (after about one hour).

Video head

- When the video head becomes dirty, you cannot record pictures normally, or distorted picture or sound is played back.
- If the following problem occurs, clean the video heads for 10 seconds with the Sony DVM-12CLD cleaning cassette (optional).
 - Mosaic-pattern noise appears on the playback picture or the screen is displayed in blue.



- Playback pictures do not move.
- Playback pictures do not appear or the sound breaks off.
- [⊗] Dirty video head. Use a cleaning cassette.] appears on the screen during recording.
- The video head suffers from wear after long use. If you cannot obtain a clear image even after using a cleaning cassette, it might be because the video head is worn. Please contact your Sony dealer or local authorized Sony service facility to have the video head replaced.

LCD screen

- Do not add excessive pressure on the LCD screen, as it may cause damage.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

To clean the LCD screen

- If fingerprints or dust make the LCD screen dirty, it is recommended you using the cleaning cloth (supplied) to clean it. When you use the LCD Cleaning Kit (optional), do not


apply the cleaning liquid directly to the LCD screen. Use cleaning paper moistened with the liquid.

On adjustment of the LCD screen (CALIBRATION)

The buttons on the touch panel may not work correctly. If this happens, follow the procedure below. It is recommend you connect your camcorder to the wall socket using the supplied AC Adaptor during the operation.

- 1 Slide the POWER switch up to (CHG) OFF.**
- 2 Eject the cassette and “Memory Stick” from your camcorder, then disconnect any connecting cables except the AC Adaptor from your camcorder.**
- 3 Slide the POWER switch repeatedly to select the PLAY/EDIT mode while pressing DISPLAY/BATT INFO on your camcorder, then press and hold DISPLAY/BATT INFO for about 5 seconds.**
- 4 Touch the “x” displayed on the screen with the corner of the supplied “Memory Stick.”**

The position of the “x” changes.

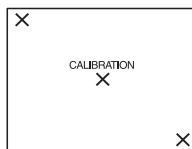

If you did not press the right spot, start from Step 4 again.

⚠ Note

- You cannot calibrate the LCD screen if you have rotated the LCD panel and set it with the LCD screen facing out.

Cleaning the casing

If the casing is soiled, clean the camcorder body with a soft cloth lightly moistened with water. Avoid the following as they may damage the finish.

- Using solvents such as thinner, benzene, alcohol, chemical cloths, volatile materials like insecticide.

→ continued

- Leaving the case in contact with rubber or vinyl objects for a long period of time.

About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances:
 - When there are fingerprints on the lens surface.
 - In hot or humid locations
 - When the lens is exposed to salty air such as at the seaside.
- Store in a well-ventilated location subject to little dirt or dust.
- To prevent molds periodically clean the lens as described above.

It is recommended you operate your camcorder about once a month to keep it in an optimum state for a long time.


To charge the pre-installed button-type battery

Your camcorder has a pre-installed button-type battery to retain the date, time, and other settings even when the POWER switch is set to (CHG) OFF. The pre-installed button-type battery is always charged while you are using your camcorder but it will get discharged gradually if you do not use your camcorder. The button-type battery will be fully discharged in about 3 months if you do not use your camcorder at all. However, even if the pre-installed button-type battery is not charged, the camcorder operation will not be affected if you are not recording the date.

Procedures

Connect your camcorder to a wall outlet using the supplied AC Adaptor, and leave it with the POWER switch set to (CHG) OFF for more than 24 hours.

Removing dust from inside the viewfinder

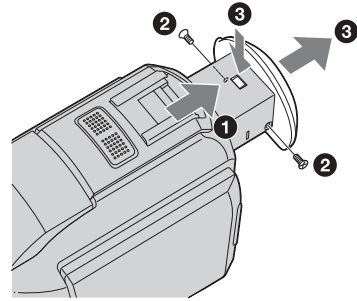

1 Remove the eyecup.

① Pull out the viewfinder.

② Remove the screw on each side of the eyecup and viewfinder using a screwdriver.

③ Remove the eyecup.

2 Remove dust from inside the eyecup and viewfinder with a blower.

3 Reverse steps ② and ③ to re-attach the eyecup and replace the screws.

⚡ Note

- Do not drop or bend the eyecup shaft. Be careful when handling the eyecup.

Specification

Video camera recorder

System

Video recording system

2 rotary heads, Helical scanning system

Still image recording system

Exif Ver. 2.2 *1

*1 "Exif" is a file format for still images, established by the JEITA (Japan Electronics and Information Technology Industries Association). Files in this format can have additional information such as your camcorder's setting information at the time of recording.

Audio recording system


Rotary heads, PCM system

Quantization: 12 bits (Fs 32 kHz, stereo 1, stereo 2), 16 bits (Fs 48 kHz, stereo)

Video signal

NTSC color, EIA standards

Usable cassette

Mini DV cassette with the  mark printed

Tape speed

SP: Approx. 18.81 mm/s

LP: Approx. 12.56 mm/s

Recording/playback time (using a DVM60 cassette)

SP: 60 min

LP: 90 min

Fast forward/rewind time (using a DVM60 cassette)

Approx. 2 min 40 s

Viewfinder

Electric viewfinder (color)

Image device

5.9 mm (1/3 type) CCD (Charge Coupled Device)

Gross: Approx. 3 310 000 pixels

Effective (still): Approx. 3 050 000 pixels

Effective (movie): Approx. 2 050 000 pixels

Lens

Carl Zeiss Vario-Sonnar T*

Combined power zoom lens

Filter diameter: 37 mm (1 1/2 in.)

10 × (Optical), 120 × (Digital)

F = 1.8 ~ 2.1

Focal length

5.1 - 51 mm (7/32 - 2 1/8 in.)

When converted to a 35 mm still camera

In CAMERA-TAPE:

45 - 450 mm (1 13/16 - 17 3/4 in.)

In CAMERA-MEMORY:

37 - 370 mm (1 1/2 - 14 5/8 in.)

Colour temperature

[AUTO], [HOLD], [INDOOR] (3 200 K),

[OUTDOOR] (5 800 K)

Minimum illumination

7 lx (lux) (F 1.8)

0 lx (lux) (during NightShot function)*

*Objects unable to be seen due to the dark can be shot with infrared lighting.

Input/Output connectors

Audio/Video input/output

10-pin connector

Video signal: 1 Vp-p, 75 Ω (ohms), unbalanced

Luminance signal: 1 Vp-p, 75Ω (ohms), unbalanced

Chrominance signal: 0.286 Vp-p, 75Ω (ohms), unbalanced

Audio signal: 327 mV (at output impedance more than 47 kΩ (kilohms)), Input impedance more than 47 kΩ (kilohms), Output impedance with less than 2.2 kΩ (kilohms)

DV input/output

4-pin connector

Headphones jack

Stereo minijack (φ 3.5 mm)

LANC jack

Stereo mini-minijack (φ 2.5 mm)

USB jack

mini-B

MIC jack

Minijack, 0.388 mV low impedance with DC 2.5 to 3.0 V, output impedance 6.8 kΩ (kilohms) (φ 3.5 mm), Stereo type

LCD screen

Picture

6.2 cm (2.5 type)

Total dot number

211 200 (960 × 220)

→ continued

General

Power requirements

- DC 7.2 V (battery pack)
- DC 8.4 V (AC Adaptor)

Average power consumption (when using the battery pack)

- During camera recording using the viewfinder
3.3 W
- During camera recording using the LCD
3.8 W

Operating temperature

- 0° C to 40° C (32° F to 104° F)

Storage temperature

- 20° C to + 60° C (-4° F to + 140° F)

Dimensions (approx.)

- 59 × 119 × 113 mm (2 3/8 × 4 3/4 × 4 1/2 in.)
(w/h/d)

Mass (Approx.)

- 540 g (1 lb 3 oz) main unit only
- 630 g (1 lb 6 oz) including the NP-FM30 rechargeable battery pack, DVM60 cassette and lens cap.

Supplied accessories

- See page 12.

AC Adaptor AC-L15A/L15B

Power requirements

- AC 100 - 240 V, 50/60 Hz

Current consumption

- 0.35 - 0.18 A

Power consumption

- 18 W

Output voltage

- DC 8.4 V, 1.5 A

Operating temperature

- 0° C to 40° C (32° F to 104° F)

Storage temperature

- 20° C to + 60° C (-4° F to + 140° F)

Dimensions (approx.)

- 56 × 31 × 100 mm (2 1/4 × 1 1/4 × 4 in.) (w/h/d) excluding the projecting parts

Mass (approx.)

- 190 g (6.7 oz) excluding the power cord

Rechargeable battery pack (NP-FM30)

Maximum output voltage

- DC 8.4 V

Output voltage

- DC 7.2 V

Capacity

- 5.0 Wh (700 mAh)

Dimensions (approx.)

- 38.2 × 20.5 × 55.6 mm
(1 9/16 × 13/16 × 2 1/4 in.) (w/h/d)

Mass (approx.)

- 65 g (2.2 oz)

Operating temperature

- 0° C to 40° C (32° F to 104° F)

Type

- Lithium ion

“Memory Stick”

Memory

- Flash memory
16MB: MSA-16A

Operating voltage

- DC 2.7 - 3.6 V

Power consumption

- Approx. 45 mA during operation mode
- Approx. 130 µA during tape recording standby

Dimensions (approx.)

- 21.5 × 50 × 2.8 mm (7/8 × 2 × 1/8 in.) (w/h/d)


Mass (approx.)

- 4 g (0.14 oz)

Design and specifications are subject to change without notice.

Identifying parts and controls


Camcorder

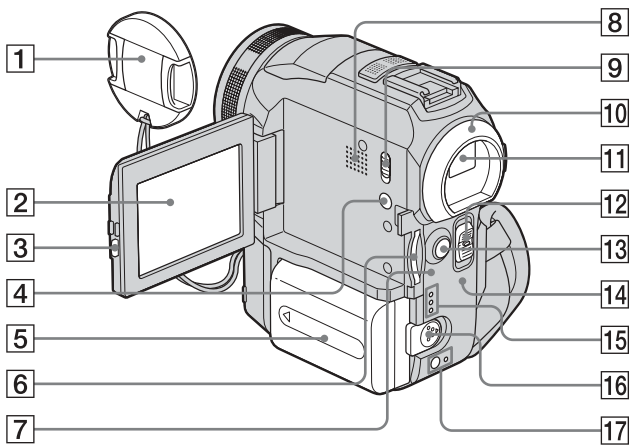


- 1 Lens cap (p. 23, 28)
- 2 LCD/Touch panel screen (p. 3, 17)
- 3 OPEN button (p. 17)
- 4 DISPLAY/BATT INFO button (p. 14)
- 5 Battery pack/Battery terminal cover (p. 13)
- 6 “Memory Stick” slot (p. 21)
- 7 Access lamp (p. 21, 118)

- 8 Speaker
- 9 LCD BACKLIGHT switch (p. 17)
- 10 Eyecup
- 11 Viewfinder (p. 3, 17)
- 12 POWER switch (p. 16)
- 13 START/STOP button (p. 23, 28)
- 14 CHG (charge) lamp (p. 13)
- 15 CAMERA-TAPE, CAMERA-MEMORY, PLAY/EDIT mode lamps (p. 16)
- 16 Battery release lever (p. 13)
- 17 ⚡ (flash) button/flash charge indicator (p. 30)

To replace the lens cap

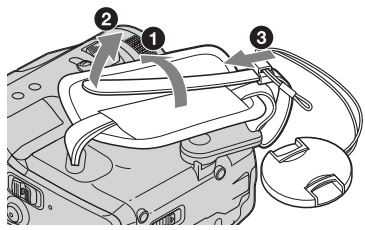

→ continued

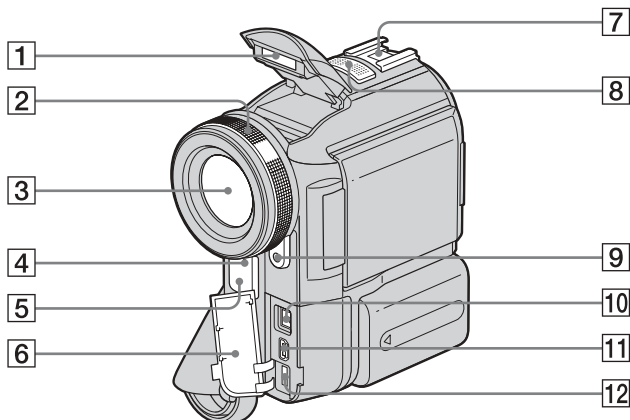

1 Flash (p. 30)

2 Focus ring (p. 36)


3 Lens (Carl Zeiss Lens)

Your camcorder is equipped with a Carl Zeiss lens which can reproduce fine images. The lens for your camcorder was developed jointly by Carl Zeiss, in Germany, and Sony Corporation. It adopts the MTF measurement system for video cameras and offers a quality as fine as a Carl Zeiss lens. The lens for your camcorder is also T*-coated to suppress unwanted reflection and faithfully reproduce colors. MTF stands for Modulation Transfer Function. The value number indicates the amount of light from a subject coming into the lens.

4 Camera recording lamp (p. 23, 28)

5 Remote sensor/Infrared ray emitter (p. 92)

6 Jack cover

7 Intelligent accessory shoe  (p. 97)

The intelligent accessory shoe supplies power to optional accessories such as a video light or microphone. The accessory can be turned on or off as you operate the POWER switch on your camcorder. Refer to the operating instructions of the accessory for details. The intelligent accessory shoe has a safety device for fixing the installed accessory securely. To connect an accessory, press down and push it to the end, and then tighten the screw. To remove an accessory, loosen the screw, and then press down and pull out the accessory.


8 Microphone (p. 97)




9 HOLOGRAM AF emitter (p. 37)

10  DV Interface (p. 121)


11  (USB) jack

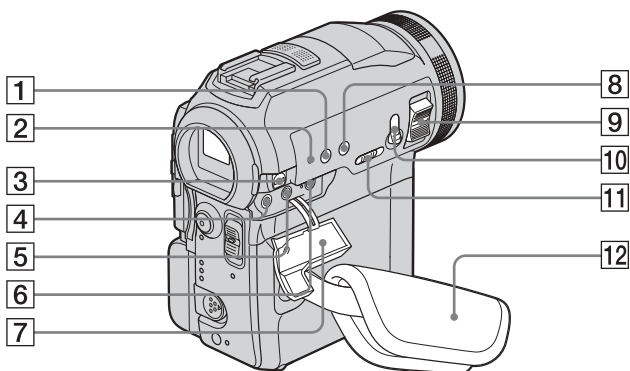12 DC IN jack (p. 13)

 

- | | |
|---|--|
| <p>1 BACK LIGHT button (p. 32)</p> <p>2 RESET button
If you press RESET, all the settings including the date and time, except the Personal Menu items, return to the default.</p> <p>3 A/V (audio/video) jack (p. 86)</p> <p>4  (LANC) jack (blue)
The  LANC control jack is used for controlling the tape transport of video device and peripherals connected to it.</p> <p>5  (headphones) jack (green)
When you use headphones, the speaker on your camcorder is silent.</p> <p>6 MIC (PLUG IN POWER) jack (red) (p. 97)</p> <p>7 Jack cover</p> | <p>8 FOCUS button (p. 35)</p> <p>9 Power zoom lever</p> <p>10 PHOTO button (p. 28)</p> <p>11 NIGHTSHOT/NIGHTFRAMING switch (p. 34)</p> <p>12 Grip belt and finger rest (p. 4)</p> |
|---|--|

→ *continued*

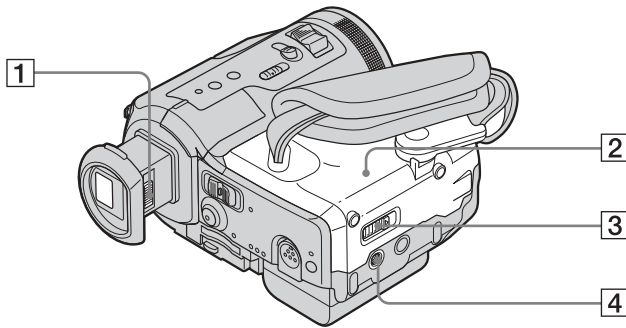

1 Viewfinder lens adjustment lever (p. 17)

2 Cassette compartment (p. 20)


3 OPEN/▲EJECT ▼ lever (p. 20)

4 Tripod receptacle

Make sure that the length of the tripod screw is less than 5.5 mm (7/32 inch). Otherwise, you cannot attach the tripod securely, and the screw may damage your camcorder.


Remote Commander

Remove the insulation sheet before using the Remote Commander.

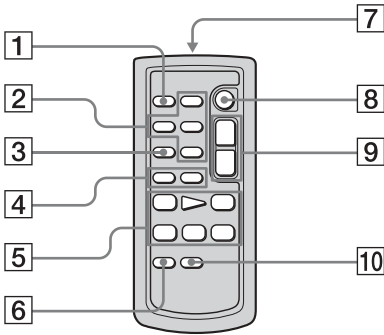


- 1 PHOTO button (p. 28)
- 2 Memory control buttons (Index, -/+, Memory playback) (p. 48)
- 3 SEARCH M. button (p. 54)
- 4 ◀◀/▶▶ buttons (p. 54)
- 5 Video control buttons (Rewind, Playback, Fast-forward, Pause, Stop, Slow) (p. 46)
- 6 ZERO SET MEMORY button (p. 54)
- 7 Transmitter
After turning on your camcorder, point towards the remote sensor to control your camcorder.
- 8 START/STOP button (p. 26)
- 9 Power zoom button (p. 25)
- 10 DISPLAY button (p. 54)

To remove the insulation sheet

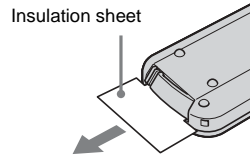


To change the battery


- 1 While pressing on the tab, inset your fingernail into the slit to pull out the battery case.

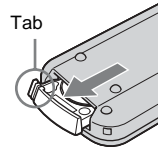

- 2 Remove the button-type lithium battery.

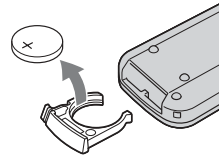

- 3 Place a new button-type lithium battery with the + side facing up.

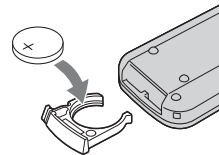

- 4 Insert the battery case back into the Remote Commander until it clicks.

→ continued

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

Notes on the Remote Commander


- A button-type lithium battery (CR2025) is used in the Remote Commander. Do not use batteries other than CR2025.
- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.
- The Remote Commander may not function properly when the remote sensor is obstructed with a conversion lens (optional).
- When you are operating with the Remote Commander supplied with your camcorder, your VCR may also operate. In that case, select a commander mode other than VTR 2 for your VCR, or cover the sensor of your VCR with black paper.

Indicators for the LCD screen and viewfinder

Following indicators will appear on the LCD screen and viewfinder to indicate the state of your camcorder.

Example: Indicators in the CAMERA-TAPE mode

Time code (p. 51)/Tape counter (p. 51)/Self-diagnosis (p. 111)/Picture number (p. 49)

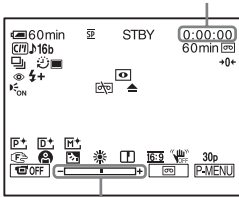

Exposure adjustment scale

Indicators	Meanings
60min	Remaining battery (p. 24)
SP, LP	Recording mode (p. 25)
PAL	PAL system video (p. 107)
STBY REC	Recording standby/ recording mode
STD FINE	Image quality (p. 29)
2016 640	Image size (p. 29)
320 160	Image size (p. 25)
101 101	Recording folder/playback folder (p. 66)
	Cassette Memory (p. 116)
16b	Audio mode (p. 77)
60min	Remaining tape (p. 24)
BRK	Continuous photo recording (Burst) (p. 64)
	Self-timer recording (p. 26, 31)
	Interval still image recording (p. 72)
	Flash (p. 30) This indicator appears only when the flash is in use.

Indicators	Meanings
	Frame recording (p. 70)
AV/DV	Outputting analog images and sound in digital format (p. 79)
DVIN	DV input (p. 87)
	Zero set memory (p. 54)
	HOLOGRAM AF (p. 37)
	NightShot (p. 34)
	Super NightShot (p. 34)
	Color Slow Shutter (p. 35)
	NightFraming (p. 38)
	Warning (p. 111)
	Picture effect (p. 68)
	Digital effect (p. 40)
	MEMORY MIX (p. 41)
	Manual focus/Expanded focus (p. 35)
	PROGRAM AE (p. 58)
	Backlight (p. 32)
HOLD	White balance (p. 59)
	Sharpness (p. 60)
	16:9 WIDE (p. 62)
	SteadyShot off (p. 63)
30p	Progressive recording (p. 27)
	Protect (p. 101)
	Print mark (p. 102)
	Slide show (p. 69)
	LCD backlight off
	Image deletion (p. 99)

Index

Numerics

16:9 WIDE mode 62

A

A/V connecting cable
..... 53, 86, 97
AC Adaptor 16
Adjusting the viewfinder... 17
Audio dubbing (AUD DUB
CTRL)..... 97
AUDIO MIX 78, 99
AUDIO MODE 77
Auto shut off function (A.
SHUT OFF) 81
AUTO SHUTTER 60

B

BACK LIGHT (camera).... 32
Battery
Battery Info..... 14
Battery pack 13
Remaining battery
time 24, 120
BEEP 80
BURN DVD 73
Burst (BURST)..... 29, 64
Button-type battery
Camcorder 124
Remote Commander . 131

C

CALIBRATION 123
Camera Chroma key (CAM ←
M CHROMA) 41
Camera settings data
display 51
Cassette 20
Cassette Memory..... 3, 116
Cassette Memory Search
(SEARCH) 43, 54, 55, 74
Charging the battery
Battery pack 13
Pre-installed button-type
battery 124
Clock set (CLOCK SET)
..... 18, 82

Color Slow Shutter (COLOR
SLOW S)..... 35
Customizing Personal
Menu 83

D

Data code (DATA CODE)
..... 51, 80
Date search..... 55
Date/time..... 51
Delete
Deleting pictures 99
DEMO MODE 72
Digital convert function (A/V
→ DV OUT)..... 79
Digital effect (D.EFFECT)
..... 40, 47
Digital program editing
(PROG.EDIT) 91
DIGITAL ZOOM 62
Display
DISPLAY 81
Display indicators 133
DOT FADER 39
Dual sound track tape 77
Dubbing (REC CTRL)..... 86

E

EDIT SEARCH 44
END SEARCH 43, 74
Erase
ALL ERASE (Cassette
Memory)..... 76
ALL ERASE
(still image)..... 65
Expanded focus (EXP.
FOCUS) 60

F

FADER 38
FILE NO. 66
Fine (FINE)
See Image quality
(QUALITY)
Finger rest 4
Flash..... 30
FLASH LEVEL 60
Flash motion (FLASH) 40
FLASH SET 60

Flexible spot meter (SPOT
METER) 33
Focus 35
Folder
See NEW FOLDER
See PB FOLDER
See REC FOLDER
FORMAT 66, 117
Frame playback 46
Frame recording (FRAME
REC) 70
Full charge 13

G

Grip belt..... 4

H

Headphones jack 129
HOLOGRAM AF..... 37, 61

I

i.LINK 121
i.LINK cable 86, 91
ID-1/ID-2 system..... 62
Image protection..... 101
Image quality (QUALITY)
..... 29, 65
Image size (IMAGE SIZE)
..... 29, 65
Index screen..... 49
"InfoLITHIUM" battery
pack..... 119
Infrared ray emitter..... 92
Intelligent accessory shoe
..... 97, 128
Interval photo recording (INT.
REC-STL)..... 72

J

JPEG..... 117

L

LANC 129
LANGUAGE..... 82
Language (LANGUAGE) . 22
LCD back light (LCD BL
LEVEL) 78
LCD BACKLIGHT switch
..... 127

LCD brightness (LCD BRIGHT).....	17	NightShot.....	34	Review	23, 28
LCD COLOR.....	78	NightShot Light (NS LIGHT).....	61	S	
LCD screen.....	3	NORMAL FADER.....	38	S video	53, 86
LCD/VF SET	78	NTSC.....	115	Self-diagnosis display	111
LP (Long Play)		O		Self-timer recording (SELF-TIMER)	26, 31
See Recording mode (REC MODE)		OLD MOVIE.....	40	SHARPNESS.....	60
Luminance key (LUMI. KEY)	40	P		Skip scan	46
M		PAL	115	SLIDE SHOW	69
Main sound		PB FOLDER.....	67	Slow shutter (SLOW SHUTTR).....	40
See MULTI-SOUND		Personal Menu (P-MENU)	56	Smooth interval tape recording (SMTH INT. REC).....	70
Manual exposure (EXPOSURE)	33	Picture effect (PICT. EFFECT).....	68	Smooth transition	
Manual focus.....	36	Picture search	46	See END SEARCH	
Memory Chroma key (M ← CAM CHROMA	42	Playback (VAR.SPD PB)		SP (Standard Play)	
Memory Luminance key (M ← CAM LUMI.)	41	Double speed	46	See Recording mode (REC MODE)	
MEMORY MIX.....	41	Frame	46	SPOT FOCUS.....	35
Memory Overlap (OVERLAP).....	39	Reverse	46	Standard (STANDARD)	
Memory photo.....	28, 48	Slow	46	See Image quality (QUALITY)	
“Memory Stick”		Playback zoom (PB ZOOM).....	51	STEADYSHOT	63
General information ..	117	Playing time.....	15	Stereo/monaural	77
Inserting.....	21	Power mode.....	16	STILL.....	40
Number of pictures	25, 29	Print mark	102	Still image format	117
Menu		PROGRAM AE.....	58	STILL SET.....	64
CAMERA SET.....	58	Program edit (PROG. EDIT).....	73	Sub sound	
EDIT/PLAY	73	Progressive recording mode (PROGRE REC).....	27	See MULTI-SOUND	
MEMORY SET	64	R		Super NightShot.....	34
MENU ROTATE	81	REC FOLDER.....	67	T	
PICT. APPLI.....	68	Rec review	44	Tape counter.....	24
Selecting items	56	Recording capacity		Telephoto	
STANDARD SET	77	Display.....	24	See Zoom	
TIME/LANGU.....	82	REMAINING	65, 80	Time code.....	24
Mirror mode.....	26	Recording lamp (REC LED)	80	Title (Cassette Memory)	
Moisture condensation.....	122	Recording mode (REC MODE).....	24, 77	TAPE TITLE.....	76
MONOTONE.....	38	Recording time	15, 25	TITL ERASE.....	75
MOSAIC FADER.....	38	Red-eye reduction (REDEYE REDUC)	61	TITLE.....	74
MOVIE SET	65	Remote Commander.....	131	TITLE DISP	75
MPEG	117	REMOTE CTRL.....	80	Title search.....	54
MULTI-SOUND.....	77	Remote sensor	128	TRAIL.....	40
N		RESET	129	TV color systems	115
NEW FOLDER.....	66	Resize (RESIZE).....	100		
NightFraming.....	38			U	
				USB jack	128
				USB Streaming	79

USB-CAMERA 79
USB-PLY/EDT..... 79
Using abroad 115

V

Video head 123
VIDEO INPUT..... 79
Viewfinder..... 17
 Brightness (VF B.
 LIGHT) 78
Volume (VOLUME)... 45, 48

W

Warning indicators 111
Warning messages 111
White balance (WHITE
 BAL.)..... 59
Wide angle
 See Zoom
WIPE 39
WORLD TIME 82
Write-protect tab 116, 118

Z

Zero set memory 54
Zoom 25, 50

<http://www.sony.net/>



Printed on 100% recycled paper using
VOC (Volatile Organic Compound)-free
vegetable oil based ink.

Printed in Japan

