

C1

C3

N1

N2

N3

P1

S1



Canon Powershot SX 50HS
 Canon Powershot G 10
 Canon Powershot G 11
 Canon Powershot G 12
 Canon Powershot G1X
 Canon Powershot G1X MkII
 Canon Powershot G15
 Canon Powershot G16
 Canon 100D/SL1
 Canon 1000D/Rebel XF/Kiss F
 Canon 1100D/Rebel T3/Kiss X50
 Canon 1200D/Rebel T5/Kiss X70
 Canon 300D
 Canon 350D/Rebel XT
 Canon 400D/Rebel XTi
 Canon 450D/Rebel/ XSi/Kiss X2
 Canon 500D/Rebel T1i/Kiss X3
 Canon 550D/Rebel T2i/Kiss X4
 Canon 60D
 Canon 60Da
 Canon 600D/Rebel T3i/Kiss X5
 Canon 650D/Rebel T4i/Kiss X6
 Canon 70D
 Canon 700D/Rebel T5i
 Canon 750D/Rebel T6i/Kiss X8i
 Canon 760D/Rebel T6s
 Pentax K100D
 Pentax K100D Super
 Pentax K110D
 Pentax K10 Grand Prix
 Pentax K10D
 Pentax K20D
 Pentax K200D
 Pentax K30
 Pentax K500
 Pentax K50
 Pentax K5

Canon 1D
 Canon 1D Mk II
 Canon 1D Mk II N
 Canon 1Ds
 Canon 1Ds MkII
 Canon 1D Mk III
 Canon 1D Mk IV
 Canon 1DC
 Canon 1DX
 Canon 10D
 Canon 20D
 Canon 20Da
 Canon 30D
 Canon D30
 Canon 40D
 Canon 50D
Canon 5D
 Canon 5D MkII
 Canon 5D MkIII
 Canon D60
 Canon 6D
 Canon 7D
 Canon 7D MkII
 Kodak DSC 530

Nikon D1
 Nikon D1X
 Nikon D1H
 Nikon D2
 Nikon D2X
 Nikon D2Xs
 Nikon D2H
 Nikon D2Hs
 Nikon D200
 Nikon D3
 Nikon D3X
 Nikon D3s
 Nikon D300
 Nikon D300s
 Nikon D4
 Nikon D4s
 Nikon D70s
 Nikon D700
 Nikon D800
 Nikon D800e
 Nikon D810

Nikon D70s
 Nikon D80

Nikon Df
 Nikon D3000
 Nikon D3100
 Nikon D3200
 Nikon D3300
 Nikon D5000
 Nikon D5100
 Nikon D5200
 Nikon D5300
Nikon D600
 Nikon D610
 Nikon D750
 Nikon D7000
 Nikon D7100
 Nikon D7200
 Nikon D90

Panasonic FZ15
 Panasonic FZ20
 Panasonic FZ30
 Panasonic FZ35
 Panasonic FZ45
 Panasonic FZ50
 Panasonic FZ100
 Panasonic FZ150
 Panasonic FZ1000
 Panasonic FZ200
 Panasonic FT2
 Panasonic GF1
 Panasonic G1
 Panasonic G2
 Panasonic G3
 Panasonic G5
 Panasonic G6
 Panasonic G7
 Panasonic G10
 Panasonic GH1
 Panasonic GH2
 Panasonic GH3
 Panasonic GH4
 Panasonic GX1
 Panasonic GX7
 Panasonic GX7
 Panasonic GX8
 Panasonic L1
 Panasonic L10
 Panasonic LC1
 Panasonic TS2
 Leica Digilux 2
 Leica Digilux 3
 Leica V-Lux 1
 Leica V-Lux 2
 Leica V-Lux 3

Sony A100
 Sony A200
 Sony A300
 Sony A33
 Sony A35
 Sony A350
 Sony A37
 Sony A400
 Sony A450
 Sony A500
 Sony A55
 Sony A550
 Sony A550V
 Sony A560
 Sony A57
 Sony A580
 Sony A65
 Sony A65V
 Sony A700
 Sony A77
 Sony A77V
 Sony A850
 Sony A900
 Sony A99
 Minolta Dynax 3
 Minolta Dynax 4
 Minolta Dynax 5D
 Minolta Dynax 500si
 Minolta Dynax 505si
 Minolta Dynax 5000
 Minolta Dynax 7
 Minolta Dynax 7D
 Minolta Dynax 7000
 Minolta Dynax 9
 Minolta Dynax 9000
 Minolta Dynax Sweets
 Minolta Dimage A1

Pentax K5 II
Pentax K5 IIs
Pentax K7
Pentax K m
Pentax ist D
Pentax ist DS
Pentax ist DS2
Pentax ist DL
Pentax ist DL2
Pentax MZ-6
Pentax MZ-L
Pentax ZX-L
Pentax 645D
Hasselblad H3D
Hasselblad H4D-200Ms
Hasselblad H4D-31
Hasselblad H4D-40
Hasselblad H4D-50
Hasselblad H4D-50Ms
Hasselblad H4D-60
Samsung NX-5
Samsung NX-10
Samsung NX-100
Samsung NX-11
Samsung GX-1S
Samsung GX-1L
Samsung GX-10
Samsung GX-20
FujiFilm X-E1
FujiFilm X-E2
FujiFilm X-T1
FujiFilm X-T10
FujiFilm X-30
Fujifilm S3 PRO
Fujifilm S5 PRO
Contax 645
Contax N
Contax N Digital
Contax N1
Contax NX
SIGMA SD1
SIGMA SD1 Merrill
SIGMA SD15

Minolta Dimage A2
Minolta Dimage A200
Minolta Dimage 5
Minolta Dimage 7
Minolta Dimage 7i
Minolta Dimage 7Hi
Minolta Maxxum 3
Minolta Maxxum 4
Minolta Maxxum 5D
Minolta Maxxum 500si
Minolta Maxxum 505si
Minolta Maxxum 5000
Minolta Maxxum 600si
Minolta Maxxum 7
Minolta Maxxum 7D
Minolta Maxxum 700si
Minolta Maxxum 7000
Minolta Maxxum 807si
Minolta Maxxum 9
Minolta Maxxum 9000
Hasselblad H