

## INSTRUCTION MANUAL

**Dual Camera** 



# VPC-GH1EX VPC-GH1GX VPC-GH1PX VPC-GH1TA VPC-GH2



#### Important note

This manual explains how to safely operate the VPC-GH1EX, VPC-GH1GX, VPC-GH1PX, VPC-GH1TA and VPC-GH2. Any information regarding only one of these products will be labeled as such.

Please read these instructions carefully before using the camera. Make sure to read and understand the separate booklet "SAFETY MANUAL". Keep this manual in a safe place for later reference.

# HOW TO READ THIS MANUAL

#### For first-time users

Please read the sections on "SETUP" and "SIMPLE" in this manual to familiarize yourself with your camera's operation.

#### To use the various camera features

Please read the sections on "NORMAL" and "OPTION SETTINGS" in this manual. To connect the camera to a computer or view images on a TV, please read the section on "OTHER DEVICES AND CONNECTIONS" in this manual.

 $\downarrow$ 

#### To use additional features

Visit the Sanyo website to learn how to adjust the camera settings for various shooting scenes. There you'll also find information about the software for playing back data recorded with your camera and for burning (recording) DVDs (page 156).

You may find the answers to questions or problems concerning camera operation in the sections "COMMONLY ASKED QUESTIONS" (page 166) and "TROUBLESHOOTING" (page 174).


## Symbols used in this manual

HINT Points giving some extended instructions or special points to pay attention to.

- CAUTION Points that require special attention.
- (page xx) Refer to the page indicated for detailed information.

# SHOOT, PLAY BACK AND SAVE


## Preparing the camera

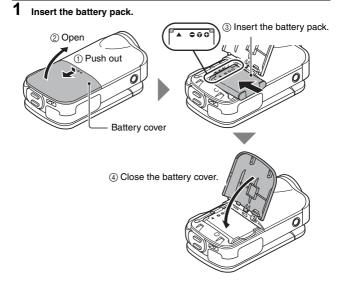

## About saving your recorded data

- If you wish to use an SD Memory Card, refer to page 27 to install the card in the camera.
- An SD Memory Card is not included with your camera. Please purchase a commercially sold card.
- This camera has an internal memory, so you can shoot and record without an SD Memory Card installed.

## Shooting

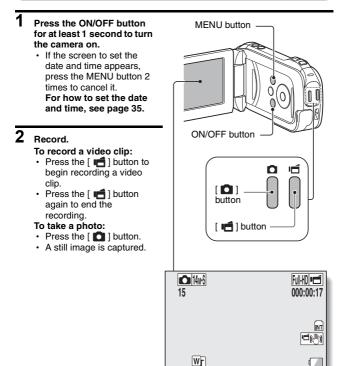

# Before capturing those important shots, be sure to first take a test shot to confirm that your camera is set up and ready to go


Sanyo declines any claim for compensation for recorded contents etc. in case
of photographing or recording failure due to a chance camera or card flaw.


## Playback

- 1 Press the REC/PLAY button.
  - The display changes to the Playback Screen.

# 2 Select the image to play back.

- Use the arrow keys to move the orange frame to the image you wish to play back.
- The image information for the framed image is shown in the bottom part of the monitor.

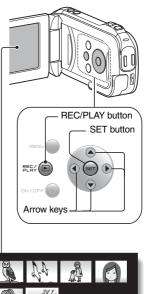



## **3** Press the SET button. <To return to the recording mode>

Press the REC/PLAY button.

### When you are finished using the camera...

Press the ON/OFF button for at least 1 second to turn the camera off.


### Copy data from your camera to the computer

Connect your camera to a computer, and copy the desired data to the computer.

- 1 Turn on the computer, and use the supplied dedicated USB interface cable to connect your camera to the computer.
  - Connect the cable between the camera's USB/AV terminal and the computer's USB connector.

## **2** Turn on the camera (page 32).

· The USB Connection Screen appears on the camera's monitor.

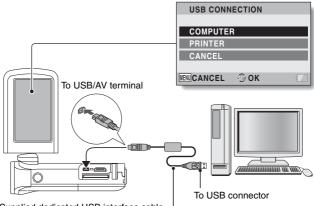

Supplied dedicated USB interface cable -

## **3** Select "COMPUTER", and press the SET button.

- The screen to select the computer connection mode appears.
- USB CONNECTION CARD READER MTP SCREEN CAPTURE PC CAMERA CANCEL IEN D GOK

## 4 Select "CARD READER", and press the SET button.

- The message [Found New Hardware] appears in the task tray, showing that the camera is recognized as a drive.
- The card is recognized (mounted) as a disk, and the [XACTI (E:)] icon appears in the [My Computer] window.
  - The drive name (E:) may be different on your computer.

#### <If the access menu (page 158) appears>

Click on [Exit] to cancel the access menu.

## 5 Select an action.

 If the [XACTI (E:)] window appears automatically, select the desired procedure from the window.

6 Copy files from the camera to a computer.

## **Dismounting the camera**

#### CAUTION

- To disconnect your camera, be sure to follow the procedure below. Failure to follow this procedure may cause faulty operation of your computer or corrupt the files in your camera.
- Left-click on the icon for safely removing hardware in the task tray.
   A list appears showing the devices connected to the computer's USB connector.

## 2 Left-click on the camera drive (E:).

- The camera can now be disconnected.
  - The drive name (E:) may be different on your computer.

No software is included with this camera. Please visit our website to obtain the available software.

# CONTENTS

HOW TO READ THIS MANUAL	i
QUICK SEARCH BY OPERATION	6
CHECKING THE INCLUDED ACCESSORIES	11
How to use the accessories	13
ABOUT THE CARD	17
Media cards that can be used with this camera	17
What "card" means in this manual	17
GETTING THE MOST OUT OF YOUR CAMERA	18
High-quality images with "Full High Definition*"	18
Includes SIMPLE mode for quick-and-easy operation	19
Image stabilizer for sharp pictures	19
Capture clear images of the targeted subject	20
Eye-Fi smart	20
SYSTEM MAP	21

## ■ SETUP

PARTS NAMES	22
CHARGING THE BATTERY PACK	24
Charging the battery pack	25
INSTALLING THE CARD	27
INSTALLING THE BATTERY PACK	
About the temperature alert icon 🜆	31
TURNING THE CAMERA ON AND OFF	32
Turning on the camera	32
Turning off the camera	32
Turning on the camera when the power save (sleep) mode is	
active	
DATE AND TIME SETTING	35
SWITCHING BETWEEN THE RECORDING MODE AND PLAYBAC	ĸ
MODE	38
SWITCHING THE OPERATING MODE	39
Switching between the SIMPLE and NORMAL modes	
Accessing/exiting the SIMPLE/NORMAL Mode Menu Screen	
Overview of the SIMPLE Mode Setting Screen	45
Overview of the NORMAL Mode Setting Screen	49

### ■ SIMPLE

7
7
8
1
2
3
4
5
8
0
2

#### PLAYBACK

PLAYING BACK VIDEO CLIPS AND STILL IMAGES	74
How to save one frame from a video clip as a still image	77
SLIDESHOW PLAYBACK	78
PLAYBACK VOLUME	79
DELETING FILES	80
Delete single/delete all/delete folder	80
Delete selected	81
PLAYBACK MODES	83
21-image display playback	83
Selecting the playback folder	84
Magnifying (zooming in) the image	85

## ■ NORMAL

SHOOTING	
RECORDING MENU 1	
Video setting	86
Still image setting	
Scene select setting	91
Filter setting	
Self-timer setting	
RECORDING MENU 2	
Motion compensation (image stabilizer) setting	
Focus range setting	
Focus mode setting	
Light-measuring mode setting	
ISO sensitivity setting	
RECORDING MENU 3	
White balance setting	
Exposure setting	
Subject chaser settings	
High sensitivity mode setting	102
Digital zoom setting	102
Exposure compensation	103
Storage folder setting	104

#### PLAYBACK

PLAYBACK MENU 1	105
Slideshow settings	
File protect setting	106
Resize	108
Rotate	
PLAYBACK MENU 2	109
Correcting the image	109
Editing video clips	
Printing instructions	119
FILE INFO DISPLAY	123

## OPTION SETTINGS

DISPLAY THE OPTION SETTING MENU	124
INTRODUCTION TO THE OPTION SETTING MENU	125
Shortcut setting	131
TV output setting	134
File No. continued setting	138
Formatting (initializing)	140
CHECKING THE REMAINING CARD MEMORY	141
Checking the remaining number of images and	
video recording time	141
For audio recordings	142
CHECKING THE REMAINING BATTERY PACK CHARGE	143

### ■ OTHER DEVICES AND CONNECTIONS

#### CONNECTING TO A COMPUTER

OPERATING ENVIRONMENT	145
When using as a card reader	145
To access the files in the internal memory	
SETTING THE CONNECTION MODE	146
USING AS A CARD READER	149
For Windows Vista/XP/7 users	149
For Windows 2000 users (except for the SDXC card)	
For Mac OS X users	151
ABOUT THE CONTENTS OF THE CARD	152
Configuration of directories in the card	
File formats	152
Cautions when using as a card reader	
USING AS A PC CAMERA	
For Windows XP	155
Using as a PC camera	
USING THE SOFTWARE	156
Operating environment	
Obtaining the software	157

#### CONNECTING TO A TV

CONNECTING TO A TV	159
Connecting to a video input terminal	160
Connecting to the HDMI terminal	
PLAYING BACK ON A TV	161

#### CONNECTING TO A PRINTER

PRINTING1	62
-----------	----

#### **OTHER CONNECTIONS**

SCREEN CAPTURE	65
----------------	----

### APPENDICES

COMMONLY ASKED QUESTIONS	. 166
TROUBLESHOOTING	. 174
Camera	. 174
Notes regarding the Scene Select feature and filters	. 182
SPECIFICATIONS	. 184
Camera	. 184
Camera connectors	. 188
Battery life	. 188
Possible No. of Images/Possible Shooting Time/	
Possible Recording Time	. 189
Concerning the multi-indicator	. 190
Supplied battery pack charger	. 191
Supplied Li-ion battery pack	. 191
Others	. 192
Before capturing those important shots, be sure to first take	
a test shot to confirm that your camera is set up and	
ready to go	
HINTS FOR TAKING PICTURES	. 194

# QUICK SEARCH BY OPERATION

Your camera has an abundance of convenient features and functions. From creating precisely the photo you want, to viewing images using various techniques, you can locate the exact operation for your purposes in the following table.

Shooting/recording		
Basic operation	Convenient functions	Additional functions
Getting started shooting/recording • "VIDEO CLIP RECORDING" on page 64 • "SHOOTING SINGLE SHOTS" on page 65 • "Sequential shots" on page 90 • "Audio recording" on page 86	Log the date and time of your photos • "DATE AND TIME SETTING" on page 35 Zoom in on the subject • "MACRO- PHOTOGRAPHY (ZOOM)" on page 72 Close-up photography • "Focus range" (super macro mode) on pages 46 and 52 • "Select the focus setting" (super macro mode) on page 62	For more accurate focus • "How to use the manual focus" (manual focus) on page 94 Set the focus to a narrow range • "Focus mode setting" on page 95 Reduce noise when recording • "NOISE REDUCTION setting" on page 128
Optimize the photo quality • "Select the recording size" on pages 46 and 61. • "Video setting" on pages 50 and 86 • "Still image setting" on pages 50 and 90	Set the camera's color/ characteristics • "Image quality setting" on p	
Capture fast-moving su • "Scene select" (sports mod Suppress camera shak • "Motion compensation (ima	de) on page 50	es 52 and 93

Shooting/recording		
Basic operation	Convenient functions	Additional functions
Shoot in dark condition • "Exposure compensation" o • "Using the flash" on pages 4 • "Scene select setting" (night and 91	n page 103	ode/lamp mode) on pages 50
	Increase the camera's a • "ISO sensitivity setting" on p • "High sensitivity mode setting	ages 52 and 96
Photographing people • "Scene select setting" (portrait mode/night view portrait mode) on pages 50 and 91 • "Filter setting" (cosmetic filter) on pages 50 and 91 Capture sharp images • "Face chaser setting" on pages 54 and 100 • "Color chaser setting" on pages 54 and 99		
Simplified operation fo <ul> <li>"SWITCHING BETWEEN TI</li> </ul>	r shooting/playback HE RECORDING MODE AND F	PLAYBACK MODE" on page 38
<ul> <li>Photographing landsca</li> <li>"Scene select" (landscape n</li> </ul>		
Take a self-photo  • "Self-timer setting" on pages 50 and 92		
	Make images lighter or darker • "Exposure compensation" on page 103 • "High sensitivity mode setting" pages 54 and 102	Measure the brightness of a specific area • "Light-measuring mode setting" on pages 52 and 95 Adjust the camera's sensitivity pages 52 and 96 For a more precise exposure setting" (manual exposure control) on pages 54 and 98
	Change the color of the images • "Filter setting" (monochrome filter/sepia filter) on pages 50 and 91	Make white appear natural • "White balance setting" on pages 54 and 97

Playback		
Basic operation	Convenient functions	Additional functions
Getting started viewing images • "PLAYING BACK VIDEO CLIPS AND STILL IMAGES" on page 74	Adjust the speaker volume "PLAYBACK VOLUME" pages 55 and 79 Search for image/ audio files "21-image display playback" on page 83 "Selecting the playback folder" on pages 56 and 84 Magnify an image "Magnifying (zooming in) the image" on page 85	Change the angle of view • "Rotate" on pages 55 and 108 Reduce the photo size • "Resize" on pages 55 and 108
<ul> <li>"Audio playback" on page 88</li> </ul>	<ul> <li>Adjust the speaker volu</li> <li>"PLAYBACK VOLUME" on</li> </ul>	
Continuous playback • "SLIDESHOW PLAYBACK	" on pages 48, 78 and 105	
Adjust the monitor brig • "Adjusting the monitor brig • "BRIGHTNESS setting" on	, htness" on page 66	
Playback on a TV • "PLAYING BACK ON A TV Set the TV system • "TV output setting" on page		

File managing/processing		
Basic operation	Convenient functions	Additional functions
Search for image/audio files • "21-image display playback" on page 83 • "Selecting the playback folder" on pages 56 and 84		
Delete files • "DELETING FILES" on pages 48, 55 and 80	Protect files from accidental erasure • "File protect setting" on pages 55 and 106 Format a card • "Formatting (initializing)" on pages 130 and 140	
Delete a part of a video clip and join video clips • "Editing video clips" on pages 56 and 110		
• "Printing instructions" on page	prints, index print, and d ages 56 and 119	ate imprint
View the settings that w recorded • "FILE INFO DISPLAY" on p	vere in effect when the in page 123	nage/audio files were

Using with a computer		
Basic operation	Convenient functions	Additional functions
Use the camera as a ca • "SETTING THE CONNEC" • "USING AS A CARD REAL	FION MODE" on page 146	
Copy files from your car • "Copy data from your care	mera to a computer era to the computer" on page v	i
<ul><li>Playback</li><li>"About video clip files reco</li></ul>	rded with this camera" on page	9 153
Using as a webcam • "USING AS A PC CAMER,	A" on page 155	
<ul> <li>Record an image of the</li> <li>"SCREEN CAPTURE" on p</li> </ul>		

# CHECKING THE INCLUDED ACCESSORIES

• Li-ion battery pack: 1



- Dedicated USB interface cable (page 146): 1

 Lithium-ion battery pack charger and power cord: 1



 Dedicated AV interface cable (page 160): 1



• Lens cap (page 15): 1



- Handstrap (page 13): 1 \*To prevent from dropping the
  - camera, be sure to attach the handstrap.



<VPC-GH2>



<Other models>



- GUIDE FOR BASIC OPERATION (VPC-GH1EX, VPC-GH1GX, VPC-GH1PX, VPC-GH1TA only)
- SAFETY MANUAL (safety precautions booklet) Please read this booklet carefully before using the camera.



• Obtaining the PDF instruction manual and cautions







## How to use the accessories

■ Handstrap <VPC-GH2>









#### <Other models>




<To use the grip belt ... >

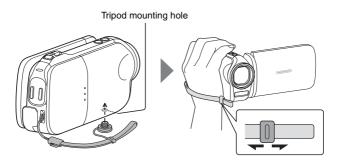

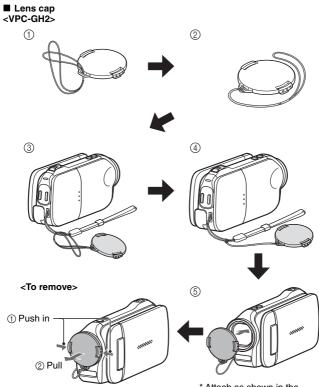

\* Attach as shown in the illustration.

<Other models>

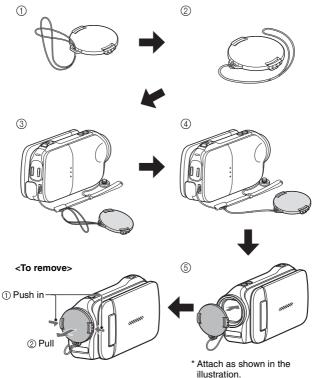

# **ABOUT THE CARD**

### Media cards that can be used with this camera

The type of card that can be inserted into and used with this camera is:

- SD Memory Card
- SDHC Memory Card
- SDXC Memory Card



## What "card" means in this manual

 In this manual, SD Memory Cards, SDHC Memory Cards and SDXC Memory Cards that can be used in this dual camera are referred to as "card".


## GETTING THE MOST OUT OF YOUR CAMERA

Your dual camera can record video clips in Full High Definition\*.

# High-quality images with "Full High Definition\*" (pages 50 and 61)

Your camera can capture full high definition (full HD)  $1920 \times 1080$ -pixel video clips. Also, the H.264/MPEG-4 AVC standard is used for formatting video files. You get both compact file size and high picture quality in one high-performance camera.

\* "Full High Definition" by SANYO Dual Camera signifies recording at a resolution of 1920 pixels horizontally ×1080 pixels vertically.

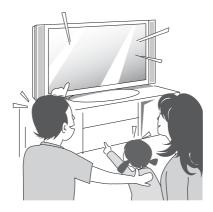

# Includes SIMPLE mode for quick-and-easy operation (page 39)

Select from two recording/playback modes: the "SIMPLE mode" for users new to the camera, and the "NORMAL mode" for full use of all the camera's many features and functions.

#### Example:



<SIMPLE Mode Recording Menu>



<NORMAL Mode Recording Menu>

# Image stabilizer for sharp pictures (pages 52 and 93)

Your camera can compensate for the camera shake that results in blurry images when you try to capture a fast-moving subject or when you zoom in on a subject.



# Capture clear images of the targeted subject (pages 54 and 99)

Both the color chaser feature to target a specific color, and the face chaser feature to capture clear face shots, are provided.




## Eye-Fi smart

By inserting a commercially sold Eye-Fi card (SD card with wireless LAN) in your camera, you can easily upload photos to your computer, a sharing site, etc. automatically via a Wi-Fi network. Also, you can transfer video files if your Eye-Fi card has a video upload function. Instructions for the Eye-Fi transfer feature can be found at the following website: http://sanyo.com/xacti/english/

## SYSTEM MAP


You can connect the camera to various devices to expand its capabilities.

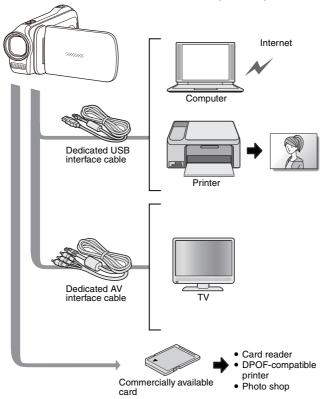


## PARTS NAMES

## Front

Sub-REC buttons

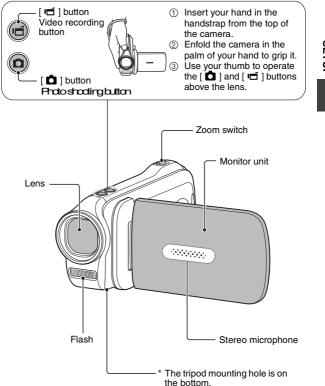


## Rear

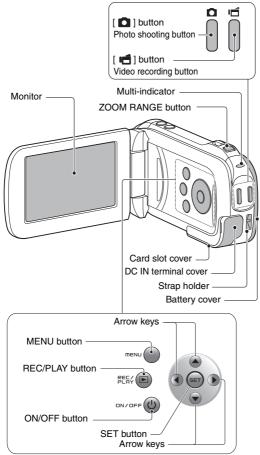

# CHARGING THE BATTERY PACK

Please charge the supplied battery pack before using it.

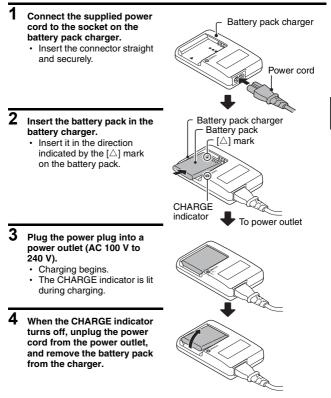

#### HINT

• Charging takes approximately 120 min.

## Charging the battery pack

Be sure to fully charge the supplied or separately sold battery pack before using it in your camera. For charging the battery pack, use the supplied charger.

Charge the battery pack if it is being used for the first time, and recharge it whenever the remaining charge is low.

#### Does the battery pack feel hot?

- During charging, the charger and battery pack will be warm. This is normal and does not indicate a malfunction.
- If there is interference to your TV or radio during charging...
- Move the battery pack and charger further away from the TV or radio.

#### Ambient temperature during charging

- It is recommended that the ambient temperature during charging be between about 10 °C and 35 °C (50 °F and 95 °F). Due to the characteristics of the battery pack, at temperatures below 0 °C (32 °F), it may not be possible to sufficiently charge it.
- When the battery pack temperature is high, the safety function may be activated and halt charging.

#### Charge a battery pack in the following cases

- · A battery pack which has not been used for a long time
- Newly purchased battery pack

#### FOR AMERICAN USERS:

 Use a UL Listed, 1.8 to 3 m (6 to 10 ft.), Type SPT-2 or NiSPT-2, AWG No.18 power supply cord, rated for 125 V 7 A, with a non-polarized NEMA 1-15P plug rated for 125 V 15 A.

## About the CHARGE indicator

The CHARGE indicator shows the status of the battery pack and the charger. Please refer to the following table if the indicator flashes abnormally.

CHARGE	indicator
Not lit	<ul> <li>Not connected properly</li> <li>To recharge the battery pack, the power cord of the charger must be connected to a power outlet, and the plug at the other end inserted in the charger's power socket (page 24).</li> <li>The battery pack is not installed, or it is not installed correctly (page 24).</li> <li>Charging finished</li> </ul>
Lit	Charging
Flashing	<ul> <li>Problem with the battery pack or battery pack charger</li> <li>Immediately remove the battery pack from the charger.</li> <li>Do not use an abnormal battery pack. (The usable life of the battery pack has probably expired.)</li> </ul>


#### CAUTION

Do not charge the battery pack immediately after the camera has been in continuous use for a long time

 The battery pack becomes hot when the camera is used continuously for a long time. If you attempt to charge the battery pack in this state, the safety function may be activated and it may not be possible to charge the battery pack. Wait until the battery pack has cooled down before attempting to charge it.

# **INSTALLING THE CARD**

Be sure to format a newly purchased card or one that was used in another device before using it in your camera (pages 130 and 140). If an unformatted card is used, the card itself may become unusable.



① Open the card slot cover.

Insert the card. -

#### <When removing the card ... >

• To remove the card, press it in, and then release. The card will protrude slightly, and you can then pull it out.



### CAUTION

### Do not attempt to forcibly remove the card

• Doing so may damage the card or the stored files.

If the multi-indicator is flashing red...

 Never remove the card when the multi-indicator is flashing red, as doing so may result in loss of files stored in the card.


### HINT

### Shooting without a card installed

• When a card is installed, images are recorded to and played back from the card. When no card is installed, images are recorded to and played back from the camera's internal memory. When the camera is turned on with no card installed, the internal memory icon is shown on the monitor to let you know that the images you capture will be saved to the camera's internal memory.

# INSTALLING THE BATTERY PACK

Please charge the supplied battery pack before using it.

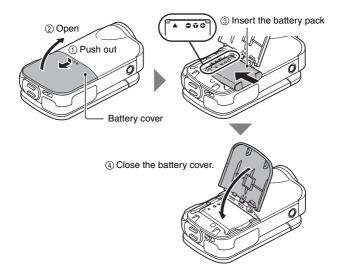

# English 30

### Does the battery pack appear swollen?

 The lithium-ion battery used in this camera may expand slightly when stored in a hot environment or repeatedly used, but this is not a safety hazard. However, a battery that is difficult to insert because it has become swollen may then be impossible to extract from the battery compartment. In this case, please discontinue its use and replace it with a new battery.

Do not use the battery with the outer covering or label removed

Doing so may result in malfunction.

### HINT

### About the internal backup battery

 This camera's internal battery serves to maintain the date and time settings, as well as the shooting settings. The backup battery will be fully charged when the battery pack is kept in the camera continuously for about 2 days. In the fully charged state, the backup battery will maintain the camera settings for about 7 days.

When not using the camera for a long time, remove the battery pack

 A small amount of power is still used even if the camera is turned off, and it is therefore recommended that the battery pack be removed from the camera if it is not going to be used for a long time. Note that when the battery pack is removed for a long period, the time and date settings may be cleared. Before using your camera again, be sure to confirm that the camera settings are correct.

### To prolong the life of the battery pack

- Although the battery pack is an expendable item, you can maximize the life of the battery by heeding the following suggestions.
  - Do not leave the battery under the hot summer sun or exposed to other high-temperature environments.
  - Do not continually recharge the battery when it is already fully charged. After fully charging it once, for example, use it for a while to partially discharge it before recharging it again.
  - When the battery is not to be used for a long time, if possible store the partially charged (not fully charged) battery in a cool environment.

## About the temperature alert icon

During camera use, if the temperature of the battery or inside the camera (excluding the battery) rises, a temperature alert icon  $\mathbb{A}$  will appear as described below.


- When the battery or internal camera (excluding battery) temperature rises during use
  - During camera use, if the temperature of the battery or inside the camera (excluding the battery) rises, a A A icon lights on the monitor. It is still possible to record and play back even when the A icon is lit; however it is advised that you discontinue use as soon as possible and turn the camera off.
  - If the temperature rises further, the A icon will start to flash, and the camera will turn off automatically.
     The camera cannot be turned on until the temperature has dropped (or as long as the A icon remains flashing). Please wait until the temperature has dropped before resuming use.
  - During video recording, a countdown indicator will show the time starting about 15 seconds before shutdown. When the indicator shows 0 seconds, recording stops.
  - If the camera is turned off while the temperature is high (that is, while the Add icon is flashing), it cannot be turned on again until the temperature has dropped (or as long as the Add icon remains flashing).

# TURNING THE CAMERA ON AND OFF

### Turning on the camera

### 1 Open the monitor unit, and press the ON/OFF button for at least 1 second.

- If you briefly press the ON/OFF button, once, the camera will switch to the power save mode.
- If you press the REC/PLAY button for at least 1 second, the camera turns on in the playback mode.

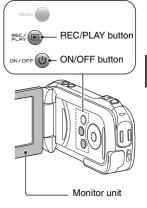

### Turning off the camera

- Press the ON/OFF button for at least 1 second.
  - · The camera turns off.

1

## English 32

SETUP

# Turning on the camera when the power save (sleep) mode is active

In order to preserve battery pack power, the power save (sleep) function will automatically turn off the camera after about 1 minute of no use during shooting, or about 5 minutes of no use during playback (factory-preset setting).

- When the power save mode is active, you can restore the power by any of the following methods:
  - Press the ON/OFF button.
  - Press the [ 1 button.
  - Open the monitor unit.
- After the power save mode has been active for about 1 hour, the camera will switch to the standby mode. In this case, you can restore the power by pressing the ON/OFF button, or by closing and then opening the monitor unit.
- When the AC adaptor (optional) is connected, the power save mode will become active about 5 minutes after the camera is turned on (factorypreset setting).
- The user can specify the time elapsed before the power save mode is activated (page 130).
- When the camera is connected to a computer or printer, the power save mode becomes active after about 12 hours.

# English 34

### HINT

### To immediately activate the power save mode

• Press the ON/OFF button briefly to activate the power save function.

### About the standby mode

 To turn off the camera only briefly, you can close the monitor unit to put the camera in the standby mode. The standby mode uses almost no power. When the monitor unit is opened again, the camera turns on immediately and you are ready to shoot or view images without any delay.

### CAUTION

### If the **9**? icon appears...

• When a picture is taken, the date and time it was captured are recorded with it. If the date and time settings have not been completed (page 35), the date and time cannot be recorded with the captured images. For this reason, immediately after the camera is turned on, the "Set date and time" reminder briefly appears, after which the <sup>[O]</sup> icon is shown on the Recording Screen. To have the date and time recorded with the images, please complete this setting before capturing images.


# DATE AND TIME SETTING

The camera will record the date and time an image or audio recording is taken so that you can display them during playback. Therefore, before capturing images, make sure the correct date and time are set.

• To correct the date and time setting, please see under HINT on page 37.


Example: To set the clock to 7:30 p.m. on December 24, 2010

- 1 Turn on the camera (page 32), and press the SET button.
  - The Clock Set Screen appears.
  - Follow the procedures below to enable or disable the date display during playback, to set the display format for the date, and to set the date and time.
  - To display the Recording or Playback Screen, press the MENU button 2 times.




# 2 Set the date.

- ① Select "DATE".
- Press the SET button.
  - The Set Date Screen appears.
- ③ Set the date to "2010/12/24".
  - The date is set in the following order: Set the year
     → Set the month → Set the day.
  - Press [◀] or [▶] to select year, month or day. Press [▲] or [♥] to increase or decrease the number.
- ④ Press the SET button.



## 3 Set the clock.

- Select "TIME".
- Press the SET button.
  - The Set Time Screen appears.
- ③ Set the time to "19:30".
  - The time is set in the following order: Set the hour → Set the minute.
  - A 24-hour clock is used for the time display.
- ④ Press the SET button.



# SETUP


# 4 Set the order in which the date is displayed during playback.

- Select "DISP".
- Press the SET button.
  - The Set Date Format Screen appears.
- ③ Press [▲] or [▼].
  - Press [▲] to change the displayed date order as follows:

$$\longrightarrow$$
 D / M / Y  $\rightarrow$  Y / M / D  $\rightarrow$  M / D / Y  $\longrightarrow$ 

Press [▼] to change it in the reverse order.

④ Press the SET button.



## 5 Press the MENU button.

- · The date and time setting is completed.
- · To display the Recording or Playback Screen, press the MENU button.

### HINT


 Under normal conditions, while the battery pack is being replaced, an internal battery will maintain the date and time settings. However, there is a small chance the settings may be lost (the backup will last for about 7 days). It is recommended to check that the date and time settings are still correct after replacing the battery pack and before shooting or recording of any type (follow step 1).

### To correct the date and time settings

- ① Turn on the camera.
- Display the Option Setting Menu 1 (page 124).
- ③ Select "CLOCK SET" and press the SET button.
  - · The screen to set the date and time appears.
  - The current date and time settings are shown.
- ④ Select the line you wish to change, and make the correction.

# SWITCHING BETWEEN THE RECORDING MODE AND PLAYBACK MODE

Switch between the recording mode (for recording) and the playback mode (for viewing your recorded images).

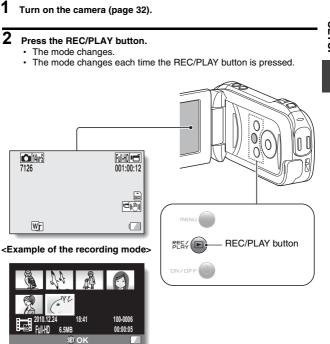

<Example of the playback mode>

# SWITCHING THE OPERATING MODE

The "SIMPLE mode" comprises only those functions that are most often used and necessary to operate the camera, while the "NORMAL mode" enables full use of all the camera's many functions. Select the mode that is suitable for your purposes.

# Switching between the SIMPLE and NORMAL modes


- **1** Turn on the camera (page 32).
  - · The previous mode is active.
- 2

### Press the MENU button.

· The Menu Screen for the active mode appears.

# **3** Select the operating mode icon, and press the SET button.

- Switch from the SIMPLE mode to the NORMAL mode, or from the NORMAL mode to the SIMPLE mode.
- Press the MENU button to cancel the Menu Screen.




Operating mode icon

<SIMPLE Mode Menu Screen>

1 2 2			
3 1 2 3	Press SET button to switch to simple Menu		
SIN	MENU 🖓	(1) OK	
<ul> <li>Operating mode icon</li> </ul>			

<NORMAL Mode Menu Screen>

### Accessing/exiting the SIMPLE/NORMAL Mode Menu Screen

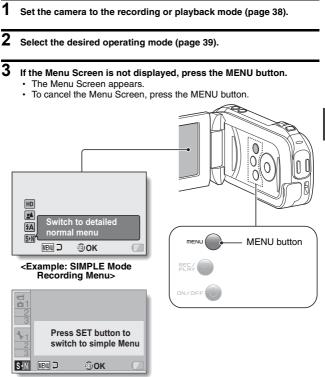


<Example: NORMAL Mode Recording Menu>

## Using the SIMPLE Mode Menu

# 4 Press [▲] or [▼] to select the item you wish to change, and press the SET button.


· The Setting Screen for the selected item appears.

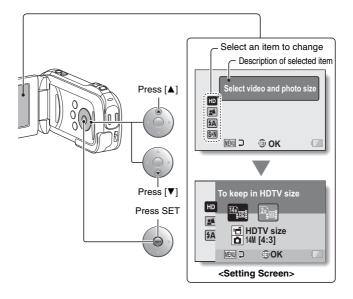


## Using the NORMAL Mode Menu

# 4 Press [▲] or [▼] to select a tab.

• The Menu Screen for the selected tab appears.

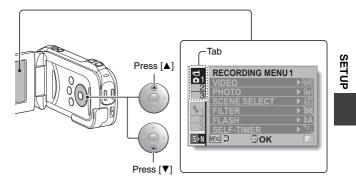


5 Press [►].

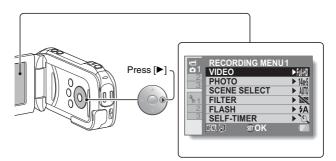

# 6 Press [▲] or [▼] to select the item you wish to change, and press the SET button.

- · The Setting Screen for the selected item appears.
- To return to the Menu Screen, press the MENU button.

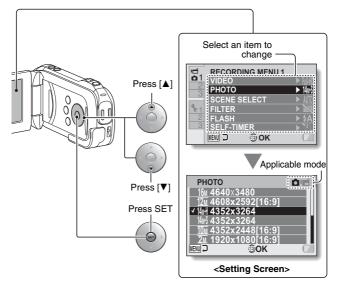

### HINT

### About the applicable mode indicator

- This indicator shows the shooting mode(s) for which the selected setting is effective.
  - **O** : This setting is effective during still image shooting.
  - if : This setting is effective during video clip recording.
  - This setting is effective during still image shooting and video clip recording.

**Overview of the SIMPLE Mode Setting Screen** 

## SIMPLE Mode Recording Menu



### (1) Recording size (page 61)

· Select the video clip size to record.



- : The video clip size is 1920 × 1080 pixels, recorded at 60 fields/sec. The captured still image size is 4352 × 3264 pixels (4:3 aspect ratio).
- - : The video clip size is 640 × 480 pixels, recorded at 30 frames/sec. The captured still image size is 1600 × 1200 pixels (4:3 aspect ratio).

### ② Focus range (page 62)

- Select the focus range that corresponds to the distance to the subject.
- (▲): The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal).
- The camera focuses on a subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).


- ③ Flash (page 68)
  - Specify how the flash will operate.
    - (**\*A**): The camera detects the subject brightness and uses the flash only when necessary.
    - **5**: The flash operates with every image captured regardless of the conditions.
    - (%): The flash does not operate even in dark situations.

#### (4) (s) (page 39) Set to the NORMAL mode.

⑤ Remaining battery power indication (page 143)

SETUP

## SIMPLE Mode Playback Menu

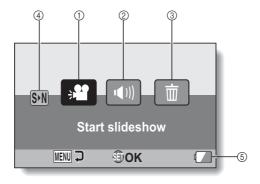


SETUP

- ① Slideshow (page 78)
  - Specify the slideshow settings and play the slideshow.
- Playback volume (page 79)
   Adjust the volume for video
  - clip and audio file playback.
- ③ Delete (page 80)• Delete files.
- (page 39)Set to the NORMAL mode.
- 6 Remaining battery power indication (page 143)

**Overview of the NORMAL Mode Setting Screen** 

NORMAL Mode Recording Menu <Tab 1>

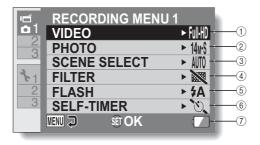

- Video clip settings (page 86) <HD mode>
  - EIIIID: Record at 1920 × 1080 pixels, 60 fields/s (60i).
  - HM: Record at 1920 × 1080 pixels, 30 fps (30p).
  - HDHR: Record at 1280 × 720 pixels, 60 fps (60p).
  - ₩₩: Record at 1280 × 720 pixels, 30 fps (30p).

#### <SD mode>

- Record at 640 × 480 pixels, 30 fps.
- Make an audio recording.
- ② Still image settings (page 90) <a>Single-shot></a>
  - 16M: Image size is 4640 × 3480 pixels.
  - izm: Image size is 4608 × 2592 pixels (16:9 aspect ratio).
  - Image size is 4352 × 3264 pixels (low compression).
  - Image size is 4352 × 3264


     pixels (normal compression).
  - 1011: Image size is 4352 × 2448 pixels (16:9 aspect ratio).
  - Image size is 1920 × 1080 pixels (16:9 aspect ratio).
  - 2<u>M</u>: Image size is 1600 × 1200 pixels.
  - LSm: Image size is 1280 × 720 pixels (16:9 aspect ratio).
  - 0.3M: Image size is 640 × 480 pixels.

#### <Sequential shots>

- 14配: 4352 × 3264-pixel \_\_\_\_\_\_sequential shots.
- 2. 1600 × 1200-pixel sequential shots.

- ③ Scene select (page 91)
  - AUTO : Full auto setting
  - 🖎: Sports mode
  - E Portrait mode
  - 🛋 : Landscape mode
  - In the second second
  - Snow & beach mode
  - 🔅: Fireworks mode
  - 🔐: Lamp mode
- ④ Filter (page 91)
  - 🔯 : No filter
  - : Cosmetic filter
  - Monochrome filter
  - 🚿: Sepia filter
- 5 Flash
  - FA: The camera will detect the subject brightness and use the flash only when necessary.
  - : The flash will operate with every image captured regardless of the conditions.
  - : The flash will not operate even in dark situations.
- 6 Self-timer (page 92)
  - 🖄: Self-timer is off.
  - Shooting begins 2 seconds after the [ ] or [ ] button is pressed.
  - Shooting begins 10 seconds after the [ ☐ ] or [ ☐ ] button is pressed.
- Remaining battery power indication (page 143)

<Tab 2>

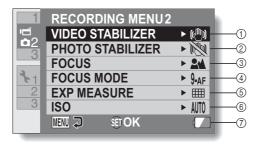

English 52

- ① Video stabilizer (page 93)
  - Compensate for camera shake during video clip recording.
  - Record with image stabilizer on.
  - Record without image stabilizer.

### ② Photo stabilizer (page 93)


- Compensate for camera shake during still image shooting.
- Shoot with image stabilizer on.
- Shoot without image stabilizer.

### ③ Focus range (page 94)

- Select the focus range that corresponds to the distance to the subject.
- The camera automatically focuses on the subject with a range of 50 cm (19.69 in.) to infinity (normal).
- MF: The focus can be set manually.
- The camera focuses on the subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).
- ④ Focus area (page 95)
  - 9-AF: 9-point range finder focus
  - S-AF: Spot focus

- 5 Light-measuring mode (page 95)
  - Hulti-section light measuring
  - Center-weighted light measuring
  - : Spot light-measuring
- 6 ISO sensitivity (page 96)
  - ATO: Sensitivity is set automatically (video clip recording: ISO 50 to 800; still image shooting: ISO 50 to 400)
    - 50: Sets sensitivity to ISO 50
    - 100: Sets sensitivity to ISO 100
    - 200: Sets sensitivity to ISO 200
    - 400: Sets sensitivity to ISO 400
    - 800: Sets sensitivity to ISO 800
    - 1600: Sets sensitivity to ISO 1600
    - The indicated ISO value is the standard output sensitivity.
- ⑦ Remaining battery power indication (page 143)

<Tab 3>

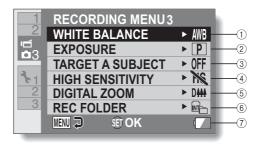

- ① White balance (page 97)
  - WB: White balance is automatically adjusted depending on the ambient lighting (auto).
  - : For shooting in sunny conditions (fair).
  - C: For shooting in overcast conditions (cloudy).
  - Err shooting under fluorescent lighting (fluorescent).
  - : For shooting under incandescent lighting (incandescent).
  - : For setting the most accurate white balance (one push).

### ② Exposure (page 98)

- P: The exposure is set automatically.
- S: Set the shutter speed manually.
- A: Set the aperture manually.
- M: Set the aperture and shutter speed manually.

#### ③ Subject chaser (page 99) Automatically target a specific

color with the color chaser function, or capture sharp face shots with the face chaser function.


- [2]: Enable face chaser.
- 🕼: Enable color chaser.
- OFF: Disable face chaser and color chaser.

 High sensitivity mode (page 102)
 HS: Increased sensitivity.

Normal sensitivity.

- 5 Digital zoom (page 72) Diff. Enable the digital zoom.
  - Disable the digital zoom.
- 6 Rec folder setting (page 104)
- ⑦ Remaining battery power indication (page 143)

### NORMAL Mode Playback Menu <Tab 1>

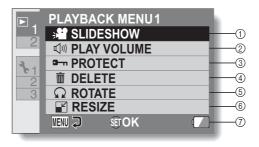

### ① Slideshow (page 105)

• Specify the slideshow settings and play the slideshow.

### ② Playback volume (page 79)

 Adjust the volume for video clip and audio file playback.

### ③ Protect (page 106)

 File protect setting (delete prohibited)

- ④ Delete (page 80)• Delete files.
- ⑤ Rotate (page 108)
   Rotate a still image.
- 6) Resize (page 108)
  - Reduce the resolution of a still image.
- ⑦ Remaining battery power indication (page 143)




- ① Edit photo (page 109)
  - Repair the "red-eye" caused by the flash, or enhance the contrast (still images only).
- ② Video clip edit (page 110)
  - · Edit video clips.
- ③ Printing instructions (page 119)
  - Specify the printing instructions (DPOF settings).
- ④ Select folder (page 84)
  - · Select a folder to play back.

- ⑤ Copy
  - Copy files from the card to the internal memory, or vice versa.
- 6 Remaining battery power indication (page 143)

# **BEFORE TAKING PICTURES**

### For best results

Hold the camera securely, keeping your elbows close to your body and making sure the camera is stable.

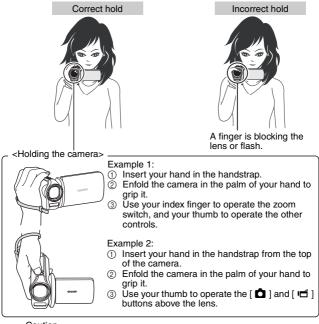

- <Caution>
- Due to the characteristics of the camera, the outer surface may become warm during use, but this does not indicate a malfunction.
- If the camera starts to feel uncomfortably hot during use, you might temporarily discontinue use until it cools down, or try holding it in your other hand for a while.

Please use a tripod or other support when using the camera for a long time.

## Using the autofocus

The autofocus will work in almost all situations; however, there are certain conditions that may cause the autofocus function to not work properly. If the autofocus function is not working properly, set the focus range to capture images (page 62).

### Conditions that may cause incorrect focus

The following examples are some of the situations where the autofocus function may not work.

- Subjects with low contrast, very bright subjects at the center of the image or dark subjects or locations Use the focus-lock function to lock the focus on an object with contrast at the same distance as the desired subject.
- Subjects without vertical lines
  Use the focus-lock function to lock the
  focus while framing the subject
  vertically, then re-orient the camera to
  compose a horizontally framed image.



The following examples are some of the situations where the autofocus function may work, but not as desired.

 When both near and far objects are present

Use the focus-lock function to lock the focus on an object at the same distance as the desired subject, then reposition the camera to compose the picture.



### • Fast-moving subjects

Use the focus-lock function to lock the focus on an object at the same distance as the desired subject, then reposition the camera to compose the picture.



### HINT

- Still images can be rotated when they are played back (pages 55 and 108).
- When the [ ] button is pressed halfway, the image in the monitor may waver vertically. This is the result of internal image processing and is not a malfunction. This wavering is not recorded and will not affect your images in any way.
- When the optical zoom is used or when the autofocus is operating, the image may appear to waver, but this is not a malfunction.

## Select the recording size

The larger the image size (number of pixels), the better the image quality will be, but the file size will also be larger. Select the image quality that is correct for the intended purpose.

1 Display the SIMPLE Mode Recording Menu (page 40), select the recording size setting, and press the SET button.



: The video clip size is  $1920\times1080$  pixels, recorded at 60 fields/sec.

The captured still image size is  $4352\times3264$  pixels (4:3 aspect ratio).



: The video clip size is  $640 \times 480$  pixels, recorded at 30 frames/sec.

The captured still image size is 1600  $\times$  1200 pixels (4:3 aspect ratio).

## 2 Select the desired recording size, and press the SET button.

· This completes the recording size setting.

### Select the focus setting

Select the focus range corresponding to the distance between the camera and the subject.

1 Display the SIMPLE Mode Recording Menu (page 40), select the focus setting, and press the SET button.



- The camera automatically focuses on the subject within a range of 50 cm (19.69 in.) to infinity (normal).
- (C): The camera focuses on a subject within a range of 1 cm (0.39 in.) to 80 cm (31.50 in.) (super macro).
- 2 Select the desired focus range, and press the SET button.
  - · This completes the focus range setting.

## Hints for taking pictures

### Muting the operation sounds

• The audio guidance that sounds when you operate the camera can be muted (page 126).

### Where are the image and audio files saved?

• All the image and sound files are recorded on the card installed in the camera, or in the camera's internal memory.

### Taking pictures in backlight conditions...

 When taking pictures with the light coming from behind the subject, due to the characteristics of the lens, ghost patterns (flare phenomenon) may appear in the captured image. In this situation, it is recommended that you avoid taking pictures with the subject lit from behind.

### While the image files are being recorded...


 While the multi-indicator is flashing red, the image files are being written to the memory, during which time it is not possible to capture another image. Another image can be captured after the flashing red indicator turns off. However, even when the multi-indicator is flashing red, depending on the camera's internal memory remaining capacity, in some cases the next image can be captured about 2 seconds after shooting.

# VIDEO CLIP RECORDING

1 Turn on the camera (page 32), and set it to the recording mode (page 38).

# 2 Press the [ 📹 ] button.

- · Recording begins.
- It is not necessary to keep the [ ] button pressed while recording.
- When the remaining recording time available for the currently recording clip becomes little, a countdown of the remaining recording time appears on the display.



Recording time .

## 3 End the recording.

• Press the [ 1] button again to stop recording.



Available recording time remaining

# SHOOTING SINGLE SHOTS

Capture a still image (single-shot).

1 Turn on the camera (page 32), and set it to the recording ۵ mode (page 38). [ D] button -2 Press the [ ] button. Press the [ ] button halfway. · The autofocus operates, and the image is focused (focus lock). ② Continue to gently press the [ 🖸 ] button all the way. The shutter releases and the image is captured. · You can view the captured image on the monitor by keeping the [ **D** ] button depressed when you **1**4M-S capture the image. ¥Α 1 2

Target mark


#### HINT

#### Adjusting the monitor brightness

 While the Recording Screen is active, you can quickly access the screen for adjusting the brightness of the monitor by pressing the MENU button for at least 1 second.

#### What is the camera focusing on?

- A target mark II on the monitor shows the area the camera is focusing on.
- The camera automatically determines the correct focus by measuring from 9 different focus points within the shooting area. If the target mark is at a position that is different from the point you wish to focus on, you can refocus, for example, by changing the shooting angle.
- The large target mark appears when the camera focuses on a wide area in the center of the screen.

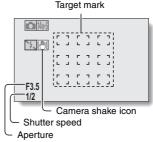

#### The focus and exposure can be locked (in the NORMAL mode)

- By assigning an operation shortcut to an arrow key (pages 128 and 131), you can set the autofocus or the exposure to a fixed setting. When the exposure setting is fixed, the **Are** icon appears on the monitor; when the autofocus setting is fixed, the **Are** icon appears on the monitor.
- When the focus range (pages 50 and 91) setting or scene select setting is changed, the focus lock is released.

#### The shutter speed and aperture are displayed (in the NORMAL mode)

• The shutter speed and aperture settings are shown on the Recording Screen. You can use them as a reference when shooting.

#### If the camera shake icon 🖑 appears... (in the NORMAL mode)

- During still image shooting, if the shutter speed is slow and the possibility that the image may be blurred due to camera shake becomes high, the camera shake icon may appear on the monitor. In this case, use a tripod to stabilize the camera when shooting, or set the flash operation mode to automatic (pages 46 and 68).
- When shooting with the scene select function set to the fireworks in mode, the camera shake icon always appears, but this is normal.

#### Does it seem to take a long time to save images?

• When shooting in dimly lit conditions, it may take some time to save the data to the card.

## Using the flash

The flash is not only used for photographing under dark conditions, but is also convenient for example when the subject is in shadow or lit from behind. The flash is available only when shooting single-shot still images.

1 Display the SIMPLE Mode Recording Menu (page 40), select the flash setting, and press the SET button.

· The screen to select the flash operation appears.



- **EA**: The camera detects the subject brightness and uses the flash only when necessary.
- : The flash operates with every image captured regardless of the conditions.
- : The flash does not operate even in dark situations.

# 2 Select the desired flash operation, and press the SET button.

· This completes the flash operation setting.

# **3** Press the [ **1**] button to take the picture.

#### CAUTION Do not touch the flash unit when shooting

• The flash unit becomes very hot and may cause a burn. Avoid touching the flash unit when shooting.


#### HINT

- The flash cannot be used during video clip recording.
- By assigning an operation shortcut to an arrow key (pages 128 and 131), you can change the flash mode from the Recording Screen (NORMAL mode).

# SHOOT A STILL IMAGE WHILE RECORDING A VIDEO CLIP

You can capture a still image (a single-shot) while recording a video clip.

- 1 Turn on the camera (page 32), and set it to the recording mode (page 38).
- 2 Press the [ 📹 ] button.
- 3 When you see a scene you'd like to capture as a still image, press the [ ] ] button.
- 4 Press the [ ] button to end the video clip recording.

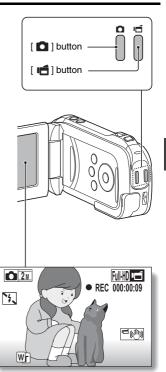

SIMPLE/SHOOTING

#### HINT

- When shooting a still image while recording a video clip, the flash does not operate.
- The photo stabilizer (pages 52 and 93) is inoperative.
- When the remaining video recording time becomes approximately 50 seconds, it will no longer be possible to capture a still image while recording a video clip. The exact remaining recording time at which this occurs will differ depending on the subject and on the recording size (page 61), as well as on the video clip recording mode (page 86). If you intend to capture a still image while recording a video clip, it is suggested that you take note of the remaining video recording time.

#### About the recording size of still images

 The size of a still image captured during video clip recording depends on the video clip recording size.

Video clip recording size setting	Still image recording size
(Full-HD) (Full-SH2)	2
HD-HR) HD-SHQ	<u>0.9m</u>
(TV-SHQ)	0.3м

· It is not possible to capture sequential shots.

# MACRO-PHOTOGRAPHY (ZOOM)

Your camera has two zoom functions: optical zoom and digital zoom.

- 1 Point the camera lens at the subject.
- 2 Push the zoom switch toward [T/ ] or [W/ ] to compose the desired image.

[T/ ]: Zoom in on the subject. [W/ ] 1: Zoom out.

- · When the zoom switch is pushed, the zoom bar appears on the monitor.
- · When the optical zoom factor is at maximum, zooming stops temporarily. When the zoom switch is pushed toward the  $[T/\odot]$  side again, the mode changes to the digital zoom mode and zooming continues.

Take the picture.

page 64.

page 65.


see page 90.

For video clip recording, see

For shooting single shots, see

For shooting sequential shots,

3

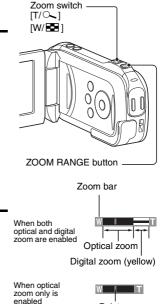



Pointer

SIMPLE/SHOOTING

#### HINT

#### When the ZOOM RANGE button is pressed...

- The magnification is approximately doubled (double-range zoom). Press the button again to return to normal magnification.
- The Wij icon is shown on the Recording Screen during normal magnification, and a Ti icon on the double-range zoom Recording Screen.

# PLAYING BACK VIDEO CLIPS AND STILL IMAGES

#### Set the camera to the playback mode (page 38).


# 2 Select the image to play back.


- Use the arrow keys to move the orange frame to the file you wish to play back.
- The image information for the framed image is shown at the bottom of the screen.

# **3** Press the SET button.

- The image you selected in step 2 is displayed fullscreen.
- If a video clip was selected, playback begins.

<To return to the screen to select playback files> Press [♥].

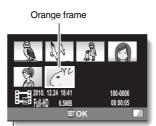

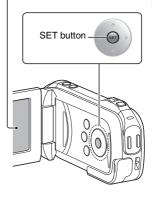

# Video clip playback operation

To do this		Do this
Normal forward playback		Press the SET button.
Stop playback		During playback, press [▼].
Pause		During playback, press the SET button or press [▲]. During accelerated playback, press [▲].
To play back one image at a time (single- frame step)	Forward playback	After pausing playback, press [▶].
	Reverse playback	After pausing playback, press [◀].
Slow playback	Forward playback	After pausing playback, press and hold [►].
	Reverse playback	After pausing playback, press and hold [4].
To accelerate playback	Forward playback	<ul> <li>During forward playback, press [▶].</li> <li>The playback speed changes each time [▶] is pressed, as follows: Normal playback → 2x → 5x → 10x → 15x</li> <li>Press [◀] to resume normal playback speed.</li> </ul>
	Reverse playback	<ul> <li>During forward playback, press [◄].</li> <li>The playback speed changes each time [◄] is pressed, as follows: 15× ← 10× ← 5×</li> <li>Press [▶] to resume normal playback speed.</li> </ul>
Return to normal playback speed		Press the SET button.
Adjusting the volume		Louder: During playback, push the zoom switch toward the [T] side. Softer: During playback, push the zoom switch toward the [W] side.

#### HINT

If the 📖 appears on the playback Screen...

 The Ittil icon appears when playing back a file that was saved in segments (page 87).

# How to save one frame from a video clip as a still image

1 Play back the video clip. Pause the playback at the point you wish to "snap" a photo.

# 2 Press the [ 🖸 ] button.

 The screen to select the aspect ratio of the still image appears. Select the desired aspect ratio, and press the [ ] button. Note, however, that if the video clip aspect ratio is 4:3, you cannot select 16:9.

#### HINT

#### The file size for a video clip is very large

- Therefore, be aware that if the video clip is uploaded to a computer to be played back, the computer may not be able to play back the video fast enough, making it appear jerky. (The video will always be displayed properly on the camera monitor or a television.)
- Depending on the card, recording may end even before the possible recording time indicated.

#### Display the video clip playback point

- During video clip playback, press the MENU button for at least 1 second to display a bar showing the current playback point in the video clip.
- Press the MENU button for about 1 second to cancel the bar.

#### CAUTION

#### During video clip playback, the sound of a motor is audible...

 During recording, the sound of the optical zoom movement or autofocus movement was recorded. This is not a malfunction.

#### If no audio is heard ...

 The audio is not played back when the video clip is played back in the frame-by-frame, slow-motion, fast playback or reverse playback mode.

# SLIDESHOW PLAYBACK

You can play back files in succession with the "slideshow playback" feature.

- 1 Display the SIMPLE Mode Playback Menu (page 40), select the slideshow setting, and press the SET button.
  - EE: Play back all files.
  - Play back video clips and audio files.
  - E: Play back still image files.



- 2 Select the type of file to play back, and press the SET button.
  - · Slideshow playback begins.
  - To stop slideshow playback, press the SET button or MENU button.

#### HINT


#### About the slideshow settings

 The slideshow settings can be changed from the NORMAL Mode Playback Menu (page 105).

# PLAYBACK VOLUME

Adjust the playback volume for video clips and audio files.

- 1 Display the SIMPLE Mode Playback Menu (page 40), select the playback volume setting, and press the SET button.
  - The volume control bar appears.



- 2 Press [◄] or [▶] to set the volume, and press the SET button.
  - The playback volume is set, and the display returns to the SIMPLE Mode Playback Menu.

#### HINT

#### The volume can be adjusted during playback

 During video clip or audio file playback, if you push the zoom switch toward [T/ →] or [W/ ➡], the volume control bar will appear, allowing you to adjust the volume.

#### In the NORMAL mode

• When you select "PLAY VOLUME" from the NORMAL Mode Playback Menu and press the SET button, the volume control bar appears.

# **DELETING FILES**

You can delete files if you no longer need them. You can delete single files, selected files or all the files at one time.

# Delete single/delete all/delete folder

1 Display the SIMPLE Mode Playback Menu (page 40), select the delete setting, and press the SET button. DELETE SINGLE: Deletes one file at a time. DELETE SELECTED: Deletes the selected files (page 81). DELETE ALL: Deletes all files. DELETE FOLDER: Delete the folder and all the files in the folder.

2 Select the desired delete mode, and press the SET button.

- · The Delete Confirmation Screen appears.
- <DELETE SINGLE>
- Press [◀] or [▶] to select the file you wish to delete.
- There is no confirmation screen when deleting single files. Please make sure that the displayed image is one you wish to delete.

#### <DELETE ALL>

• Press [◀] or [▶] to confirm the files to delete.

#### <DELETE FOLDER>

Press [▲] or [▼] to select the folder you wish to delete.



#### 3 Select "DELETE", and press the SET button. <DELETE SINGLE>

- · The currently displayed file is deleted.
- To delete other files, select the files, select "DELETE" and press the SET button.

#### <DELETE ALL, DELETE FOLDER>

 The Delete Confirmation Screen again appears. To delete the files, select "DELETE" and press the SET button. Then select "YES" and press the SET button, and the files will be deleted. When file delete is completed, "No image" is shown.

## **Delete selected**

Delete selected files.

1 Display the SIMPLE Mode Playback Menu (page 40), select the delete setting, and press the SET button.

- 2 Select "DELETE SELECTED", and press the SET button.
  - The screen to select files to delete appears.



**3** Select an image you wish to delete.

Use the arrow keys to move the orange frame to the file you wish to delete.

# SIMPLE/PLAYBACK

#### 4 Press the SET button.

- The selected file is marked with the delete icon [  $\overline{m}$  ].
- Up to 100 files can be selected.
- To cancel a delete selection and remove the delete icon from a file, move the orange frame to the marked file and press the SET button.

# 5 Press the [ 🖸 ]or [ 📹 ] button.

· The Confirm Delete Screen appears.

## 6 Select "YES", and press the SET button.

· The selected files are deleted.

#### HINT

#### In the NORMAL mode

• When you select "DELETE" from the NORMAL Mode Playback Menu and press the SET button, the Delete Screen appears.

#### CAUTION

 Files that are protected from accidental delete cannot be deleted. To delete protected files, set the protect setting for the files to off (pages 55 and 106), and then follow the file delete procedure.

# PLAYBACK MODES

# 21-image display playback

1 Display the image you wish to play back.


# 2

#### Push the zoom switch toward the [W/ 1 side.

• The 21-image display appears.

#### 3 Select the image to play back.

- · Use the arrow keys to move the orange frame to the desired image, and press the SET button.
- · Pushing the zoom switch toward the [T/ ~] side will show the 8-image display.
- · If the zoom switch is pushed toward the [W/ E ] side while the 21-image display is shown, the display changes to the screen to select the playback folder (page 84).
- · It is not possible to perform the file delete or file protect settings on the 21-image display.

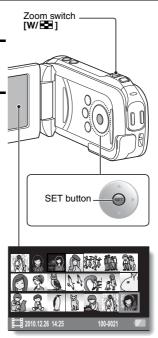

## Selecting the playback folder

If the card contains multiple folders, you can select from which folder you would like to play back.

## **1** Display the Playback Screen.

#### 2 Push the zoom switch toward the [W/➡] side twice.

- The screen to select the playback folder appears.
- If the zoom switch is pushed toward the [T/\\_] side, the camera changes to the 21-image display (page 83).



# Press [▲] or [▼] to move the orange frame to the desired folder, and press the SET button.

 The files in the selected folder are displayed in the Playback Screen.

#### HINT

#### In the NORMAL mode

 When you select "SELECT FOLDER" from the NORMAL Mode Playback Menu and press the SET button, the screen to select the playback folder appears.

# Magnifying (zooming in) the image

# **1** Display the image that you want to magnify.

· For a video clip, pause playback at the place you want to magnify.

# **2** Push the zoom switch toward the [T/\\_] side.

- Magnification is enabled.
- The image is magnified, and the central portion of image is displayed.
- Use the arrow keys to view different parts of the magnified image.

#### To magnify:

Magnification increases each time the zoom switch is pushed toward the  $[T/\sim]$  side.

#### To return to normal size:

Magnification decreases each time the zoom switch is pushed toward the [W/EP] side.

 Press the SET button to return to the normal (100%) view.



#### HINT

#### The magnified portion of the image can be saved as a separate image

• Press the [ 1] button. The magnified portion is saved as a new still image.

# English 86

# **RECORDING MENU 1**

## Video setting

When recording a video clip, smoother motion and better image clarity can be achieved by a higher pixel rate (resolution) and a faster frame rate. However, the file size will also be proportionately larger, requiring longer times to edit and store. It is recommended that you adjust the settings to those suitable for the desired purpose. Note that this menu is also used for recording audio only files.

#### CAUTION

#### When editing video clips...

- In order for video clips to be joined, they must have been photographed in the same mode.
- · Video clips that were photographed in different modes cannot be joined.

## Audio recording

Audio recording

# 1 Select **!**, and press the SET button.


- The audio recording mode is enabled.
- The menu display is canceled if the MENU button is pressed.

Remaining time

NORMAL/SHOOTING

# 2 Press the [ 📹 ] button.

 Audio recording begins. During recording, appears in the monitor. It is not necessary to continue pressing the [16] button while recording.



# 3 End the recording.

Press the [ i j button again to stop recording.

#### HINT

#### You can capture a still image during an audio recording

• Press the [ 1] button during audio recording to capture a 103ml still image. About files saved in segments

• When the video setting is set to a voice memo that exceeds about 13 hours, the recorded file is saved once, and the recording continues in a new file. For other video settings, when the file size exceeds 4 GB, the recorded file is saved once, and the recording continues in a new file. (These 4 GB segments are automatically created. The recording session continues until you stop recording, but voice memo recording is temporarily interrupted while the file is being saved.)

# 1 Select an audio file, and press the SET button.

· Playback begins.

To do	this	Do this
Normal playback	Start playback	Press the SET button.
	Pause	Press the SET button. Press [▲].
	Stop playback	Press [▼].
Fast forward/ fast reverse	Fast forward	During playback, press [▶]. Each time [▶] is pressed, the speed increases. If [◀] is pressed during fast forward, the speed decreases.
	Fast reverse	During playback, press [◀]. Each time [◀] is pressed, the speed increases. If [▶] is pressed during fast reverse, the speed decreases.
	Pause	Press [▲].
	Return to normal playback	Press the SET button.

#### CAUTION If no audio is heard...

• The audio is not played back when the audio recording is played back in the fast playback or fast reverse mode.

# Still image setting

For still images, you can select either the 4:3 or 16:9 horizontal to vertical aspect ratio. This menu is also used for shooting sequential shots.

## Sequential shots

- 1
- Select III or 21, and press the SET button.
- · The camera changes to the sequential shots mode.

# 2 Press the [ 🖸 ] button.

 Shooting begins. Shooting continues as long as the [ ] button is kept pressed.

#### HINT

# What is the maximum number of images in a sequential shots sequence?

24 : 22 images

141 images

- If you continue shooting even after the maximum number of images has been captured, recording does not stop.
- If you continue shooting after the maximum number of images has been captured, subsequent captured images will overwrite the sequence already captured, beginning from the first image in the sequence.

#### About the focus when shooting sequential shots

• When sequential shots are captured, the autofocus operates when the [

#### Can the flash be used?

• The flash does not operate when shooting sequential shots.

#### Did the angle of view change?

 When shooting sequential shots, the angle of view relative to that of still image shooting may change.

#### About the PHOTO NR (page 128) setting

 During sequential shots shooting, the PHOTO NR setting automatically turns OFF.

## Scene select setting

You can select from various preset settings (aperture, shutter speed, etc.) for specific shooting conditions.

#### HINT

- To return to normal photography, select <u>MUD</u> from the scene select menu, and press the SET button.
- When capturing images using the lamp 🔐, fireworks 🔅 or night view portrait 🏝 setting, use a tripod or other method to stabilize the camera.
- In the sequential shots mode, it is not possible to select night view portrait
   ▲★, fireworks , or lamp .
- A table showing the limitations for settings corresponding to scene select icons other than AUTO is on page 182.

# **Filter setting**

The filter feature changes image characteristics such as color tones, to apply unique effects to the photographed image.

#### HINT

- To return to normal photography, select 🕅 from the filter menu, and press the SET button.
- A table showing the limitations for settings corresponding to filter icons other than 🕅 is on page 183.

# Self-timer setting

By assigning an operation shortcut to an arrow key (pages 128 and 131), you can set the self-timer from the Recording Screen.


#### HINT

#### To pause or cancel the self-timer function...

- If the [ ] button or [ ] button is pressed again before the shutter is released, the self-timer countdown temporarily stops. Press the [ ] button or [ ] button or [ ] button one more time to restart the self-timer.
- To cancel self-timer photography, select the Si icon from the self-timer menu, and press the SET button.
- The self-timer is automatically reset to off 🔊 after the power save mode is activated and the camera turned off.

#### When 🖄 is selected...

 When the [ ] button or [ ] button is pressed, the multi-indicator will blink for about 10 seconds, and then the image is captured. Also, 4 seconds before the shutter releases, the indication shown in the illustration appears on the monitor.



# **RECORDING MENU 2**

# Motion compensation (image stabilizer) setting

Your camera can minimize a jittery picture by compensating for unintentional hand motion.

#### HINT

#### If the motion compensation does not seem to be working ...

- Due to the mechanical characteristics of this function, it may not be possible for the camera to compensate for violent motion.
- If the digital zoom (page 72) is being used, the large magnification factor may make it difficult for the motion compensation function to work correctly.
- When the scene select function is set to night view portrait \*, the motion compensation effect may be insignificant.

#### Can't set the "photo stabilizer" setting?

- The photo stabilizer is automatically turned off 🕅 after any of the following operations.
  - Setting the exposure to S, A or M (pages 54 and 98).
  - · Setting the still image NR (noise reduction) setting (page 128) to "ON".
  - · Starting video clip recording.

#### When motion compensation is enabled,

• The following icons are shown on the monitor:



#### Did the scene select setting change?


• When the photo stabilizer is set to [1], if the scene select setting is 🔅 or [2], it will automatically change to [10].

# English 94

### Focus range setting

### How to use the manual focus

- 1 Select MF, and press the SET button.
  - The focus distance adjustment bar appears.
- Press [◄] or [▶] to adjust the focus distance, and press the SET button.
  - The focus distance is set, and you are returned to the Recording Screen.



#### HINT

#### About the focus range

- The focus distance indication shows the distance between the center of the lens and the subject.
- In some cases there may be a slight variance between the distance (numerical figure) you set in the manual focus mode and the actual distance.

#### About zoom movement when using the manual focus

- If the focus distance is set to 70 cm (27.56 in.) or less, the zoom changes to the largest setting that is suitable for that focus distance.
- When the focus distance is set to 70 cm (27.56 in.) or less, the zoom will function only within the range at which the image is focused.

#### About the super macro mode

- When the focus range is set to super macro 💽, the zoom is temporarily set to the wide end.
- By assigning an operation shortcut to an arrow key (pages 128 and 131), you can change the focus range setting from the Recording Screen.

# Focus mode setting


When the spot focus setting is selected, the focus mark + appears in the center of the monitor.



Focus mark

# Light-measuring mode setting

When spot light-measuring is selected, the light-measuring spot mark appears in the center of the monitor.



Light-measuring spot mark

## ISO sensitivity setting

With the initial settings, the ISO sensitivity is automatically set according to the brightness of the subject. However, the ISO sensitivity can be set to a fixed setting.

#### HINT

- By setting a higher ISO sensitivity, you can set faster shutter speeds and capture images in darker locations, but noise in the captured images may increase or the images may be irregular.
- By assigning an operation shortcut to an arrow key (pages 128 and 131), you can change the ISO setting from the Recording Screen.

#### CAUTION

#### Does the image appear to flicker when recording a video clip?

• If recording a video clip under fluorescent lights with the ISO sensitivity set to 400 or higher, a noticeable flicker may appear in the image.

# **RECORDING MENU 3**

# White balance setting

This camera automatically adjusts the white balance under most lighting conditions. However, if you want to specify the lighting conditions or change the overall tone of the image, the white balance can be manually set.

## How to use the one push setting

- 1 Select the 💷 icon.
- 2 Fill the entire screen with a plain white card (or piece of paper, etc.), and press the SET button.
  - · This completes the white balance setting.

#### HINT

To cancel the white balance setting

• Select AWB, and then press the SET button.

# NORMAL/SHOOTING

## **Exposure setting**

The shutter speed and aperture size can be set individually.

1 Select the desired icon from the exposure menu, and press the SET button. <If S. A or M was selected> Press [▲] or [▼] to select Μ aperture value or shutter F3.5 speed. -1/250(2) Press [◀] or [▶] to change the setting for the selected Shutter speed parameter. Aperture

# 2 Press the SET button.

· This completes the exposure setting.

#### HINT

- To prevent the effects of camera shake at slow shutter speeds, it is recommended to use a tripod or other method to stabilize the camera.
- A slow shutter speed may be useful for photographing in a darker environment, but noise in the image may be increased.
- To minimize noise in the image, complete the noise reduction setting (page 128).
- The exposure setting automatically becomes P if the scene select function is active.
- In the sequential shots mode, the shutter speed is faster than 1/15 sec.
- Even if the shutter speed is set to slower than 1/29 sec., the shutter speed during video clip recording is 1/30 sec.
- If the exposure setting is set to **S**, **A** or **M**, by assigning an operation shortcut to an arrow key (pages 128 and 131), you can select the **S**, **A** or **M** exposure setting from the Recording Screen.

# Subject chaser settings

Adjust the settings to automatically target a specific color with the color chaser function, or capture sharp face shots with the face chaser function.

# Shooting with the color chaser function (still images only)

- **1** Set the color chaser setting to
  - · A target mark (+) appears in the center of the monitor.
- 2 Move the target mark to the desired subject, and press the SET button.
  - When the subject is successfully targeted, a target frame icon (blue
     appears superimposed on the subject.
  - <To cancel the color chaser operation>
  - · While the target frame icon is displayed, press the SET button.
  - If the subject is not successfully targeted>
  - The target mark continues to be displayed. Press the SET button once more, and try to engage the target again.

# 3 Press the [ 🗖 ] button.

• The image is captured at the moment the [

## Shooting with the face chaser function

#### Set the face chaser setting to [2].

1

- · A green frame appears in the center of the monitor.
- When the subject is successfully targeted, a green double-frame appears superimposed on the subject.

## **2** When capturing a still image, press the [ **1**] button halfway.

## **3** Press the [ **△** ] or [ **□** ] button.

- <To capture a still image>
- Gently press the [ 1 ] button all the way to capture the photo.

#### <To record a video clip>

- Recording begins when the [ 📹 ] button is pressed.
- During recording, an orange frame appears superimposed on the subject.

#### CAUTION

#### About recording with the subject chaser

- The chaser function does not work while the digital zoom is being used.
- The chaser function does not work when zooming in or out.
- The chaser function may not work when the subject in the monitor is relatively small or appears dark.
- If the scene select function setting was fireworks in or landscape , it automatically changes to UTO.

#### When using the face chaser function

• The light measuring mode changes to multi-section light measuring.

## High sensitivity mode setting

When you shoot in the high sensitivity mode, the captured image appears even brighter than that specified by the ISO sensitivity and exposure compensation settings.

#### CAUTION

#### Limitations of the high sensitivity mode

- When the shutter speed is reduced to create a bright image, video clip motion will appear uneven during playback.
- When shooting in a dark environment, the autofocus and auto exposure may not function effectively.

### **Digital zoom setting**


This setting allows you to specify whether or not the digital zoom is enabled during zoom shooting.

#### HINT

• The digital zoom does not function in the following situation: When the still image mode is set to 16 or 12

## **Exposure compensation**

By assigning the exposure compensation operation shortcut to an arrow key (pages 128 and 131), you can make the image lighter or darker when capturing images.

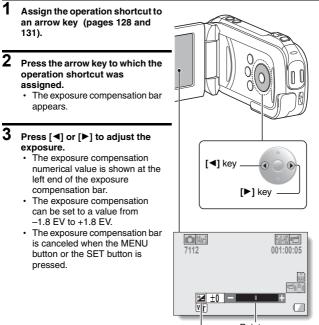

Pointer Exposure compensation bar

#### HINT

The exposure compensation setting is canceled in the following cases:

- When the pointer is set to the center position.
- When the camera is set to the playback mode.
- After the power is turned off.

## Storage folder setting

Create or select a recording folder (a folder in which to store recorded files).

- 1 Select "REC FOLDER", and press the SET button. <Create a new folder>
  - Select "CREATE NEW FOLDER".
  - <Select an existing folder>
  - Select the desired folder number.



## 2 Press the SET button.

- · This completes the create/select folder setting.
- If you created a new folder, it automatically becomes the selected recording folder.

#### CAUTION

#### When an existing folder cannot be selected or a new one created...

- A folder cannot be selected if it was created using a different device, or if it already contains the maximum number of files.
- This setting is not available when using the internal memory.

# PLAYBACK MENU 1

## **Slideshow settings**

Specify the settings for playing back files continuously in a "slideshow" format. In a slideshow of still images, you can set the transition time, transition effects and BGM.

## Changing a setting

- 1 Select the item you wish to change, and press the SET button.
- 2 Press [▲] or [▼] to change the setting.

SLIDESHOW			
MODE		ALL	
TIME		1sec	
EFFECT		OFF	
BGM		OFF	
START			
MENU 🤉 🕄 OK 🔽			

**3** Press the SET button.

## Begin the slideshow

#### Select "START" and press the SET button.

- Slideshow playback begins.
- · To stop slideshow playback, press the SET button or MENU button.

#### HINT

1

#### BGM for video clips?

• When video clips are played back in a slideshow, the recorded audio track is played back; the BGM is not played.

Prevent accidental erasure of image and audio files.

## Protect files one by one

- 1 Display the file that you want to protect from accidental erasure, and display the NORMAL Mode Playback Menu (page 40).
- 2 Select "PROTECT" and press the SET button.
- **3** Select "PROTECT SINGLE" and press the SET button.
  - · "LOCK" appears.
  - If the protect mode has already been enabled for the file, then "UNLOCK" appears.



# 4 Select "LOCK" and press the SET button.

- The protect mode is set for the file.
- The protect mark 🖃 indicates that the file is locked.

#### CAUTION

• Even if the protect mode is set for certain files, they will be deleted if the card is reformatted.

#### HINT

#### To select a different image in step 3...

• Press [◀] or [▶].

#### To cancel the protect mode for a file...

Display the desired file and repeat steps 1 to 4. The protect mark is will disappear and the protect mode is canceled.

## Protect selected files

Select multiple files to protect.

#### 1 Display the NORMAL Mode Playback Menu (page 40).

#### 2 Select "PROTECT" and press the SET button.

#### 3 Select "PROTECT SELECTED" and press the SET button.

· Use the arrow keys to move the orange frame to the file you wish to protect.



## 4 Press the SET button.

- The selected file is marked with the protect icon [
- To cancel a protect selection and remove the protect icon from a file, move the orange frame to the marked file and press the SET button.

### Resize

A captured image can be resized to a smaller size and saved as a separate image.

#### HINT

#### Why can't the image be resized?

 An image can be resized only to a smaller (or the same) size, not to a larger size.

## Rotate

Captured still images can be rotated to the correct orientation for viewing.

#### HINT

• An image for which the protect mode has been enabled cannot be rotated. To rotate a protected image, cancel the protect mode before beginning the rotate image procedure (pages 55 and 106).

# PLAYBACK MENU 2

## Correcting the image

Repair the red-eye effect in still images to make the eyes appear more natural, or enhance the contrast.

#### HINT

If the "Contrast correction not successful" or "Red-eye correction not successful" message appears...


- The camera was not able to successfully repair the image.
- The correction function works to automatically edit flaws that the camera detects in captured images. In some cases, the camera may fail to correct a flaw.
- Concerning the date and time information for the saved image
- When an image is corrected and saved, the recorded date and time of capture (Exif information) remains unchanged from the original image.
   However, the file date shown on the computer changes to the date and time the image was revised.

# NORMAL/PLAYBACK

## Editing video clips

You can trim away unwanted portions from a video clip and save it as a new video clip (video clip cutting [extracting]). You can also join video clips together and save them as one separate clip ("ioining").

## Procedure to cut (extract) a portion of a video clip

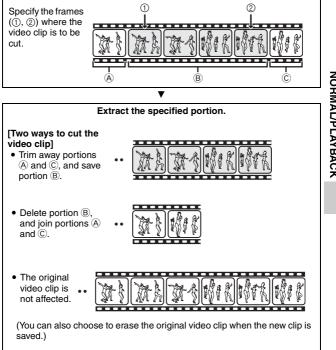

## Procedure to join video clips





## Specify the video clip that you wish to append (join).



# Join the video clips. • The video clips are joined. • The original video clips are not affected. (You can also choose to erase the original video clips when the new clip is saved.)

V

#### CAUTION

#### Caution when editing video clips

- When editing video clips, do not turn off the camera, as doing so may erase the original video clip.
- As the number or size of the video clips increases, the card memory may become full, making it impossible to edit or save the video clips. In this case, you will need to free some of the memory on the card by deleting files that are no longer necessary (pages 55 and 80).

#### Regarding the capture date of the saved files

 The capture date of edited images changes to the date that the files are saved.


## 111 English

## Video clip cutting (extracting)

- 1 Display the video clip from which you wish to extract a segment.
- 2 Display the NORMAL Mode Playback Menu (page 40), select "EDIT VIDEO", and press the SET button.



- **3** Select "CUT" and press the SET button.
  - The Cutting Screen appears.



## 4 Specify the start point of the extract.

- Use the procedure below to specify the frame from which the video clip extract will start.
- Play the video clip until approximately the desired point, pause the video clip, then play the video clip one frame at a time, stopping at the start point of the extract. This will be the first frame of the extract.
- If the start point of the video clip is also the start point of the extract, proceed to step 5.

#### <Procedure>

#### Play:

After pausing playback, press and hold [▶] for about 2 seconds for forward playback, or [◀] for reverse playback.

#### Pause:

During playback, press the SET button.

#### Accelerated playback:

During playback, press [ $\blacktriangleleft$ ] or [ $\blacktriangleright$ ] to change the playback speed. Single frame:

After pausing playback, press [▶] to move forward one frame, or [◄] to move back one frame.

## 5 Press [▲].

- · The start point of the video clip extract is set, and the screen to specify the end point appears.
- Specify the end point of the extract by following the same procedure as in step 4.

#### <When joining the first and latter portions>

- Press [▼].
  - Each time [♥] is pressed, the sections to delete and the sections to save are reversed.
- ② Specify the end point of the extract. The frame following the end point of the extract will be the start point of the latter portion to be joined.

## 6 Press the [ 🗖 ] or [ 📹 ] button.

· A screen appears for you to select either to save the edited video clip as a new (separate) file, or to delete the original video clip and replace it with the edited video clip.

#### SAVE AS NEW:

The edited video clip will be saved as a new file. The original video clip remains unchanged.


#### OVERWRITE:

The original video clip will be deleted. Only the edited video clip will be saved.

#### **REVIEW CLIP:**

Play back the edited video clip before saving it.

EX CU.	Т	
SAVE OVERV REVIE		
MENU 🖓	<b>⊕OK</b>	



Approximate playback time

Portion to be deleted

# NORMAL/PLAYBACK

## 7 Select the desired option, and press the SET button.

- Editing starts.
- When editing ends, you are returned to the NORMAL Mode Playback Menu.

#### HINT

- You will not be able to overwrite the file if the original file is protected.
- If the "Insufficient card memory" or "Insufficient internal memory" message appears, you will need to free some of the memory by deleting files that you do not need to keep.

#### CAUTION

#### Warning concerning the battery pack remaining charge

- During the editing of lengthy video clips, the time to process the large amount of data can become quite long. To avoid problems caused by the battery pack becoming depleted in the middle of video clip editing, before starting to edit be sure that a sufficiently charged battery pack is installed in the camera, or connect the AC adaptor (optional).
- It is recommended that a computer be used to edit long video clips.


## Joining video clips

#### CAUTION

1

2

• Video clips that were photographed in different modes cannot be joined.

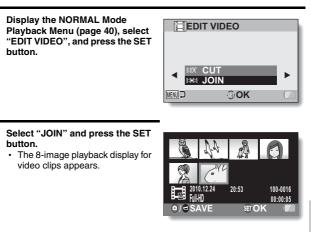

# 3 Move the orange frame to the video clip you wish to join, and press the SET button.

- The specified video clip is labeled with a number.
- Up to 9 video clips can be selected.
- To cancel a selection and remove the number label from a video clip, select the video clip and press the SET button.



## 4 Press the [ 🗅 ] or [ 📹 ] button.

 A screen appears for you to select either to save the joined video clip as a new (separate) file, or to delete the original video clips and replace them with the joined video clip.

#### SAVE AS NEW:

The joined video clip will be saved as a new file. The original video clips remain unchanged.

#### OVERWRITE:

The original video clips will be deleted. Only the joined video clip will be saved.

#### **REVIEW CLIP:**

Play back the joined video clip before saving it.



## 5 Select the desired option, and press the SET button.

- · Editing starts.
- When editing ends, you are returned to the NORMAL Mode Playback Menu.

# NORMAL/PLAYBACK

#### HINT

- If the file size of the video clip after editing exceeds 4 GB, it is not possible to either "SAVE AS NEW" or "OVERWRITE".
- You will not be able to overwrite the file if the original file is protected. If you
  want it to be erased, you will need to first remove the protection (pages 55
  and 106).
- If the "Insufficient card memory" or "Insufficient internal memory" message appears, you will need to free some of the memory by deleting files that you do not need to keep.

#### CAUTION

#### Warning concerning the battery pack remaining charge

- During the editing of lengthy video clips, the time to process the large amount of data can become quite long. To avoid problems caused by the battery pack becoming depleted in the middle of video clip editing, before starting to edit be sure that a sufficiently charged battery pack is installed in the camera, or connect the AC adaptor (optional).
- It is recommended that a computer be used to edit long video clips.

## **Printing instructions**

In addition to using your printer to print out still images captured with your camera, as with conventional film, you can have prints made at shops offering digital print services. Moreover, this camera is DPOF-compatible, so you can use the camera to specify the number of prints, whether or not the date is displayed on the print, and also to request an index print.

## **Display the Printing Instructions Screen**

## 1 Select a photo from the Playback Screen.

A photo must be selected in order to access the Print Instructions Screen.

#### 2 Display the NORMAL Mode Playback Menu (page 40), select "PRINT INSTRUCTIONS", and press the SET button. ALL IMAGES:

The specified printing instructions apply to all the images.

#### EACH IMAGE:

The printing instructions are specified for each individual image.

#### INDEX:

All the still images are printed as miniature images (thumbnail images), several images on one print.

#### ALL CLEAR:

Clear all the printing instructions. This cannot be selected if no printing instructions have been specified for an image.



#### HINT

#### Printing a single frame from a video clip

 To print with a printer or have the digital print service shop print out a still image from a video clip, you must first save it (extract still) as a still image (page 77).

#### About the DPOF format

 DPOF (Digital Print Order Format) is a print order format. You can connect your camera to a DPOF-compatible printer to produce your prints. You can also set the printing instructions for the desired images, and then have the requested images printed automatically (page 163).

#### About the finished prints

- Rotated images (pages 55 and 108) will be printed in their original orientation.
- The quality of the print output will differ depending on the print service and printer used.

## Specifying date imprinting and print quantities

You can specify printing instructions for each individual image (EACH IMAGE), or apply the printing instructions to all the images (ALL IMAGES).

## 1 Display the Printing Instructions Screen (page 119).

#### 2 Select "ALL IMAGES" or "EACH IMAGE". ALL IMAGES:

The printing instructions are applied to all the images.

#### EACH IMAGE:

The printing instructions are applied only to the image currently displayed.




## **3** Press the SET button.

- The Date/Copies Print Screen appears.
- If "EACH IMAGE" was selected, press [◀] or [▶] to display the desired image to print.
- The printing instructions that are currently active for the displayed image are shown. You can press
   or (>) to confirm the printing instructions for each image.



Printing instructions



<Completed printing instructions>


4 Specify whether the date is displayed on the print, and the number of prints.

#### <Specify the number of prints>

- Press [▲] or [▼].
  - The quantity indication changes.
  - Display the desired number of prints.
- · Press the SET button.
  - · The number of prints is set.

#### <Specify dated prints>

- From the screen on which the number of prints is set, press the zoom switch.
- · Press the SET button.

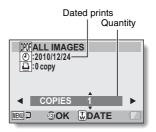

# NORMAL/PLAYBACK

## 5 Press the MENU button.

- The printing instructions for the requested print quantities and dated prints are stored.
- The display returns to the Printing Instructions Screen.

#### HINT

#### Can't specify dated prints?

• Dated prints are not possible for photos that were captured before the camera's date and time setting was completed.


## Index print

Printing out many small images on one sheet is called an "index print". This is convenient for use as a list of the images you have captured.

English 122

# FILE INFO DISPLAY


On the Information Screen you can check what the settings were when a file was recorded with your camera.

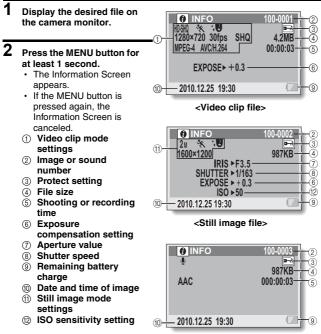

<Audio file>

## DISPLAY THE OPTION SETTING MENU

The camera settings are executed via the Option Setting Menu.

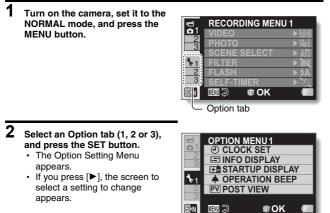

## To access a Setting Screen

- 3 Press [▲] or [♥] to select the item you wish to set, and press the SET button.
  - · The Setting Screen for the selected item appears.
  - To return to the Menu Screen, press the MENU button.

## INTRODUCTION TO THE OPTION SETTING MENU

## Tab 1



# **OPTION SETTINGS**

#### ① CLOCK SET setting (page 35)

Set the camera's clock.

#### 2 INFO DISPLAY setting

 Specify the information to display on the playback screen.

#### SHOW ALL:

Display the capture date and playback time (video clips).

#### DATE & TIME:

Display the capture date.

#### COUNTER:

Display the playback time when playing back a video clip.

#### OFF:

Do not display the capture date or playback time.

#### **③ STARTUP DISPLAY setting**

 Select the display that appears on the monitor when the camera is turned on in the recording mode.

#### ④ OPERATION BEEP setting

Settings for the camera's operation sounds, audio guide and volume.

#### TURN ON/OFF:

Mute or enable the sounds when the camera is turned on or off.

#### SHUTTER:

Select the sound that is produced when the [ 1] button is pressed.

#### KEY SW:

Select the sound that is produced when the SET button, MENU button, etc. are pressed.

#### AUDIO GUIDE:

Mute or enable the camera's audio help guide.

#### **OPERATION VOL:**

Adjust the volume of the operation sounds.

#### ⑤ POST VIEW setting

- Specify the duration that the captured image is shown on the monitor (post-view) after the [ ] button is pressed.
- 6 Remaining battery charge display (page 143)

Tab 2



127 English

#### ① SHORTCUTS setting (page 131)

#### 2 NOISE REDUCTION setting

 Compared to normal shooting, when the PHOTO NR function is ON, the image processing time after shooting a still image is slightly longer.

#### VIDEO NR:

Turn ON/OFF the image noise reduction function during video clip recording.

#### PHOTO NR:

Turn ON/OFF the image noise reduction function during still image shooting.

#### WIND SOUND NR:

Turn ON/OFF the wind noise reduction function during video clip/audio shooting.

#### ③ Image quality setting

 Set the vividness and sharpness of the images.


#### ④ BRIGHTNESS setting

 Adjust the brightness of the camera's monitor display.

#### **⑤ LANGUAGE setting**

- Select the language in which the monitor messages are displayed.
- 6 Remaining battery charge display (page 143)

Tab 3

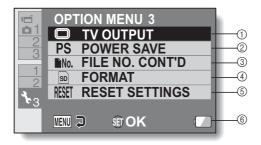

- ① TV OUTPUT setting (page 134)
- ② POWER SAVE setting (page 33)
  - Specify the elapsed period of inactivity before the power save mode (to conserve battery power) is activated.
- ③ FILE NO. CONT'D setting (page 138)
- ④ FORMAT (page 140)
- **5 RESET SETTINGS** 
  - Reset the camera settings to the factory-preset settings.
  - The following settings do not change with this procedure: Date and time setting TV system setting Language setting
- 6 Remaining battery charge display (page 143)

## Shortcut setting

1


Assign functions (operation shortcuts) to the arrow keys when they are pressed while the Recording Screen is displayed.

#### Select "SHORTCUTS", and press the SET button.

- ∴ Assign the function when [▲] is pressed.
- ◯: Assign the function when [▼] is pressed.
- : Assign the function when [◄] is pressed.
- : Assign the function when [▶] is pressed.

#### **RECOMMENDED SETTINGS:**

The most commonly used settings are automatically assigned.




Arrow keys

# 2 Select the key to which you wish to assign the function, and press the SET button.

- · The screen to assign a function to the key appears.
- OFF: No operation shortcut is assigned to the key.
- AF AF LOCK: Lock the focus (page 66).
- **AE LOCK:** Lock the exposure setting (page 66).
- FOCUS: Set the focus range (pages 62 and 94). (This operation shortcut can be assigned only to the <sup>△</sup> or <sub>↓</sub> key.)
- **FLASH:** Set the flash operation (pages 46 and 68).
- **EXP COMPENSATION:**Adjust the exposure (page 103).
- ISO ISO: Set the ISO sensitivity (pages 52 and 96).
- SEQUENTIAL: Switch between sequential shots and single shots.
- SELF-TIMER: Set the self-timer (pages 50 and 92).
- **EXPOSURE:** Set the exposure value for the exposure setting (pages 54 and 98).
- **DISP. ON/OFF:** Turn the shooting settings display on/off.

PHOTO VIEW: Select the desired field of view (photo view or video view) for the Recording Standby Screen display. When "photo view" is selected, a frame to show the field of view during video clip recording appears.

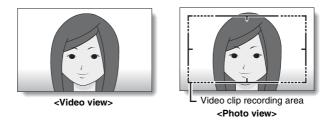

## **3** Press [▲] or [♥].

· Display the function you wish to assign to the key.

## 4 Press the SET button.

- The selected function is assigned to the key, and you are returned to the Shortcuts Screen.
- To assign functions to the other keys, repeat steps 2 through 4.



<When "RECOMMENDED SETTINGS" is selected>

## 5 Press the MENU button.

- The screen to confirm the shortcut settings appears, and then you are returned to the Option Setting Menu.
- This completes the shortcuts setting.

## <To confirm the assigned shortcuts>


 On the screen in step 1, press the MENU button, and the screen to confirm the shortcut settings appears.



## TV output setting

Specify the type of image signal that is output from your camera's USB/AV terminal.

1 Select "TV OUTPUT", and press the SET button. TV SYSTEM: Set the type of TV signal that is Τν τγρε HDMI output from the USB/AV terminal. TV TYPE: Set the TV's aspect ratio. HDMI: IMENU 🖓 Set the signal that is output from the HDMI terminal. HDMI-CEC: Set the HDMI-CEC function.



## 2 Select the desired setting, and press the SET button.

· The screen to change the parameter for the selected setting appears.

#### <If "TV SYSTEM" is selected>

NTSC: Outputs NTSC video signals.

PAL: Outputs PAL video signals.

#### <If "TV TYPE" is selected>

- **16:9:** Use this setting when a TV having an aspect ratio of 16:9 is connected.
- **4:3:** Use this setting when a TV having an aspect ratio of 4:3 is connected.

#### <If "HDMI" is selected>

**AUTO:** The camera automatically determines the appropriate setting.

- 720p: Choose this setting if the video clip was recorded in the 脉隙 or 脉腑 mode.
- 1080i: Choose this setting if the video clip was recorded in the 내해 or ᡅல mode.
- 480p: Choose this setting if the video clip was recorded in the TMM mode.
  - · Does not work with 480i connector.

#### <If "HDMI-CEC" is selected>

ON: Sets the HDMI-CEC function to "ON".

OFF: Sets the HDMI-CEC function to "OFF".

**3** Press  $[\blacktriangle]$  or  $[\blacktriangledown]$  to select the desired parameter.

## 4 Press the SET button.

### 5 Press the MENU button.

· This completes the TV output setting.

#### HINT

#### About the HDMI-CEC function

- This is a system control function by which, through an HDMI cable, a control signal is output to electronic devices and the operation of multiple devices is coordinated.
- The HDMI-CEC function will operate correctly only when the camera is connected to a SANYO TV that incorporates the HDMI-CEC function.
- When the HDMI-CEC function is used, your TV's remote control unit can be used to operate the camera playback; however, it does not work to turn the camera ON. In addition, in the playback mode, the camera's power save function is disabled.
- For information concerning connecting and operation, please see your TV's instruction manual.

(As of May 2008, SANYO TVs that incorporate the HDMI-CEC function have not been released.)

# Relation between "TV TYPE" setting and TV display

The tables below show the video signal that is output when the "TV TYPE" setting is changed. However, note that for some TVs that have an auto-detect function, the output may not conform to the table, or the TV display may not change at all.

"TVTYPE" setting	TV type to be connected	Image file to be displayed	TV display
		Still image (4:3)	
4:3	4:3	Video clip in SD mode	
		Video clip in HD mode	

**OPTION SETTINGS** 

"TVTYPE" setting	TV type to be connected	Image file to be displayed	TV display
		Still image (4:3)	
16:9	16:9	Video clip in SD mode	
		Video clip in HD mode	

### CAUTION

## If the TV display is not correct...

 If the appearance of the image on the TV monitor is not correct, you can either change the camera's "TV TYPE" setting, or change the screen size setting on your TV. To change the screen size setting on your TV, please refer to the instruction manual for your TV.


The aspect ratio of the output still image does not change to 16:9?

• The still image output will be 4:3 for images captured in a 4:3 still image mode.


# File No. continued setting

If a newly formatted card is used, the file name (image number) of the captured image automatically begins from 0001. If the card is subsequently reformatted, or if a different reformatted card is used, the file names again begin from 0001. This is because the file number continued function is set to "OFF", and consequently it results in more than one card containing images with the same numbers, or may result in unintentionally overwriting files when, for example, saving files in a computer. By setting the file number continued function to "ON", even if the card is replaced with another card, the consecutive numbering of file names continues from the last number recorded by the camera.

#### <File number continued function "OFF">



<File number continued function "ON">



 If Card B already has files in it when it replaces Card A, file names are assigned as follows.

When the highest file number on Card B (before replacing) is lower than the highest file number on Card A: the file name of the next recorded image continues from last file name recorded on Card A.



When the highest file number on Card B (before replacing) is higher than the highest file number on Card A: the file name of the next recorded image continues from last file name recorded on Card B.



#### HINT

 Until the file number continued function is turned "OFF", consecutive file names are assigned. It is recommended that the file number continued function be returned to "OFF" at the end of each photography session.

# Formatting (initializing)

A card must be formatted with this camera:

· After purchasing, when used for the first time, or

• If it was formatted using a personal computer or another digital camera.

The card cannot be formatted if the lock switch is set to the "LOCK" position. Proceed with the format procedure after setting the lock switch to the unlocked position.

#### CAUTION

#### **Caution during formatting**

• Do not turn off the power to the camera or eject the card during formatting. Formatting erases the data

 When a storage medium is formatted, all recorded files on the medium are erased. Protected data (pages 55 and 106) is also erased, so before formatting a card, any data you want to keep should be copied to your personal computer's hard disk or other storage medium.

# Caution regarding disposing/transferring the card (recovering data from a reformatted card)

- If a card is reformatted or the data is erased from the card using the camera or a computer, the card's control data may be merely modified and the data itself may not be completely erased from the card.
- In some cases it may be possible to recover the data from a reformatted card using special software for that purpose.
- If you are disposing of a card, it is recommended that you physically destroy it. If you are transferring the card to someone else to use, it is recommended that you use commercially available software for erasing card data. Managing data is the responsibility of the user.

# CHECKING THE REMAINING CARD MEMORY

You can check how many images can be captured and how much recording time is available on the card. For a table showing the maximum number of images and recording time for specific cards, please see "Possible No. of Images/Possible Shooting Time/Possible Recording Time" on page 189.

# Checking the remaining number of images and video recording time

# 1 Set the camera to the recording mode (page 38).

- The remaining number of images appears in the upper left of the monitor.
- The remaining video recording time appears in the upper right of the monitor.
- The remaining number of images and video recording time will differ depending on the resolution and compression settings.



# For audio recordings

# 1 Set the camera to the audio recording mode (page 86).

The remaining audio recording time is shown.



#### HINT

- When the remaining number of images or the remaining video recording time is "0", you cannot capture any more images. To capture more images, either install a new card, or save the images to a computer and then delete them (page 80) from the card.
- When the remaining number of images or the remaining video recording time is "0", it may be possible to capture a few more images by setting a lower resolution setting (pages 61, 86 and 90), or selecting a different image quality setting.

# CHECKING THE REMAINING BATTERY PACK CHARGE

When using the battery pack, the remaining battery pack charge can be checked on the monitor. Make sure to check this indicator before capturing an image. For an indication of the possible length of time for battery pack operation, see page 188.

## 1 Display the Recording Menu or Playback Menu (page 40).

- The battery pack remaining charge indicator appears in the lower right corner of the monitor.
- Due to the battery pack characteristics, when the ambient temperature is low,
   may appear early for an incorrect indication of the remaining charge.

ıď.	RECORDING MENU	J1
<b>6</b> 1	VIDEO	► Full+HD
	PHOTO	► 14m-S
	SCENE SELECT	► AUTO
2.1	FILTER	
2	FLASH	► \$A
3	SELF-TIMER	ା <b>୬</b> 'ଥି
	III 🔉 🕄 OK	
_		

Battery pack remaining J charge indicator

Also, depending on the

conditions of use of the camera

or the ambient conditions (temperature, etc.), the indicated remaining charge may change. Therefore, this indication can only be used as a general approximation of the remaining charge.

Battery pack remaining charge indicator	Battery remaining charge	
	Approx. full.	
	Power is low.	
	It will soon be impossible to capture or play back images.	
If this icon flashes when the [ ] but [ I ] button is pressed, images can captured. Recharge the battery pack		

#### HINT

- If any file is present, you can also check the remaining battery pack charge on the Information Screen (page 123).
- Battery life may differ even among battery packs of the same type.
- Depending on the usage of the camera (such as the number of times the flash is used, the use of the monitor, etc.) or the ambient temperature (temperatures below 10 °C [50 °F]), the number of images that can be saved on a fully charged battery pack will vary greatly.
- It is recommended that you prepare an extra battery pack(s) when taking
  pictures at a wedding or while traveling, for example, so you don't miss
  capturing images of important moments due to the battery pack power
  running out. The same is recommended for taking photos in cold
  environments. (In a ski area, for example, the battery pack can be kept
  warm in your pocket until ready to use.)

# **OPERATING ENVIRONMENT**

## When using as a card reader

Limited to models with the preinstalled OS. Windows Windows 2000, XP, Vista, 7 Mac OS Mac OS X 10.3.6 or later

## To access the files in the internal memory

- Remove the card from the camera before connecting the camera to a computer.
- The volume name becomes [XACTI\_INT].

# SETTING THE CONNECTION MODE

Start your computer, and use the supplied USB interface cable to connect the camera to the computer. · Connect the camera's USB/AV terminal to the computer's USB connector. 2 Turn on the camera (page 32). The USB Connection Screen appears on the camera's monitor. USB CONNECTION COMPUTER PRINTER CANCEL CANCEL OK To USB/AV terminal T To USB connector Supplied dedicated USB interface cable

# **3** Select "COMPUTER", and press the SET button.

• The screen to select the computer connection mode appears.

#### CARD READER:

Use the camera as an external drive of the computer.

### MTP:

Connect the camera in the MTP mode to a Windows Vista or Windows 7 computer.

For Windows 7 operating systems, this camera is compatible with Device Stage.

#### SCREEN CAPTURE:

Save an image of the computer screen in your camera.

#### PC CAMERA:

Use your camera as a PC camera.

#### USB CONNECTION CARD READER MTP SCREEN CAPTURE PC CAMERA CANCEL

**OK** 

MENU 🖓

# 4 Select the desired connection mode, and press the SET button.

#### CAUTION

#### Insert and pull out the cable carefully

- When connecting the cables, make sure that the cable plugs are correctly
  oriented and that they match the shapes of the terminal sockets on the
  devices. Push the plugs in straight when connecting them. If undue force is
  used to connect a cable, it may permanently damage the connector pins in
  the terminal socket.
- Do not use excessive force when connecting and disconnecting cables.
- Please connect the dedicated USB interface cable to your computer's USB connector. Do not connect it to the USB port on your monitor or keyboard, or to the USB hub. Be especially careful when installing the driver software. In some instances, it may not be possible to correctly install the driver software.

#### Do not exchange data bi-directionally

 While copying data from the camera to the computer in the card reader mode, do not perform any operation that would copy the computer data to the camera.

# **USING AS A CARD READER**

# For Windows Vista/XP/7 users

# Mounting your camera

### Set the camera to the card reader mode (page 146).

- The message [Found New Hardware] appears in the task tray, showing that the camera is recognized as a drive.
- The card is recognized (mounted) as a disk, and the [XACTI (E:)] icon appears in the [My Computer] window.
  - The drive name (E:) may be different on your computer.

# 2 Select an action.

 If the [XACTI (E:)] window appears automatically, select the desired procedure from the window.

# **Dismounting the camera**

### CAUTION

1

 To disconnect your camera, be sure to follow the procedure below. Failure to follow this procedure may cause faulty operation of your computer or loss of card data.

1 Left-click on the icon for safely removing hardware in the task tray.

A list appears showing the devices connected to the computer's USB connector.

# 2 Left-click on the camera drive (E:).

# **3** Click on the [OK] button.

- The camera can now be disconnected.
  - The drive name (E:) may be different on your computer.

# For Windows 2000 users (except for the SDXC card)

## Mounting your camera

Set the camera to the card reader mode (page 146).

- If a message appears on the computer monitor instructing you to load the Windows CD-ROM, follow the instructions and install the driver.
- The camera is recognized as a drive, and [Removable disk (E:)] appears in the [My Computer] window.
  - The drive name (E:) may be different on your computer.
- The card is recognized (mounted) as a disk.
- Double-click on the [Removable disk (E:)] icon in [My Computer], and you can process the contents of the card installed in your camera exactly like you would the files in the other computer drives.

# **Dismounting the camera**

#### CAUTION

- To disconnect your camera, be sure to follow the procedure below. Failure to follow this procedure may cause faulty operation of your computer or loss of card data.
- Left-click on [Unplug or Eject Hardware] in the task tray.
  - A list appears showing the devices connected to the computer's USB connector.

# 2 Left-click on the camera drive (E:).

- The drive name (E:) may be different on your computer.
- The [Safe to Remove Hardware] dialog box will open.

# **3** Click on the [OK] button.

· You can now disconnect the camera.

# For Mac OS X users

## Mounting your camera

#### Set the camera to the card reader mode (page 146).

- The camera is recognized as a drive and appears as an icon named [XACTI] on the Desktop.
- Double-click on the [XACTI] icon, and you can process the contents of the files in your camera's memory exactly like you would the files in the other computer drives.

# **Dismounting the camera**

#### CAUTION

1

 To disconnect your camera, be sure to follow the procedure below. Failure to follow this procedure may cause faulty operation of your computer or loss of data in your camera.

# 1 Drag the [XACTI] icon for your camera on the Desktop to the trashcan.

- · The [XACTI] icon disappears from the Desktop.
- · You can now disconnect your camera.


## CAUTION

#### When using in a Mac OS X Classic environment

• It is not possible to save or load files directly to or from your camera. The files must first be saved once to your hard disk.

# ABOUT THE CONTENTS OF THE CARD

# Configuration of directories in the card

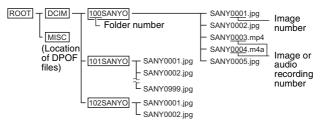

Up to 999 files can be stored in folder 100SANYO. If more files are made, a
folder named 101SANYO is created, and they will be stored in there. New
folders will then be named in sequence, i.e., 102SANYO, 103SANYO, etc.

# **File formats**

The format of the files saved and the method in which the file names are determined are explained below.

Type of file	File format	File name structure	
Still image file	JPEG	File name begins with SANY. Extension is " jpg". SANY**** jpg	
Video clip file	MPEG-4	File name begins with SANY. Extension is ".mp4". SANY****.mp4*	
Audio recording file	MPEG-4 Audio (AAC compression)	File name begins with SANY. Extension is ".m4a". SANY****.m4a	

\* Consecutive numbers assigned in the order the files were saved.

## Cautions when using as a card reader

• Do not alter files or folders in your camera in any way. Doing so may result in your camera not recognizing that data.

If you want to edit files, first copy them to your computer's hard drive.

 Cards formatted on your computer cannot be used by your camera. Format all cards to be used by your camera with your camera.

#### HINT

#### About the volume name

 The volume name will be [XACTI] for a card that was formatted with the camera and [Removable disc] for a card that was formatted with a computer.

#### About video clip files recorded with this camera

 You can use Apple's QuickTime to play back video clips on a computer. Playback may be possible using other software that supports the ISO standard MPEG-4 AVC/H.264 (AAC audio).

#### <Video clip file playback operating environment>

	Windows	Mac OS	
OS*	Windows XP Windows Vista Windows 7	Mac OS X 10.3.9 Mac OS X 10.4.9 or later	
CPU	Core 2 Duo E4400 2.0 GHz or later Core Duo T2600 2.16 GHz or later Athlon X2 4600+ 2.4 GHz or later	Core 2 Duo or later	
Memory	1 GB (Recommended 2 GB) or more		
Video memory	128 MB or more	256 MB or more	
Other	USB connector		

\* Limited to models with preinstalled OS.

#### About audio files recorded with this camera

 If you change the extension (.m4a) of audio files to ".mp4", playback may be possible using software that supports the ISO standard MPEG-4 (AAC audio).

#### About file names when the card is replaced...

 If the file number continued function is set to on, even when the card is replaced, consecutive numbering of folder numbers and file names continues from the previously installed card (page 138).

# **USING AS A PC CAMERA**

When connected to a Windows XP, Windows Vista or Windows 7 computer, the camera can be used as a PC camera.

# For Windows XP

Please perform the following upgrades before connecting the camera to a computer.

- Upgrade Windows XP to SP2 or later. Install Windows XP SP2 or later.
- Install Windows Messenger 5.0 or later version.
   Download Windows Messenger 5.0 or later version, and install it.
- If using MSN Messenger, please install MSN Messenger 7.0 or later version.

## CAUTION

- The PC camera function can be used only with computers in which Windows XP, Windows Vista or Windows 7 was preinstalled.
- The zoom cannot be used with the PC camera function. Moreover, only images can be recorded; audio files cannot be recorded.
- Although your camera can shoot at a maximum rate of 15 frames per second, the rate at which you can broadcast in the PC camera mode may be less than this depending on the speed of your Internet connection.

# Using as a PC camera

1 Set the camera to the PC CAMERA mode (page 146).

# **USING THE SOFTWARE**

Use the links on the Sanyo website for downloading software that enables you to use the data from your camera on a computer.

Before downloading the software, be sure to check the precautions described on the website.

# **Operating environment**

	for Windows	for Mac OS	
	Video clip playback	Video clip playback	
OS*	Windows XP, Windows Vista, Windows 7	Mac OS X 10.3.6 or later	
CPU	Core Duo 1.66 GHz or faster Pentium 4 3.6 GHz or faster	Power PC G5 dual 2.3 GHz or faster	
Memory	1 GB (Recommended 2 GB) or greater	512 MB or greater	
Video Memory	64 MB (Recommended 256 MB) or greater	64 MB or greater	
Others	USB port	USB port	

\* Limited to models with preinstalled OS.

# Obtaining the software

# For Windows operating systems

# **1** Remove the card from the camera.


 The program to access the website is stored in your camera's internal memory. This program cannot be accessed while a card is installed in the camera.

# 2 Start your computer, and use the supplied dedicated USB interface cable to connect your camera to the computer.

Connect the camera's USB/AV terminal to the computer's USB connector.

# **3** Turn on your camera (page 32).

• The USB Connection Screen appears on the camera's monitor.

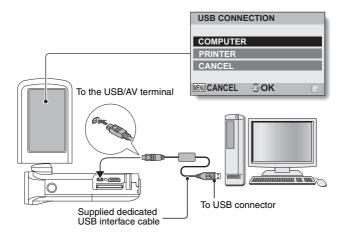

# **4** Select "COMPUTER", and press the SET button.

· The screen to select the computer connection mode appears.

## 5 Select "CARD READER" and press the SET button. <For Windows users>

- The screen to access the website for this camera (access menu) appears.
- If the access menu does not appear, double-click on Autorun or Autorun.exe.

#### <For Mac OS users>

 When you double-click on the HTML file (index.html) in the camera drive, the screen to access the website for this camera (access menu) appears.

# 6 Click on [Go to Xacti GH1/GH2 Web Support Page].

- The screen to select your desired language appears. When you click on a language selection, the website page introducing this camera opens.
- · Select and download the desired software from the website.

#### HINT

#### If the Autorun, Autorun.exe or index.html file has been deleted ...

• The Autorun or Autorun.exe and index.html files can be created by using the camera to format the camera's internal memory.

## About the Kodak online service

 When you close the access menu, a dialog box to connect to the website introducing Kodak's online service appears. Check the [No thanks!] option button, and then click on the [OK] button.

#### To access the Web support page next time ...

 When you close the access menu, a shortcut icon is created on your desktop so that you can easily access the Web support page in the future. The next time you wish to access the Web support page, just double-click on the desktop shortcut icon.

# CONNECTING TO A TV

By connecting the camera to a TV, you can play back the recorded files on the TV.

## CAUTION

#### Insert and pull out the cable carefully

- When connecting the cables, make sure that the cable plugs are correctly
  oriented and that they match the shapes of the terminal sockets on the
  devices. Push the plugs in straight when connecting them. If undue force is
  used to connect a cable, it may permanently damage the connector pins in
  the terminal socket.
- Do not use excessive force when connecting and disconnecting cables.

About image output: The image output destination differs depending on the camera status.

Connection	Image output	Recording mode		Playback
cable	destination	Standby	Recording	mode
Dedicated AV	Camera monitor	NTSC: × PAL: O	0	×
interface cable	TV	NTSC: ○ PAL: ×	×	0
HDMI cable	Camera monitor	×	0	Х
	TV	0	×	0

O: Images are output X: Images are not output


#### HINT

 HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.




# Connecting to a video input terminal

Use the supplied dedicated AV interface cable to connect to a TV.

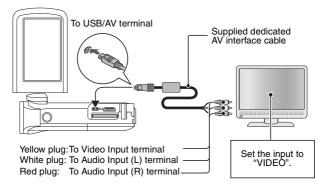

# **Connecting to the HDMI terminal**

Use a separately sold mini-HDMI cable to connect to a TV.

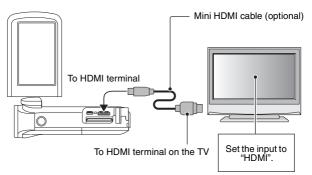

# PLAYING BACK ON A TV

- After connecting the camera to the television, switch the TV input to the terminal to which the camera is connected.
- The playback method is the same as when viewing images on the camera's monitor. (Use the TV controls to adjust the volume.)
- The same playback procedure as when playing back with the camera is used to play back audio recordings as well.


### CAUTION

#### Insert and pull out the cable carefully

- When connecting the cables, make sure that the cable plugs are correctly
  oriented and that they match the shapes of the terminal sockets on the
  devices. Push the plugs in straight when connecting them. If undue force is
  used to connect a cable, it may permanently damage the connector pins in
  the terminal socket.
- · Do not use excessive force when connecting and disconnecting cables.

# PRINTING

Your camera supports the PictBridge function. By connecting the camera directly to a PictBridge-enabled printer, the camera's monitor can be used to select images and initiate printing (PictBridge printing).

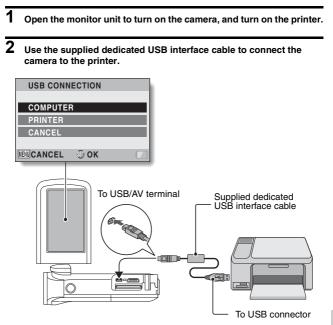

# **3** Select "PRINTER", and press the SET button.

# 4 The PictBridge printing mode is activated.

• The camera switches to the PictBridge printing mode, and the PictBridge Menu Screen appears.

16	PictBridge MENU
	ALL PRINT ALL IMAGES
	📖 Э 🗐 ОК 🛛 🗖

Select the desired type of printing, and press the SET button.		
PRINT 1 IMAGE:	Select the still images you wish to print.	
PRINT ALL IMAGES:	Print all the still images.	
INDEX:	Print all the still images as thumbnail images,	
	many images per print.	
DPOF:	Print images according to the printing instruction	
	settings.	
PRINTER SETTINGS	Print images according to settings specified by	
	the camera, such as paper size, type, size, layout,	
	printing quality, etc.	
	PRINT 1 IMAGE: PRINT ALL IMAGES: INDEX: DPOF:	

#### HINT

## To cancel printing

- During printing, press [♥].
  - The confirmation screen to cancel printing appears.
- ② Select "CANCEL" and press the SET button.
  - If "EXIT" is selected and the SET button is pressed, printing resumes.

## About printing all the images

- Printing is not possible if there are more than 999 images in the memory.
- Delete unwanted images before printing.

## About DPOF printing

• DPOF printing is not possible if your printer is not DPOF-compatible.

## About the printer settings

- The printer setting parameters shown on the Printer Settings Screen will differ depending on the printer that is connected.
- To use printer values that do not appear on your camera's Printer Settings Screen, select "

## CAUTION

### Insert and pull out the cable carefully

- When connecting the cables, make sure that the cable plugs are correctly oriented and that they match the shapes of the terminal sockets on the devices. Push the plugs in straight when connecting them. If undue force is used to connect a cable, it may permanently damage the connector pins in the terminal socket.
- Do not use excessive force when connecting and disconnecting cables. Caution when connecting a printer
- If the power to the printer is turned off while it is connected, the camera may not operate correctly. If the camera does not operate correctly, disconnect the USB interface cable, turn off the camera, and then reconnect the cable.
- During PictBridge printing, the camera's button operation response is slower.
- If the camera is powered by the battery pack for printing, make sure that the remaining battery charge is sufficient.

# SCREEN CAPTURE

Individual windows on your computer's monitor display can be saved in the camera.

Set the camera to the SCREEN CAPTURE mode (page 146).
 Run Screen Capture.

 Screen Capture is automatically launched when you start your computer.
 To quit Screen Capture>

 Right-click on [Xacti Screen Capture 1.1] in the task tray, and then left-click on [Xacti Screen to confirm appears, left-click on [Yes].

• To launch Screen Capture again, click [Start]→[Programs]→[Xacti Screen Capture 1.1].

# **3** On the computer's monitor, display the window you wish to save.

· Make the window you wish to save the active (selected) window.

## 4 Press the [D] button.

- The currently displayed active window is saved as a JPEG file in the camera's memory.
- · When there is no active window, the entire screen display is saved.
- The saved file is stored in the \DCIM\\*\*\*SANYO folder in the drive for the camera.
- · To exit Screen Capture, quit the application.

#### HINT

- To use Screen Capture, only one camera should be connected to the computer.
- The maximum file size that can be saved for any one screen capture is 10 MB.
- When running Screen Capture, do not turn off the camera or remove the card from the camera, as doing so may corrupt the files. Also, do not use the computer to process the contents of the files in the camera's card, or the camera may not operate normally.

165 English

# **COMMONLY ASKED QUESTIONS**

If you have a question about the camera operation, you might find the answer in this compilation of commonly asked questions.

	Question	Answer	Action
	Why doesn't the power turn on?	Due to cold temperatures, the battery pack temporarily lost its power.	Place the camera in your pocket to warm it up before using it.
	Why is the battery pack consumed so quickly even after it was fully	The ambient temperature is very low.	Keep the battery pack in an environment of 10 to 40 °C (50 to 104 °F).
Power	recharged?	The battery pack life has expired.	If a battery becomes depleted quickly even after it was sufficiently charged, it should be assumed that the battery has reached the end of its service life. Please replace it with a new battery.
	Why doesn't recharging end?	The battery pack life has expired.	Replace with a new battery pack. If this is not effective, consult your dealer.
	Why does the	The remaining battery pack power is low.	Use the AC adaptor (optional), or replace the battery pack with a fully charged one.
	Why does the multi-indicator flash red?	A recorded file is being saved on the card or internal memory.	Not a malfunction. Wait until the multi- indicator turns off.
Shooting	Why doesn't the flash operate?	The camera has determined that the image is bright enough and the flash is not necessary.	Not a malfunction. Capture the image; the camera will determine when the flash is necessary.

APPENDICES

	Question	Answer	Action
	Are the settings retained even after the camera is turned off?		All settings except the self-timer and the exposure compensation are retained even after the camera is turned off.
Shooting	Which resolution setting should I use?		Select the resolution setting according to the intended use. [16w], [12w], [14w], [14w], [16w], [12w], [14w]; Appropriate for printing letter-size or larger, and for printing a close-up of part of a photo (trimming). [2w], [2w], [2w]; For printing standard photo (photo service) sizes. [15w], [10w]; For photos displayed on a web page, or sent as e-mail attachments.

	Question	Answer	Action
Shooting	What is the difference between the digital zoom and the optical zoom?	1	Because shooting with the optical zoom uses the optics of a physical lens, you can shoot without losing minute details in the image. The digital zoom, on the other hand, works by magnifying a portion of the image that hits the image sensor and may produce a coarser image.
	How can I get the distant view into focus?	_	Set the scene select function to the landscape $\textcircled{a}$ mode when photographing. Or, set the focus range setting to manual focus $\fbox{F}$ , and set the distance to $\infty$ .
	The video clip appears to freeze for an instant.	The ZOOM RANGE button was pressed during video clip recording.	Not a malfunction. During the very brief span that the zoom lens is changing, the recording appears as a still image.
	The zoom range does not change when the ZOOM RANGE button is pressed.	The ZOOM RANGE button was pressed while the digital zoom was engaged.	Not a malfunction. Use the optical zoom. The zoom range cannot be changed while the digital zoom is engaged.

	Question	Answer	Action
Monitor	When used in cold weather, why does the image seem to leave traces as it moves?	Condition due to the monitor characteristics.	Not a malfunction. Spots that appear in the monitor only appear in the monitor and will not be recorded with the
	Why does the displayed image contain some red, blue and green dots, or why are black spots visible?		images.
Viewing images	Why is the image too bright?	The subject was too bright.	When capturing an image, devise a way to compensate for a bright subject, for example, by changing the shooting angle.
	Why is the image out of focus?	The focus is not locked properly.	Hold the camera correctly and slowly press the [ ] ] button halfway to lock the focus. Then press the [ ] ] button all the way to capture the image.

	Question	Answer	Action
Viewing images	Why is there no image (?) is shown)?	This may happen when trying to play back images stored on a card from a different digital camera.	Play back images that were recorded on a card using this camera.
	Why is the playback image distorted?	If the subject moves or the camera is moved during recording, a distorted image may sometimes occur.	Not a malfunction. This is a characteristic of the CMOS sensor.

	Question	Answer	Action
	Why isn't the magnified image clear?	Due to the characteristics of the camera, magnified images appear less clear.	Not a malfunction.
	Why isn't the captured image clear?	The image was captured using the digital zoom.	Not a malfunction.
Viewing images	Can I play back image and sound files that I edited using my computer?	_	We cannot guarantee the accurate playback of files that have been edited using a computer.
	Why is there a motor-like sound during video clip playback?	The sound of the camera's mechanical action was recorded.	Not a malfunction.
Connecting to a TV	Why is there no sound?	The volume on the TV is set to the minimum.	Adjust the volume on the TV.
Printing	Why does a message appear during PictBridge printing?	There is a problem with the printer.	Please refer to the instruction manual for your printer.

	Question	Answer	Action
	The "Cannot edit video clips with unlike settings" message appears.	You have attempted to join video clips having different resolutions or frame rates.	Select video clips that have the same resolution or frame rate.
	Why is a noise heard from a nearby TV or radio during battery recharging?	Electromagnetic waves are emitted from the charger.	Move the AC adaptor further away from the TV or radio when recharging the battery pack.
Misc.	Why does the "Insufficient card memory" or "Insufficient internal memory" message appear?	There is no more available memory on the card or in the camera's internal memory.	Delete unnecessary files, or use a card that has more memory available.
	Why does the "Card is protected" message appear?	The lock switch on the card is in the locked (protect) position.	Move the lock switch to the unlocked position.
	Why can't the camera be operated?	A temporary internal circuitry problem may be the cause.	Remove the AC adaptor (optional) and the battery pack from the camera, wait a few minutes, then reinstall the battery pack and try again.
	A problem such as inability to record or play back occurs.	The card contains files that were saved using a device other than this camera.	After saving your files to a different medium, format the card.

	Question	Answer	Action
	Can I use my camera abroad?	_	When the camera is connected to a TV, you can switch the camera's video output to NTSC or PAL. If you have questions about accessories etc., please consult with a dealer near you for advice.
Misc.	Why does the "System error" message appear?	A problem has occurred within the camera or card.	<ul> <li>Check the following items:</li> <li>Remove the card and then install it again.</li> <li>Remove the battery pack and then install it again.</li> <li>Install a different card.</li> <li>Install a different card.</li> <li>If "System error" still appears after performing the above steps, then take the camera to the dealer for service.</li> </ul>

## TROUBLESHOOTING

Before taking your camera to the repair shop, check the following table for a possible solution to the problem.

## Camera

	Problem	Cause	Action	Reference page
	No power.	The battery pack is dead.	Recharge the battery pack, or replace with a fully charged battery pack. Or connect the AC adaptor (optional).	24, 29
Power		The battery pack has not been inserted correctly.	Reinsert the battery pack, making sure to orient it correctly.	
	A blinking temperature warning icon is	The battery pack is too hot.	Wait for the battery pack to cool down.	31
	The camera turns off by itself.	The power save function is operating.	Turn on the camera again.	33

APPENDICES

	Problem	Cause	Action	Reference page
	An image is not captured when the [ 1] button or [ 1] button is pressed.	If the power save function was activated, turn on the camera before shooting. If the camera was turned off, press the ON/ OFF button to turn it on.	32, 33	
		The maximum number of	Install a new card.	27
Shooting		images that can be captured or the maximum video clip recording time has been reached.	Delete the images that are not necessary.	80
	The flash does not operate.	The flash off mode is selected.	Set the flash to automatic flash mode or forced flash mode.	46, 50, 68
		The battery pack is dead.	Recharge the battery pack, or replace with a fully charged battery pack. Or connect the AC adaptor (optional).	24, 29

	Problem	Cause	Action	Reference page
	The digital zoom does not work.	The still image is set to 16m or 12m.	Set it to a different mode.	50, 90
		The digital zoom setting is set to "OFF".	Set the digital zoom setting to "ON".	54, 72
	A warning tone (beep-beep- beep) sounds, and it is not possible to take a picture using the self- timer.	The battery pack is consumed.	Recharge the battery pack, or replace with a fully charged battery pack. Or connect the AC adaptor (optional).	24, 29
Shooting	When zooming in or out, the zoom movement stops momentarily.	The optical zoom has moved to the maximum magnification position.	Not a malfunction. Release the zoom switch, and push it again.	72
	There is noise in the captured image.	The ISO sensitivity setting is too high.	Set the ISO sensitivity to a lower setting.	52, 96
	The A icon appears, and shooting is not possible.	The camera's internal temperature is high.	Discontinue shooting, and wait for the camera to cool down before using it again.	31

	Problem	Cause	Action	Reference page
Monitor	No playback image appears.	The camera is not set to the playback mode.	Set the camera to the playback mode.	38, 74
	The image is too dark.	The flash was blocked by a finger or other object.	Hold the camera correctly, and make sure the flash is not obstructed.	57
		The subject was too far away.	Capture the image in the range of operation of the flash.	186
Viewing images		The subject was lit from	Use the forced flash mode.	46, 50, 68
		behind.	Use the exposure compensation function.	103
			Use the spot light-measuring mode.	52, 95
		There is not enough light.	Adjust the ISO sensitivity setting.	52, 96

	Problem	Cause	Action	Reference page
	The image is too bright.	The forced flash mode is selected.	Select a different flash mode.	46, 50, 68
		The subject was too bright.	Use the exposure compensation function.	103
		The ISO sensitivity setting is incorrect.	Set the ISO sensitivity to AUTO.	52, 96
Viewing images	The image is not in focus.	The subject is too close to the camera. The focus setting is not correct.	Capture the image with the subject within the photographable range. Select the correct focus setting for your needs.	52, 62, 94
		The camera moved when the [ ] button was pressed. (camera shake) The focus is not locked properly.	Hold the camera correctly and slowly press the [ ] button halfway to lock the focus. Then press the [ ] button all the way to capture the image.	57, 65
		The lens is dirty.	Clean the lens.	—

	Problem	Cause	Action	Reference page
	The colors of the images captured indoors are not	This is due to ambient lighting.	Capture the image using the forced flash mode.	46, 50, 68
	correct.	The white balance setting is incorrect.	Set the white balance setting correctly.	54, 97
Viewing images	A part of the image is missing.	The strap or a finger was blocking the lens.	Hold the camera correctly, and make sure the lens is not obstructed.	57
	"No image" is shown.	There is no file in the internal memory or in the installed card.	Play back after capturing images or making audio recordings.	_
	During audio playback, there is no sound.	The playback volume setting on the camera is too low.	Adjust the playback volume.	55, 75, 79
Connecting to a TV	There is no color in the image. The image is distorted.	The TV output setting is not correct.	Select the correct TV output setting.	130, 134

	Problem	Cause	Action	Reference page
0	No image or sound.	The camera is not correctly connected to the TV.	Follow the instructions to make the connection correctly.	159, 160
Connecting to a TV		The TV input setting is not correct.	Set the TV input to the correct setting.	
	The edge of the image is cut off.	This is a characteristic of the TV.	Not a malfunction.	—
Image editing	You cannot edit or rotate an image.	The protect mode is set.	Cancel the protect mode.	55, 106
Charging	The battery pack is not charging.	The battery pack is not correctly inserted in the charger.	Make sure that the battery pack is correctly oriented when inserting it in the charger.	24
Misc.	The "Image is protected" message appears and the file cannot be deleted.	You have attempted to delete a file that is protected from accidental erasure.	Set the protect setting for the file to UNLOCK.	55, 106

	Problem	Cause	Action	Reference page
	The audio guide does not sound.	The audio guide setting is set to "OFF".	Set the audio guide setting to "ON".	126
	The recording capacity is less than that indicated in the section "Possible No. of Images/ Possible Shooting Time/ Possible Recording Time" (page 189).	The recording capacity is less than the value specified for the card.	Depending on the card, the capacity may be less than the specified value. Please refer to the instructions that accompanied the card.	_
Misc.	The battery pack appears to be swollen.	Normal change occurring with battery use. Even with normal correct use of the lithium-ion battery, it has a tendency to swell as the number of charge and discharge cycles adds up and it gradually approaches the end of its service life.	Not a safety hazard. However, a battery that is difficult to insert because it has become swollen may then be impossible to extract from the battery compartment. In this case, please discontinue its use and replace it with a new battery.	

# Notes regarding the Scene Select feature and filters

### **Scene Select**

Setting	Remarks
Sports * Portrait	Focus range: Fixed at 🏝. Exposure: Fixed at 🎴.
Landscape	Focus range: Fixed at . Chaser settings: Fixed at OFF. Exposure: Fixed at P.
Night view portrait	Focus range: Fixed at . Exposure: Fixed at P. Still image setting: When sequential shots is active, changes to .
Snow & beach	Focus range: Fixed at 🎿. Exposure: Fixed at P.
Fireworks	Focus range: Fixed at . Flash: Fixed at . ISO sensitivity: Fixed at . Photo stabilizer: Fixed at "OFF". Chaser settings: Fixed at . Exposure: Fixed at . Still image setting: When sequential shots is active, changes to .
Lamp* East	Focus range: Fixed at A. Flash: Fixed at J. Photo stabilizer: Fixed at "OFF". Still image NR: Fixed at "OFF". Exposure: Fixed at P. Still image setting: When sequential shots is active, changes to H. ISO sensitivity: Fixed at MM.

\* In some cases, the shutter speed may decrease to 1/15 sec.

## Filter

Setting	Remarks
Monochrome	Still image mode: 16m and 12m cannot be selected.
Sepia	Color chaser: Fixed at OFF.

# About the scene select function and focus range settings

- The scene select function changes to AUTO when the focus range is set to 🐨 or IMF.
- Even if you set the focus range to 🐨 or MF, it changes to 🏜 when the scene select function is set to any setting other than MTO.

## SPECIFICATIONS

### Camera

Recorded image file format	Still images:         JPEG format (DCF, DPOF, Exif 2.2 compliant)         Note: Designed mainly by the Japan Electronics and Information Technology Industries Association (JEITA), DCF (Design rule for Camera File system) is standard for digital still camera image files to provide interoperability between digital photography devices for the images stored on removable memory cards. However, it is not guaranteed that all devices will support the DCF standard.         Video clips:       Conforms to ISO-standard MPEG-4 AVC/H.264*         MPEG-4 audio (AAC compression)       48 kHz sampling rate, 16-bit stereo format	
Data storage media	Internal memory: Approx. 50 MB SD Memory Card SDHC Memory Card (up to 32 GB) SDXC Memory Card (up to 64 GB)	
Image sensor/ camera effective number of pixels	1/2.33-inch (1.1 cm) CMOS sensor Still images: Approx. 14.3 million pixels Videos (HD mode): Approx. 11.9 million pixels Videos (SD mode): Approx. 14.3 million pixels	

\* Video clip files recorded with models VPC-CA65 and VPC-CG65 are in the same H.264 format as this model. However, such files cannot be played back, since they are not compatible due to differences such as the data compression method.

Still image shooting mode (recording resolution)	15ml:         4640 × 3480 pixels (approx. 16 million pixels)           12ml:         4608 × 2592 pixels (approx. 12 million pixels, 16:9 aspect ratio)           14ml:         4352 × 3264 pixels (approx. 14 million pixels, 16:9 aspect ratio)		
	Iow compression) Imm: 4352 × 3264 pixels (approx. 14 million pixels, normal compression) Imm: 4352 × 2448 pixels (approx. 10 million pixels,		
	16:9 aspect ratio) 2: 1920 × 1080 pixels (approx. 2 million pixels, 16:9 aspect ratio) 2: 1600 × 1200 pixels (approx. 2 million pixels)		
	Image: 1280 × 720 pixels (approx. 900,000 pixels, 16:9 aspect ratio)         Image: 640 × 480 pixels (approx. 300,000 pixels)         Image: 4352 × 3264 pixels (approx. 14 million pixels,		
	sequential shots) 2018: 1600 × 1200 pixels (approx. 2 million pixels, sequential shots)		
Video clip recording mode (recording resolution)	Image: 1920 × 1080 pixels, 60 fields/s (60i)         Image: 1920 × 1080 pixels, 30 fps (30p)         Image: 1280 × 720 pixels, 60 fps (60p)         Image: 1280 × 720 pixels, 30 fps (30p)         Image: 640 × 480 pixels, 30 fps (30p)         The 60 fps frame rate of this camera is 59.94 fps, and the 30 fps frame rate is 29.97 fps.		
White balance	Full-auto TTL; manual setting available		
Lens	Focal length: $f = 6.8 \text{ mm}$ to 34.0 mm, Optical 5× zoom Open: $F = 3.5$ (wide) to 3.7 (tele) 8 groups, 11 elements (including three with six aspheric surfaces) Galvanometer iris Internal ND filter		
	35 mm film camera conversion Still image shooting: 38 mm to 190 mm (5×) Video clip recording: 40 mm to 240 mm (binning mode, 6× Advanced Zoom) 80 mm to 480 mm (cropping mode, 12× Advanced Zoom)		
Exposure control type	Programmable AE/Shutter speed priority AE/ Aperture priority AE/Manual exposure control Exposure compensation available (0 ±1.8 EV in 0.3 EV steps)		

	••••••••••••••••••••••••••••••••••••••	
Light-measuring mode	Multi-section measuring, center-weighted measuring, spot measuring	
Range	Normal mode: 50 cm (19.69 in.) to infinity Super macro mode: 1 cm (0.39 in.) to 80 cm (31.50 in.) (wide end only)	
Digital zoom	For shooting: 1× to approx. 10× For playback: 1× to 72.5× (varies with resolution)	
Shutter speed	<ul> <li>Still image shooting mode: 1/2 to 1/1,500 sec. (Approx. 1 sec. max. when scene select function is set to lamp [<sup>3</sup>@<sub>2</sub>]) (During flash: 1/30 to 1/1,500 sec.)</li> <li>Sequential shots mode: 1/30 to 1/1,000 sec. (no flash)</li> <li>Video clip recording mode: 1/30 to 1/10,000 sec. (1/15 sec. max. when scene select function is set to lamp [<sup>3</sup>@<sub>2</sub>] or the high sensitivity mode)</li> </ul>	
Sensitivity	<ul> <li>Still image shooting (standard output sensitivity*)/video clip recording mode: Auto (video clip recording: ISO 50 to 800; still image shooting: ISO 50 to 200)/ISO 50, ISO 100, ISO 200, ISO 400, ISO 800, and ISO 1600 (switchable from the Recording Menu)</li> <li>Sensitivity measured in compliance with the ISO standard (ISO 12232:2006).</li> <li>Maximum ISO sensitivity up to 1600 equivalent when Scene Select function is set to 200;</li> </ul>	
Minimum subject illumination	Approx. 17 lux (1/30 sec. in the scene select AUTO mode) Approx. 5 lux (1/15 sec. in the HIGH SENSITIVITY or lamp mode)	
Image stabilizer	Video: Electronic Still image: Multi-calculation electronic	
Monitor	2.7" (6.9 cm) low-temperature polysilicon TFT color wide liquid crystal (transmissive), approx. 230,000 pixels	
Flash working range	GN = 4.0 Approx. 50 cm (19.69 in.) to 2.3 m (7.55 ft.) (wide) Approx. 80 cm (31.50 in.) to 2.2 m (7.22 ft.) (tele)	
Flash modes	Auto-flash, forced flash, flash off	

APPENDICES

Focus	TTL-type AF (still image shooting mode: 9-point range finder/spot focus; video clip recording mode: Continuous focus), manual focus		
Self-timer	Approx. 2-seco	nd delay, 10-second delay	
Ambient environment	Temperature	0 to 40 °C (32 to 104°F) (operation) -20 to 60 °C (-4 to 140°F) (storage)	
	Humidity	30 to 90% (operating, no condensation) 10 to 90% (storage, no condensation)	
Power supply	Battery pack (supplied)	Li-ion battery pack (DB-L80) ×1	
	AC adaptor (optional)	VAR-G9	
Power consumption		3.5 W (When using the Li-ion battery during recording)	
Dimensions (excluding protrusions)		$\begin{array}{l} 38.5 \ (W) \times 109.6 \ (D) \times 55.0 \ (H) \ mm \\ 1.52 \ (W) \times 4.31 \ (D) \times 2.17 \ (H) \ in. \\ (Maximum \ dimensions) \\ Volumetric \ capacity: \ Approx. \ 158 \ cc \end{array}$	
Weight		Approx. 155 g (5.5 oz.) (camera only [without battery pack and card]) Approx. 172 g (6.1 oz.) (including battery pack and card)	

## **Camera connectors**

USB/AV	Dedicated regrouped jack		
(communication/audio and video output) terminal	Audio output	Stereo	
	Video output	Composite video, NTSC color TV system/PAL TV system (switchable from the Option Setting Menu)	
	USB	USB 2.0 High Speed PC camera: USB video class	
HDMI terminal		Video output Total number of scan lines (effective number of scan lines): 750p (720p)/ 1125i (1080i)/525p (480p) Audio output: L-PCM 48 kHz sampling	

## Battery life

Shooting	Still image shooting mode	Approx. 200 images: CIPA standard (when a SanDisk 2 GB SD Memory Card is used)
	Video clip recording mode	Approx. 60 minutes: Recorded in MM mode
Playback		Approx. 210 minutes: Monitor on, continuous playback

- $\bullet$  Until battery pack runs out when using a fully charged battery pack at a 25  $^{\circ}\text{C}$  (77  $^{\circ}\text{F})$  ambient temperature.
- The operation time may vary depending on the conditions of the battery pack and the conditions of use. Especially when used at temperatures below 10 °C (50 °F), the battery pack operation time is significantly reduced.

### Possible No. of Images/Possible Shooting Time/ Possible Recording Time

Shooting/	Resolution	Internal	SD Mem	ory Card
recording mode	setting	Memory	8 GB	16 GB
	16м	7 images	1,200 images	2,410 images
	12M	9 images	1,480 images	2,970 images
	14M-H	7 images	1,130 images	2,280 images
	14M-S	10 images	1,690 images	3,390 images
0.00	10M	14 images	2,240 images	4,490 images
Still image mode	<b>2</b> M	69 images	10,800 images	21,700 images
mode	2м	74 images	11,300 images	22,700 images
	0.9M	138 images	20,700 images	41,600 images
	0.3м	318 images	49,800 images	99,800 images
	1411-1	10 images	1,690 images	3,390 images
	2M	74 images	11,300 images	22,700 images
	Full-HD	21 sec.	1 hr. 1 min.	2 hr. 4 min.
	Full-SHQ	28 sec.	1 hr. 21 min.	2 hr. 43 min.
Video clip mode	HD-HR	28 sec.	1 hr. 21 min.	2 hr. 43 min.
mode	HD-SHQ	37 sec.	1 hr. 46 min.	3 hr. 33 min.
	TV-SHQ	1 min. 31 sec.	4 hr. 19 min.	8 hr. 39 min.
Audio recording mode	Ŷ	26 min.	67 hr.	134 hr.

- If the continuous recording time of a voice memo exceeds about 13 hours, the recorded file is saved once, and then recording continues in a new file. In the video clip recording mode, when the size of the file being recorded exceeds 4 GB, the recorded file is saved once, and then recording continues in a new file. (These 4 GB segments are automatically created. The recording session continues until you stop recording, but voice memo recording is temporarily interrupted while the file is being saved.)
- The above values apply when an SD Memory Card by SanDisk is used.
- Even with cards of the same capacity, the amount of data that can actually be stored may differ depending on the card brand, etc.
- The continuous shooting time for each video clip will differ depending, for example, on the card capacity, environmental conditions (temperature and shooting conditions, etc.).

## Concerning the multi-indicator

The camera's multi-indicator will light, flash, or be off, depending on the different camera operations.

Color	Multi-indicator status		Camera status
Green	Lit Flashing		Connected to a computer or printer
			Power save mode active
Orange	Lit		Connected to a TV
		Slow	Rise in internal temperature
Red Fla	Flashing	Fast	During self- timer photography
		Very fast	Accessing card



## Supplied battery pack charger

Part No.		VAR-L80
Power source		AC 100 to 240 V, 50 to 60 Hz, 5 W
Rated output		DC 4.2 V, 550 mA
Compatible batteries		Supplied or separately sold Lithium-ion battery pack (DB-L80)
Ambient environment	Temperature	0 to 40 °C (32 to 104 °F) (when charging) -20 to 60 °C (-4 to 140 °F) (storage)
	Humidity	20 to 80% (no condensation)
Dimensions		84.0 (W) $\times$ 50.5 (D) $\times$ 22.5 (H) mm 3.31" (W) $\times$ 1.99" (D) $\times$ 0.89" (H)
Weight (without power cord)		Approx. 49 g (1.7 oz.)

 When using the supplied battery pack charger abroad, the power cord may need to be replaced in accordance with local requirements. Please contact your local dealer for details.

## Supplied Li-ion battery pack

Model number		DB-L80
Voltage		3.7 V
Capacity		700 mAh
Ambient environment	Temperature	0 to 40 °C (32 to 104 °F) (during use) -10 to 30 °C (14 to 86 °F) (storage)
	Humidity	10 to 90% (no condensation)
Dimensions		39.2 (W) $\times$ 5.9 (D) $\times$ 31.4 (H) mm 1.54 (W) $\times$ 0.23 (D) $\times$ 1.24 (H) in.
Weight		Approx. 15 g (0.5 oz.)

## Others

Mac OS is a trademark of Apple Inc., registered in the U.S. and other countries.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the USA and other countries.

Intel and Pentium are registered trademarks of Intel Corporation (USA). In this manual, the Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 operating system, Microsoft<sup>®</sup> Windows<sup>®</sup> XP operating system, Microsoft<sup>®</sup> Windows<sup>®</sup> Vista operating system, and Microsoft<sup>®</sup> Windows<sup>®</sup> 7 operating system are collectively referred to as "Windows".

Software Red Eye by FotoNation<sup>™</sup> 2003-2005 is a trademark of FotoNation<sup>®</sup> Inc.

Red Eye software<sup>®</sup> 2003-2005 FotoNation In Camera Red Eye - covered by U.S. Patent No. 6,407,777. Other patents Pending.



SDXC logo is a trademark.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.



Eye-Fi is a registered trademark of Eye-Fi, Inc.

All other company and product names are registered trademarks or trademarks of their respective owners.

#### CAUTION

- It is forbidden to copy this manual, whole or in part, without prior written permission.
- All images and illustrations given in this manual are for explanation purposes and may differ slightly from that of the actual product. Also, actual specifications are subject to change without prior notice and therefore may differ from the contents of this manual.

## Before capturing those important shots, be sure to first take a test shot to confirm that your camera is set up and ready to go

- Sanyo Electric shall not be held responsible for any problems resulting from the use of this camera.
- Sanyo Electric declines all responsibility for damages due to improper use of the camera, failure to adhere to the instructions given in this manual, or repairs or changes done by those other than a technician authorized by the manufacturer.
- Sanyo Electric shall not be held responsible for any damage caused by optional devices or consumable items used with the camera other than those supplied with the camera or those specified by Sanyo Electric.
- Sanyo Electric shall not be held responsible for any losses or loss of revenue resulting from the loss of data caused by the malfunction, or the repairing of a malfunction, of the camera.
- The images captured with this camera will differ in quality from pictures taken with a standard film camera.

## HINTS FOR TAKING PICTURES

Taking great pictures in difficult surroundings is easier than you might think. By keeping a few points in mind and choosing the correct settings, you can create photos that you'll be proud to display and share.

# If images are blurred even when the autofocus is used

Your camera employs an autofocus function. When you snap a picture using the autofocus, the camera automatically adjusts the settings so that the image will be in focus. If you are getting blurred images even when using the autofocus, one or more of the following might be the reason.

#### How the autofocus works

The autofocus is activated when the [ ] button is gently pressed halfway. Press the [ ] button slightly, and the target mark will appear on the monitor to indicate that the autofocus has been activated. Next, continue to gently press the [ ] button all the way to snap the picture. This two-step method is the way to ensure that your photos are perfectly focused.

#### Reasons for unfocused images

- ① The [ 1] button was pressed all the way in one step.
- 2 After the image was focused, the subject moved.
  - Even if camera focuses the subject once, if the distance between the camera and the subject is changed, the subject may become out of focus.
- ③ The focus setting is not set for the correct distance.
  - If you shoot a close-up subject with the camera set to the normal focus mode, or if you shoot a subject at normal distance with the camera set to the super macro (close-up) mode (pages 52, 62 and 94), the image will not be in focus.

#### Preventing blurred images

- ① Confirm that the camera is set to the correct focus mode for your subject.
- ② Hold the camera correctly, and press the [ 1] button halfway.
- ③ Wait for the target mark to appear in the monitor, and holding the camera steady, gently continue to press the [ ] button all the way down.

Following these steps for a gentle but firm pressing of the [ 1 button will ensure that you get beautifully focused photos.

## Photographing a moving subject

Situation: You would like to snap an action shot of a moving child or pet. The autofocus is activated, but because the subject is moving, the image may be blurred. In particular, when the distance between the camera and the subject is changing, it is difficult to lock the focus on the subject. Here are some hints for successfully capturing images of moving subjects.

#### Reasons for unfocused images

When the [ ] button is gently pressed halfway, the camera's autofocus works by determining the distance between the camera and the subject. Once the subject is in focus, if it then moves before the picture is snapped, the image may be out of focus. This often happens when you once lock the focus on a subject and then wait for the right moment to snap the picture. And, conversely, a blurred image may result if you press the [ ] button all the way in one step in an attempt to quickly capture an action scene, thus failing to activate the autofocus in time.

#### Preventing blurred images (How to use the manual focus [page 94])

In addition to the autofocus, a manual focus mode is also incorporated in your camera. In the autofocus mode, the distance between the camera and the subject is automatically determined when you press the [ ] button halfway. In contrast to this, with the manual focus mode, you set the focus to the focal point you wish to record before taking the picture.

#### How to photograph a moving subject

- Set the camera's focus mode to the manual focus. Adjust the focus to the point you wish to record.
- ② When the subject comes to the focal point position, gently press the [ 1 button all the way down.

#### <Advantage of using the manual focus>

- Images can be quickly captured without waiting for the autofocus to activate.
- Because you are presetting the focal point, the focus can be more accurate.

#### <Using the manual focus effectively>

- When photographing a moving subject, you can get a good result by pressing the [
- Use manual focus to avoid incorrectly focused images when there is an object between the camera and the subject you wish to focus on.

## Shooting portraits (portrait mode 🕒)

#### Points:

- · Choose a background that doesn't detract from your subject.
- Move in close to your subject.
- Pay attention to lighting and how it affects your subject.

#### NOTE

- If the background is distracting, it will not show your subject to his best advantage. Move in closer to your subject or zoom in so that the background does not compete with the subject.
- In portrait photography your subject is clearly the central figure, so try techniques that allow the subject to stand out.
- If light is coming from behind your subject (backlit), his face will appear dark. You can get a better picture by using the flash, for example, or changing the exposure compensation setting.

### Photographing moving subjects (sports mode 🕅) Points:

- · Match the camera's movement with that of the subject.
- Set the zoom to the wide end (wide-angle).
- Don't be too hesitant to press the [ 1] button, or you'll miss the action.

#### NOTE

- Tips to not missing those great action shots: Make sure you're holding the camera correctly. Keep the subject in the lens at all times, moving the camera with him while waiting for the right shot. Move your whole body-not just your arms-with the camera while shooting.
- Blurred images are more likely when the zoom is set to the tele end than the wide end. Set the zoom as close as possible to the wide end.
- Learn to press the [ 🖸 ] button quickly yet smoothly the instant your photo chance occurs.

## Night photography (night view portrait mode \*)

- Avoid camera shake.
- · Increase the ISO sensitivity.

#### NOTE

- Camera shutter speed during night photography is considerable slower, so there is a much greater chance that your photographed images will be blurry. Stabilize the camera when shooting.
- You can photograph your subject with the night scene in the background by using the flash. Be careful not to shoot too close to the subject, however, or your subject's face will appear too bright.
- After the flash operates, keep the camera and the subjects motionless for about 2 seconds.

## Photographing scenery (landscape mode 🛋)

#### Points:

- Shoot using a high resolution.
- · For zoom photography, use the optical zoom.
- Pay attention to picture composition.

#### NOTE

- When shooting with a wide-angle setting, or if you intend to enlarge the photo, the higher the resolution, the better.
- To zoom in on distant scenery, it's better to use the optical zoom. Using the digital zoom produces a coarser image. Hold the camera securely, keeping your elbows close to your body and making sure the camera is stable. Taking care to stabilize the camera will increase the likelihood of getting a clear photo.
- Don't forget to pay attention to picture composition; note perspective and be aware of how the placement of objects affects the scene.



SANYO Electric Co., Ltd.